


DIY WOODEN DRONE

P·W·L·F

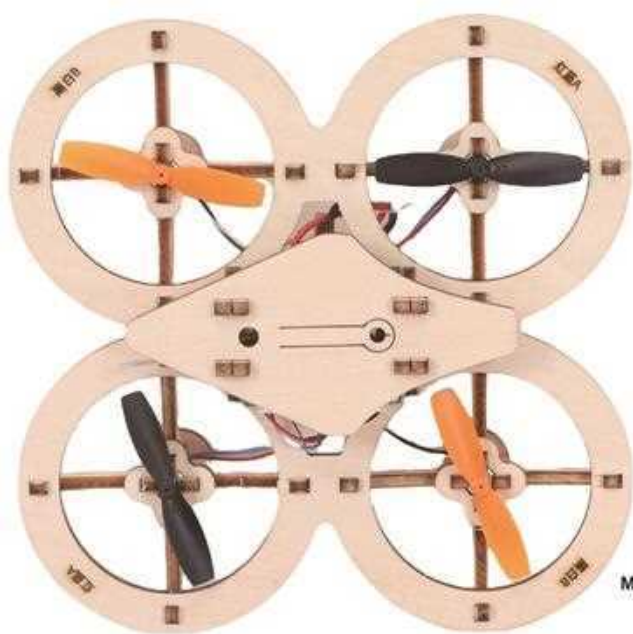


MQ-53 DIY Wooden Drone




Scan QR Code for videos

NOTE: WHEN ASSEMBLING THE PARTS, ENSURE THE CORRECT SEQUENCE, ORIENTATION, AND POSITION.


CONTROLLER ASSEMBLING

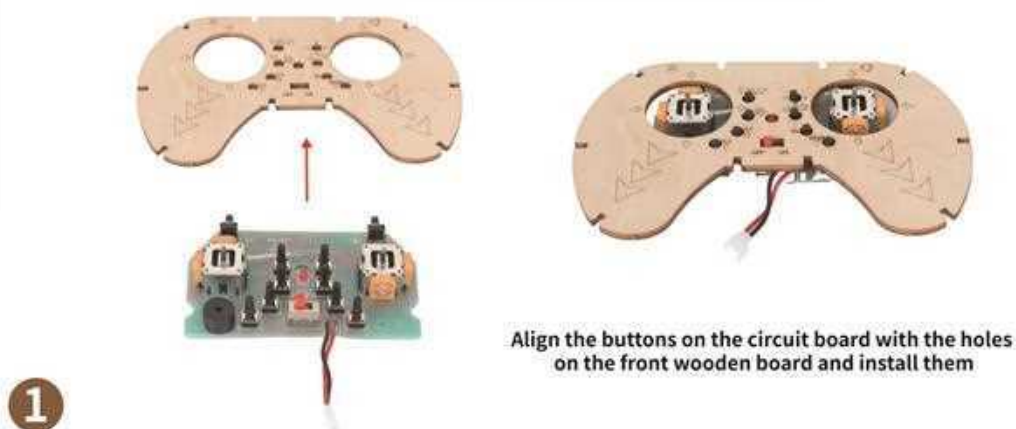


1

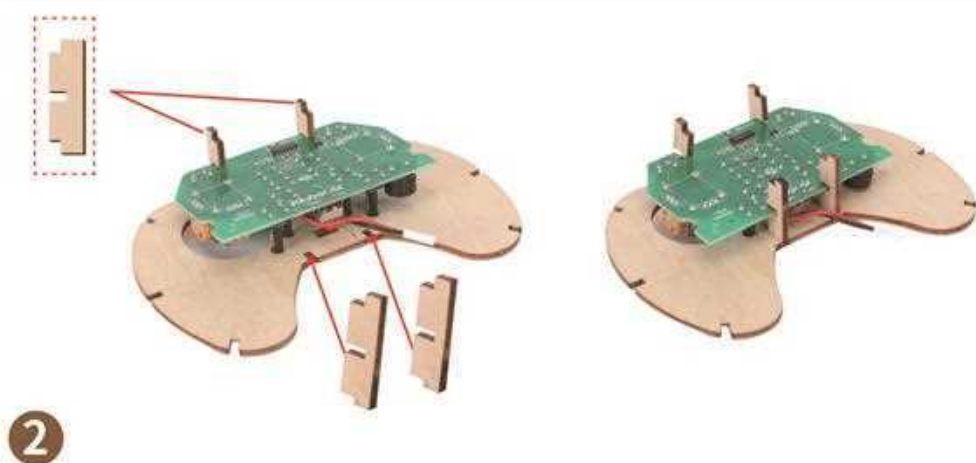

2

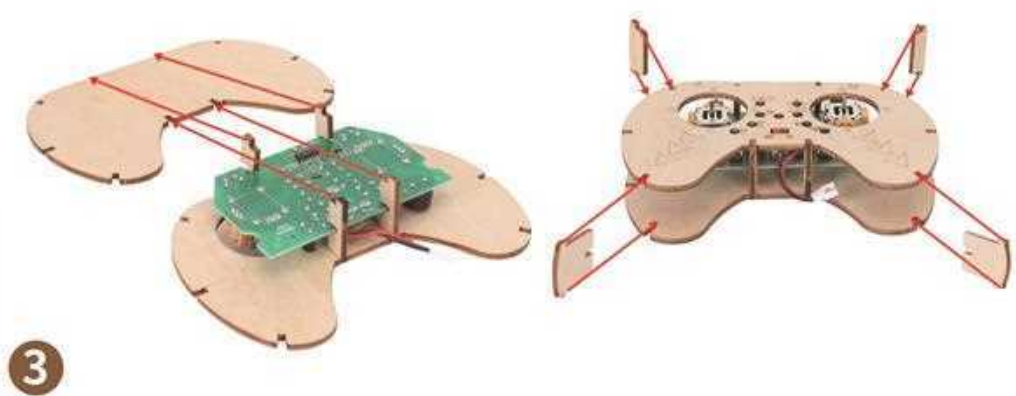


3

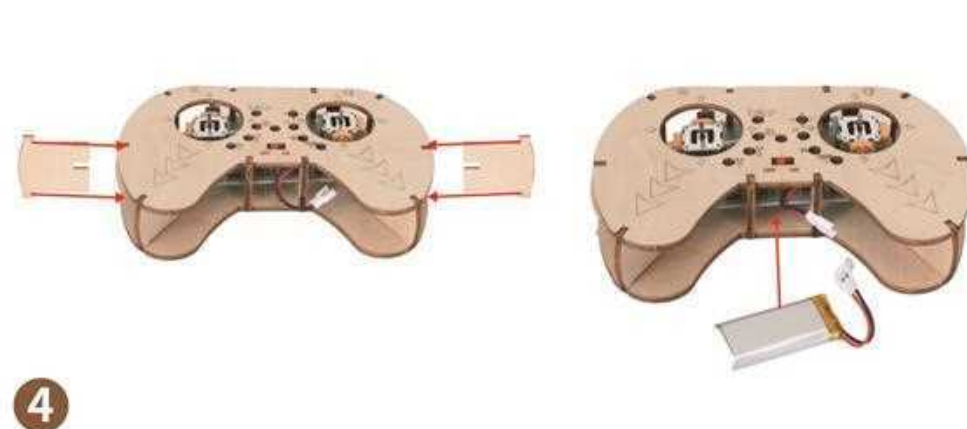

4



5

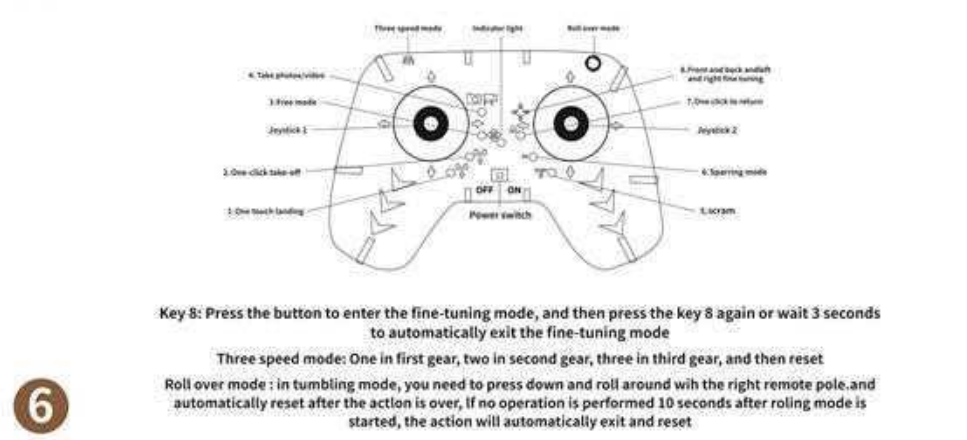

6

THE BATTERY SHOULD BE FULLY CHARGED FOR THE FIRST TIME. WHEN CHARGING, THE INDICATOR LIGHT OF THE USB CHARGING CABLE WILL BE ON, AND THE INDICATOR LIGHT WILL BE OFF, THE CHARGING ENDS (CHARGING DEVICES ABOVE 1.5A CANNOT BE USED).

WARNING :

For use by students only in an educational setting under the supervision of a school or other adult instructor. Please read the manual carefully and thoroughly before operating this product. This product belongs to scientific experimental equipment it is not in the scope of Compulsory Product Certification Catalogue and does not need 3C certification.

CAUTIONS WHEN CHARGING

- When charging, please put this product on a dried or ventilated area and keep it far away from heat source or explosive product.
- When charging, please remove the batteries from the quadcopter. Then charging process should be supervised by an adult so as not to cause an accident.
- After flying, please do not charge the battery if the surface temperature is still not cool. Otherwise it may cause a swollen battery or even a fire hazard.
- Please make sure that you use the original USB charging cable provided. When the battery has been used for a long time, or appears to be swollen, please replace them.
- A battery when not in use for a long time will lose its charge automatically. Charging or discharging too often may reduce the life of the battery.

BATTERY REPAIR & MAINTENANCE

- Battery should be put in the dried or ventilated place with environment temperature about 18-25°C.
- In order to enhance the using life of the battery, please avoid repeat charging or excessive discharging.
- When the battery needs to be stored for a long time, please charge the battery first. That is to say, charge the battery for about 50-60% of the volume and then well store it.
- If you do not use it for more than 1 month, it's highly recommended that you need to check the battery voltage every month so as to make sure the voltage is less than 3V, otherwise please do by following No.(3) mentioned.

CAUTIONS :

- When the indicator of transmitter keep light on but the indicator of quadcopter is blinking slowly, it means signal matching was not successful. Please turn off the power both of transmitter and quadcopter then restart the transmitter and quadcopter.
- If the quadcopter is still flying to on side dramatically or spinning while hovering, please switch off the power of both the quadcopter and transmitter and then repeat the pre-flying steps.
- When the indicator of the quadcopter keeps flashing slowly, it means that the quadcopter has entered into the low battery state. This time you need to charge the quadcopter with the USB cable provided.

SAFETY & CAUTIONS :

- This R/C flying model is a high dangerous commodity. Please make sure that it should be filed far away from the crowd. Please also pay more attention to the phenomenon such as incorrect assembly or damaged model or incorrect connection of electronic control equipment. Please also pay attention to the flying safety when operating and know more about the accident that may be happened due to your own negligence.
- Keep it far away from the barrier or crowd.
 - Keep it far away from the moisten environment.
 - Use this product correctly and avoid operating by your own.
 - Keep it far away from the high-speed rotating part and heat source.
 - Please conform to the sequence of power ON/OFF as the picture below shown, incorrect sequence of power ON/OFF may cause this product out of control and affect your own safety or others. Please form a good habit of switching on or switch off this product correctly.

TROUBLE SHOOTING :

PROBLEM	REASON	SOLUTION
No response from the quadcopter	1. Quadcopter battery power not enough. 2. Transmitter battery power not enough. 3. The band of the transmitter does not correspond to the decoding of the quadcopter.	1. Charge the quadcopter. 2. Charge or replace them if required. 3. Adjust the band on the transmitter and keep it the same as the quadcopter.
If the quadcopter is slow to respond or difficult to maneuver	1. Insufficient power with the transmitter. 2. Transmitter of the same frequency is used nearby.	1. Replace the battery. 2. Use the helicopter out of the range of other RC quadcopter.



1



2



3




4



5




6

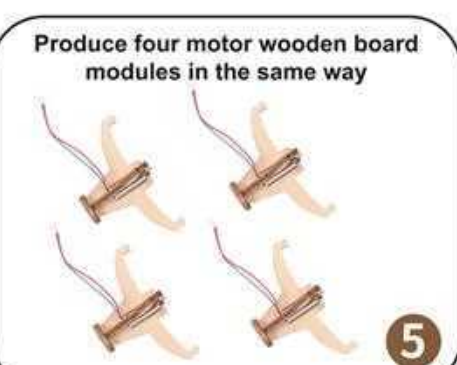


7




8

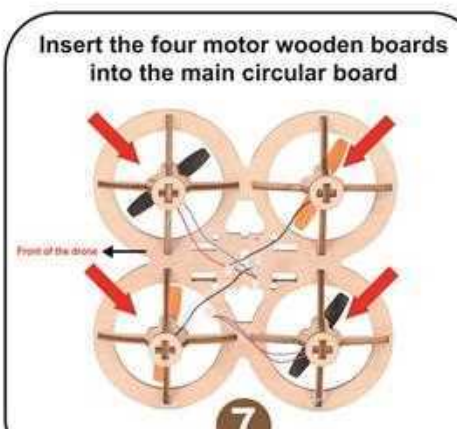

9

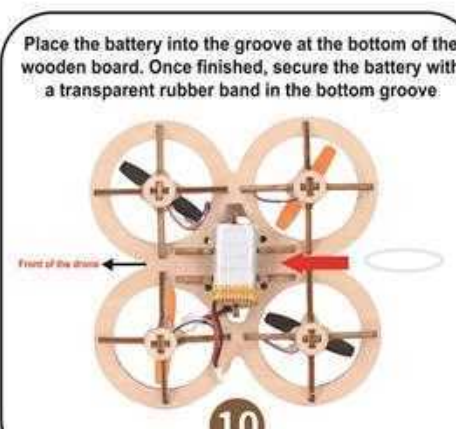


10

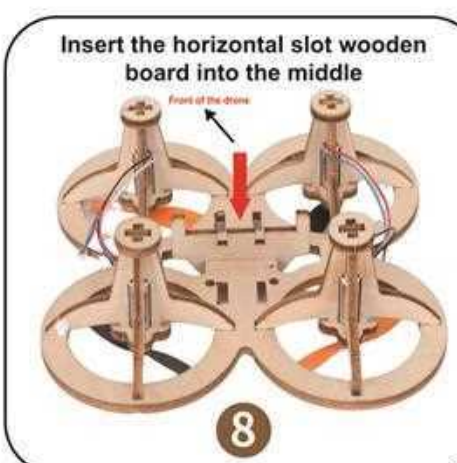

11




12

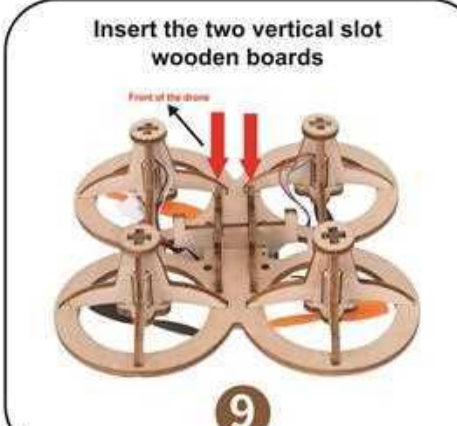


13




14

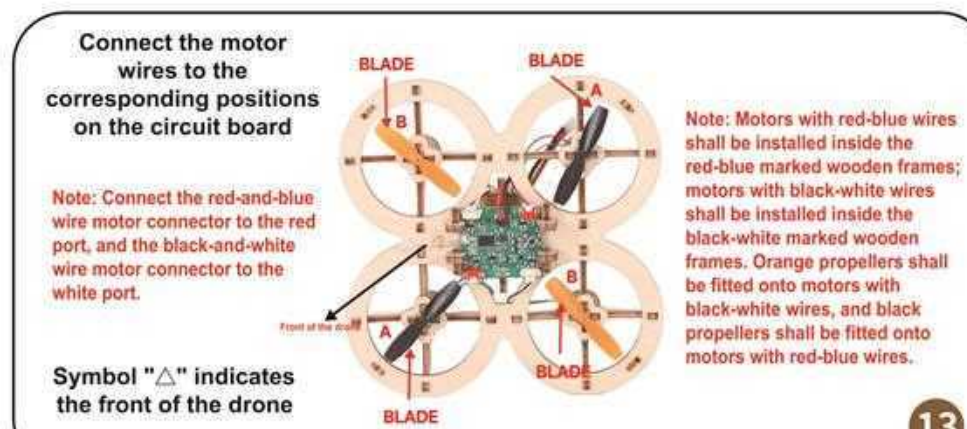

15

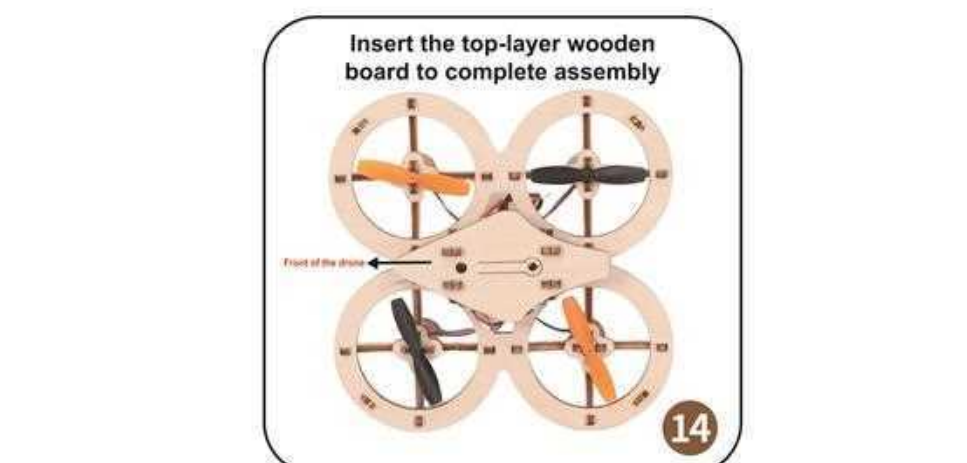

16

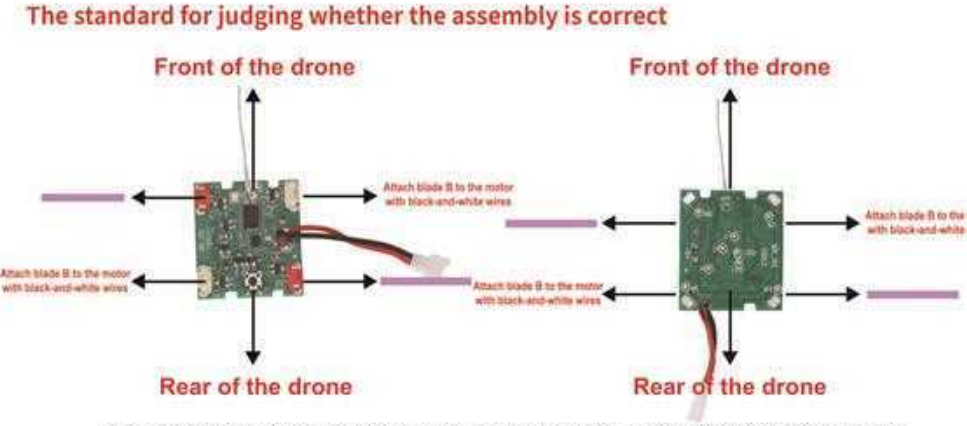

17

THE BATTERY SHOULD BE FULLY CHARGED FOR THE FIRST TIME. WHEN CHARGING, THE INDICATOR LIGHT OF THE USB CHARGING CABLE WILL BE ON, AND THE INDICATOR LIGHT WILL BE OFF, THE CHARGING ENDS (CHARGING DEVICES ABOVE 1.5A CANNOT BE USED).

WARNING :

For use by students only in an educational setting under the supervision of a school or other adult instructor. Please read the manual carefully and thoroughly before operating this product. This product belongs to scientific experimental equipment it is not in the scope of Compulsory Product Certification Catalogue and does not need 3C certification.

CAUTIONS WHEN CHARGING

- When charging, please put this product on a dried or ventilated area and keep it far away from heat source or explosive product.
- When charging, please remove the batteries from the quadcopter. Then charging process should be supervised by an adult so as not to cause an accident.
- After flying, please do not charge the battery if the surface temperature is still not cool. Otherwise it may cause a swollen battery or even a fire hazard.
- Please make sure that you use the original USB charging cable provided. When the battery has been used for a long time, or appears to be swollen, please replace them.
- A battery when not in use for a long time will lose its charge automatically. Charging or discharging too often may reduce the life of the battery.

BATTERY REPAIR & MAINTENANCE

- Battery should be put in the dried or ventilated place with environment temperature about 18-25°C.
- In order to enhance the using life of the battery, please avoid repeat charging or excessive discharging.
- When the battery needs to be stored for a long time, please charge the battery first. That is to say, charge the battery for about 50-60% of the volume and then well store it.
- If you do not use it for more than 1 month, it's highly recommended that you need to check the battery voltage every month so as to make sure the voltage is less than 3V, otherwise please do by following No.(3) mentioned.

CAUTIONS :

- When the indicator of transmitter keep light on but the indicator of quadcopter is blinking slowly, it means signal matching was not successful. Please turn off the power both of transmitter and quadcopter then restart the transmitter and quadcopter.
- If the quadcopter is still flying to on side dramatically or spinning while hovering, please switch off the power of both the quadcopter and transmitter and then repeat the pre-flying steps.
- When the indicator of the quadcopter keeps flashing slowly, it means that the quadcopter has entered into the low battery state. This time you need to charge the quadcopter with the USB cable provided.

SAFETY & CAUTIONS :

- This R/C flying model is a high dangerous commodity. Please make sure that it should be filed far away from the crowd. Please also pay more attention to the phenomenon such as incorrect assembly or damaged model or incorrect connection of electronic control equipment. Please also pay attention to the flying safety when operating and know more about the accident that may be happened due to your own negligence.
- Keep it far away from the barrier or crowd.
 - Keep it far away from the moisten environment.
 - Use this product correctly and avoid operating by your own.
 - Keep it far away from the high-speed rotating part and heat source.
 - Please conform to the sequence of power ON/OFF as the picture below shown, incorrect sequence of power ON/OFF may cause this product out of control and affect your own safety or others. Please form a good habit of switching on or switch off this product correctly.

TROUBLE SHOOTING :

PROBLEM	REASON	SOLUTION
No response from the quadcopter	1. Quadcopter battery power not enough. 2. Transmitter battery power not enough. 3. The band of the transmitter does not correspond to the decoding of the quadcopter.	1. Charge the quadcopter. 2. Charge or replace them if required. 3. Adjust the band on the transmitter and keep it the same as the quadcopter.
If the quadcopter is slow to respond or difficult to maneuver	1. Insufficient power with the transmitter. 2. Transmitter of the same frequency is used nearby.	1. Replace the battery. 2. Use the helicopter out of the range of other RC quadcopter.