


Product Information

Product parameters

Product name	AIR COOLING MIST FAN	Product model	E868
Wind speed gear	3 gear switching	Rated power	15W
Adapter output	5V $\equiv$ 2A	Working voltage	5V $\equiv$
Product weight	1.05KG	Battery capacity	6000mAh


Product size

332mm

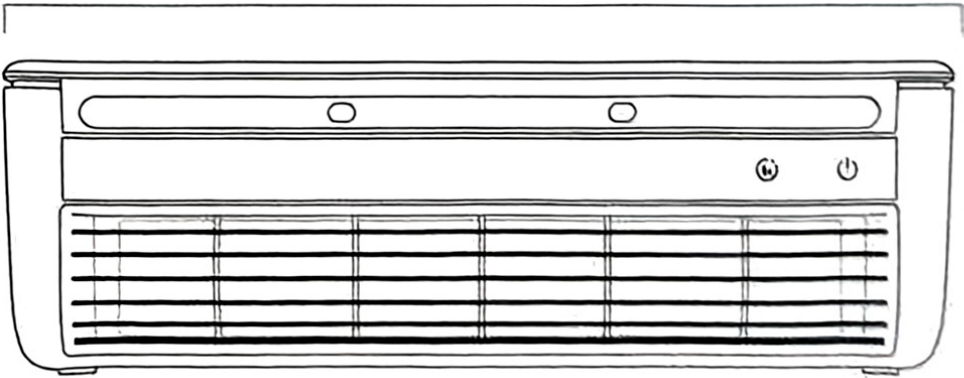

Front view

101mm

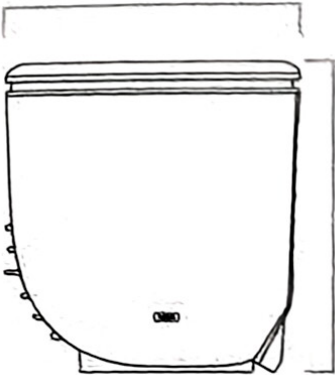

108mm

Side view

Safety and matters needing attention

- Please read the user manual carefully before use and use it correctly according to the instructions;
- If the power cord is damaged, in order to avoid danger, it must be replaced by professionals from the manufacturer, its maintenance department, or similar departments;
- Sharp objects such as metals and needles are prohibited from falling into this product to prevent short circuits;
- Do not use corrosive cleaning agents or diluents to clean products;
- Please do not let pets such as cats and dogs play or bite on this product to prevent pets from damaging the power supply and wiring;
- Do not pull or entangle the internal power cord of the product;
- Individuals who are unable to take care of themselves, infants and young children, or those who are not sensitive to heat must be accompanied by a guardian for use;
- When not in use, please turn off the power promptly and unplug the power plug;
- When the product is hung on a wall hanging buckle, the buckle should be perpendicular to the ground (cannot be tilted left or right) and smoothly pasted on a smooth wall surface for 24 hours before the entire machine can be hung on the wall;
- When using hooks for products, the place where the hooks are hung should be stable and firm to prevent them from falling off;
- Do not use wet hands to unplug the power plug to avoid the risk of electric shock;
- When there are stains on the surface of the product, you can use a soft cloth dipped in soap to wipe it clean. Do not use organic solvents such as gasoline or alcohol to scrub;
- Do not use in areas with high temperature, humidity, high dust, or volatile acidic or alkaline oils;
- If the machine is damaged or the body is damaged, please unplug the power in a timely manner and contact after-sales service for assistance

Protecting the environment

This product contains recyclable materials. Recycling and disposal should refer to local laws and regulations. Protecting through recycling and reuse
Our environment has made significant contributions to our environmental protection. Before disposing of equipment, the battery must be removed from the equipment; When removing the battery, the appliance must be powered off; The battery should Safely dispose of.

① Gently lift the cover (water tank) on the product ② Use a screwdriver to remove the two screws on the machine casing and the air outlet network component Remove the bottom screw ③ from the air mesh component, and then remove the three screws ④ After removing the upper shell, you can see the battery. Remove the red terminal on the battery cable to remove the battery.

Maintenance and storage


- Cut off the power supply before maintenance
- When there is oil stains on the body, it must be cleaned thoroughly to avoid discoloration and damage.
- After maintenance and cleaning, pack each component into a packaging box in the original packaging order and place it in a dry place for proper storage.
- This machine only requires general external cleaning and maintenance.
- Do not rinse the body directly with water.
- Avoid wiping with diluents, toluene, acidic detergents, oil, etc. to prevent discoloration or deterioration.

The front grille is removable and washable


When there is a lot of dust accumulation on the current mesh cover, it can be disassembled and washed in the shutdown state. After the front mesh cover is fully dried, it can be installed and the product can be reopened.

Safety reminder: Before removing the front grille, it is necessary to confirm that the fan and power supply are disconnected; Do not disassemble the front grille while the fan is in operation;


Do not turn on the machine if the front grille is not installed properly or the fan blades are exposed.

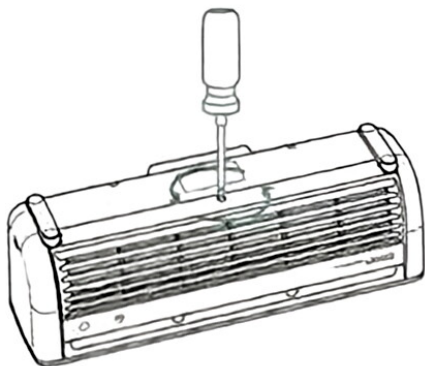


At the bottom of the product body, remove the screws that secure the front grille cover.

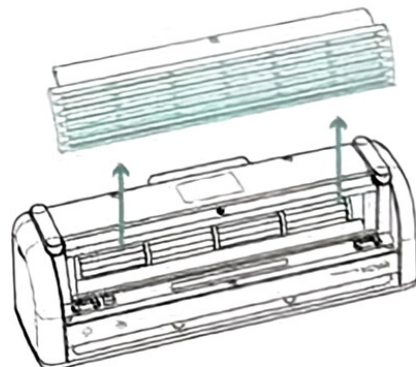

Lift the front grille with both hands and pull it out along the card slot to remove it.

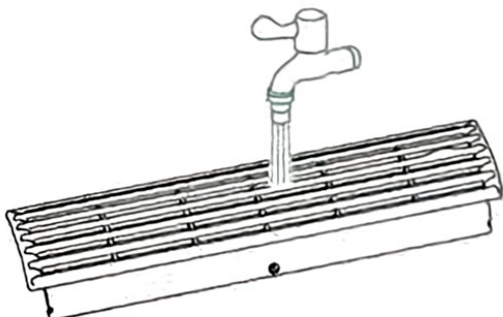

The front grille can be individually rinsed with water.

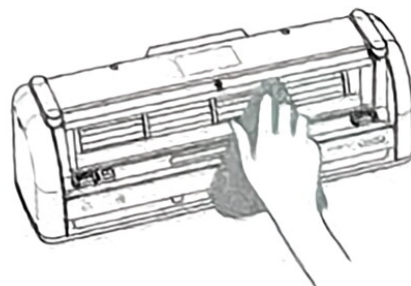

The body and internal wind turbine cannot be rinsed with water. Please gently wipe with a clean towel.

Maintenance instructions

Contact after-sales, explain the reason for the return and exchange, and reach a return and exchange agreement. Users who purchase the Eden series products will enjoy comprehensive "three guarantees" services in accordance with the relevant national regulations on the responsibility for repairing, replacing, and returning certain products.

Warranty principle

Within 30 days of receipt, if the product cannot be used normally due to quality issues, you can enjoy free replacement service; This product enjoys a free one-year warranty, with the warranty starting from the date of purchase; When replacing accessories or enjoying free repair services, it is necessary to provide pictures of the purchase voucher to online customer service; If there are quality issues, you can take pictures to retain evidence and consult online customer service or call 4008-948-698 for after-sales guidance.

Returns and exchanges are not provided in the following situations: incomplete accessories (gifts given with the product must be returned together and the product must not be damaged); Damage caused by improper use, storage, and maintenance by consumers; Damage caused by unauthorized disassembly and repair by our company's designated maintenance department; Damage caused by force majeure.

Fault analysis and troubleshooting

Fault phenomenon	Common problem causes	Processing confirmation
Unable to power on	The power cord is not plugged in or has poor contact	Plug in the power cord to ensure good contact
	Not pressed on/key	Press the on/off button to activate the machine
	Fan working abnormally	Unplug the power and contact after-sales service for assistance
	Machine damage	Unplug the power and contact after-sales service for assistance
Unable to shut down	Damage to the body	Unplug the power and contact after-sales service for assistance