
INSTALLATION GUIDE · MONITOR V2.0

Nomadic D1 DC-DC converter monitor on your Victron Cerbo GX

Make the cable, set up the Cerbo, and install the monitor. When you're done, the D1's readings appear on the Cerbo screen, in the VRM app and on a web page with live charts.

It only watches. The monitor listens to the D1 and never sends it anything, so the D1 keeps working exactly as it does today, on its own built-in logic.

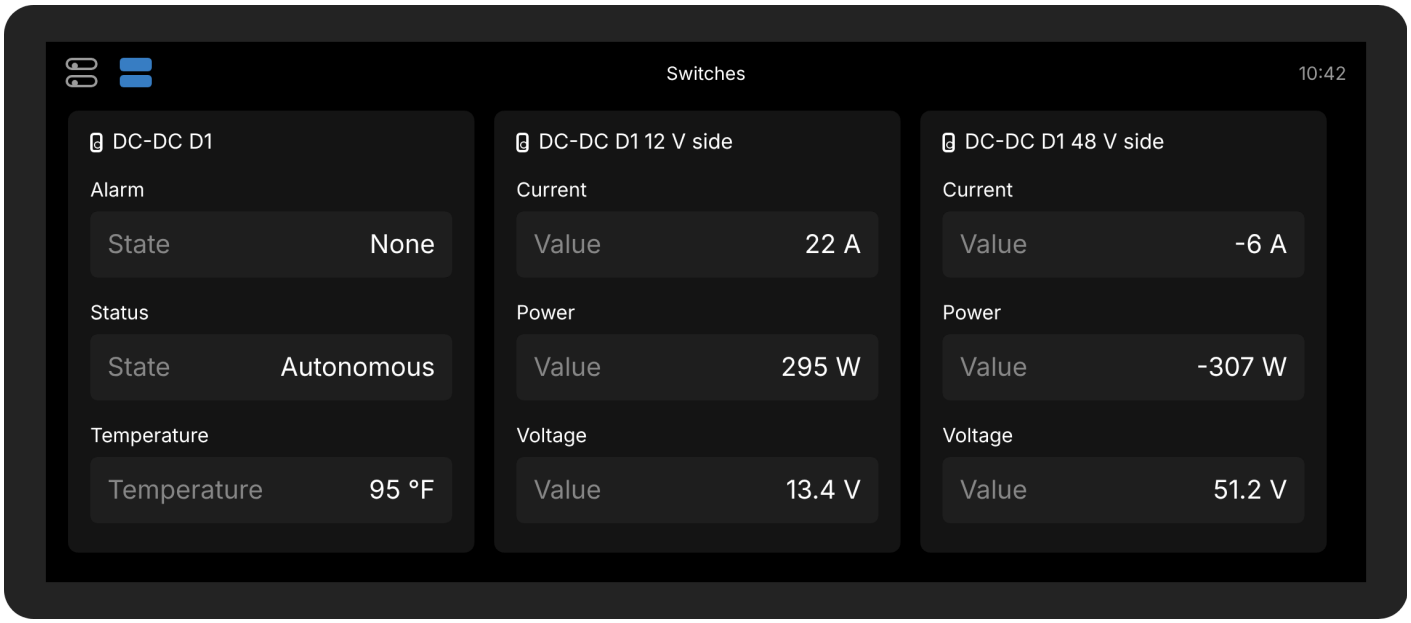

What you'll see on the Cerbo screen when you're done (drawn from Victron's own screen design, so the real screen may differ slightly).

You'll be able to see

- 12 V and 48 V side voltage, current and power
- The D1's temperature, what it's doing (standby, autonomous, derating…) and every alarm, in plain words
- Charts of the last 24 hours on a web page
- Everything in the VRM app on your phone

Good to know

- It takes about 1 hour, including making the cable
- Nothing changes for the D1. The Cerbo can't send it any commands
- You don't need to type any commands. The **Cerbo Setup** helper does it for you

STEP 1 Get what you need

STEP 2 Make the cable

STEP 3 Set up the Cerbo

STEP 4 Connect everything

STEP 5 Install the monitor

STEP 6 Use it

1 Get what you need

Gather everything before you start.

For the cable

- A standard Ethernet patch cable (Cat5e or Cat6), long enough to reach from the Cerbo to the D1
- Two **3-way lever wire connectors**, for example WAGO 221-413. They take 24–12 AWG wire: solid-core Cat5e/Cat6 (about 24 AWG) fits; very thin stranded patch-cable wire may not clamp well, so use solid-core cable, or put a small ferrule on each end
- Wire cutters and a wire stripper
- Heat-shrink tubing or electrical tape
- A multimeter with a continuity (beep) setting and an Ohms setting
- A VE.Can terminator: the small RJ45 plug that came in the Cerbo box
- A **120 Ω resistor**, ¼ W metal film (1 %), for the D1 end. Measure it before use: 115–125 Ω

For the software


- A Windows PC on the same network (Wi-Fi or Ethernet) as the Cerbo
- The project folder downloaded from GitHub, which contains **Cerbo Setup.bat** and the **dbus-nomadic-dcdc** folder
- The Cerbo running Venus OS **v3.80 or newer**. Step 3 shows you how to check

> **Safety**
>
> Before you work on the D1's wiring, switch off its 12 V supply (KL30/KL15) and follow the D1 manual. The CAN cable only carries data, but it ends next to the D1's 48 V and 12 V power terminals.

2 Make the cable


The Cerbo uses **RJ45 sockets**, the same plug as network cables. Take a ready-made network cable, keep the plug on one end for the Cerbo, and cut off the other end. You only need **2 of its 8 wires**: the brown pair. The D1 already has labelled wires coming out of its signal plug (CAN_H, CAN_L, and two voltage wires called KL15 and KL30). You join the network cable to its CAN_H and CAN_L wires with **two lever wire connectors**. The **120 Ω resistor** goes between the two connectors. **No ground wire** is needed.

The whole connection

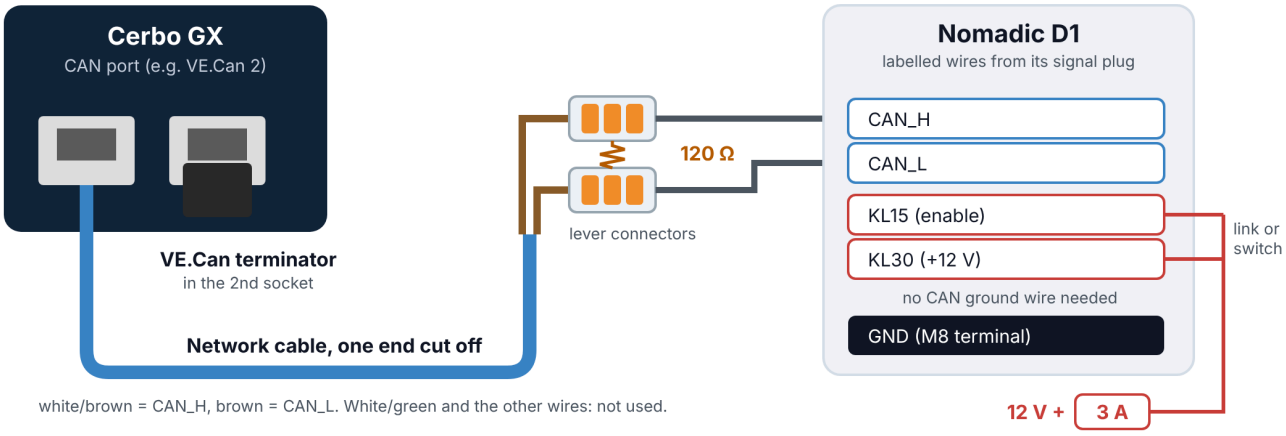

Blue: the network cable you make. The two lever connectors join it to the D1's CAN_H and CAN_L wires, with the required 120 Ω resistor between them. Red: the D1's own 12 V wires (KL30 and KL15). If your D1 already works today, they're already in place.

The two lever connectors

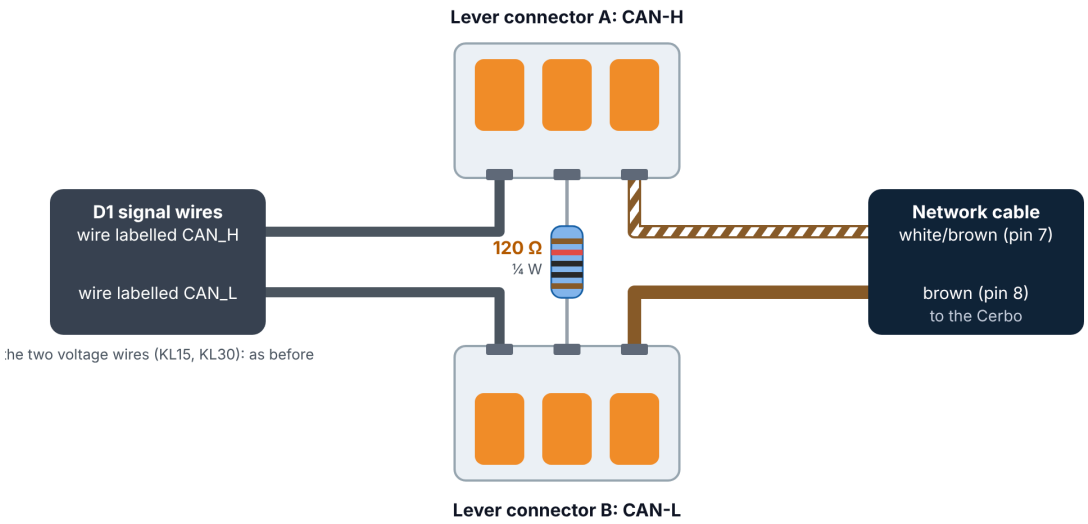


White/green (pin 3) and the other five wires: **not used**, cut short and insulate each one. No ground wire.


Strip each wire 11 mm (the gauge on the connector's side), push it fully in, close the lever. Heat-shrink both resistor leads.

Each connector joins three things: one D1 wire, one network-cable wire and one leg of the resistor. The resistor bridges the two connectors, so it sits across CAN_H and CAN_L at the D1.

Which wire goes where

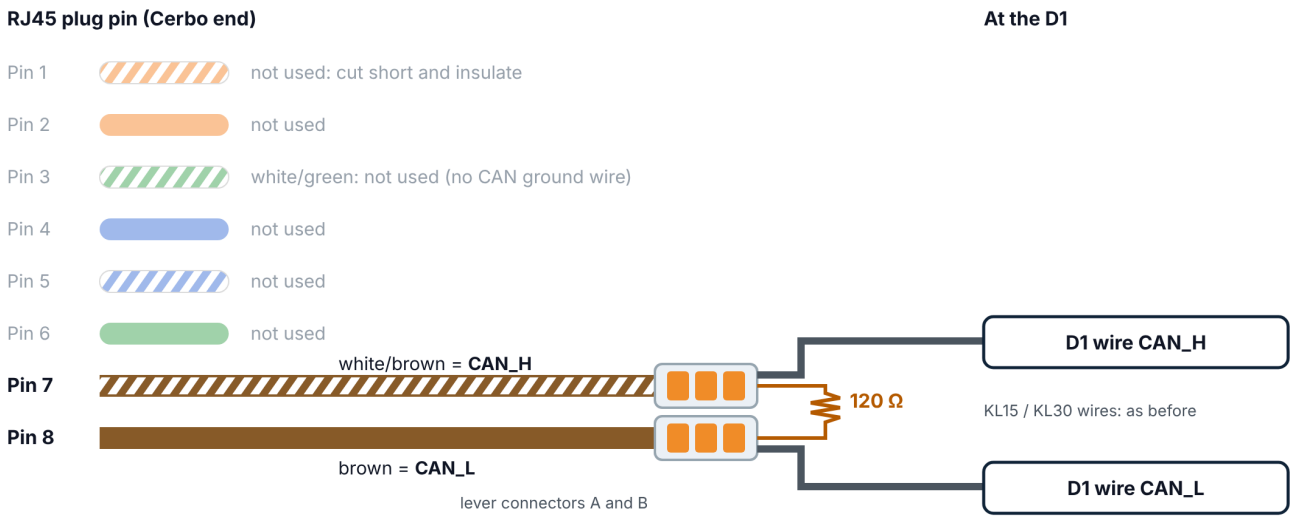


Pins 7 and 8 are the **brown pair** (twisted together), which suits CAN well. Everything else, including white/green (pin 3), is not used.

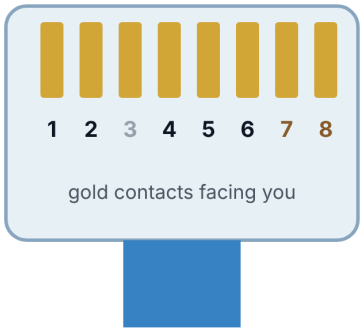

cable pointing down, clip at the back

RJ45 plug (Cerbo end): only pins 7 and 8 are used.

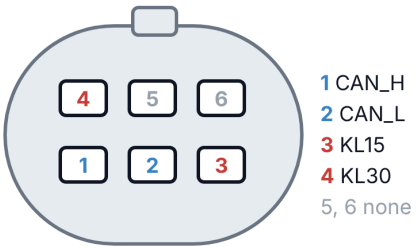

layout as drawn in the D1 manual
(facing the D1's connector)

D1 signal plug (TE 1-967616-1), for reference only:
its wires come out labelled, so there's no need to open it.

Wire	RJ45 pin (Cerbo)	Goes to
white/brown	7	**Lever connector A**, with the D1's wire labelled **CAN_H**
brown	8	**Lever connector B**, with the D1's wire labelled **CAN_L**
120 Ω resistor	–	One leg in connector A, the other in connector B
The other 6 wires (pins 1–6, including white/green)		Not used. Cut them short and insulate each one. No ground wire

Sources: Victron's *VE.Can to CAN-bus BMS cables manual* (Cerbo side: pin 7 CAN-H, pin 8 CAN-L) and the *D1 Bidirectional DC-DC Converter Manual*, Rev D.

Make it

2a **Cut off one plug.** Keep the other plug for the Cerbo. Strip about 5 cm (2 in) of the grey outer jacket.

2b **Check the wires with a multimeter** on the continuity (beep) setting. Touch one probe to a gold contact on the plug and the other to a wire:

- Pin 7 should beep with **white/brown**
- Pin 8 should beep with **brown**

2c **Insulate the 6 wires you don't need**, including white/green. Cut them short and cover **each one** separately with heat-shrink or tape, so none can touch anything.

2d **Join the wires with the two lever connectors**, with the D1 switched off. Strip each wire **11 mm** (the strip gauge on the connector's side), lift the lever, push the wire fully in, and close the lever.

- **Connector A (CAN-H):** the D1's wire labelled **CAN_H**, the **white/brown** wire, and one leg of the resistor
- **Connector B (CAN-L):** the D1's wire labelled **CAN_L**, the **brown** wire, and the other leg of the resistor

Slide heat-shrink over both resistor legs so they can't touch each other or anything metal. Keep the brown pair twisted up to a few centimetres from the connectors. Tie the connectors and cable to something solid, or put them in a small box, so road vibration can't pull on them.

2e **No ground wire.** CAN works on the difference between CAN_H and CAN_L. The Cerbo and the D1 already share the van's negative through their power wiring, so a separate CAN ground isn't needed. Leaving it off also avoids a thin wire running in parallel with the main negative cables (the Cerbo's VE.Can 2 port is not isolated). Once everything runs, step 5c includes a quick check of the ground difference.

> Never connect any of the network-cable wires to the D1's HV+ or LV+ terminals. They only join the D1's labelled CAN_H and CAN_L wires.

2f **Check the D1's two voltage wires (KL30 and KL15).** The D1 needs both to work at all, and without them it's also silent on CAN. If your D1 already works today, they're already in place: just check them. On the Grand Design LTV1 both are joined to one always-on, fused 12 V wire, which keeps the D1 always enabled.

Wire	Connect to
KL30	A permanent 12 V supply (9–16 V, up to 2 A) through a 3 A fuse close to the 12 V source
KL15	A 12 V "enable" signal (8 V or more = on). Link it to KL30 to keep the D1 always enabled, or wire it through a switch, ignition or relay. The manual (Rev D) fuses it at 1 A when it has its own wire

2g **Check the resistor.** With the RJ45 plug not yet in the Cerbo, measure between pins 7 and 8 of the RJ45 plug (or the white/brown and brown wires). It should read about **120 Ω**. If it reads open, a wire isn't fully in its lever connector.

2h **Final check:** plug the RJ45 into the Cerbo port you'll use, with the VE.Can terminator in that port's other socket. With everything switched off, measure between white/brown and brown again:

You measure	Meaning
About 60 Ω	Correct: both ends are terminated
About 120 Ω	The VE.Can terminator isn't in the Cerbo port's other socket, or the cable is in a different port
Very high or "OL"	The resistor at the D1 isn't connected, or a wire isn't fully in its lever connector. Re-check steps 2d and 2g

3 Set up the Cerbo

Do this on the Cerbo's touchscreen, or remotely with Remote Console in VRM. Every item below is found from the Settings menu.

3a **Check the firmware version.** Go to **Settings › General › Firmware**. It needs to be **v3.80 or newer**. If it's older, use **Online updates** on the same page to update first.
Then go to **Settings › General › Modification checks** and make sure **modifications are enabled** (that's the default). If they are off, Venus OS switches off the start-up script and the driver disappears after the next restart.

3b **Write down the Cerbo's IP address.** Go to **Settings › Connectivity › Ethernet** (or Wi-Fi) and read the IP address.
IP address: _____

3c **Choose the CAN port and speed.** Use the Cerbo's second CAN port, with nothing else plugged into it. The labels next to the ports tell you which Cerbo you have:

- **Cerbo GX MK2** (ports labeled **VE.Can 1** and **VE.Can 2**): go to **Settings › Connectivity › VE.Can port 2** (some firmware still calls it **BMS-Can port**) and set **CAN-bus profile** to **VE.Can (250 kbit/s)**. That is the default. The D1 talks at either 250 or 500 kbit/s, so start with 250. Step 5c tells you if the D1 is talking at the other speed. If it is, change the profile to **CAN-bus BMS LV (500 kbit/s)**. Older firmware calls it **CAN-bus BMS (500 kbit/s)**.
  Victron's own messages use a different kind of CAN address from the D1's, so they don't get in each other's way. Other guides may mention a profile called *Up, but no services*. The Cerbo screen no longer offers it, and you don't need it.
- **Original Cerbo GX** (second port labeled **BMS-Can**): go to **Settings › Connectivity › BMS-Can port**. This port only runs at 500 kbit/s, so leave it on **CAN-bus BMS (500 kbit/s)**. It works only if the D1 talks at 500 kbit/s. If step 5c reports bus errors on it, the D1 is at 250 kbit/s: use the VE.Can port (if nothing else is on it) with **VE.Can (250 kbit/s)** instead.

3d **Let your PC connect to the Cerbo** (this switches on SSH):

1. Go to **Settings › General › Access & Security › Access level** and choose **User & Installer**. The password is `ZZZ`.
2. Still on the Access & Security page, drag the list down with your finger and hold it for about 5 seconds (on Remote Console with a keyboard: hold the right-arrow key). The access level changes to **Superuser**.
3. Tap **Root password** and choose a password (at least 8 characters).
   Root password: _____
4. Switch **Enable SSH on LAN** to on.

4 Connect everything

4a Plug the cable's RJ45 plug into the CAN port you chose in 3c, with the VE.Can terminator in the port's other socket (as in step 2h).

4b Plug the D1's signal plug back in and switch its 12 V supply (KL30/KL15) back on.

> Nothing changes for the D1, now or later. The monitor can only listen: it has no way to send the D1 a command.

5 Install the monitor with Cerbo Setup

5a **Open the helper.** In the project folder, double-click `Cerbo Setup.bat`. If Windows shows "Windows protected your PC", click **More info** and then **Run anyway**.

5b **Type the Cerbo's IP address** from step 3b and press **Enter**. The helper remembers it for next time, and then shows its menu:

```
  ============================================================
    Nomadic DC-DC monitor  -  Cerbo GX setup
    Cerbo address: 192.168.1.50
    Monitor only: nothing is ever sent to the converter
  ============================================================

    1  Edit the settings (config.ini)
    2  Find which Cerbo port the converter is on
    3  Watch live readings from the converter
    4  Install or update the monitor on the Cerbo
    5  Show the monitor log

    U  Make a USB-stick installer (no network needed)

    9  Try it with a pretend converter (simulation)

    6  Change the Cerbo address
    7  Fix "REMOTE HOST IDENTIFICATION HAS CHANGED"
    8  Uninstall the monitor from the Cerbo
    0  Exit

  Type a number and press Enter: _
```

> **Want to see it first?** Option **9** runs everything with a pretend D1 and no CAN bus at all (see the Safe Test Plan, `docs/safe-test-plan.pdf`).

> **The password prompt.** Every option that talks to the Cerbo asks for the root password from step 3d. **Nothing appears on screen while you type it.** That's normal: type it and press Enter.

5c **Type `2`: find the converter.** The helper copies the monitor to the Cerbo and listens on every CAN port for 3 seconds. You should see something like this:

```
Venus OS v3.80 OK
Listening 3 s on each CAN port (nothing is transmitted)...
  can0    250 kbit/s  error-active  nothing from the converter
  can1    250 kbit/s  error-active  CONVERTER FOUND (391 frames)
The converter is on can1. config.ini has interface = auto, so the driver finds it there by itself.
Good.
```

Port names differ between Cerbo models (`can1`, or `vecan1` on the MK2). That's fine: with `interface = auto` the driver uses whichever port the D1 is on. If the D1 is set to the other speed, you'll see bus errors

instead:

```
  can1    250 kbit/s  error-passive nothing decoded, but 288 bus errors: talking at a different
speed?
Something is talking on can1 at a different speed. On the Cerbo, set that port's CAN-bus
profile to "CAN-bus BMS LV (500 kbit/s)" and run this again.
```

Do what it says (step 3c), then type `2` again. If nothing is heard at all, see Troubleshooting, and check the KL30/KL15 supply first.

> **Ground check (no CAN ground wire).** Later, with the D1 working hard, measure between the Cerbo's negative terminal and the D1's GND terminal. A few tenths of a volt is normal. More than about 1 V points to a poor negative connection: fix that first. If the Cerbo ever can't hear the D1 although the wiring and the 60 Ω check are right, try a wire from RJ45 pin 3 (white/green) to the D1's GND as a test.

5d **Type `1` : edit the settings.** Notepad opens `config.ini`. Check these lines, then press Ctrl+S to save and close Notepad:

Line	What to put
`interface = auto`	Leave as auto: the driver finds the D1's CAN port by itself
`custom_name = DC-DC D1`	The name shown on the Cerbo and in VRM
`password =`	Optional: a password for the web page. Without one, anyone on your network can see the readings (but can't change anything)
`switch_pane = yes`	Leave as yes to get the cards on the Cerbo screen and in VRM

5e **Type `3` : watch the live readings** (optional, but a good check). The voltages should match what a meter shows on the D1's terminals. To stop, press Ctrl+C, then type N and press Enter.

```
--- can1 10:42:07  ONLINE  0x066=20/s 0x088=100/s 0x520=10/s
LV  13.4 V  +22 A   +295 W | HV  51.2 V   -6 A   -307 W | 35 C
Mode: Autonomous (default set-point) | Precharge not in process
Alarms: none
Software 1.2.3  Hardware 5
```

5f **Type `4` : install.** After about 10 seconds you should see:

```
/service/dbus-nomadic-dcdc: up (pid 1834) 6 seconds
... INFO: Nomadic DC-DC monitor 2.4.1 starting on auto (monitor only: nothing is transmitted)
... INFO: Converter online on can1
```

Done! It now starts by itself after every reboot and firmware update.

No network to the Cerbo? Install from a USB stick instead

Venus OS can install add-ons from a USB stick or microSD card by itself, with no SSH or password. Do this instead of 5c–5f:

U1 **Get the file.** Download `venus-data-nomadic-d1-monitor.tar.gz` from the latest release (https://github.com/CKOCI13/cerbo-nomadic-d1-monitor/releases/latest). It has the standard settings, with `interface = auto`, so there's nothing to edit. To change settings first, edit config.ini (Cerbo Setup option `1`) and type `U` to make your own copy of the file. On a Mac, download it with Chrome or Firefox: Safari can unpack it into a `.tar` file, which the Cerbo ignores.

U2 Copy it to the **top folder** of a USB stick or SD card (FAT32), not inside another folder. Put only **one** `venus-data` file on the stick. If your browser saved it as `venus-data-nomadic-d1-monitor (1).tar.gz`, rename it back to `venus-data-nomadic-d1-monitor.tar.gz`: the Cerbo skips names with spaces.

U3 Put the stick in the Cerbo and restart it (**Settings › General › Reboot**, or switch it off and on). The Cerbo unpacks the file and installs the monitor while it starts.

U4 **Wait about 2 minutes, then take the stick out.** The Cerbo renames the file on the stick to `...tar.gz.installed`, so it never installs twice. Then open the switch pane: the DC-DC D1 cards should be there.


Without SSH you can't run "find the converter" (5c). If the Status card says **No communication**, check the CAN port you chose in 3c, its speed (250 / 500 kbit/s) and the wiring, and restart the Cerbo. To install again, use a fresh file (U1).

Upgrading from the old control version (1.x)? Installing this monitor (option 4) replaces it. If the old version was in Off, Buck or Boost, its commands stop when the monitor starts. Nobody knows yet whether the D1 then goes back to its own logic or keeps the last command. So first switch the old version to **Automatic** (it then sends nothing), check the D1 behaves as it does on its own, and only then install. If it seems stuck, switch KL15 off and on to restart its controller (if KL15 is joined to KL30, as on the LTV1, pull that wire's fuse for a few seconds).

6 Use it

On the Cerbo screen (and Remote Console)

Tap the **switches icon** at the top left of the screen. Three cards appear (swipe if your screen shows fewer at once):

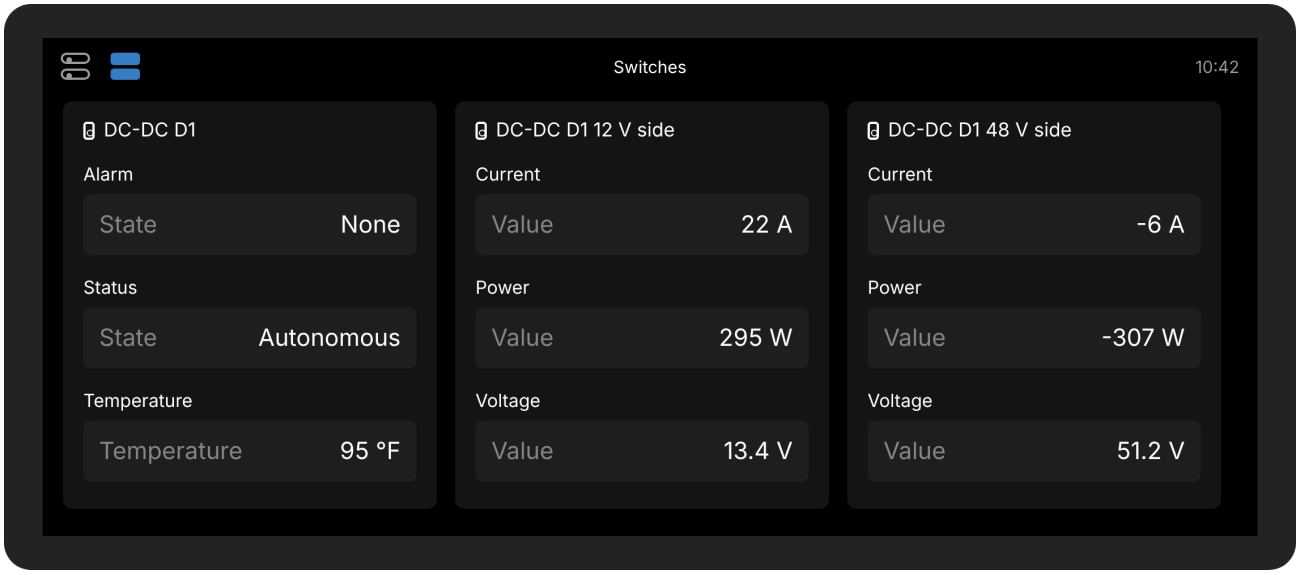

Card	Item	Shows
DC-DC D1	Alarm	The most serious active alarm, or None (the D1's own alarms first, then the monitor's temperature warning). The tile turns red on a fault or a temperature alarm, and "N active" appears when there are several
	Status	What the D1 says it's doing: Standby, Autonomous, Buck, Boost, Derating (hot)... or **No communication**
	Temperature	The D1's power board temperature, in your Cerbo's temperature unit. For °F choose Fahrenheit at **Settings › General › Display & Appearance › Data units › Temperature**
DC-DC D1 12 V side **DC-DC D1 48 V side**	Current, Power, Voltage	Live readings for that battery side. **+** means energy going into that battery, **−** coming out (see below)

To rename, move or hide any item, go to **Settings › Devices › DC-DC D1**. A hidden **Precharge status** item is there too (the D1 manual doesn't use precharge).

On the Overview page

The D1 has an **Alternator** tile: **+** watts while it charges the 48 V battery, **−** while it powers the 12 V side from it. Listing it as an alternator keeps the Cerbo's **DC Loads** figure right. Nothing is sent to the D1. For no tile, set `service_class = dcdc`.

The D1's temperature, on every screen

The temperature is the D1's **internal power board**, the same sensor the D1 uses to protect itself. It runs well above the air around it: about 180 °F while boosting about 1.7 kW is normal.

Where	What you see
Overview page	Top right of the **Alternator** tile
Device page (Settings › Devices › DC-DC D1)	**Alternator temperature** (Victron's fixed wording)
Levels › Environment	A gauge named **DC-DC D1**, 32–212 °F. Its sensor type is **Water heater**, the only type whose scale covers the D1's working range
Brief page	Can show it in the centre circle: Settings › General › Display & Appearance › Brief page › Center details
Relays	A Cerbo relay set to the **Temperature** function can switch a fan or light on its reading (Settings › Relay › Temperature control rules)
Switch pane, web page, VRM	Temperature item; the web page also says OK / Warning / Alarm

Board temperature	D1 (manual Rev D, section IV.B)	Monitor
up to 212 °F (100 °C)	Full output	OK
212–221 °F (100–105 °C)	Full output	**Warning**: High Temperature notification, Alarm card "Temperature high"
221–248 °F (105–120 °C)	Cuts its current back, from 100 % to 0 %; status "Derating (hot)"	**Alarm**: notification, red Alarm card
above 248 °F (120 °C)	Stops and reports a fault	The D1's own fault on the Alarm card

The levels are in the `[temperature]` part of config.ini, in °C. Each clears 5 °F (3 °C) below where it came on. Air around the D1: full power up to 140 °F (60 °C); the manual asks for airflow along the heatsink fins while it works.

> **DVCC temperature sensor: leave it on "No sensor" or your battery.** Under Settings › DVCC › Temperature sensor the Cerbo also lists the D1 as **"None on CAN vecan1 (monitor only)"**, because Victron offers any alternator that reports a temperature. Don't choose it: the chargers would treat the D1's board temperature as the battery's. "Automatic" never picks it. The DC-DC D1 temperature sensor is not offered there (its type is Water heater); don't change its type to Battery.

In the VRM app and portal

The same cards appear in the **Switches** widget in the VRM app, and in the **Switches** panel on the VRM portal dashboard. The Cerbo must be online with VRM. Nothing needs to be changed in VRM's access settings: there is nothing to control.


The picture is an illustration. VRM draws its own version of these cards, so the layout may differ a little.

On a web page, with charts


On any phone, tablet or computer on the same network, open:

http://<Cerbo IP>:8088

It shows the live readings, which way the energy is flowing, every alarm, the raw status bits, and charts of the last 10 minutes to 24 hours. Point at a chart to read the values at that moment. The history starts again when the monitor restarts.

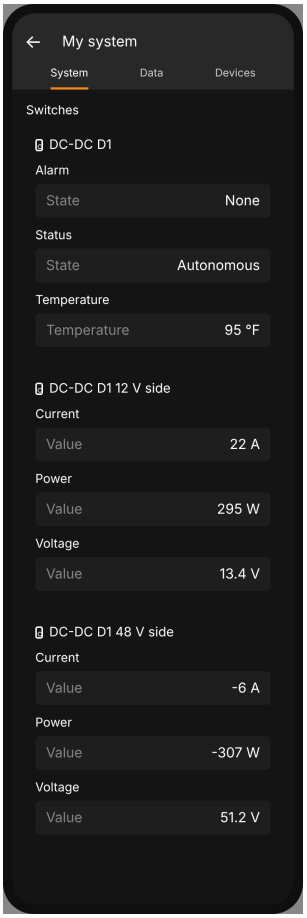


VRM app, Switches widget (illustration)

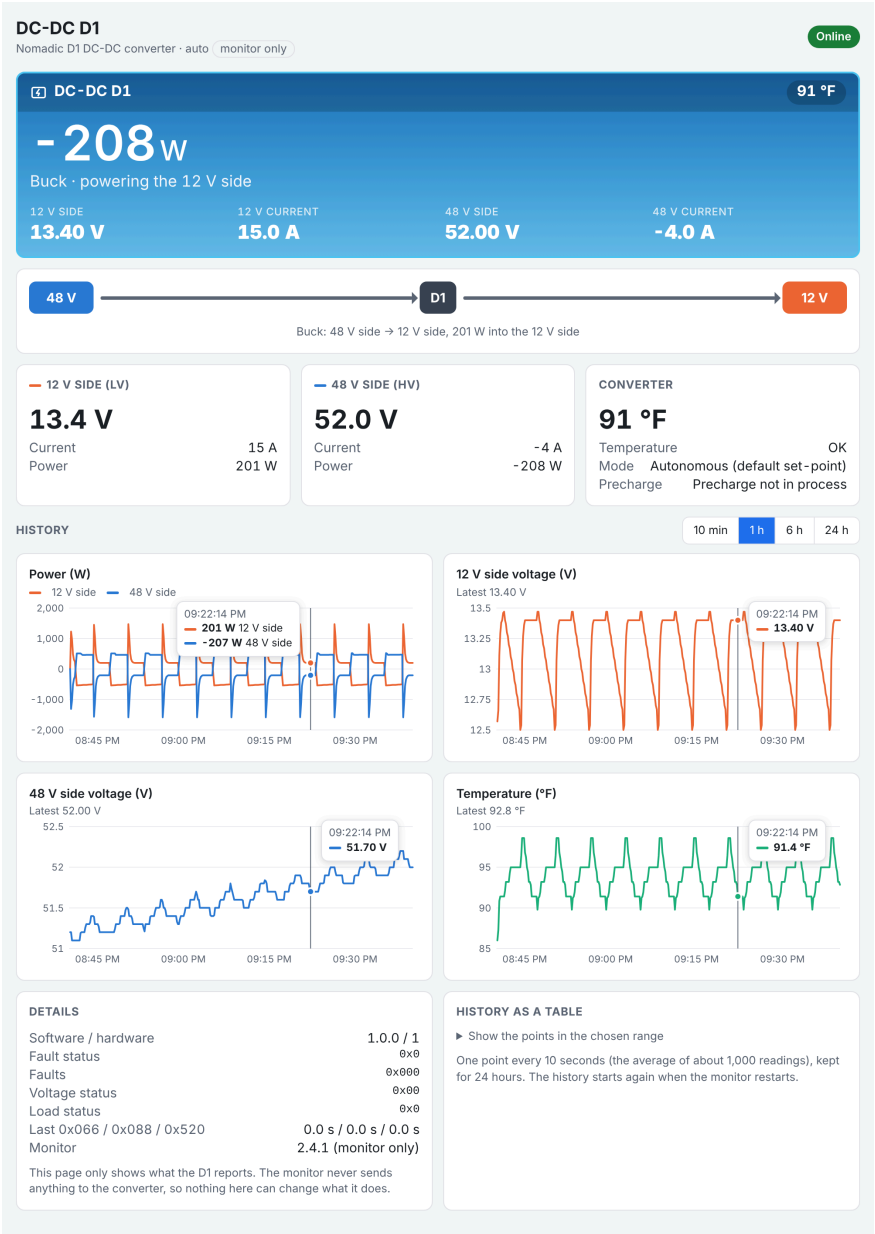

The web page, with a pretend D1 (simulation).

When something is wrong

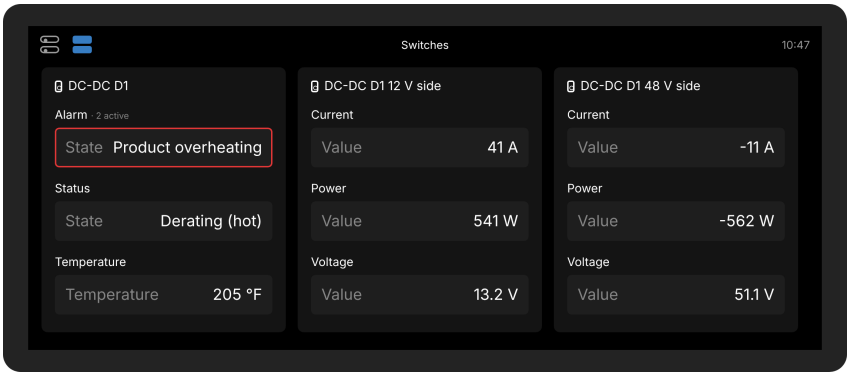

An example: the D1 is hot, so it's limiting its power (derating). The alarm shows the most serious problem first.

Reading the numbers

Which way is the energy going?

BUCK: 48 V HELPS 12 V

48 V ····· D1 ····· 12 V

12 V side current **+22 A** · power **+295 W**
48 V side current **−6 A** · power **−307 W**

BOOST: 12 V HELPS 48 V

48 V ····· D1 ····· 12 V

12 V side current **−40 A** · power **−520 W**
48 V side current **+9 A** · power **+470 W**

+ means energy is going **into** that battery, **−** means it's coming **out**. The side that's being charged is the one with the plus sign. The 48 V side always shows a little more than the 12 V side gets in buck (and the other way round in boost): that difference is the D1's own losses.

The D1's documents don't say which way its current is counted. The monitor shows exactly what the D1 reports; check the sign once with a clamp meter.

On its own, the D1 **bucks** (charges the 12 V side from 48 V) when the 12 V side drops below 12.5 V. It only does this when the 48 V side is 41–58 V, and it fills the 12 V side back up to about 13.4 V. It **boosts** (pushes 12 V energy up to 48 V) when the 12 V side is 13.5–16 V, until it falls below 12.3 V. In between it waits in **Standby**, with no current.

? Troubleshooting

What you see	What to do
Option 2: "not heard on any port"	Check, in this order: 1. the D1 has power on its KL30 wire (9–16 V) and its KL15 wire (8 V or more), measured to GND. Without both, its controller is off and silent 2. the CAN speed: if it reports bus errors, switch to the other speed (step 3c) 3. the wires (2b), and that each lever connector holds the right D1 wire (CAN_H with white/brown, CAN_L with brown) 4. the termination reads about 60 Ω (2h) 5. the cable is in the Cerbo port you set up
"ssh" or "tar" is not recognized	Install the Windows OpenSSH client: Settings › Apps › Optional features › Add a feature › OpenSSH Client.
"Connection timed out" or "Connection refused"	Check the IP address (menu option 6), that the PC and Cerbo are on the same network, and that Enable SSH on LAN is on (step 3d).
"Permission denied"	Wrong root password. Set it again (step 3d, item 3).
"REMOTE HOST IDENTIFICATION HAS CHANGED"	This happens after the Cerbo is reset or replaced. Use menu option 7, then try again.
Option 2: Venus OS version warning	Update the Cerbo (step 3a). Older firmware can't show the cards.
Nothing appears in the switch pane	Check the firmware is v3.80 or newer. Use option 5 (log) and look for "Registered ... on D-Bus". Make sure `switch_pane = yes` in config.ini.
Status shows Standby	Normal when the 12 V side is between 12.5 and 13.5 V: the D1 has nothing to do.
Status shows No communication	The Cerbo can't hear the D1. Check KL30/KL15, the cable and the termination.
The charts say "Collecting data..."	They add a point every 10 seconds. Wait a minute. They start empty after every restart of the monitor or the Cerbo.
The "DC Loads" figure on the Cerbo goes negative	The D1 is set up as a DC-DC converter (`service_class = dcdc`), which Victron leaves out of its sums. Set `service_class = alternator` (the default) in config.ini (option 1, then 4).

To change settings later, open Cerbo Setup, choose 1 to edit config.ini, save, then choose 4. **To remove it,** choose 8 and type YES. The D1 is not affected either way.