
INSTALLATION GUIDE · CONTROL EDITION V1.3

Nomadic D1 DC-DC converter on your Victron Cerbo GX

Make the cable, set up the Cerbo, and install the driver. When you're done, the D1's readings and controls appear on the Cerbo screen, in the VRM app and on a web page.

This is the control edition, for advanced users. It can command the D1. If you only want to see what the D1 is doing, use the monitor-only edition instead (`github.com/CKOCI13/cerbo-nomadic-d1-monitor`), which never sends the D1 anything.

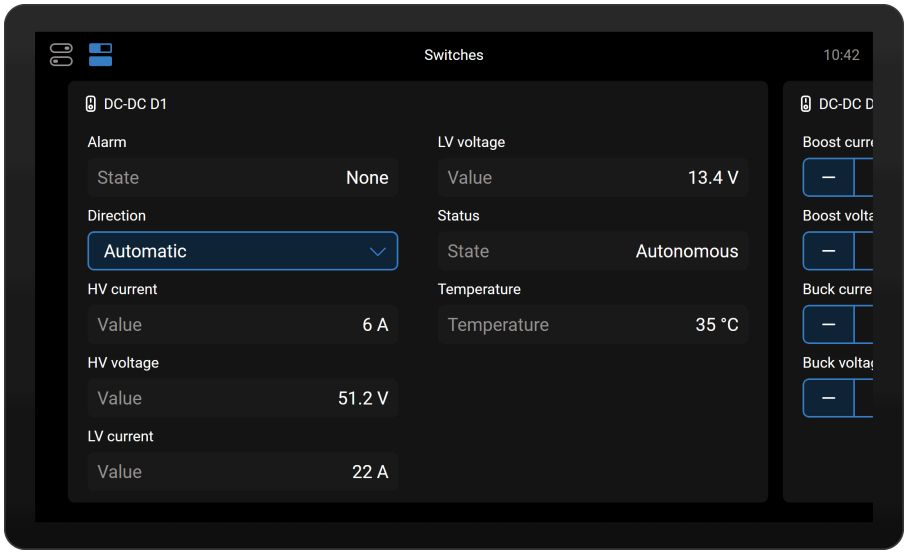

What you'll see on the Cerbo screen when you're done (drawn from Victron's own screen design, so the real screen may differ slightly).

You'll be able to

- See LV/HV voltage and current, temperature, status and alarms
- Run the D1 in Automatic within your current limits, or choose Off, Buck (48 V to 12 V) or Boost (12 V to 48 V) by hand
- Change the voltage targets and current limits

Good to know

- It takes about 1 hour, including making the cable
- In Automatic (the default) the Cerbo makes the D1's own buck / boost / standby choices and keeps it within your current limits. Nobody has to choose Buck or Boost
- You don't need to type any commands. The **Cerbo Setup** helper does it for you

STEP 1	STEP 2	STEP 3	STEP 4	STEP 5	STEP 6
	Make the cable			Install the driver	Use it

Get what you need		Set up the Cerbo	Connect everything		

1 Get what you need

Gather everything before you start.

For the cable

- A standard Ethernet patch cable (Cat5e or Cat6), long enough to reach from the Cerbo to the D1
- Two crimp contacts to add CAN_H and CAN_L to the D1's 6-pin signal plug (TE Connectivity connector 1-967616-1, per the D1 manual). Ask Nomadic or a TE distributor for the matching plug and contacts, or for a ready-made pigtail
- A ring terminal (M8) or a free spot on your ground bus, for the CAN ground wire
- Wire cutters, a wire stripper and a crimp tool for the TE contacts
- Heat-shrink tubing or electrical tape
- A multimeter with a continuity (beep) setting and an Ohms setting
- A VE.Can terminator: the small RJ45 plug that came in the Cerbo box
- A 120 Ω resistor (¼ W) for the D1 end. Required: the D1 has no built-in terminator
- Only if the D1 isn't wired yet: wire, a 3 A fuse for its KL30 wire and a 1 A fuse for its KL15 wire (step 2f)

For the software


- A Windows PC on the same network (Wi-Fi or Ethernet) as the Cerbo
- The project folder downloaded from GitHub, which contains **Cerbo Setup.bat** and the **dbus-nomadic-dcdc** folder
- The Cerbo running Venus OS **v3.80 or newer**. Step 3 shows you how to check

> **Safety**
>
> Before you work on the D1's wiring, switch off its 12 V supply (KL30/KL15) and follow the D1 manual. The CAN cable only carries data, but it ends next to the D1's 48 V and 12 V power terminals.

2 Make the cable


The Cerbo uses **RJ45 sockets**, the same plug as network cables. The easiest way is to take a ready-made network cable, keep the plug on one end for the Cerbo, and cut off the other end. You only need **3 of its 8 wires**: CAN_H and CAN_L go into the D1's signal plug, and the CAN ground goes to the common ground.

The whole connection

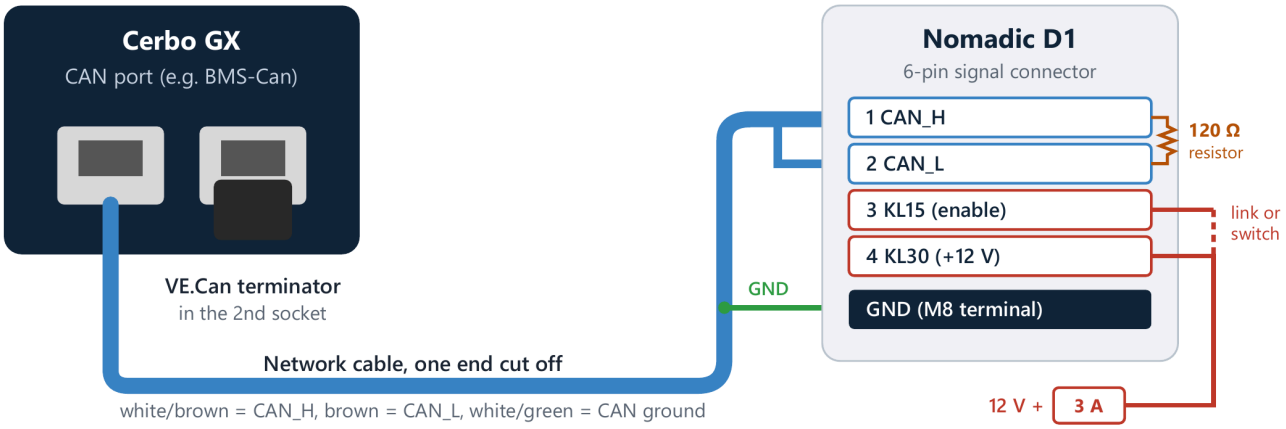


Blue: the network cable you make (CAN), with the required 120 Ω resistor across CAN_H and CAN_L at the D1. Green: CAN ground to the D1's common ground. Red: the D1's own 12 V wires (KL30 and KL15). If your D1 already works today, the red wires are already in place.

Which wire goes where

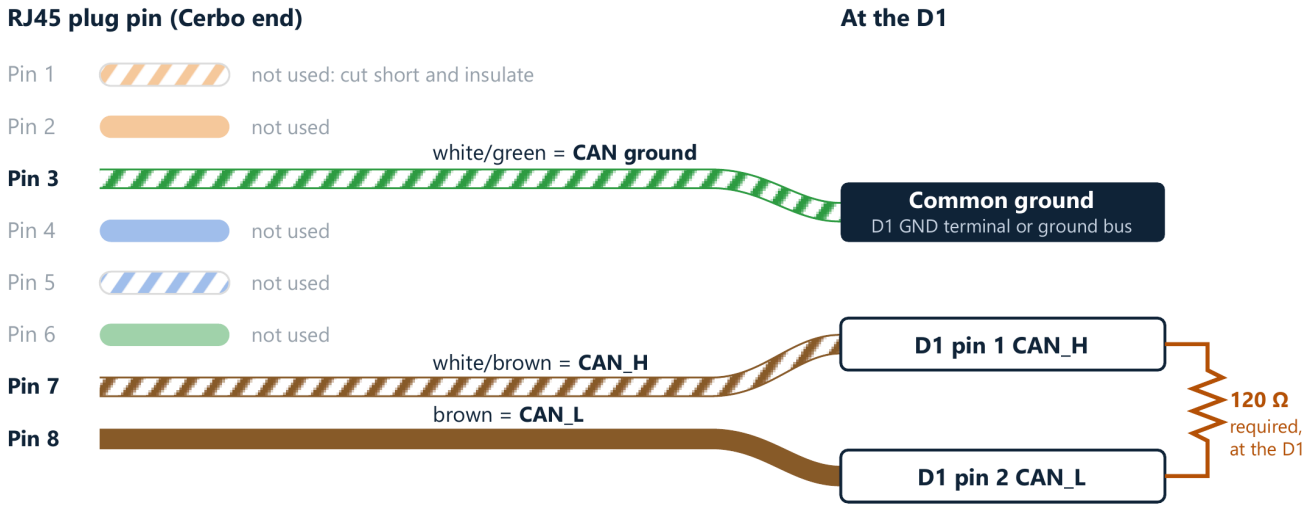


Pins 7 and 8 are the **brown pair** (twisted together), which suits CAN well. Pin 3 is **white/green** on most cables (T568B), or **white/orange** on T568A cables. The multimeter check in step 2b tells you which.

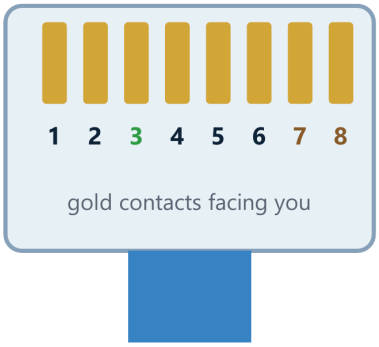

cable pointing down, clip at the back

RJ45 plug (Cerbo end): pin 1 is on the left.

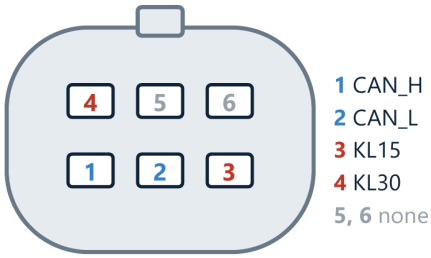

layout as drawn in the D1 manual
(facing the D1's connector)

D1 6-pin signal connector. Check the numbers moulded on the connector before you crimp.

Wire	RJ45 pin (Cerbo)	Goes to (D1)
white/brown	7	**Pin 1 CAN_H** on the 6-pin signal connector
brown	8	**Pin 2 CAN_L** on the 6-pin signal connector
white/green (white/orange on T568A)	3	**Common ground**: the D1's GND terminal, or the ground bus it's bolted to. The D1's signal connector has no ground pin
The other 5 wires (pins 1, 2, 4, 5, 6)		Not used. Cut them short and insulate each one

Sources: Victron's *VE.Can to CAN-bus BMS cables manual* (Cerbo side: pin 7 CAN-H, pin 8 CAN-L, pin 3 GND) and the *D1 Bidirectional DC-DC Converter Manual*, Rev D (signal connector pinout and fuses).

Make it

2a **Cut off one plug.** Keep the other plug for the Cerbo. Strip about 5 cm (2 in) of the grey outer jacket.

2b **Check the wires with a multimeter** on the continuity (beep) setting. Touch one probe to a gold contact on the plug and the other to a wire:

- Pin 7 should beep with **white/brown**
- Pin 8 should beep with **brown**
- Pin 3 should beep with **white/green**. If it beeps with white/orange instead, use white/orange as the CAN ground

2c **Insulate the 5 wires you don't need.** Cut them short and cover **each one** separately with heat-shrink or tape, so none can touch anything.

2d **Add CAN_H and CAN_L to the D1's signal plug.** With the D1 switched off, crimp contacts onto **white/brown** (into **pin 1, CAN_H**) and **brown** (into **pin 2, CAN_L**). Keep the brown pair twisted together as close to the plug as you can. If your D1 is already wired, unplug the existing signal plug and add the two contacts to it.

2e **Connect the CAN ground.** Put a ring terminal on the **white/green** wire and connect it to the **common ground**: the D1's GND terminal, or the ground bus that terminal is bolted to.

> Never connect any of the network-cable wires to the D1's HV+ or LV+ terminals. CAN_H and CAN_L only go to pins 1 and 2 of the signal plug.

2f **Check the D1's own 12 V wires (KL30 and KL15).** The D1 needs both to work at all, and without them it's also silent on CAN. If your D1 already works today, they're already in place: just check them.

Pin	Connect to
4 KL30	A permanent 12 V supply (9–16 V, up to 2 A) through a 3 A fuse close to the 12 V source
3 KL15	A 12 V "enable" signal (8 V or more = on). Link it to KL30 to keep the D1 always enabled, or wire it through a switch, ignition or relay. The manual (Rev D) fuses it at 1 A when it has its own wire
5, 6	Nothing. The manual says "do not connect"

2g **Fit the 120 Ω resistor at the D1.** The D1 has no built-in terminator, so connect a 120 Ω resistor between CAN_H and CAN_L at the D1 end, for example between the white/brown and brown wires where they meet the signal plug. Insulate it with heat-shrink.
Check: with the RJ45 plug not yet in the Cerbo, measure between the white/brown and brown wires (or pins 7 and 8 of the RJ45 plug). It should read about **120 Ω**.

2h **Final check:** plug the RJ45 into the Cerbo port you'll use, with the VE.Can terminator in that port's other socket. With everything switched off, measure between white/brown and brown again:

You measure	Meaning
About 60 Ω	Correct: both ends are terminated
About 120 Ω	The VE.Can terminator isn't in the Cerbo port's other socket, or the cable is in a different port
Very high or "OL"	The resistor at the D1 isn't connected. Re-check step 2g

3 Set up the Cerbo

Do this on the Cerbo's touchscreen, or remotely with Remote Console in VRM. Every item below is found from the Settings menu.

3a **Check the firmware version.** Go to **Settings › General › Firmware**. It needs to be **v3.80 or newer**. If it's older, use **Online updates** on the same page to update first.
Then go to **Settings › General › Modification checks** and make sure **modifications are enabled** (that's the default). If they are off, Venus OS switches off the start-up script and the driver disappears after the next restart.

3b **Write down the Cerbo's IP address.** Go to **Settings › Connectivity › Ethernet** (or Wi-Fi) and read the IP address.
IP address: _____

3c **Choose the CAN port and speed.** Use the Cerbo's second CAN port, with nothing else plugged into it. The labels next to the ports tell you which Cerbo you have:

- **Cerbo GX MK2** (ports labeled **VE.Can 1** and **VE.Can 2**): go to **Settings › Connectivity › VE.Can port 2** (some firmware still calls it **BMS-Can port**) and set **CAN-bus profile** to **VE.Can (250 kbit/s)** (the default). The D1 talks at either 250 or 500 kbit/s. Start with 250. Step 5c shows each port's speed, and tells you if the D1 is talking at the other speed. Then change the profile to **CAN-bus BMS LV (500 kbit/s)** (older firmware: **CAN-bus BMS (500 kbit/s)**).
  Victron's own messages on that port use a different kind of CAN ID (29-bit) from the D1's (11-bit), so they don't get in each other's way. You may see the profile *Up, but no services* mentioned elsewhere: the Cerbo screen no longer lets you choose it, and it isn't needed.
- **Original Cerbo GX** (second port labeled **BMS-Can**): go to **Settings › Connectivity › BMS-Can port**. This port only runs at 500 kbit/s, so leave it on **CAN-bus BMS (500 kbit/s)**. It works only if the D1 talks at 500 kbit/s. If step 5c reports bus errors on it, the D1 is at 250 kbit/s: use the VE.Can port (if nothing else is on it) with **VE.Can (250 kbit/s)** instead.

3d **Let your PC connect to the Cerbo** (this switches on SSH):

1. Go to **Settings › General › Access & Security › Access level** and choose **User & Installer**. The password is `ZZZ`.
2. Still on the Access & Security page, drag the list down with your finger and hold it for about 5 seconds (on Remote Console with a keyboard: hold the right-arrow key). The access level changes to **Superuser**.
3. Tap **Root password** and choose a password (at least 8 characters).
   Root password: _____
4. Switch **Enable SSH on LAN** to on.

3e **Optional, to change settings from VRM:** go to **Settings › VRM › VRM Portal access level** and set it to **Full**.

4 Connect everything

4a Plug the cable's RJ45 plug into the CAN port you chose in 3c, with the VE.Can terminator in the port's other socket (as in step 2h).

4b Plug the D1's signal plug back in and switch its 12 V supply (KL30/KL15) back on.

> Nothing changes for the D1 yet. The Cerbo only listens until you finish Step 5. After installing, it starts in **Automatic with limits**: it makes the D1's own buck / boost / standby choices and sends your current limits. To install it so that it only watches, set `automatic = hands_off` in step 5d (the Safe Test Plan does this for its first stages).

5 Install the driver with Cerbo Setup

5a **Open the helper.** In the project folder, double-click `Cerbo Setup.bat`. If Windows shows "Windows protected your PC", click **More info** and then **Run anyway**.

5b **Type the Cerbo's IP address** from step 3b and press **Enter**. The helper remembers it for next time, and then shows its menu:

```
  ============================================================
    Nomadic DC-DC converter  -  Cerbo GX setup
    Cerbo address: 192.168.1.50
  ============================================================

    1  Edit the settings (config.ini)
    2  Find which Cerbo port the converter is on    (listen only)
    3  Watch live readings from the converter       (listen only)
    4  Install or update the driver on the Cerbo
    5  Show the driver log

    U  Make a USB-stick installer (no network needed)

    9  Try it with a pretend converter (simulation - nothing is sent)

    6  Change the Cerbo address
    7  Fix "REMOTE HOST IDENTIFICATION HAS CHANGED"
    8  Uninstall the driver from the Cerbo
    0  Exit

  Type a number and press Enter: _
```

> **Want to see it first?** Option **9** runs everything with a pretend D1 and sends nothing on CAN (see the Safe Test Plan, `docs/safe-test-plan.pdf`).

> **The password prompt.** Every option that talks to the Cerbo asks for the root password from step 3d. **Nothing appears on screen while you type it.** That's normal: type it and press Enter.

5c **Type `2`: find the converter.** The helper copies the driver to the Cerbo and listens on every CAN port for 3 seconds. You should see something like this:

```
Venus OS v3.80 OK
Listening 3 s on each CAN port (nothing is transmitted)...
  can0    250 kbit/s  error-active  nothing from the converter
  can1    250 kbit/s  error-active  CONVERTER FOUND (391 frames)
The converter is on can1. config.ini has interface = auto, so the driver finds it there by itself.
Good.
```

Port names differ between Cerbo models (`can1`, or `vecan1` on the MK2). That's fine: with `interface = auto` the driver uses whichever port the D1 is on. If the D1 is set to the other speed, you'll see bus errors instead:

```
  can1    250 kbit/s  error-passive nothing decoded, but 288 bus errors: talking at a different
speed?
Something is talking on can1 at a different speed. On the Cerbo, set that port's CAN-bus
profile to "CAN-bus BMS LV (500 kbit/s)" and run this again.
```

Do what it says (step 3c), then type `2` again. If nothing is heard at all, see Troubleshooting, and check the KL30/KL15 supply first.

5d **Type `1` : edit the settings.** Notepad opens `config.ini`. Check these lines, then press Ctrl+S to save and close Notepad:

Line	What to put
`interface = auto`	Leave as auto: the driver finds the D1's CAN port by itself
`startup = auto`	Leave as auto: after every Cerbo restart it's in Automatic
`automatic = limited`	Leave as limited: in Automatic the Cerbo makes the D1's own buck / boost choices and keeps it within your current limits. (`hands_off` : Automatic sends nothing)
`boost_voltage = 55.2`	The 48 V target used when you choose Boost. Set it to your 48 V battery's charge voltage
`buck_voltage = 13.5`	The 12 V target used when you choose Buck. 13.5 V charges the chassis batteries properly (it's also the D1's maximum)
`buck_current_limit` , `boost_current_limit`	The output current used for Buck (D1 max 178 A) and Boost (D1 max 57 A). Keep them within your wiring and fuses. **Boost is counted on the 48 V side:** the 12 V side then carries up to about 5 times as many amps (30 A boost ≈ 154 A on the 12 V cable at worst; see *Limiting current* in README.md). The maximums are preset for a stock LTV1 (2 AWG, 150 A fuse): 120 A buck, 23 A boost
`..._min` / `..._max` lines	Safety limits. They're preset to the D1 manual's ranges; tighten them if your batteries, cables or fuses need it
`custom_name = DC-DC D1`	The name shown on the Cerbo and in VRM
`password =`	Optional: a password for the web page

Nobody can set a value outside the limits, whether from the Cerbo screen, VRM or the web page.

5e **Type `3` : watch the live readings** (optional, but a good check). The voltages should match what a meter shows on the D1's terminals. To stop, press Ctrl+C, then type N and press Enter.

```
--- can1 10:42:07  ONLINE  0x066=20/s 0x088=100/s 0x520=10/s
LV  13.4 V  +22 A | HV  51.2 V   +6 A | 35 C
Mode: Autonomous (default set-point) | Precharge not in process
Alarms: none
Software 1.2.3  Hardware 5
```

5f **Type `4` : install.** After about 10 seconds you should see:

```
/service/dbus-nomadic-dcdc: up (pid 1834) 6 seconds
... INFO: Nomadic DC-DC driver 1.5.0 starting on auto
... INFO: Converter online on can1
```

Done! It now starts by itself after every reboot and firmware update, in Automatic with limits.

No network to the Cerbo? Install from a USB stick instead

Venus OS can install add-ons from a USB stick or microSD card by itself, with no SSH or password. Do this instead of 5c–5f:

U1 **Get the file.** Download `venus-data-nomadic-d1.tar.gz` from the latest release (https://github.com/CKOCI13/cerbo-nomadic-d1/releases/latest). It has the standard settings, with `interface = auto`, so there's nothing to edit. To change settings first, edit config.ini (Cerbo Setup option `1`) and type `U` to make your own copy of the file. On a Mac, download it with Chrome or Firefox: Safari can unpack it into a `.tar` file, which the Cerbo ignores.

U2 Copy it to the **top folder** of a USB stick or SD card (FAT32), not inside another folder. Put only **one** `venus-data` file on the stick. If your browser saved it as `venus-data-nomadic-d1 (1).tar.gz`, rename it back to `venus-data-nomadic-d1.tar.gz`: the Cerbo skips names with spaces.

U3 Put the stick in the Cerbo and restart it (**Settings › General › Reboot**, or switch it off and on). The Cerbo unpacks the file and installs the driver while it starts, in Automatic.


U4 **Wait about 2 minutes, then take the stick out.** The Cerbo renames the file on the stick to `...tar.gz.installed`, so it never installs twice. Then open the switch pane: the DC-DC D1 cards should be there.

> Without SSH you can't run "find the converter" (5c). If the Status card says **No communication**, check the CAN port you chose in 3c, its speed (250 / 500 kbit/s) and the wiring, and restart the Cerbo. To install again, use a fresh file (U1).


6 Use it

On the Cerbo screen (and Remote Console)

Tap the **switches icon** at the top left of the screen. Two cards appear. Swipe left to see the second one.

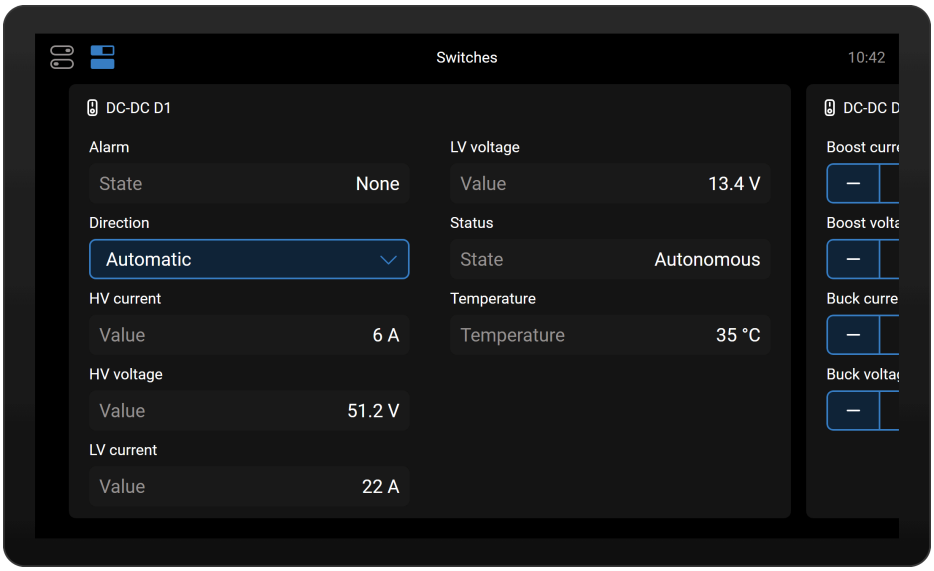

DC-DC D1: live readings, the alarm and status, and the Direction dropdown.

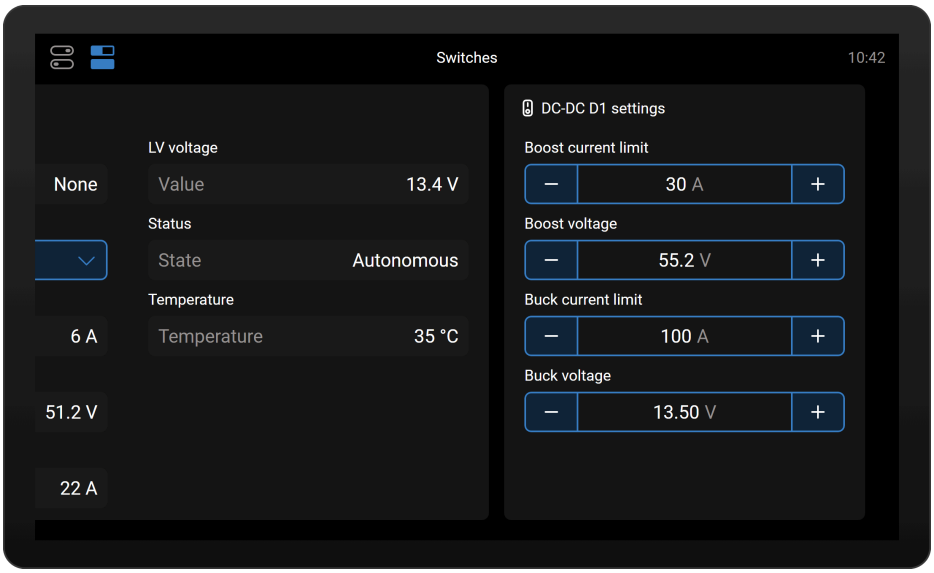

DC-DC D1 settings: tap − / + to change a value. It's used whenever the Cerbo is in control (Automatic with limits, Buck or Boost).

Direction: who's in charge

Choice	What happens
Automatic (default)	The Cerbo makes the same choice the D1 would make by itself, and sends your current limits with it. It bucks (charges the 12 V side from 48 V, to about 13.4 V) when the 12 V side drops below 12.5 V, as long as the 48 V side is 41–58 V. It boosts (pushes 12 V energy up to 48 V) when the 12 V side is 13.5–16 V, until it falls below 12.3 V. Between 12.5 and 13.5 V it waits in Standby. Each change waits 2 seconds, and boost pauses for a minute after the 12 V side sags. The web page shows what it chose and why. (With `automatic = hands_off` the Cerbo sends nothing and the D1 decides alone, at its factory limits.)
Buck 48V to 12V	The Cerbo makes the D1 charge the 12 V side, at **Buck voltage** (13.5 V) and up to **Buck current limit**. In Automatic the Cerbo uses about 13.4 V, the D1's own buck target.
Boost 12V to 48V	The Cerbo makes the D1 push energy to the 48 V side, at **Boost voltage** and up to **Boost current limit**.
Off	The Cerbo tells the D1 not to convert.


Changing between Buck and Boost always passes through Off for 1 second. Choosing Automatic again lets the Cerbo choose by itself again. The **Alarm** tile shows the most serious active alarm (red Fault label on a fault), and **Status** shows what the D1 reports it's doing, or **No communication**. The precharge controls are hidden because the D1 manual doesn't use precharge. To show them, or to rename or hide any item, go to **Settings › Devices › DC-DC D1**.

> **Limiting current to protect fuses and cables.** The Cerbo's current limits (in Automatic, Buck or Boost) keep the D1 below what a fuse or cable can take, but only while the Cerbo keeps sending its command every 10 ms. When the commands stop (the Cerbo restarts or updates, the driver stops, or the CAN cable comes loose), it isn't yet known what the D1 does; it may go back to full current (up to 178 A into the 12 V side). So never fit a bigger fuse than the cable is rated for, size fuses and cables for the D1's maximum or ask Nomadic to lower its own limit, and only rely on the Cerbo's limit after the hand-back test below. The project README explains the settings.

In the VRM app and portal

The same cards appear in the **Switches** widget in the VRM app, and in the **Switches** panel on the VRM portal dashboard. The Cerbo must be online with VRM. To change values from VRM, do step 3e (VRM Portal access level: Full).

The picture is an illustration. VRM draws its own version of these cards, so the layout may differ a little.

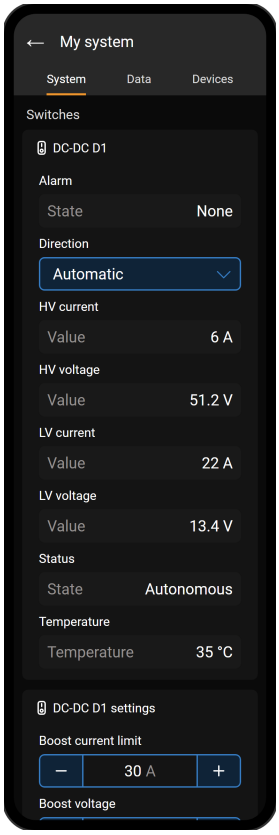


VRM app, Switches widget (illustration)

On a web page

On any phone, tablet or computer on the same network, open:

http://<Cerbo IP>:8088

This page shows everything, including the raw status bits and the exact command being sent. Set a password for it (`password =` in step 5d). Without one, **anyone on your network can operate the converter**.

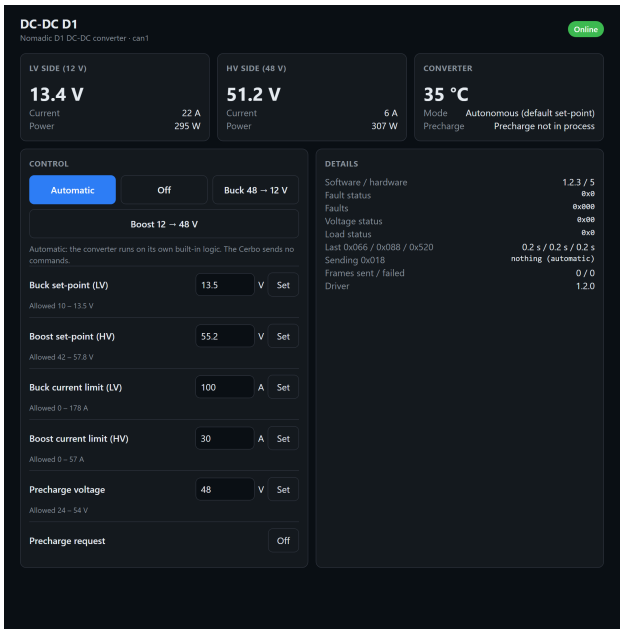

The web page.

Test the hand-back before relying on Off, Buck or Boost

The Safe Test Plan (`docs/safe-test-plan.pdf`) has the full careful version. In short: it isn't known yet whether the D1 goes back to its own logic when the Cerbo stops sending commands, or keeps following the last command. Do this test once, with the 48 V side between 41 and 58 V, and with `automatic =`

`hands_off` set (option 1, then 4), so that choosing Automatic stops the commands. Set it back to `limited` afterwards:

T1 Choose **Buck**. Status should change to **Buck 48V to 12V**.

T2 Choose **Automatic**. Within a few seconds Status should show what the D1 does on its own: **Autonomous**, **Standby** (12 V side 12.5–13.5 V), **Buck** (below 12.5 V) or **Boost** (13.5–16 V).

T3 Choose **Buck** again, then unplug the CAN cable at the Cerbo. With a meter on the D1's 12 V terminals, watch whether the D1 keeps regulating to 13.5 V, stops, or goes back to its own logic (about 13.4 V). Plug the cable back in.

> If the D1 seems stuck on the last command (for example it stays in Standby in Automatic while the 12 V side is below 12.5 V), switch KL15 off and on to restart its controller (if KL15 is joined to KL30, as on the LTV1, pull that wire's fuse for a few seconds), and tell Nomadic what you saw. Until you know how it behaves, don't count on the Cerbo's limits while it restarts or updates.

? Troubleshooting

What you see	What to do
Option 2: "not heard on any port"	Check, in this order: (1) the D1 has KL30 (pin 4, 9–16 V) and KL15 (pin 3, 8 V or more), measured to GND. Without both, its controller is off and silent; (2) the CAN speed: if it reports bus errors, switch to the other speed (step 3c); (3) the wires (2b), and that CAN_H/CAN_L are in pins 1/2 of the D1 plug; (4) the termination reads about 60 Ω (2h); (5) the cable is in the Cerbo port you set up.
"ssh" or "tar" is not recognized	Install the Windows OpenSSH client: Settings › Apps › Optional features › Add a feature › OpenSSH Client.
"Connection timed out" or "Connection refused"	Check the IP address (menu option 6), that the PC and Cerbo are on the same network, and that Enable SSH on LAN is on (step 3d).
"Permission denied"	Wrong root password. Set it again (step 3d, item 3).
"REMOTE HOST IDENTIFICATION HAS CHANGED"	This happens after the Cerbo is reset or replaced. Use menu option 7, then try again.
Option 2: Venus OS version warning	Update the Cerbo (step 3a). Older firmware can't show the cards.
Nothing appears in the switch pane	Check the firmware is v3.80 or newer. Use option 5 (log) and look for "Registered ... on D-Bus". Make sure `switch_pane = yes` in config.ini.
Status shows Standby in Automatic	Normal when the 12 V side is between 12.5 and 13.5 V: the D1 has nothing to do.
Buck doesn't start	The D1 only bucks with the 48 V side between 41 and 58 V (D1 manual), even when the Cerbo asks.
Status shows No communication	The Cerbo can't hear the D1. Check KL30/KL15, the cable and the termination.
The log says "CAN send failed"	Only happens when the Cerbo is in control (Off/Buck/Boost). Nothing on the bus is acknowledging: same checks as above. The speed is the usual cause.
A number won't go higher or lower	It has reached a limit from config.ini. To change the limit: option 1, edit, save, then option 4.
VRM shows the cards but won't accept changes	Set VRM Portal access level to Full (step 3e). The Cerbo must be online.
The "DC system" figure on the Cerbo looks wrong	The Cerbo counts the D1 as a DC-DC charger. Set `service_class = nomadicdcdc` in config.ini (option 1, then 4). The D1 leaves the Devices list, but the cards, VRM and web page keep working.

To change settings later, open Cerbo Setup, choose 1 to edit config.ini, save, then choose 4. The driver restarts with the new settings. Values you change on the screen, in VRM or on the web page are

remembered automatically. **To remove it,** choose 8 and type YES. The D1 carries on in its own automatic mode.

> Before you rely on the Cerbo's limits, do the hand-back test in Step 6. While it's in control (Automatic with limits, Buck, Boost or Off) the Cerbo sends a command every 10 ms. If the Cerbo restarts or the cable comes loose, those commands stop, and it isn't yet known whether the D1 then goes back to its own logic.

Points to confirm with Nomadic

- What the D1 does when CAN commands stop: does it go back to its own logic, and after how long? (Your hand-back test will show this too)
- Whether it sends its status even when it isn't receiving commands (the driver assumes it does)
- Reprogramming the factory limits and buck target to suit your wiring, so they also hold while the Cerbo restarts
- Which direction counts as positive current in the readings