



Team Kilimanjaro StoneCap

V.A.P.O.R. User Manual

Vehicle Analytics, Processing and Operations in Real-time

Contents

Right-click and choose Update Field to refresh this table after editing.

Contents	2
1. Introduction	4
Purpose	4
2. Getting Started	4
2.1 Creating an Account	4
2.2 Verifying Your Email	4
2.3 Logging In	5
3. Viewer Guide	6
3.1 Viewer Dashboard	6
3.2 Live Fleet Map	6
4. Fleet Manager Guide	8
4.1 Manager Dashboard	8
4.2 Understanding Your Data	9
Safety Score	9
What counts as a trip	9
Green driving breakdown	9
Daily and per-trip scores	9
4.3 Vehicle Profiles	9
Reading the vehicle list	10
Current Trip and History tabs	10
Expanding a past trip	10
4.4 Trip Replay	11
4.5 Geofencing	12
Creating a zone	12
Entry and exit alerts	12
Editing and deleting zones	12
Zone event tallies	12
4.6 Hazard Zones	12
Reading a hazard zone	13
4.7 Custom Alerts	13
Creating an alert	13
Previewing impact before saving	14
When an alert fires	15
Editing, pausing and deleting rules	15
4.8 Predictive Risk	15
Risk Score and Safety Score are not the same	16

Risk tiers	16
The top 3 reasons	17
Coaching recommendations	17
Measuring whether coaching worked	17
When a score looks wrong	18
How accurate the forecast is	18
4.9 Fuel Efficiency	18
How fuel use is estimated	18
Where to find fuel data	19
Fuel drop alerts	19
4.10 Working With Fleet Groups	19
Manager leaderboard	20
5. Administrator Guide	21
5.1 User Management	21
5.2 Editing User Roles	21
5.3 Managing Fleet Groups.....	22
Creating a group.....	22
Assigning a manager	22
Moving vehicles between groups.....	22
Deleting a group.....	23
5.4 Recalculating Risk Predictions	23
6. Live Fleet Tracking.....	24
7. Troubleshooting.....	24
7.1 Common Issues	24
7.1.1 Unable to log in.....	24
7.1.2 Verification code expired	24
7.1.3 Live map not displaying	24
7.1.4 Vehicle information not updating	24
7.1.5 Unable to manage users	24
7.1.6 Dashboard data not loading	25
7.1.7 Fuel data shows No data available.....	25
7.1.8 A vehicle is missing from my views	25
7.1.9 A custom alert is not firing	25
7.1.10 A hazard zone cannot be edited or deleted.....	25
7.1.11 Risk predictions look out of date	25
8. Frequently Asked Questions.....	25
9. Contact Information	26

1. Introduction

Purpose

V.A.P.O.R. is a web-based fleet monitoring system designed to give organisations real-time visibility into their vehicle fleets. The platform lets users monitor live vehicle locations, view fleet analytics, manage users, and oversee operational performance through a single dashboard interface.

The platform uses role-based access control, so users only see the features relevant to their responsibilities.

The system supports three user roles:

- Viewer: monitors fleet information through read-only dashboards and the live map.
- Fleet Manager: monitors fleet operations, analytics, safety, risk and alerts for their assigned fleet groups.
- Administrator: manages users, permissions, fleet group structure and system administration.

2. Getting Started

2.1 Creating an Account

New users can create an account using their email address or Google Sign-In.

Steps

1. Open the Registration page.
2. Enter your full name, email address, password, and password confirmation.
3. Accept the Terms and Privacy Policy.
4. Click Create Account.

The system validates password strength before creating the account.

The registration page

2.2 Verifying Your Email


After registration, a six-digit one-time password is sent to the registered email address.

Steps

1. Enter the six-digit verification code.

2. Click Verify Account.
3. If the code has expired, click Resend the code.

Once verification succeeds, the account is activated and can be used to log into the system.

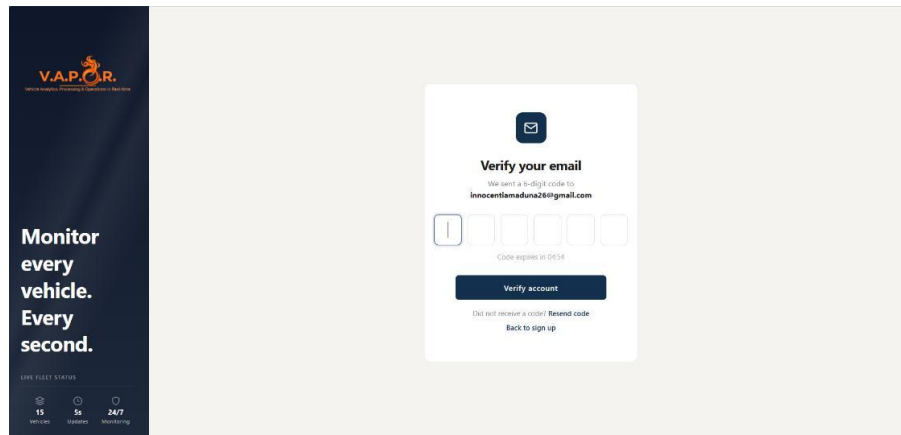

The email verification page


2.3 Logging In

Existing users can log in with an email address and password, or with Google authentication.

Steps

1. Enter your email address and password.
2. Click Sign in to dashboard.
3. Alternatively, select Continue with Google.

After successful authentication, you are taken to the dashboard for your assigned role.

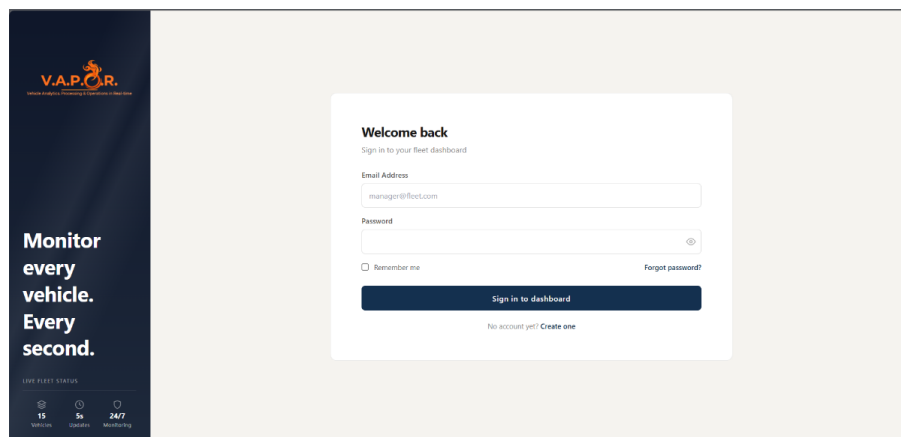

The login page

If you see a message saying your account has been deactivated, contact your Administrator to have it reactivated.

3. Viewer Guide

The Viewer role provides read-only access to fleet information and live vehicle tracking.

Viewers can:

- Monitor active vehicles
- View fleet performance indicators
- Monitor vehicle status
- Access the live fleet map
- View real-time vehicle locations

Viewers cannot:

- Modify system settings
- Edit users or change user permissions
- Access geofencing, custom alerts, predictive risk, or reports

3.1 Viewer Dashboard

The Viewer Dashboard gives an overview of fleet activity. It contains an active vehicles indicator, total distance travelled today, a live fleet map, and a vehicle status chart.

You can zoom and pan around the map to inspect vehicle positions.


3.2 Live Fleet Map

Selecting Live Map from the navigation sidebar opens a dedicated tracking interface showing every vehicle's current position.

The Viewer Live Fleet Map allows you to:

- View live vehicle locations, updated automatically
- See how many vehicles are moving, idle, and offline
- Zoom and pan to inspect any part of the fleet

Viewers see vehicle positions and status only. Geofence zones, hazard zones and risk indicators belong to the Fleet Manager view and are not shown here.

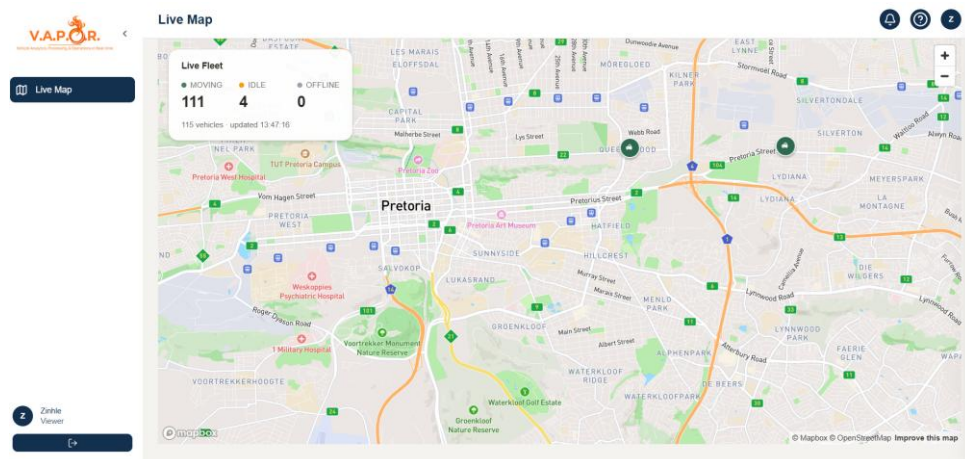

The live fleet map

4. Fleet Manager Guide


Fleet Managers have access to everything a Viewer can see, plus the operational tools described in this section.

A Fleet Manager's data is limited to the fleet groups they have been assigned. If a vehicle does not appear anywhere in your views, it most likely belongs to a group you are not assigned to.


4.1 Manager Dashboard

The Manager Dashboard includes:

- Active vehicles
- Total distance today
- Vehicles in motion
- Fleet status breakdown
- Most active vehicles today
- Recent vehicle events
- Fleet activity and safety score trend
- Fleet event breakdown and top event contributors

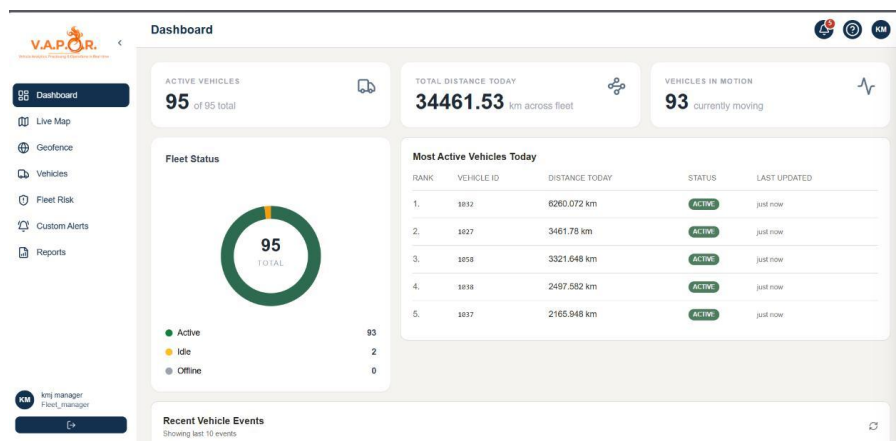

The Manager Dashboard

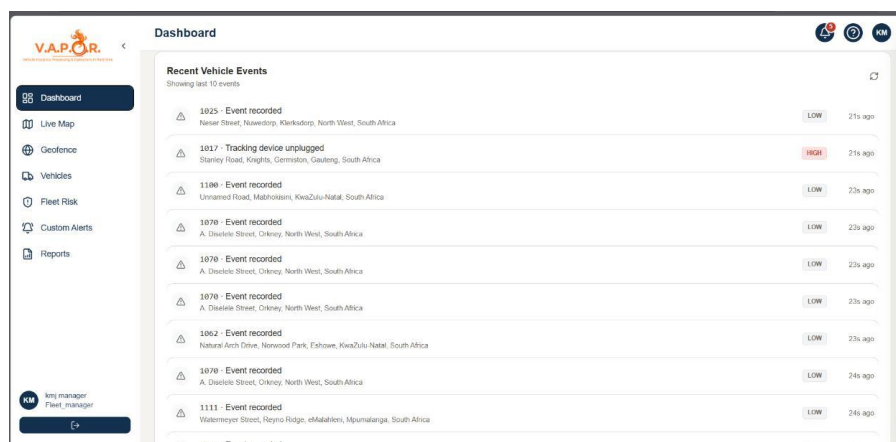

Recent vehicle events



Fleet safety score trend, event breakdown and lowest scoring vehicles

4.2 Understanding Your Data

Safety Score

Every vehicle starts each day at a score of 100. Each unsafe event detected deducts points based on that event's severity, and the score resets to 100 every 24 hours. The score therefore reflects the vehicle's behaviour for the current day rather than an all-time average.

The events that reduce a safety score are:

- Harsh braking
- Harsh acceleration
- Harsh cornering
- Crash detection
- Speeding threshold breaches

More of these events in a day means a bigger drop from 100. The score updates automatically as new telemetry arrives.

What counts as a trip

A trip starts the moment a vehicle's speed goes above 5 km/h with the movement metric on and the ignition on. It ends once the vehicle stays at or below 5 km/h for 10 minutes with the ignition off.

One long drive with a long stop in the middle appears as two separate trips. This is expected behaviour, not an error. The same stationary period is used to track rest breaks for fatigue detection.

Green driving breakdown

Under each trip you will see counts for harsh braking, harsh acceleration and harsh cornering. This shows not just that a trip scored poorly, but which specific behaviour caused the drop.

Daily and per-trip scores

- Per-trip view gives a score for each individual trip.
- Daily view aggregates scores across a full day.

Daily view is better for spotting patterns. Per-trip view is better for investigating a specific incident.


4.3 Vehicle Profiles

Reading the vehicle list

The vehicle list shows each vehicle's ID, its current status, and its current safety score.

Vehicle statuses are:

- **Active:** the vehicle is currently moving.
- **Idle:** the engine is on but the vehicle is not moving.
- **Offline:** the engine is off, or the vehicle is powered down and not transmitting.

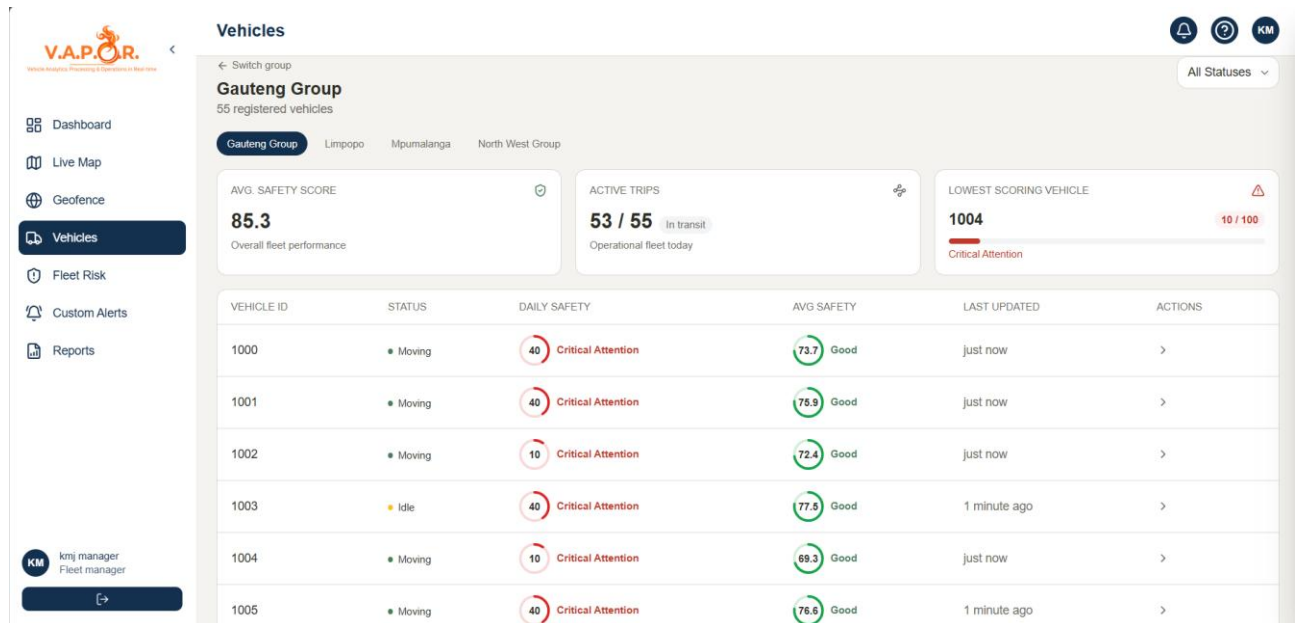


Current Trip and History tabs

The Current Trip tab shows the live GPS position, elapsed time, a live event feed and a real-time score. The History tab shows every past trip with its score, plus the vehicle's overall average.

If a vehicle has no active trip, the profile opens on History automatically.

Expanding a past trip

Click any trip in the History tab to expand it. You will see the full event timeline, with each unsafe event's type, timestamp and location, plus the trip's route drawn on the map with event locations marked along it.

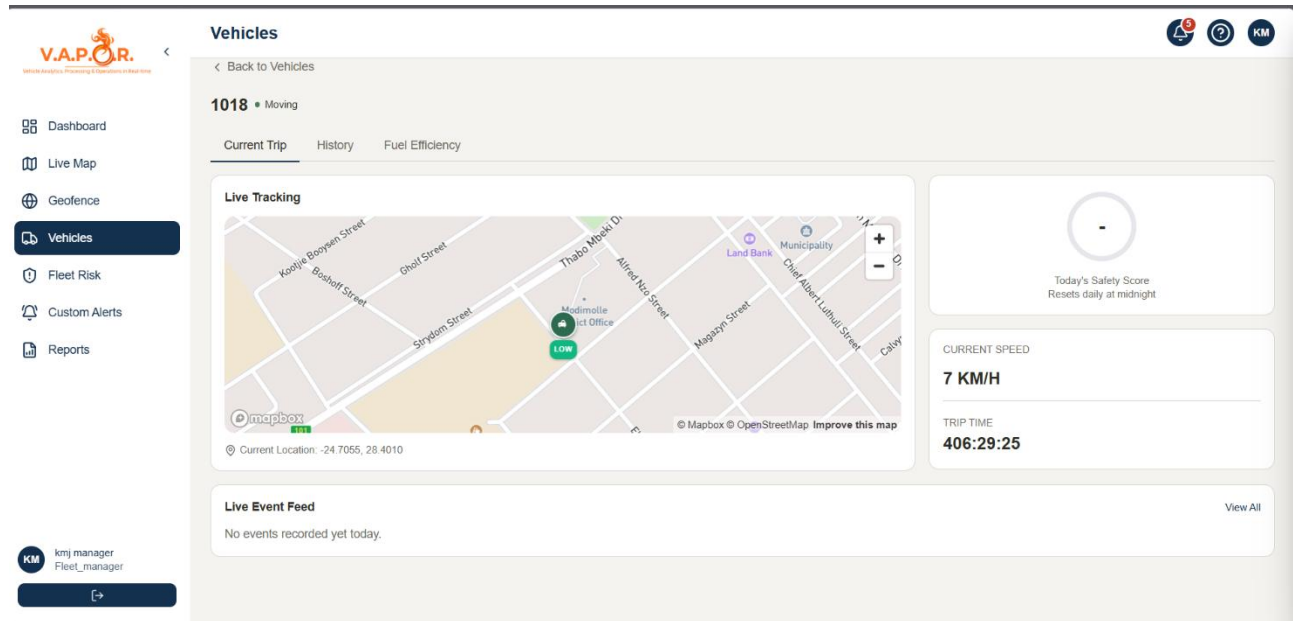


4.4 Trip Replay

Trip Replay animates a vehicle moving along its actual recorded path.

Use Play, Pause and the scrubber bar to move to any point in the trip. When playback reaches an event marker, that event's details appear in a panel beside the map.

The route is coloured by speed:

- Green: safe speed
- Amber: elevated speed
- Red: speeding

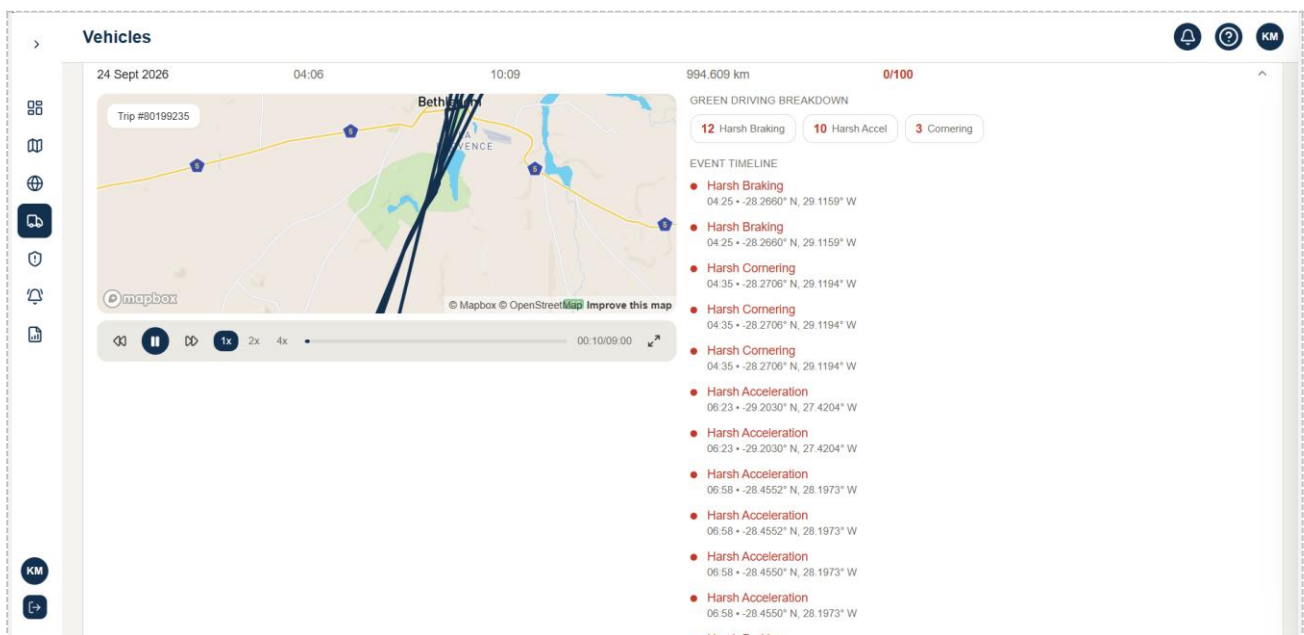

Very short trips sometimes do not have enough recorded telemetry points for smooth playback. When that happens the system shows a static route map instead.

4.5 Geofencing

A geofence zone is an area you draw on the map so you are alerted when vehicles enter or leave it.

Creating a zone

Steps

1. Go to the Geofencing section.
2. Click the draw icon at the top left of the map.
3. Click points on the map to draw the zone boundary.
4. Name the zone, for example Durban Port or Pretoria Depot.
5. Choose a trigger type: entry, exit, or both.
6. Click Save. Monitoring starts immediately.

If a vehicle is already inside the zone when you create it, no entry alert fires for that vehicle. Monitoring applies going forward only.

Entry and exit alerts

When a vehicle crosses a zone boundary you receive an alert showing the vehicle ID, the zone name, whether it entered or exited, and the timestamp. Click the alert to acknowledge it.

Editing and deleting zones

Select any existing zone to adjust its boundary or trigger settings. Deleting a zone stops monitoring immediately, and vehicles inside it at the time will not trigger an exit alert.

Zone event tallies


Every unsafe event that happens inside a zone is added to that zone's own event count. Over time this lets you compare zones and identify which locations produce the most risky driving.

4.6 Hazard Zones

Alongside the zones you draw, the system marks places where risky driving keeps happening. When enough unsafe events accumulate in a small area over the last 7 days, it creates a hazard zone of 250 m radius centred on those events.

Hazard zones appear in amber on the map and as type Hazard in the zone table. A New hazard detected alert is added to Zone Alerts, and clicking that alert zooms the map to the zone.

Geofence

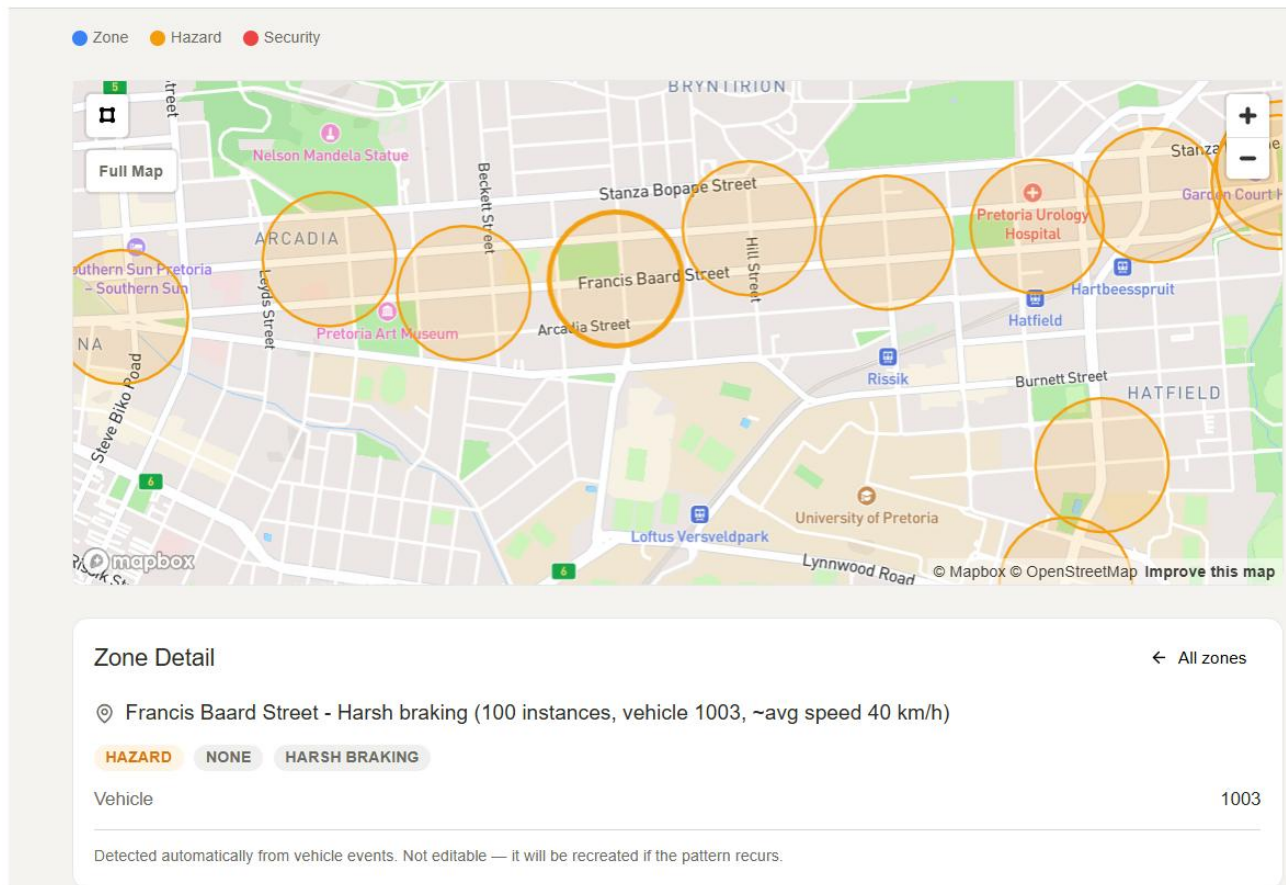

Because hazard zones are detected automatically, they cannot be edited or deleted, and they do not send entry or exit alerts.

Reading a hazard zone

The zone name is built to answer the obvious questions at a glance: the road or area, the most common event type there, the number of incidents counted, the number of vehicles involved, and the average speed.

If one vehicle caused all of the incidents, the name identifies that vehicle. If several were involved, the name gives the count and the vehicle with the most incidents. That distinction matters: a hazard caused by one vehicle is usually a driver to speak to, while a hazard caused by many is usually a road or junction to warn people about.

4.7 Custom Alerts

Custom Alerts let you define your own rules and be notified when a vehicle in your fleet group breaches one. They live in their own tab, separate from geofence alerts.

Creating an alert

Steps

1. Go to the Custom Alerts tab and click Create Alert.
2. Choose one condition type.
3. Enter the values that condition needs.

4. Choose the fleet group the rule applies to.
5. Name the rule and save it. Monitoring starts immediately.

The available condition types are:

- Speed threshold: a vehicle goes above a set speed.
- Time restriction: a vehicle runs outside your allowed hours or days.
- Repeated unsafe events: a set number of harsh events within a rolling time window.
- Safety score drop: a vehicle's score falls below a set value.
- Trip duration: a single trip, or a day's total driving, runs too long.

The screenshots show the V.A.P.O.R. Custom Alerts interface. The left sidebar contains navigation links: Dashboard, Live Map, Geofence, Vehicles, Fleet Risk, Custom Alerts (selected), and Reports. The main area is titled 'Custom Alerts' and has two tabs: 'Alert Rules' and 'Triggered Alerts'. A 'Create New Custom Alert' dialog is open in the center.

Top Screenshot: The dialog is at the '1 Select Condition' step. The 'Speed Threshold' condition is selected. The description for this condition is 'Trigger alerts when vehicles exceed a specific speed limit.' The 'Create Alert Rule' button is visible at the bottom right of the dialog.

Bottom Screenshot: The dialog is at the '2 Configure Parameters' step. The 'Safety Score Drop' condition is selected. The description is 'Trigger when a vehicle's safety score falls below a minimum.' The 'Configure Parameters' section is visible, showing fields for 'Alert Name' (set to 'High Speeding'), 'Fleet Group' (set to 'Select a fleet group'), and 'Speed Limit (KM/H)'. The 'Create Alert Rule' button is visible at the bottom right of the dialog.

You can only scope a rule to a fleet group you manage, and it will only ever fire for vehicles in that group.

Previewing impact before saving

Once you have chosen a fleet group and filled in the rule's values, click Preview Impact. The system replays your draft rule against the last 30 days of real data for that group.

The preview shows:

- How many alerts the rule would have raised

- How many vehicles would have been involved
- A day by day trend with the busiest day marked
- A sample of the most severe breaches, showing the vehicle, the value, and how far over your threshold it went

Adjust a threshold and the preview re-runs automatically, so you can settle on a number that catches real problems without burying your team in notifications. If the rule would never have fired, the panel tells you so directly.

The screenshot shows the 'Custom Alerts' interface. On the left, a sidebar lists 'Alert Rules' with options like 'Rule Name', 'High way speeding', 'Late night drives', 'Safety Score < 75', and 'High Harsh Braking'. The main area is divided into two panels. The left panel, titled 'Edit Custom Alert', has two sections: '1 Select Condition' and '2 Configure Parameters'. Under '1 Select Condition', there are four options: 'Speed Threshold' (Trigger alerts when vehicles exceed a specific speed limit), 'Time Restriction' (Flag vehicle activity during restricted hours or days), 'Repeated Unsafe Events' (Monitor for patterns like harsh braking or rapid acceleration), and 'Safety Score Drop' (Trigger when a vehicle's safety score falls below a minimum). Under '2 Configure Parameters', there is a 'Trip Duration' option (Flag trips that exceed a standard duration) and an 'ALERT NAME' field with the text 'High Harsh Braking'. The right panel, titled 'Impact Simulation', shows a large number '444' representing 'Estimated Triggers (last 30 days) - 1 vehicles affected'. Below this is a '30-DAY TRIGGER TREND' line graph showing a peak of 98 alerts on 2026-09-26. At the bottom, a table titled 'SAMPLE QUALIFYING BREACH EVENTS (50 MOST SEVERE)' lists vehicle IDs, breach values, and times. The table has three columns: 'VEHICLE', 'BREACH VALUE', and 'WHEN'. The data rows show vehicle IDs 1015, 1015, 1015, and 1015, with breach values 23, 23, 23, and 23, and times 5d ago, 5d ago, 4d ago, and 4d ago. The interface also includes a 'Cancel' button and a 'Save Changes' button at the bottom of the 'Edit Custom Alert' panel, and a 'Create Alert Rules' button on the right sidebar.

Nothing is saved and nobody is notified while you preview. Your draft stays exactly as you left it. The preview also applies the same duplicate suppression the live rule would, so the number you tune against is the number you can expect to receive.

When an alert fires

A triggered alert shows the vehicle, what was breached, the recorded value against your threshold, and the time. Acknowledge it to mark it as seen, then open Details for the location, the rule that fired, and a link to the vehicle. Mark it Resolved once you have acted.

Resolved alerts remain in the feed in a muted state rather than disappearing, so you keep the history.

If the same vehicle breaches the same rule repeatedly within a few minutes, you receive one alert rather than a stream of them. A vehicle breaching two different rules at once generates one alert for each.

Editing, pausing and deleting rules

- Edit opens the rule pre-filled. Changes apply to data received after you save, not retrospectively.
- Deactivate stops monitoring but keeps the rule in your list so you can switch it back on later.
- Delete removes the rule permanently. Alerts it already triggered remain in your history.

If a save is rejected, check for a missing threshold value, an end time earlier than the start time, or no fleet group selected.

4.8 Predictive Risk

Predictive Risk estimates how likely each vehicle is to have an unsafe day tomorrow. Every vehicle receives a score from 0 to 100, where a higher number means a higher chance of unsafe driving ahead. Scores refresh automatically once a day at 03:00.

The forecast is built from how the vehicle has been driven over the past 7 days, compared against 90 days of fleet history. It deliberately ignores today's safety score, so it is making a genuine prediction rather than repeating what you can already see.

A vehicle can have a clean day today and still be flagged as high risk for tomorrow. That is the system working as intended.

Risk Score and Safety Score are not the same

These two numbers are easy to confuse because both run from 0 to 100. They measure opposite things and move in opposite directions.

	Safety Score	Risk Score
Looks	Backwards at today	Forwards at tomorrow
Built from	Events detected today	The last 7 days of behaviour
Direction	Higher is better	Higher is worse
Updates	Continuously, resets every 24 hours	Once daily at 03:00


If a vehicle shows a good Safety Score and a high Risk Score at the same time, nothing is broken. Today went well, but the recent pattern suggests tomorrow may not.

Risk tiers

Every score falls into one of four tiers so you can triage at a glance.

- Low: recent driving looks steady. No action needed.
- Medium: some early warning signs, but nothing urgent. Worth checking the top reasons.
- High: the recent pattern resembles vehicles that went on to have an unsafe day. A coaching recommendation is created automatically.
- Critical: the strongest warning the system gives. These should be your first stop each morning. A coaching recommendation is created and an alert is sent to your notification feed.

The tier appears as a coloured badge on the vehicle's Predictive Risk tab and as a small badge in the fleet table.

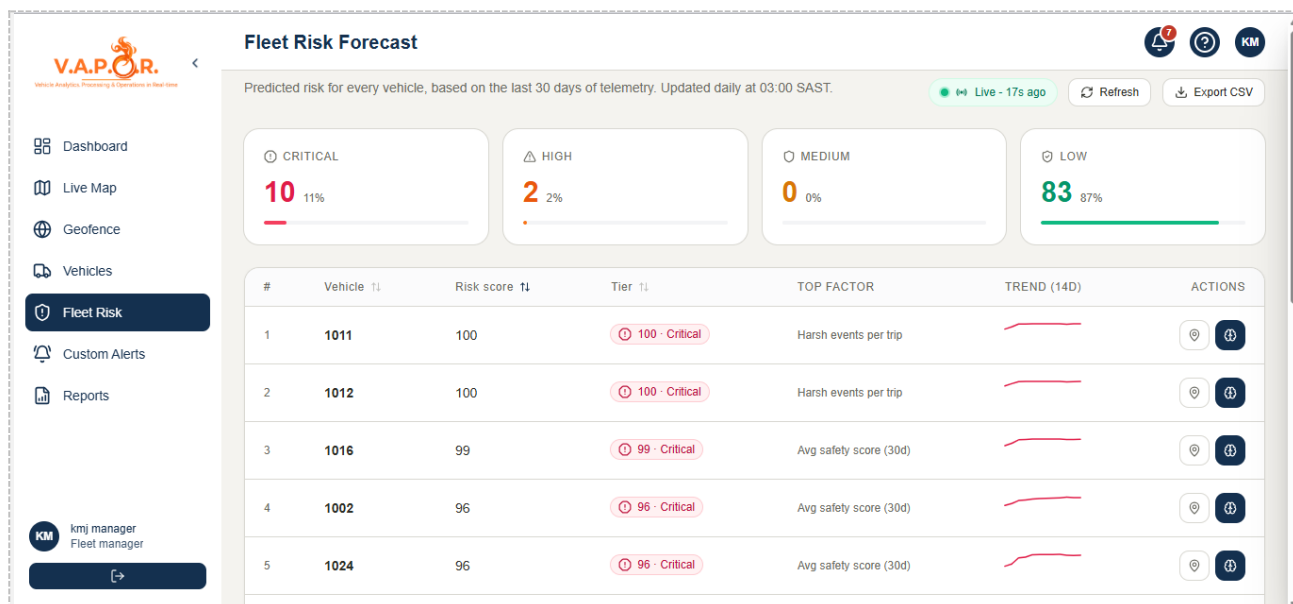

The top 3 reasons

A score alone does not tell you what to do about it. Under every prediction you will find the three factors that pushed the score up the most, ranked by how much each one mattered.

The factors considered are:

- Average safety score over the recent period
- Harsh events per trip, covering braking, acceleration and cornering
- Speeding ratio, meaning how much of the driving was above the threshold
- Distance driven over the week
- Days since the last recorded trip

Each reason is written in plain language, for example Frequent harsh events or High weekly distance.

Coaching recommendations

When a vehicle lands in High or Critical, the system writes a coaching recommendation automatically. You do not need to request one.

The recommendation is derived from the vehicle's top reason, so a vehicle flagged for harsh cornering receives different advice from one flagged for sustained speeding. You will find it in the Coaching History panel on the vehicle's Predictive Risk tab.

Recommendations are suggestions for your conversation with the driver. The system does not contact drivers directly and does not act on the vehicle.

Measuring whether coaching worked

Seven days after a recommendation is raised, the system compares the vehicle's risk score from before the coaching to its most recent score and records the outcome.

- Risk fell: the score is lower than before. The intervention appears to have helped.
- Risk rose: the score is higher than before. Worth a closer look or a different approach.
- Risk unchanged: the score is effectively where it was.

- Outcome pending: fewer than 7 days have passed. This is not a failure and is not counted against your success rate.

The Coaching History panel also shows an overall effectiveness rate, such as the percentage of past nudges that reduced risk within 7 days. Only interventions with a measured outcome are counted.

SCREENSHOT TO ADD: A vehicle's Predictive Risk tab showing the score, tier badge, 30 day trend, top 3 reasons, and a coaching history with at least one measured outcome.

When a score looks wrong

A few situations produce surprising scores that are in fact correct.

- A vehicle that has not moved recently scores low, because there is no recent behaviour to learn from. The system treats it as inactive rather than safe.
- A new vehicle with little history also sits low until it has built up enough recent driving.
- A vehicle with no completed trips in the last 30 days is treated as inactive.

A low risk score on a parked vehicle is not a clean bill of health. It only means the system has nothing recent to go on.

How accurate the forecast is

On data the model had never seen during training, it correctly ranks a genuinely unsafe vehicle above a genuinely safe one about 90.6 percent of the time. Simply assuming tomorrow will look like today gets this right 88.2 percent of the time.

The forecast is a good way to order your attention across the fleet, but it is not a guarantee about any single vehicle. Treat a High or Critical score as a prompt to look closer, not as proof that something will go wrong.

4.9 Fuel Efficiency

How fuel use is estimated

Fuel figures are not read from the vehicle's tank. They are estimated once a trip completes, from that trip's distance and average speed, using a standard consumption rate for each speed band.


Average speed	Fuel use
Under 20 km/h	14 L/100km (stop-start)
20 to 40 km/h	11 L/100km (city)
40 to 60 km/h	8.5 L/100km (mixed)
60 to 80 km/h	7 L/100km (most efficient)
80 to 100 km/h	7.5 L/100km
Over 100 km/h	9 L/100km

Because the estimate is speed based, a vehicle doing steady highway runs will always look more efficient than one doing town deliveries. Compare like with like.

Two units appear in the system. Consumption is shown as L/100km, where lower is better. Efficiency is shown as km/L, where higher is better.

Where to find fuel data

- Vehicle profile: fuel used, distance, average speed, and a trend chart for today, this week or this month.
- Each trip: its own estimated fuel consumed and efficiency.
- Fuel Analytics dashboard: fleet average efficiency, total fuel, total distance, and vehicles ranked best to worst.

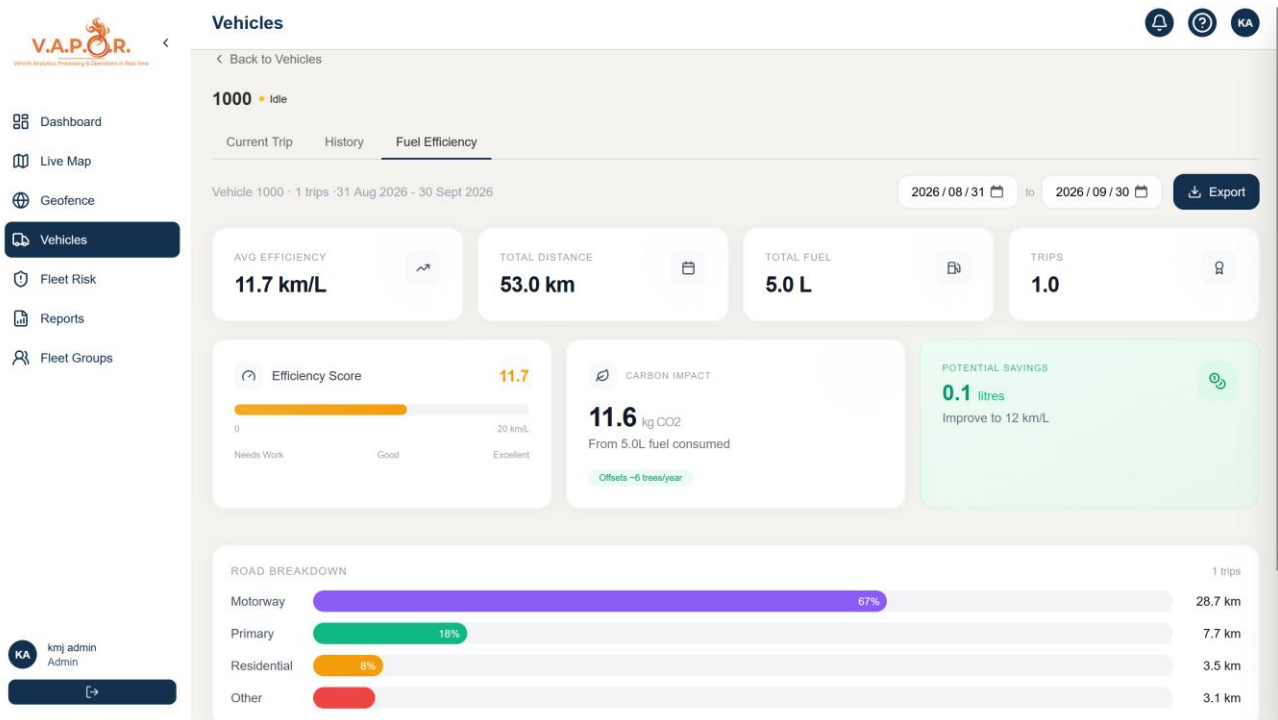

The dashboard flags the least efficient vehicles so you can start there, and clicking any vehicle opens its profile. Figures update automatically as trips complete, and you can export what you are viewing as a CSV.

Fuel is only calculated once a trip finishes, so a vehicle currently on the road shows No data available until it stops. A trip ends after the vehicle has been stationary with the ignition off for 10 minutes, so there is a short delay before new fuel data appears.

Fuel drop alerts

If a vehicle's efficiency falls more than 20 percent below its own historical average, an alert appears in your real-time feed showing the current figure, the usual figure, the size of the drop, and when it happened. You can change that 20 percent sensitivity if it proves too noisy or too quiet.

Acknowledge the alert once you have seen it. Anything left unacknowledged is followed up after 24 hours, and alerts stay in your history for 30 days.

A sudden drop is worth investigating as either a mechanical problem or a change in driving. A gradual drift is more often a change in the kind of routes being driven.

4.10 Working With Fleet Groups

A fleet group is a named collection of vehicles. Administrators create the groups, decide which vehicles belong to each one, and assign Fleet Managers to the groups they are responsible for.

Once you are assigned, your dashboard, map, vehicle list and safety scores are scoped to your groups only.

The screenshot displays the 'Vehicles' section of the V.A.P.O.R. dashboard. On the left is a sidebar with navigation links: Dashboard, Live Map, Geofence, Vehicles (highlighted), Fleet Risk, Custom Alerts, and Reports. Below the sidebar is a user profile for 'kmj manager' with the role 'Fleet manager'. The main content area is titled 'My Fleet Groups' and prompts the user to 'Select a group to view its vehicles'. It features three group cards: 'Gauteng Group' (55 vehicles, 52 Active, 3 Idle, 0 Offline), 'Limpopo' (8 vehicles, 8 Active, 0 Idle, 0 Offline), and 'Mpumalanga' (14 vehicles, 14 Active, 0 Idle, 0 Offline). Each card includes a 'View vehicles' link. Below these cards is a 'North West Group' card (18 vehicles, 18 Active, 0 Idle, 0 Offline) with a 'View vehicles' link. At the bottom, there is a 'Fleet vs Fleet Analytics' section with a 'Compare' dropdown set to 'Gauteng Group', a 'with' dropdown set to 'North West Group', and a 'Show all fleets' button.

If you are assigned to more than one group, return to the group cards and pick a different one. The dashboard, map, vehicle list and safety scores all update to the newly selected group. Switching does not reload the page.

Access is checked on every request rather than stored when you log in. If an Administrator changes your access, you will see the change on your next refresh, without logging out and back in.

Manager leaderboard

The dashboard ranks Fleet Managers by the average safety score of their vehicles over the last 7 days. Where two managers tie, the one with more vehicles ranks higher. The top 5 are shown by default.

If you are not listed, your vehicles have no safety scores from the last 7 days. A quiet week keeps you off the board rather than placing you at the bottom of it.

5. Administrator Guide


Administrators have unrestricted access to platform management features and always see every fleet group, assigned or not.

Administrators can:

- Add users
- Edit user information
- Assign user roles
- Deactivate user accounts
- Export user information
- Create and manage fleet groups
- Assign fleet managers to groups
- Trigger risk prediction recalculations
- Monitor fleet performance

5.1 User Management

The User Management table provides an overview of all registered users, showing name, email, role, status and last active time.

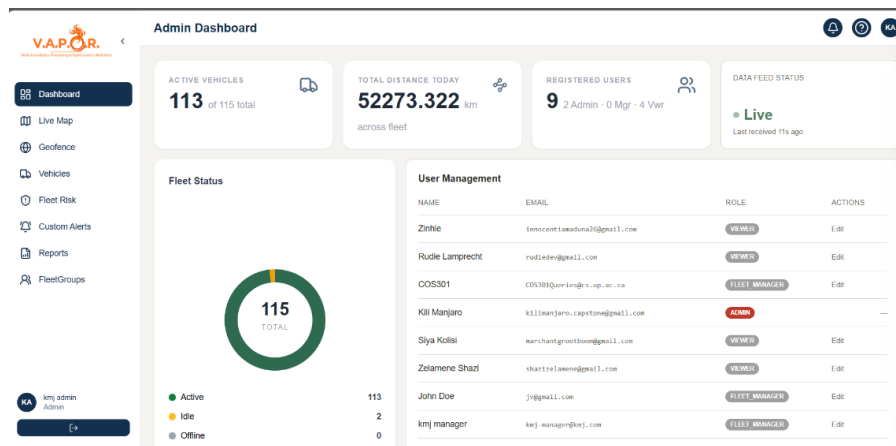


The Admin Dashboard with the User Management table

5.2 Editing User Roles

Selecting Edit opens the User Role Assignment window.

Steps

1. Select a new role from the dropdown menu.
2. Review the permissions associated with that role.
3. Click Save Changes.

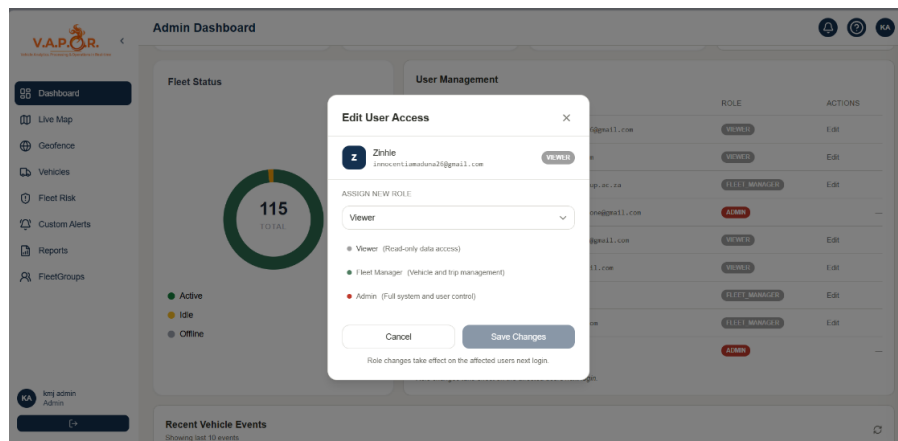

The Edit User Access dialog

If the Administrator role is selected, the system displays an additional warning before confirming the change. Selecting Cancel closes the dialog without saving any modifications.

5.3 Managing Fleet Groups

Creating a group

On the Fleet Groups page, create a group with a name and an optional description. It starts empty, with no vehicles and no manager, and is flagged Unassigned until you assign one. Names must be unique among active groups.

Assigning a manager

Open a group and choose from the list of available managers. Only active users with the Fleet Manager role appear there.

A group holds one manager at a time. To change who is responsible, remove the current manager first, then assign the new one.

Assignments and removals take effect immediately. A newly assigned manager sees the group's vehicles on their next request, and a removed manager loses access just as quickly, without either of them signing out.

Every assignment and removal is recorded with who made the change and when, including removals caused by deleting a group.

Moving vehicles between groups

Inside a group, vehicles are split across three tabs: Unassigned, In This Group, and In Another Group. Search by province, select the vehicles you want, then assign them, unassign them, or transfer them straight to another group without unassigning first.

Assigned Managers

COS301
COS301Queries@cs.up.ac.za

This group already has a manager. Remove the current before assigning a new one.

Vehicles

Transfer to... Transfer Unassign from group

Unassigned In This Group In Another Group

Search Province...

VEHICLE	PROVINCE	CURRENT GROUP
☐ 1006	Eastern Cape	Eastern Cape
☐ 1007	Eastern Cape	Eastern Cape
☐ 1030	Eastern Cape	Eastern Cape
☐ 1039	Eastern Cape	Eastern Cape
☐ 1045	Eastern Cape	Eastern Cape
☐ 1046	Eastern Cape	Eastern Cape
☐ 1048	Eastern Cape	Eastern Cape
☐ 1051	Eastern Cape	Eastern Cape
☐ 1053	Eastern Cape	Eastern Cape

kmj admin Admin

- A vehicle belongs to one group at a time, or to none.
- Transfers ask you to confirm, showing which vehicles are moving and where to.
- A transferred vehicle immediately follows its new group's manager and custom alert rules.
- If someone moved a vehicle while you were choosing, it is skipped rather than moved twice, and the result tells you how many were skipped.

Deleting a group

Deleting a group asks you to confirm and states how many vehicles will be affected. The vehicles are not deleted. They become unassigned and can be placed in another group, and the group's manager assignment is removed.

A deleted group's name becomes available again and can be reused.

5.4 Recalculating Risk Predictions

Risk predictions normally refresh once a day at 03:00. Administrators can trigger a fresh run at any time using the Recalculate Risk button on the Fleet Risk page.

This is useful after the model has been retrained, after a change to the underlying data, or when current numbers are needed for a review immediately.

When the run finishes you will see a summary of how many vehicles were scored and how many alerts were raised, and the page refreshes with the new predictions.

- Running it more than once in a day updates existing predictions rather than creating duplicates.
- If a run is already in progress, the system says so instead of starting a second one.
- Fleet Managers and Viewers do not see this button.

If you see an error saying no trained model is available, the model must be trained before predictions can run. Contact whoever maintains your deployment.

6. Live Fleet Tracking

The Live Fleet Tracking interface provides a geographic overview of the fleet.

Depending on your role, you can:

- Monitor live vehicle locations
- Identify offline vehicles
- Monitor active alerts
- View fleet movement statistics
- Inspect individual vehicle information

Selecting a vehicle marker displays its current speed, current location, trip duration and distance travelled today.

Vehicle telemetry updates automatically as new information is received by the platform.

7. Troubleshooting

7.1 Common Issues

7.1.1 Unable to log in

- Ensure your email address and password are entered correctly.
- Check that your email address has been verified.
- If you have forgotten your password, use the Forgot Password option on the login page.
- If the problem persists, contact your system administrator.

7.1.2 Verification code expired

- Verification codes are only valid for a limited time.
- Select Resend Code to receive a new verification email.
- Check your spam or junk folder if the email does not arrive within a few minutes.
- Ensure you are entering the most recently received code.

7.1.3 Live map not displaying

- Verify that you have a stable internet connection.
- Refresh the webpage.
- Try a supported browser such as Google Chrome or Microsoft Edge.

7.1.4 Vehicle information not updating

- Wait a few moments for the next telemetry update.
- Refresh the dashboard.
- Confirm that the vehicle's telemetry device is online and transmitting.
- Contact your fleet administrator if the issue persists.

7.1.5 Unable to manage users

- Verify that you are logged in with an Administrator account.
- Refresh the page and try again.
- If your permissions have recently changed, refresh the page.

7.1.6 Dashboard data not loading

- Check your internet connection.
- Refresh the dashboard.
- Wait a few moments while data is retrieved from the server.
- Contact your system administrator if the issue continues.

7.1.7 Fuel data shows No data available

- Fuel is only calculated once a trip is complete. A vehicle currently driving shows no fuel data until it stops.
- A trip ends after the vehicle has been stationary with the ignition off for 10 minutes, so allow for a short delay.
- If a vehicle has had no completed trips in the period you selected, widen the date range.

7.1.8 A vehicle is missing from my views

- Fleet Managers only see vehicles in their assigned fleet groups. Ask your Administrator whether the vehicle is in a group assigned to you.
- If your access changed recently, refresh the page. You do not need to log out.
- Check whether the vehicle is offline and has stopped transmitting.

7.1.9 A custom alert is not firing

- Confirm the rule is Active rather than Deactivated.
- Confirm the rule is scoped to the fleet group containing the vehicle.
- Use Preview Impact to check whether the rule would have fired at all over the last 30 days. A rule that never fires usually has a threshold set too high.
- Repeated breaches by the same vehicle within a few minutes produce a single alert by design.

7.1.10 A hazard zone cannot be edited or deleted

Hazard zones are created automatically by the system and cannot be modified. Only zones you have drawn yourself can be edited or deleted.

7.1.11 Risk predictions look out of date

- Predictions refresh once daily at 03:00. A change in driving today will not appear until tomorrow's run.
- Administrators can trigger an immediate recalculation from the Fleet Risk page.

8. Frequently Asked Questions

Q: Why can't I access the Manager Dashboard?

A: Your account may not have the necessary permissions. Contact an Administrator to request the appropriate role.

Q: How often is fleet information updated?

A: Vehicle telemetry is updated in near real time as new data is received from connected vehicles.

Q: Can Viewers modify fleet information?

A: No. Viewer accounts have read-only access to the platform.

Q: What happens if my verification code expires?

A: Click Resend Code to receive a new verification code by email.

Q: A vehicle has a good safety score but a high risk score. Which is right?

A: Both. The safety score describes today, which went well. The risk score describes tomorrow, based on the last 7 days of behaviour. They measure different things.

Q: Why does one drive show up as two trips?

A: A trip ends when a vehicle is stationary for 10 minutes with the ignition off. A long stop in the middle of a journey therefore splits it into two trips. This is expected.

Q: Are fuel figures read from the vehicle's fuel tank?

A: No. They are estimated from each completed trip's distance and average speed. Treat them as comparative rather than exact, and compare vehicles doing similar kinds of driving.

Q: Will previewing a custom alert send notifications to my team?

A: No. The preview is a simulation against historical data. Nothing is saved and no alerts are sent until you save the rule.

Q: A parked vehicle shows a low risk score. Is it safe?

A: A low score on an inactive vehicle means the system has no recent driving to assess, not that the vehicle is known to be safe.

Q: I was removed from a fleet group. Do I need to log out?

A: No. Access is checked on every request, so the change takes effect on your next refresh.

Q: Why can a group only have one Fleet Manager?

A: So that responsibility for a set of vehicles is always unambiguous. To change who is responsible, an Administrator removes the current manager and then assigns the new one.

9. Contact Information

For technical support, feature requests or general enquiries, please contact the system administrators.

Email address: kilimanjaro.capstone@gmail.com

Developed by: Kilimanjaro StoneCap