





## **APP\_PARTIE Carte SON**

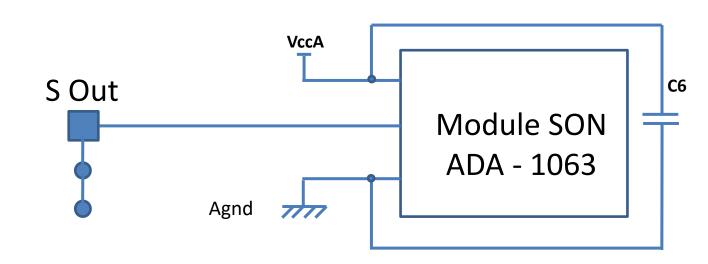


## Gauche (Connecteur en bas)

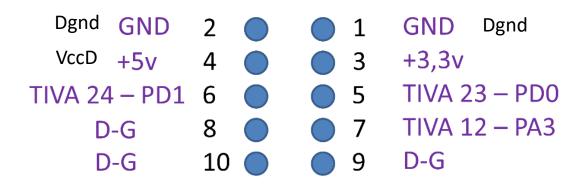

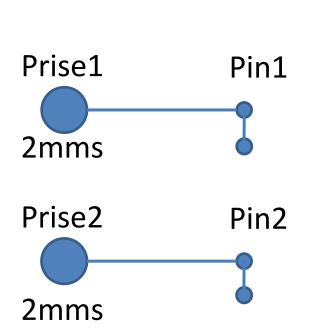

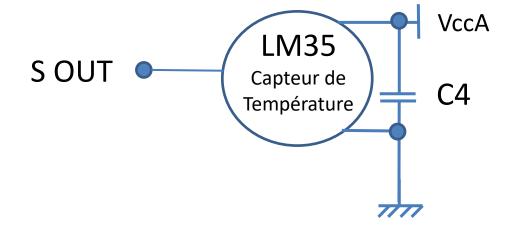

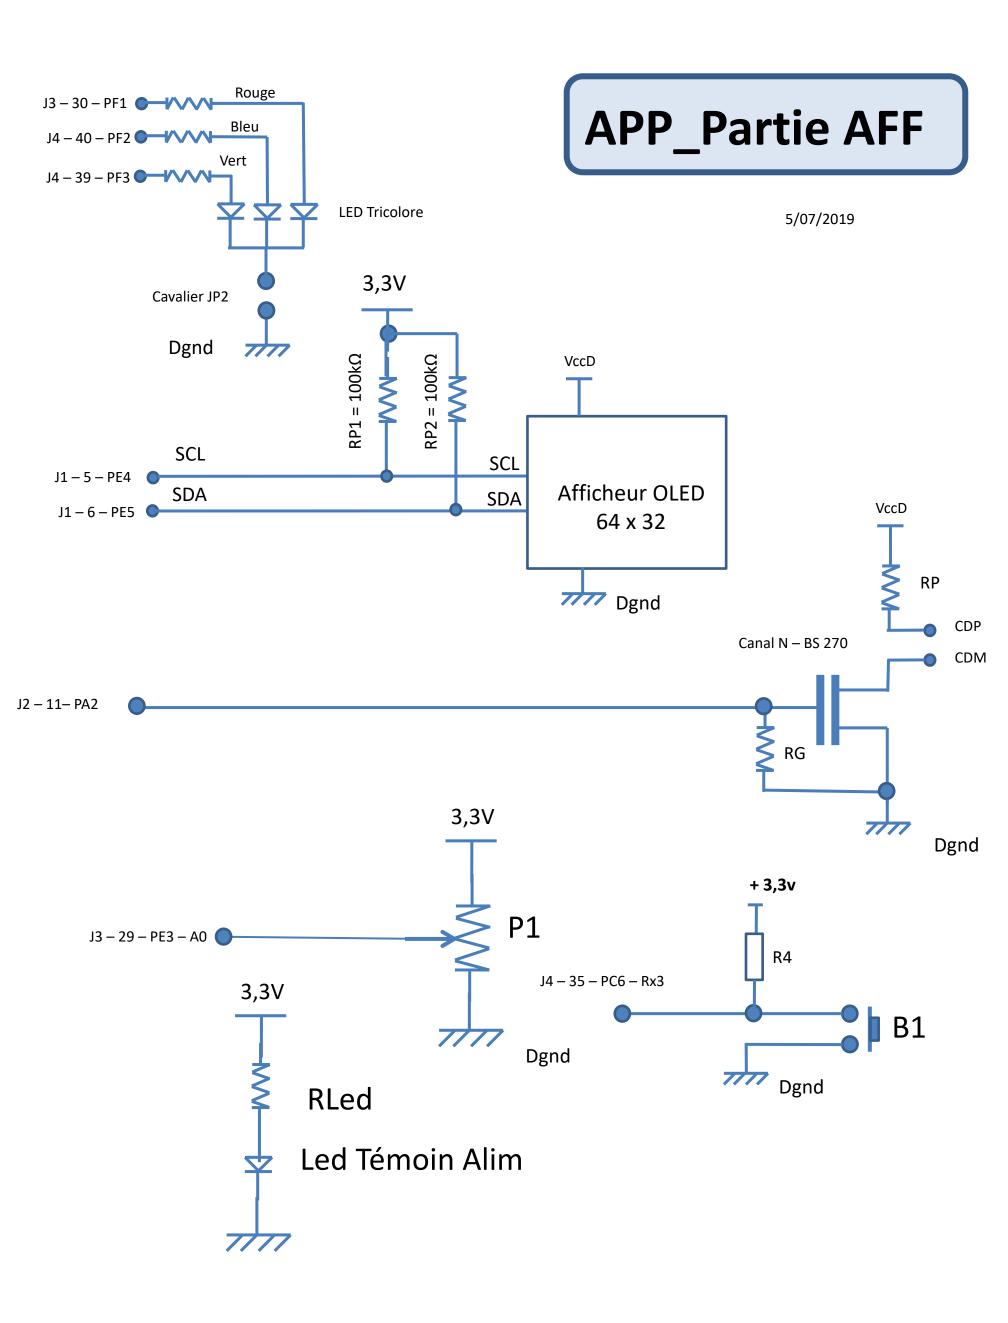

## Connecteur App\_carte\_AFF2

				1		
Agnd	GND	2			1	GND Agnd
VccA	+5v	4			3	+3,3v
TIVA	6 – PE5	6			5	TIVA 5 – PE4
TIVA	9 – PA6	8			7	TIVA 8 – PA5
TIVA 3	33 – PD6	10			9	TIVA 10 – PA7
TIVA 3	35 – PC6	12			11	TIVA 34 – PC7
TIVA 3	37 – PC4	14			13	TIVA 36 – PC5
TIVA :	13 – PA4	16			15	TIVA 38 – PB3
TIVA	28 – PE2	18			17	TIVA 27 – PE1
TIVA :	11 – PA2	20			19	TIVA 29 – PE3
TIVA	40 – PF2	22			21	TIVA 30 – PF1
NO C	ONNECT	24			23	TIVA 39 – PF3
NO C	ONNECT	26			25	NO CONNECT