FT-950 Remote

User & Technical Manual

Yaesu FT-950 web remote



Yaesu FT-950 web remote via the SCU-17 — CAT, WebRTC voice, FT8/FT4, CW skimmer — for a Raspberry Pi.

Version 1.3 · 2026-11-06

github.com/CQ-DJ0SH/ft950-remote

Contents

1 Overview 3

2 Features 4

3 Hardware and radio setup 5

What you need 5

The SCU-17 on the Pi 5

Radio menus 5

4 Installation 6

5 The page 7

6 VFO panel 8

Title bar 8

LCD 8

Tuning 9

TX power and RX · FILTER · LEVEL 9

7 PTT · Memory 11

8 Audio 12

9 DIGI — FT8 / FT4 14

Globe 16

Band conditions (VOACAP) 17

10 RTTY skimmer 19

11 CW skimmer 20

12 HackRF waterfall 21

13 Log 22

14 Settings 23

15 Remote power 27

16 Troubleshooting 28

17 Technical reference 29

Backend 29

Files on the Pi 29

1 Overview

FT-950 Remote is a web remote control for the Yaesu FT-950 HF/6 m transceiver. It runs on a Raspberry Pi next to the radio, talks to it directly through a Yaesu SCU-17 interface — CAT at 38400 Bd and USB audio — and serves the whole station as one HTTPS page. No hamlib, no desktop software: every control is mapped to the radio's documented CAT command and checked by reading the value back.

The focus is digital operation (FT8/FT4 with WSJT-X's own decoder) and remote voice over WebRTC, with a CW skimmer, a HackRF panadapter from a second Pi, logging to Wavelog and QRZ.com, and remote power through a Shelly relay.



2 Features

- VFO panel with an LCD modelled on the FT-950's display: FT-950 style analog meter, signal path as lit cells, mode lamps, DSP bars, seven-segment frequency, clarifier, VFO-B, PO/SWR/ALC/ID/AF bars on transmit.
- Title-bar switches: split, ANT 1/2, tuner and ATU tuning, CLAR/CLR, FLT · IPO · R.FLT · AGC, voice profile and FT8 profile.
- Tuning by mouse wheel or drag on a digit, frequency entry, band and mode keys, a frequency shuttle, CTCSS (ENC/TSQ), MON, NAR and a scaled TX power control.
- Push-to-talk in the browser with a watchdog, PTT-LOCK, roger beep, 1750 Hz tone call, MUTE and DROP; 32 memory keys (click recalls, hold 3 s stores).
- Two-way audio over WebRTC/Opus: RX/TX gain, mic AGC, compressor, pre-emphasis, mic echo test, RX recorder with WAV download.
- FT8/FT4 decoding with jt9 on three CPU cores, WSJT-X style sequencer with auto-answer, a queue for several callers to one CQ, waterfall, DXCC and worked-before flags; spots of the stations heard to PSK Reporter.
- HF band conditions under the waterfall from real VOACAP for your locator: 80-40, 30-20, 17-15, 12-10 and 6m in green / yellow / red, with a sun/moon switch for day and night.
- RTTY skimmer: every RTTY signal in the passband decoded at once (45.45 Bd, 170 Hz); transmit as AFSK through the DATA input, with macros.
- CW skimmer: every CW signal in the passband decoded at once; send through the radio's keyer with macros.
- HackRF waterfall relayed from TM-V71 Remote, following the amateur band of VFO A.
- Logging to Wavelog and QRZ.com; worked-before index from Wavelog.
- Radio power through a Shelly relay with auto power-off.
- Dark and light theme, 90 % panel zoom, installable as a PWA.

3 Hardware and radio setup

What you need

- Raspberry Pi with Debian 13 / Raspberry Pi OS. A Raspberry Pi 5 is strongly recommended: FT8/FT4 decoding with jt9 is the heaviest job, and the Pi 5 decodes a full band in a fraction of the Pi 4's time. A Pi 4 works, but needs 4–6 s per period at depth D2 instead of 1.5–2 s.
- Yaesu SCU-17 between Pi and radio (USB to the Pi; CAT and RTTY/DATA cables to the radio).
- Optional: a second Pi with TM-V71 Remote and a HackRF One (panadapter), a Shelly relay in the radio's 13.8 V line (remote power).

The SCU-17 on the Pi

The SCU-17 contains a CP2105 dual UART and a TI PCM2903B USB codec. The CP2105's "Enhanced" port (interface 0) carries CAT, the "Standard" port carries PTT/CW on RTS/DTR. The codec is the audio path to and from the radio's DATA jack. Use the stable /dev/serial/by-id path in Settings — it survives re-plugging.

```
/dev/serial/by-id/usb-Silicon_Labs_CP2105_..._if00-port0   CAT, 38400 Bd 8N1
/dev/serial/by-id/usb-Silicon_Labs_CP2105_..._if01-port0   PTT/CW (RTS/DTR)
hw:CARD=CODEC,DEV=0                                        audio in/out
```

Radio menus

- 026 CAT RATE = 38400 Bd (3), 027 CAT TOT = 10 ms (0).
- 031 TX TOT as a safety net for remote operation.
- 050 DATA TX GAIN — transmit level from the DATA jack (FT8, TUNE, voice). Adjust with TUNE until the power is reached and ALC just moves.
- 051 DATA OUTPUT LEVEL — receive level to the Pi (the codec has no capture control).
- 054/055 (DATA shift / VOX) as described in docs/FT8-DECODING.md.

Audio from the Pi reaches the radio on the DATA jack, which the FT-950 takes in the DATA (PKT) modes. Remote voice therefore runs in DATA-U / DATA-L — the VOICE PROFILE sets that up for the current band.

4 Installation

```
sudo apt install wsjtx voacapl    # jt9, ft8code, ft4code; VOACAP
git clone https://github.com/CQ-DJ0SH/ft950-remote /opt/ft950-remote
cd /opt/ft950-remote/backend
python3 -m venv .venv && .venv/bin/pip install -r requirements.txt
mkdir -p certs && cd certs && bash ../../deploy/gen-server-cert.sh /path/to/ca
sudo cp ../../deploy/systemd/ft950-remote.service /etc/systemd/system/
sudo systemctl enable --now ft950-remote
```

The service serves https://<pi>:8444/. The certificate is signed by a private root CA (shared with TM-V71 Remote) with a random serial and the Pi's own address; the CA can be downloaded in Settings ▸ General and on the power-off plate. Browsers allow the microphone only over HTTPS, so install the CA once on every device.

Then open Settings ▸ General: callsign, locator, CAT port and baud rate. Station data, logbook credentials and memory names are stored in backend/runtime.json (mode 0600) and never sent back to the browser.

5 The page



The title bar shows the logo (uploaded under Settings, never part of the repository), your callsign (shown with a slashed zero), the nameplate, the CAT and USB AUDIO lamps, the UTC clock, the theme switch, Settings and — once a Shelly is set up — the power switch.

Below follow the panels VFO, PTT · MEMORY and AUDIO, DIGI, RTTY, CW, HackRF and LOG. Most can be collapsed with ▲; PTT and AUDIO always stay open. The panels are shown at 90 % zoom so the whole station fits on one screen.


6 VFO panel



Title bar

- LOCK and PLL lamps: dial lock, PLL unlock (a radio fault). A click on LOCK (or Enter/Space) locks or unlocks the dial (LK, verified by read-back).
- SPLIT: receive on VFO A, transmit on VFO B.
- ANT 1 / ANT 2, TUNER (internal ATU in/out), ATU TUNE (starts a tuning cycle — the radio transmits a carrier; confirmation required).
- FLT · IPO · R.FLT · AGC step through VRF/THRU, IPO/AMP1/AMP2, AUTO/15k/6k/3k and OFF/FAST/MID/SLOW/AUTO; the LCD shows the state.
- VOICE PROFILE and FT8 PROFILE: read every value, write only what differs, verify by read-back, report what changed.

LCD

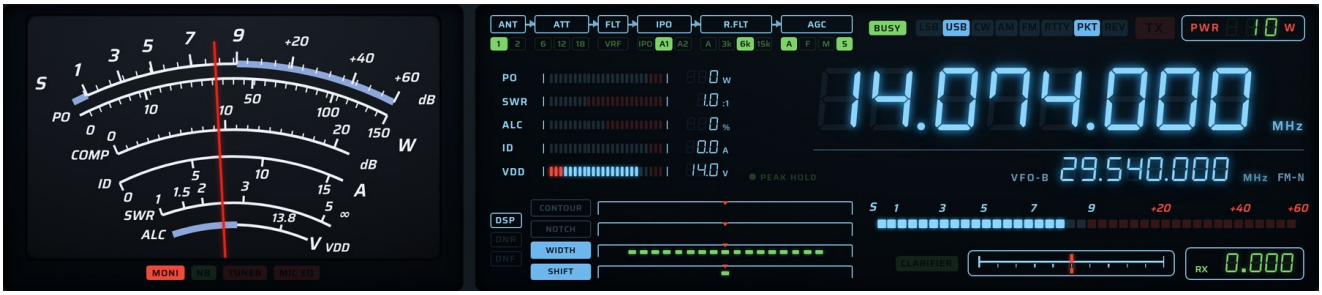

Left window: the analog meter — S on receive, PO on transmit — with the FT-950's scales (S, PO 0–150 W, COMP 0–20 dB, ID, SWR 1–∞, ALC/VDD 13.8 V), white on black with steel-blue bands, and the MONI/NB/TUNER/MIC EQ indicators.

Right window: the signal path ANT · ATT · FLT · IPO · R.FLT · AGC as fixed cells (only the active values light up), BUSY, the mode lamps LSB USB CW AM FM RTTY PKT REV (DATA-U lights PKT + USB, CW-R lights CW + REV), TX lamp and set power, the PO/SWR/ALC/ID/VDD bars, the DSP bars, the frequency to 1 Hz, the CLARIFIER lamp, the clarifier scale (red pointer = offset, ±1 kHz, tall ticks at the ends, a small one every 200 Hz) with its value (the

sign has a fixed place), VFO-B under VFO A and a digital S meter.

The DSP bars CONTOUR · NOTCH · WIDTH · SHIFT are drawn as on the FT-950: a blue bracket with a red pointer in the middle, the lit segments as green dashes. CONTOUR shows two rows with a V-shaped gap at the contour position, NOTCH a dash each side of the notch frequency in two rows; their labels stay dark while the function is off.

The digital S meter under VFO-B is a 40-segment bar, blue to S9 and red above, with the scale 1 … 9, +20, +40, +60 at the needle's S points; it stays dark while transmitting. As on the FT-950's LCD, every 7-segment digit place shows a dimmed 8 and unlit bar segments are dimmed, and nothing changes colour — the PWR box keeps its colours on transmit, the TX lamp shows it.

PO and SWR use approximate calibration points; ID (amps) follows the meter's 5/10/15 A marks. VDD is the supply voltage (RM8, also read while transmitting), approximate: 13.8 V at the meter's 13.8 mark; its bar spans 9.25–15.25 V, 0.25 V per segment. Red zones: the last three segments of PO, ID and VDD, SWR from 2:1, ALC beyond its zone, and the first three of VDD (under 10 V). Peak hold: while transmitting a held segment marks each meter's highest reading; after the transmission the bars and values show these peaks — the values in a green box, PEAK HOLD lit beside it — until the next TX starts (switchable in Settings ▸ Appearance); for VDD it keeps the lowest voltage, the sag under load. CLEAR PH next to NAR drops the held peaks at once (shown only with peak hold on). SWR counts only with some power out. Values keep a fixed number of digits (SWR as 1.5:1), so nothing jumps. The needle moves like a moving-coil meter: damped, rising in about 0.35 s and falling back a little slower.

Tuning

- Mouse wheel or drag on a digit of the LCD frequency.
- Frequency entry with ▲▼ (mic UP/DN), A⇄B and A→B.
- BAND and MODE keys light up at once and confirm when the radio reports back.
- Shuttle next to BAND (◀ DOWN · TUNE · UP ▶): hold left of the centre to tune down, right to tune up; the further out, the bigger the steps (10 Hz, 100 Hz, 1 kHz, 10 kHz) — the label shows the current step.
- CTCSS: off / ENC (send the tone) / TSQ (tone squelch) and the 50 tones, generated by the radio. MON switches the monitor. NAR selects the narrow filters; CLEAR PH beside it clears the held LCD peaks.

TX power and RX · FILTER · LEVEL

The red TX POWER control sets 5–100 W. RX · FILTER · LEVEL opens the groups RX (preamp, AGC, ATT), FILTER (width, shift, squelch SQL 0–255), LEVEL (RF gain in %), CLARIFIER and DSP; FILTER to DSP are equally wide, each value stands right beside its slider. All sliders look as in TM-V71 Remote: filled in the panel colour up to a rectangular fader knob, with a thin ring in that colour (transmit sliders red). The roofing filter is switched with R.FLT in the title bar.

- CLARIFIER: ON switches the RX clarifier, CLR sets the offset to 0; the slider sets the offset (±2.5 kHz in 10 Hz steps, double-click = 0) and switches RX CLAR on. The radio's offset is read back and checked.

- DSP: DNF, NR and NB as switches in one row; below them NOTCH (manual notch, 10–3000 Hz in 10 Hz steps) and CONTOUR (position 1–30), each with a switch, a slider and its value. The slider only sets the frequency or position, the switch turns the function on and off. Contour gain and width stay in the radio's menu (069/070).

7 PTT · Memory



- PTT: hold the button or the space bar. The browser renews a lease every second — if the page goes silent, the Pi drops PTT after 2.5 s. Maximum 180 s per over. The microphone is muted unless you transmit.
- PTT-LOCK latches transmit; ROGER adds a roger beep; 1.750 kHz arms the repeater tone call: the next PTT sends 1750 Hz instead of the microphone, releasing PTT disarms it (FM modes).
- MUTE mutes the receive audio (descending chime), DROP blanks only the current over and lifts when the station stops (ascending chime).
- PTT → VFO shows which VFO transmits. In the installed PWA, level bars for RX and MIC stand left and right of the PTT button.
- Memory keys M1–M32 (2 × 8 per side): click recalls frequency and mode to VFO A, in FM with CTCSS, plus VFO B and split if the key has them; hold 3 s to store VFO A in that channel (confirmation before overwriting).

Settings ▸ Memories edits all 32 channels: frequency, mode and CTCSS (mode and tone) go into the radio with MW, verified by MR; split, VFO B and a name are kept on the Pi, because the FT-950's memories have none of them. DEFAULTS (M1-M32) fills one band per key row for 80/40/20/15/10/6 m — left SSB | CW calling frequencies, right FT8 | FT4 — then 10/6 m FM, the 10 m repeater (split −100 kHz), SSTV and the IARU Region 1 emergency centres.


8 Audio



CONNECT starts WebRTC: the radio's audio plays in the browser, the microphone goes to the radio while you transmit. RX GAIN and TX GAIN set the levels. The switches in the title row: AGC rides the microphone toward a target level; MIC TEST records your microphone through the whole path and plays it back without transmitting — at listening level, the meters keep showing the real transmit level. On a desktop the browser's own microphone processing stays on (switching it off drops the level by about 40 dB on macOS); a built-in microphone is preferred to a Bluetooth headset.

REC records the receive audio on the Pi (up to 30 minutes, 16 kHz), ▶ plays it, ↓ WAV downloads it. Settings ▸ Audio adds a compressor and pre-emphasis for SSB voice, the FT8 TX drive, the codec output level and the FT-950's audio menus with saved defaults.

The graph is split: on top the levels of the last 30 s, below the audio spectrum 0–3 kHz (the FT-950's SSB/DATA passband) — receive audio in violet with a yellow peak hold that falls away in about 10 s, your microphone in red while you transmit or run MIC TEST. PEAK in the legend switches the peak hold. The spectrum is computed in the browser and starts with CONNECT.

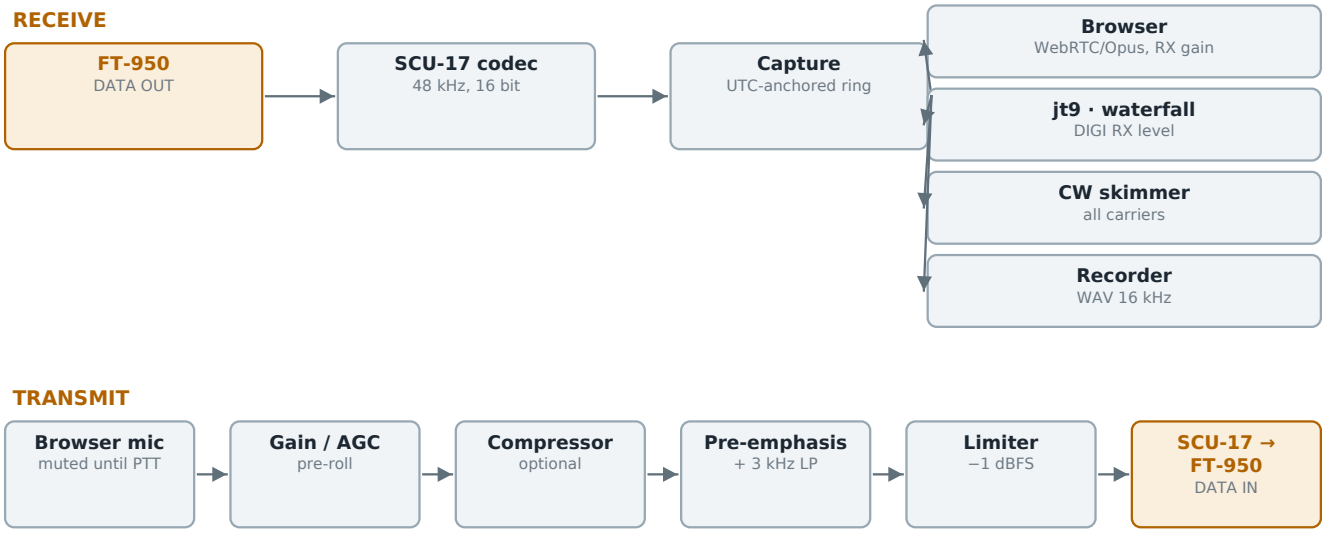

FT8/FT4 and TUNE: tones generated on the Pi (ft8code/ft4code) go straight to the codec; CW is keyed by the radio itself (keyer memory).

9 DIGI — FT8 / FT4



DECODE in the panel's title bar switches decoding on and off (as in the CW skimmer); off, the waterfall stops and is cleared (the Pi then computes no waterfall either). AUTO picks FT8 or FT4 by the nearest standard frequency — on 80 m FT8 (3.573) and FT4 (3.575 MHz) are only 2 kHz apart. Decoding runs every period with WSJT-X's jt9 — or a faster build chosen in Settings ▸ FT8 ▸ Decoder (see below); the WSJT-X plate in the title bar shows the one that runs (2.7, 2.7 fast, 3.3 MT). The passband is split over three cores. D1/D2/D3/AUTO in the footer pick the depth: D2 (default) puts the decodes on screen about 1.5–2 s after the period on a Pi 5, D3 finds a few more weak signals in about 3 s, AUTO follows the measured run time. Received messages list SNR, time offset, frequency, message and DXCC, with worked-before colouring.

Title bar: DECODE, CQ with its target, Auto Answer, Auto Hunt, the WSJT-X plate, the next transmission, Halt TRX and the TX lamp. Strip under the tables: mode (AUTO · FT8, FT8, FT4), the cycle bar (RX or TX and the seconds into the period), EVEN/ODD, DECODE with the run time and the number of decodes of the last pass, the NTP LED and the PSK Reporter LED, then RX with the receive level and TX with TUNE. Footer: dial frequency and power (framed), decode depth, OVL (codec overload), the TX frequency with Adopt Frequency, palette, contrast and brightness of the waterfall, and the VOACAP band conditions.


- Click a decode to put the RX window (green frame, if switched on in Settings ▸ FT8) there. With Adopt Frequency on (footer, next to the TX frequency) the TX box (red) moves too, and Auto Answer and Auto Hunt answer on the partner's frequency — the TX box follows while their QSO runs. A click in the waterfall sets TX by hand and switches Adopt Frequency off, so the next station does not pull it away; Shift+click moves only the RX window. double-click answers the station — in Received and in My

Messages — and selects its session in Sessions, so Session Messages shows that QSO. A double-click within the first ~1.7 s of your own TX period still transmits in that period (start at once, the partner sees a slightly positive DT); later it goes out in the next one.

- The filters above Received Messages show all, CQ only, RR73 (with RRR) only or 73 only. The arrow icon ↓ in each list head (follow) keeps the newest row in view, Session Messages included.
- A failed session shows just error in the list; the reason comes as a toast (when it happens and on a click on the row) and as the tooltip.
- With a session marked (click its row), QRZ Visit opens the station's QRZ.com page and Map Display a world map: position from the locator (without one, the centre of the DXCC entity), great circle, distance and bearing from your locator. Both open a popup window.
- CQ calls CQ — to everyone (–) or directed with the choice next to it: DX, EU, NA, SA, AF, AS, OC, POTA or SOTA (CQ DX DJ0SH JO62). Auto Answer: while idle, a station calling you is answered automatically.
- My Messages: on your TX lines the last column (DXCC/CNT) counts the attempts — 2/5 for a QSO message (five unanswered repeats end the sequence), 3/40 for CQ; the last attempt is amber.
- DX Call in the My Messages head calls a station typed in: call, grid (optional; 6 characters are cut to 4, an invalid one is dropped), period auto / even / odd, then Call DX. auto answers the station's last decode if it was heard, otherwise it calls in the next period. Your own call is refused; a click on a decode fills the fields.
- Auto Hunt calls new stations by itself: while no QSO runs, after every full decode pass it calls the best new CQ (a plain CQ, not CQ DX/NA/…; new DXCC first, then the strongest) and waits for the QSO to end. A station that never answers is struck through in Received Messages and not called again (the list survives restarts). While on, the button is red and shows Hunt and the time left as m:ss (∞: no switch-off). It calls only while a browser shows the DIGI panel. Whom it calls, the minimum SNR, the switch-off time (default 180 min, 0 = never) and the no-reply list are in Settings ▸ FT8.
- The sequencer follows WSJT-X: call, report, R-report, RR73, 73; it can log automatically: Auto-log in the Sessions header (default on) logs every completed QSO to Wavelog, and Settings ▸ Log can send it to the QRZ.com logbook as well (its own switch, default off); with neither it is offered in the log form. A session counts as logged when every target accepted it. A new QSO the sequencer starts by itself (Auto Hunt, Auto Answer, a caller to our CQ) is selected in Sessions, so Session Messages follows it; a session clicked afterwards stays until the next one starts. While a QSO runs, Session Messages also lists the partner's messages to others (their CQ, their QSO with someone else) in grey — they change nothing in the sequence; so is the decode that started the session when it was not addressed to you. Our own lines appear as soon as the next message is decided, about a second before the radio keys: TX ▷ dimmed while pending, TX ▶ once on the air, TX ✕ struck through if it did not go out (too late for the period, or halted). A reply that comes in while our older message is still on the air is answered next period — the QSO is not closed before our own 73. While a QSO runs, a narrow decode around the partner (FT8 ±200 Hz, FT4 ±300 Hz — FT4 needs the wider margin) has their reply within ~0.1 s of the period end, so the next message usually starts 0.5–1 s into our period; without a reply there it repeats at once. It can send RRR instead of RR73 (Settings ▸ FT8).

- Several callers to one CQ: the first goes to a QSO, the others wait in a queue and are answered one after the other when the QSO ends, instead of the next CQ. Order: new DXCC, DXCC new on this band, not worked on this band, then the strongest. A waiting station drops out after 2 minutes without a new call, or as soon as it is heard with someone else or calling CQ; one just worked does not queue again. Waiting stations are listed in italics at the end of Sessions (next, waiting 2, …; the tooltip shows their message and SNR); a click puts one at the front.
- A caller decoded while our CQ is already on the air: the CQ is cut and the answer goes out in the same period, as long as it can still start in time (FT8 up to 1.7 s into the period, FT4 1.2 s); later it goes out in the next period. A cut CQ does not count towards the CQ limit.
- Calls FT8 cannot carry in full (DL1ABC/QRP, W1AW/4, PA/DJ0SH — only /P and /R fit) go out as WSJT-X sends them, in short (hashed) form: <DL1ABC/QRP> DJ0SH JO62. The other station recognises its own call; your call, grid and reports stay in full.
- PSK Reporter (Settings ▸ FT8): every station decoded here is reported to pskreporter.info, with your call and locator as the receiver. The PSK Reporter LED in the strip is green after a good upload, red when the last one failed, dark until the first; its tooltip has the details. While the reporting is off the LED is hidden, its place kept. Below 1450 px window width the label shortens to PSK.
- RX in the strip sets the DIGI RX level on the Pi (software gain −20 … +20 dB, double-click: 0 dB); the meter right of it shows the receive level, target −40 … −20 dBFS. TX sets the FT8/FT4 TX drive (as FT8 TX DRIVE in Settings ▸ Audio); TUNE next to it sends a steady tone on the TX frequency and counts down the seconds left. Halt TRX, right in the title bar, is active during an FT8/FT4 transmission, a sequence or while Auto Hunt is on (dimmed otherwise); it stops at once and switches Auto Hunt off. NTP in the strip is an LED: green with the clock synchronised, red without (no decoding).

Globe

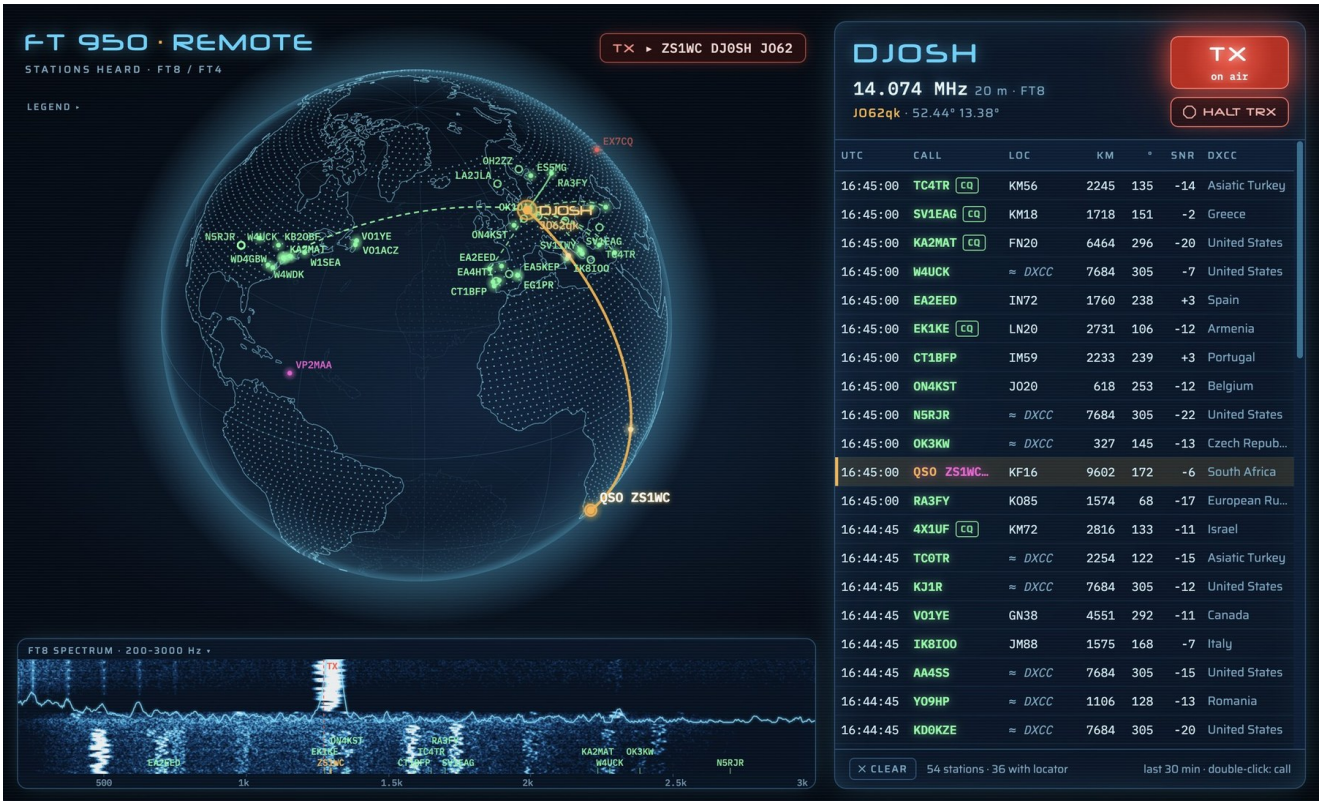

Globe, beside the title of Received Messages, opens a popup with the stations heard on a slowly turning, see-through hologram globe; your own station stands out in amber with call and locator. Stations of the last 30 minutes are points with their call (where they would overlap, the important ones win): magenta a new DXCC, green new on this band, red worked; a hollow ring sits at the centre of the DXCC entity when the station sent no locator. A call that appears for the first time draws a line out from you that fades after about 20 s; stations calling CQ now (last 45 s) have a dashed line, the QSO in progress an amber line with pulses running along it.

- The table beside it has your call as its title, the frequency with band and mode, a TX lamp (red and glowing while transmitting, with the message that goes out) and HALT TRX, as on the main page. Columns: UTC, call (with a CQ tag while it calls), locator, km, bearing, SNR, DXCC.
- A click on a row (or a point) turns the globe to the station and stops it there; RESUME, bottom left, turns it on again - also after turning it by hand with the mouse. The wheel zooms. A station clicked on the globe is marked in the table too (cyan stripe) and scrolled into view; the table keeps it there while it re-sorts, until you scroll it yourself.
- While transmitting, a small TX line at the top right of the globe shows what goes out (TX ▸ message, TUNE, VOICE or PTT). During a QSO it shows the partner's last message above it (RX ◂ message and SNR) and stays through the receive periods too, your last message then dimmed.
- × CLEAR in the table footer empties table and globe; only stations heard afterwards come back.
- A double-click on a row calls the station - through the main page, exactly as a double-click in Received Messages (RX window, Adopt Frequency, log form, then the call). Without the main page the popup does not call.
- Under the globe runs the FT8 spectrum across the full width: a waterfall over the decoder's passband (200-3000 Hz from Settings ▸ FT8, the DIGI waterfall's data) in the hologram colours with the current spectrum over it, the stations of the last period with their call at their audio frequency, the QSO partner in amber and your TX frequency as a red line while a sequence runs. With DECODE off it is empty. Legend and FT8 spectrum fold with their header line (▾/▸); the browser remembers it.
- The popup follows the main page's light or dark theme (☀/☾), also while it is open.

Band conditions (VOACAP)


At the bottom right of the panel a sun or a moon and five chips — 80-40, 30-20, 17-15, 12-10, 6m — show how the bands are open from your locator, in green, yellow or red, as iDigi shows them. The values are computed on the Pi with VOACAP (voacapl): VOACAP predicts a path, not a place, so the question goes to a ring of 36 paths around you (12 directions × 1500 / 4000 / 9000 km) at 100 W FT8 with an isotropic antenna. Per band the reliability is the mean over the ring, and a pair is as good as its better band: green from 0.6, yellow from 0.3, red below. Hovering a chip shows both bands in per cent and the trend of the next three hours.

- Sun or moon follows the real time of day at your locator. A click shows the other half of the day — the mean over today's daylight or darkness hours there — with a framed switch and dashed chips; a second click goes back to now.
- Updates: one run covers all 24 UTC hours of the month's median ionosphere (about 0.5

s, at low priority so jt9 never waits). It is computed once per UTC day and again when the locator or the sunspot number changes. The sunspot number is NOAA SWPC's latest monthly value, fetched once a day; the last good one is kept for an offline Pi. The page asks every 5 minutes, so the next hour, sunrise and sunset show within 5 minutes.

- Limits: VOACAP is a monthly median of the F2 layer. It does not see flares or geomagnetic storms, and on 6 m it shows only the rare F2 openings of a solar maximum — not sporadic-E, which opens 6 m in a European summer. A red 6m chip does not rule out Es.
- Without voacapl, or without a locator in Settings ▸ General, the strip is not shown.


10 RTTY skimmer

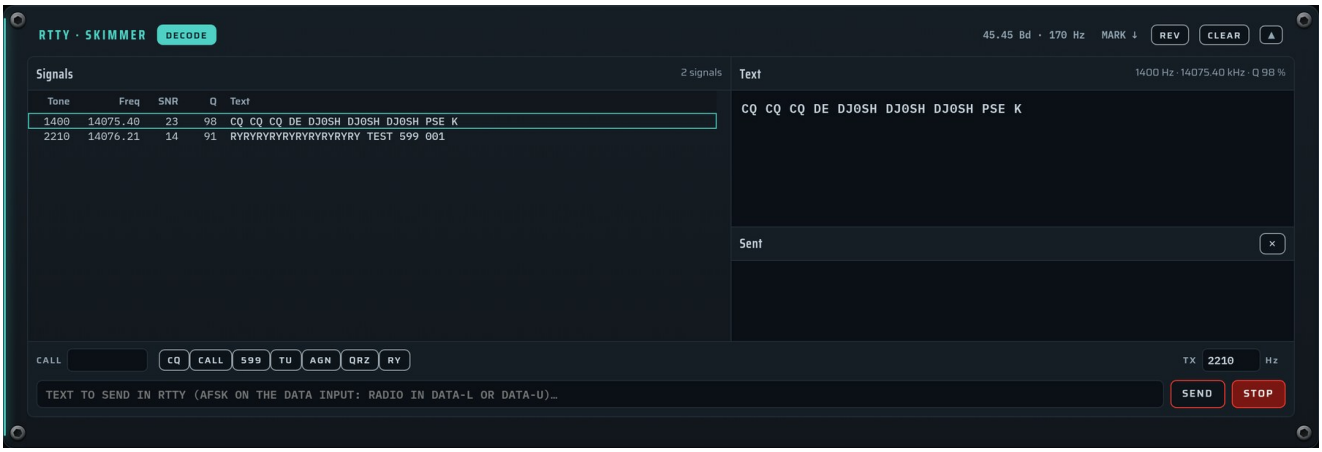

The RTTY panel below DIGI decodes every RTTY signal in the passband at once — standard amateur RTTY: 45.45 baud, 170 Hz shift, Baudot with US figures, 1.5 stop bits. DECODE switches it on (it runs on the Pi only while on). Each signal gets a row: tone (the audio centre between mark and space), frequency on the air, SNR, quality (share of characters with a correct stop bit) and the running text; a click shows its whole text on the right and takes its callsign into CALL.

- How it works: every 0.5 s a spectrum of the last 2 s is searched for pairs of peaks 170 Hz apart with a dip between them (up to 8 signals, slow drift is followed). Per signal, mark and space go through a filter matched to the bit; their levels are compared after each is normalised to its own peak, so fading of one tone does not flip the bits. A UART finds start bit, five data bits and stop bit. A character only counts where one tone stands clearly above the other, so noise prints nothing, and a row is shown only once most of its frames are clean.
- Mark and space: on the air the mark is the higher frequency. In LSB / DATA-L that is the lower audio tone, in USB / DATA-U the higher one — the panel follows the radio's mode (MARK ↓ / ↑). REV swaps them, for a station sending reversed (receive and transmit).
- Transmit: AFSK through the DATA input, like FT8 — the radio in DATA-L (usual), DATA-U or USB, at the FT8 TX drive. The text goes into the send line, by hand or from the macros CQ, CALL, 599, TU, AGN, QRZ and RY ({MY}, {LOC} and the CALL field are filled in); Enter or SEND transmits it with CR LF before and after, mark idle in front. TX is the centre frequency in Hz of audio (300–2600); a click on a signal sets it to that station. STOP and Halt TRX stop at once; a watchdog ends the transmission at the latest 3 s after its length. While the FT8 sequencer or Auto Hunt runs, RTTY does not transmit.
- The panel can be hidden and gets its own accent colour in Settings ▸ Appearance.


11 CW skimmer

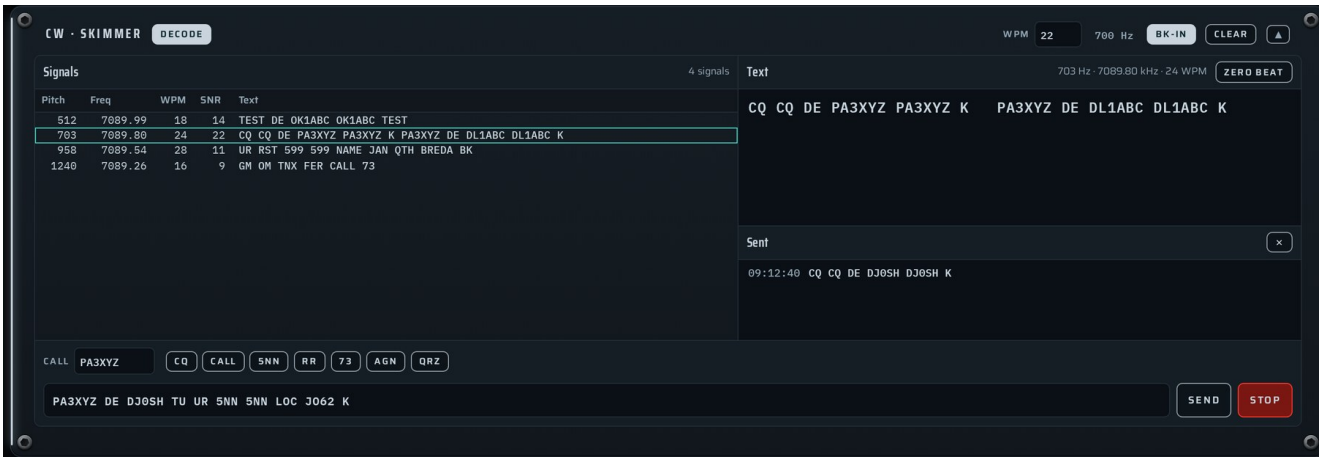

DECODE starts the skimmer. Every CW carrier in the passband gets its own decoder; the table shows pitch, RF frequency, speed, SNR and the running text. Click a row to follow it: its text appears under Text, ZERO BEAT tunes VFO A onto it.

Sending uses the radio's own keyer: the text is written to keyer memory 5 and played (KM/KY), in chunks of 50 characters. The radio must be in CW or CW-R with BK-IN on. Macros (CQ, CALL, 5NN, RR, 73, AGN, QRZ) fill the send line; CALL is taken from the selected signal.

12 HackRF waterfall

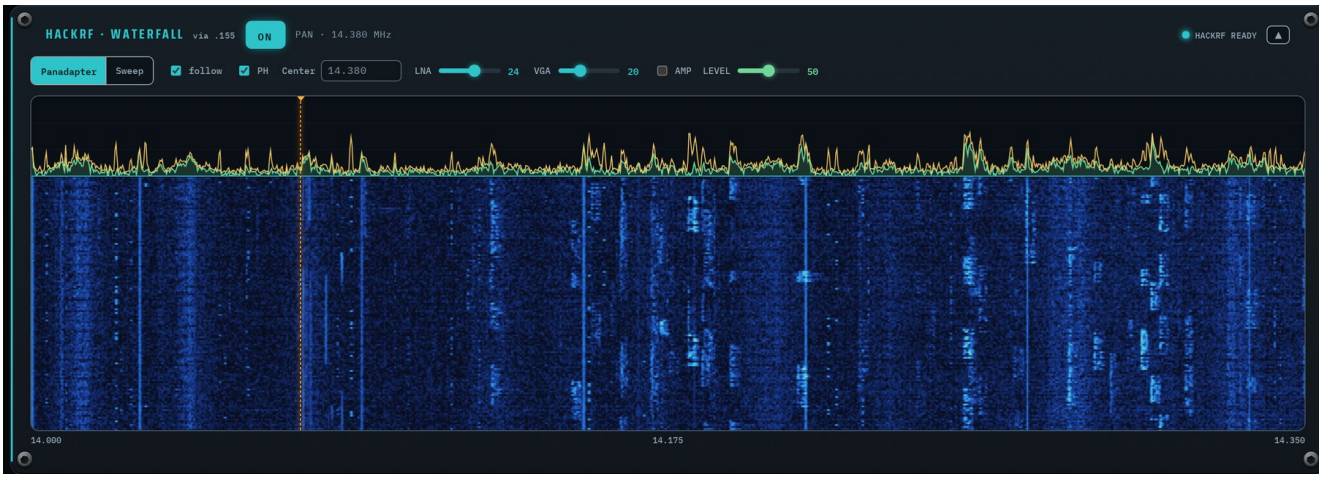

The HackRF One sits on the second Pi with TM-V71 Remote. FT-950 Remote relays its waterfall (Settings ▸ General ▸ HackRF source). With follow on, the view shows the whole amateur band of VFO A; one click tunes VFO A there. The HackRF is shared: what you set here also applies to the TM-V71's waterfall.


In the band view TM-V71 Remote sends a fine row of just that band (8192-point FFT, 244 Hz per point, 4 blocks averaged) — 820 points for 40 m instead of about 50 from the normal 2 MHz row. The mouse shows frequency and level under the pointer.

13 Log

The LOG panel logs to Wavelog (API key and station profile) and the QRZ.com logbook — each with its own button beside the callsign: LOG WAVELOG and LOG QRZ.COM (the form stays, so a QSO can go to both; a ✓ marks where it went). QRZ LOOKUP fills name, QTH and locator; NEW STATION / WORKED shows in the title bar. The worked-before index is downloaded from Wavelog and colours the FT8 list. Settings ▸ Log holds the accounts — the keys never leave the Pi.

In the title bar, LEDs as in the page's own title bar: WAVELOG and QRZ green when set up, AUTO green while completed QSOs are logged automatically (to Wavelog). The LOG buttons are only outlined while the form is empty and filled once a callsign is in it — then there is something to log. Recent QSOs: QRZ Visit and Map Display for the marked row.


14 Settings

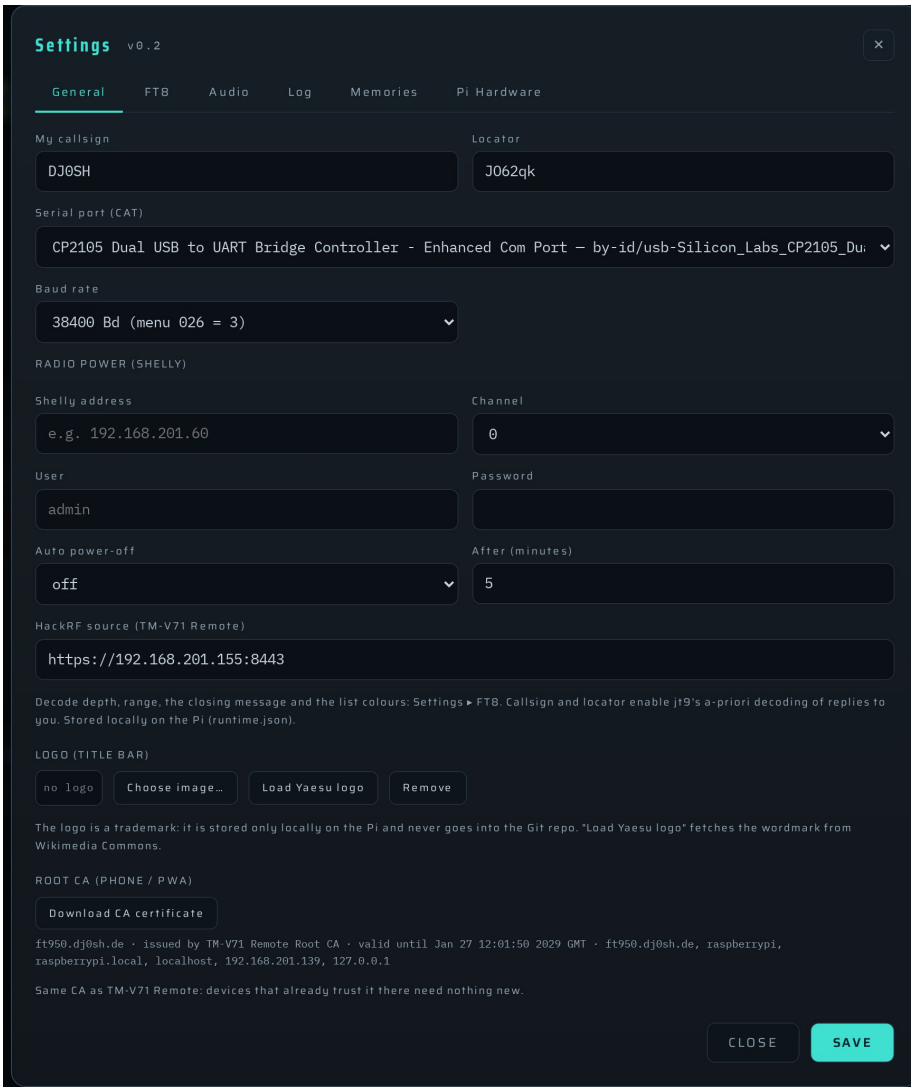


- General: callsign, locator, CAT port and baud rate, Shelly and auto power-off, HackRF source, logo, root CA.
- FT8: the decoder — jt9 (WSJT-X 2.7, Debian package), jt9-fast (the same decoder built for the Pi 5 with its OSD stage in Rust: identical decodes, about twice as fast) or jt9-33 (WSJT-X 3.3 beta, multithreaded MTft8 with a Rust OSD: about 6 % more decodes, ready about 2.4 s after the period; it sets its own depth). Builds not installed are greyed out. Then decode depth (as D1/D2/D3/AUTO in the panel) and range, closing message RR73 or RRR, PSK Reporter (switch, off by default, with the destination report.pskreporter.info:4739 (UDP) beside it; an optional antenna description; links to the PSK Reporter map — stations heard by you and stations that hear you, last hour; statistics since the service started: uploads, spots, different stations, waiting, last upload, spots per band. Uploads every 5 minutes, each station at most once an hour per band and mode, sooner only when its locator becomes known; unsure decodes and your own call are not reported), Auto Hunt (whom to call: not worked on this band, never worked, DXCC new on this band, DXCC never worked; minimum SNR; switch-off time, 0 = never; the no-reply list as a table — blocked time, call, country, grid, band, SNR, tries — with fixed column heads, × to take a call off, a field to add one by hand

and Clear list; these edits apply at once), the waterfall (per browser, at once: the green RX window on/off — default off — and the default palette, picked by clicking its colour sample; the Palette choice under the waterfall then lasts only until the page is reloaded), and the colours of the message lists with preview and reset.

- Audio: capture device, codec level, FT8 TX drive, the FT-950 audio menus, voice TX processing, WebRTC buffers.
- Log: Wavelog and QRZ.com; automation: QRZ lookup before every log, auto-log to Wavelog (as Auto-log in Sessions) and, separately, auto-log to the QRZ.com logbook (needs its API key).
- Memories: the 32 memory keys with CTCSS, split and VFO B.
- Appearance (per browser): hide the DIGI, RTTY, CW, HackRF and Log panels (VFO, PTT and Audio always stay; hiding the HackRF stops its sweep), an accent colour per panel with Reset, and peak hold of the LCD meters (PO · SWR · ALC · ID · VDD) on/off. Changes show at once and are kept with SAVE.
- Pi Hardware: load, temperature, memory, disk and a 24 h graph; below it the WSJT-X decoder (jt9) on its own — the last pass (CPU seconds, run time, parts), its memory (the parallel parts added up, peak) and the CPU of the last minute as a share of the Pi, with its own 24 h graph of CPU share and memory. CPU time comes from the kernel when a jt9 run ends; the memory is jt9's own peak, read while it runs. Two rows count audio dropouts since the service started: Audio · sound card shows the codec's overruns (samples lost — the decoder, waterfall and browser all miss them), slow 20 ms chunks (more than 15 ms to process) with the longest one, and arecord restarts; Audio · to browser shows gaps (a browser's buffer ran dry: a short silence), drops (a browser fell behind and the oldest audio was discarded) and how many browsers are listening. All at 0 means clean audio.

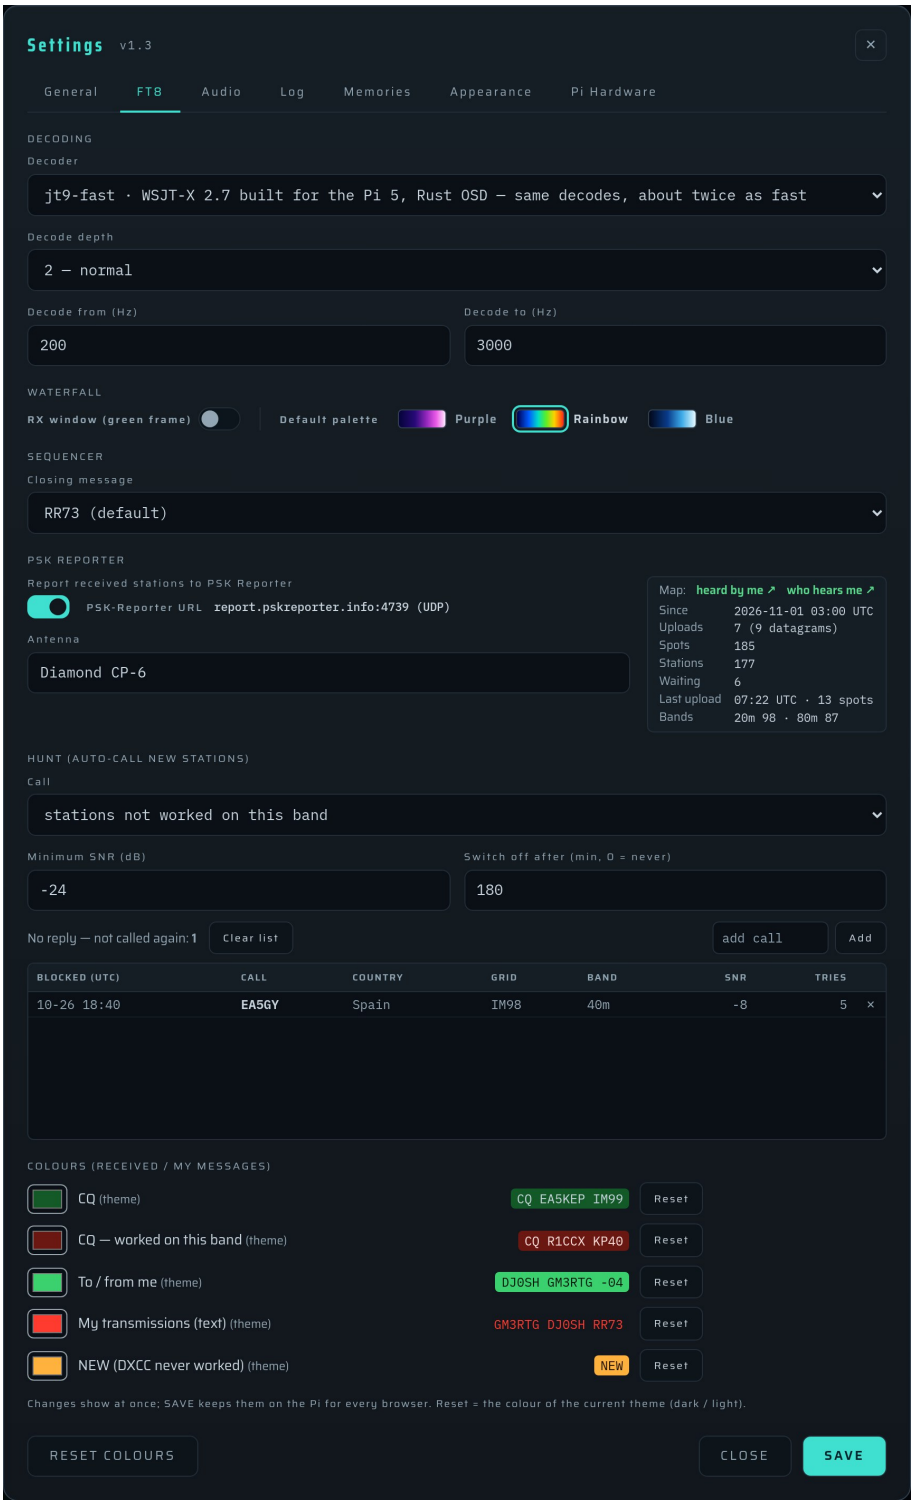
Settings v1.3
General
FT8
Audio
Log
Memories
Appearance
Pi Hardware
DECODING
Decoder
jt9-fast · WSJT-X 2.7 built for the Pi 5, Rust OSD — same decodes, about twice as fast
Decode depth
2 — normal
Decode from (Hz)
200
Decode to (Hz)
3000
WATERFALL
RX window (green frame)
Default palette
Purple
Rainbow
Blue
SEQUENCER
Closing message
RR73 (default)
PSK REPORTER
Report received stations to PSK Reporter
PSK-Reporter URL report.pskreporter.info:4739 (UDP)
Antenna
Diamond CP-6
Map: heard by me ↗ who hears me ↗
Since 2026-11-01 03:00 UTC
Uploads 7 (9 datagrams)
Spots 185
Stations 177
Waiting 6
Last upload 07:22 UTC · 13 spots
Bands 20m 98 · 80m 87
HUNT (AUTO-CALL NEW STATIONS)
Call
stations not worked on this band
Minimum SNR (dB)
-24
Switch off after (min, 0 = never)
180
No reply — not called again: 1
Clear list
add call
Add
BLOCKED (UTC)
CALL
COUNTRY
GRID
BAND
SNR
TRIES
10-26 18:40
EA5GY
Spain
IM98
40m
-8
5
COLOURS (RECEIVED / MY MESSAGES)
CQ (theme)
CQ EA5KEP IM99
Reset
CQ — worked on this band (theme)
CQ R1CCX KP40
Reset
To / from me (theme)
DJ0SH GM3RTG -04
Reset
My transmissions (text) (theme)
GM3RTG DJ0SH RR73
Reset
NEW (DXCC never worked) (theme)
NEW
Reset
Changes show at once; SAVE keeps them on the Pi for every browser. Reset = the colour of the current theme (dark / light).
RESET COLOURS
CLOSE
SAVE

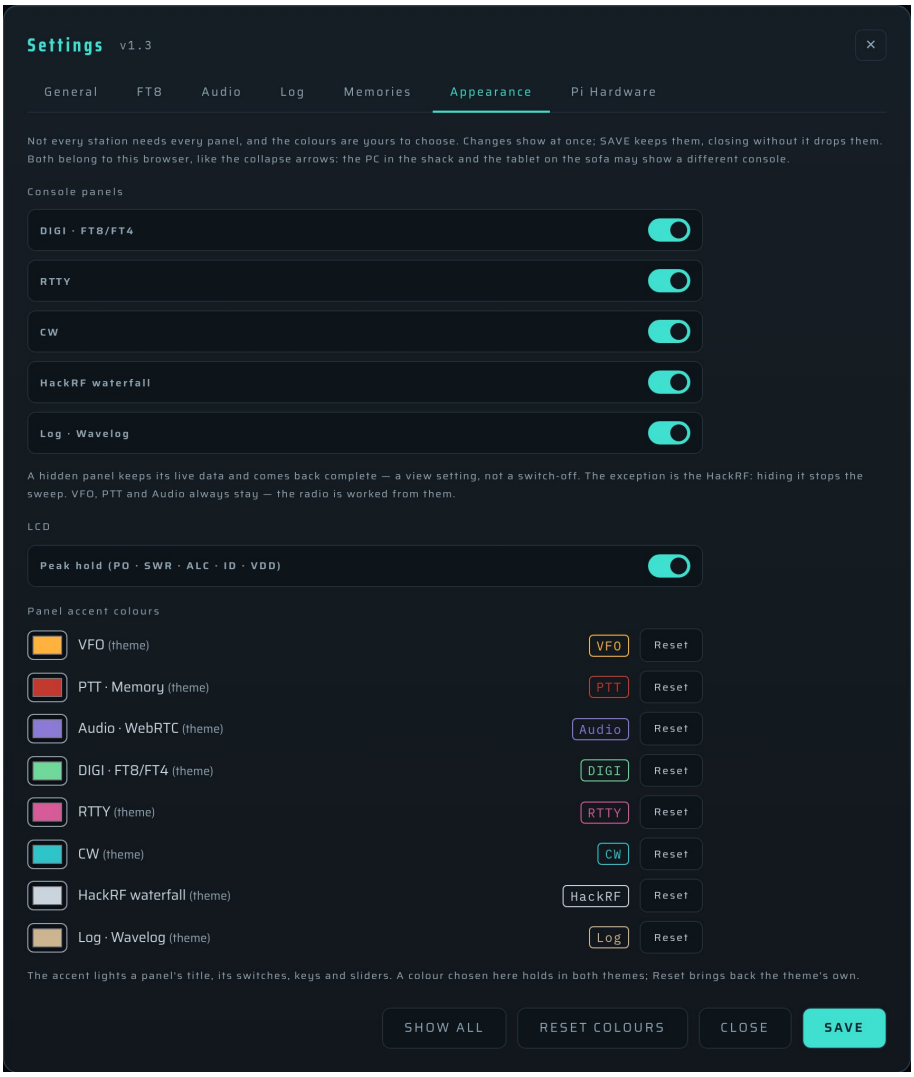

Every tab ends with the same bar: CLOSE, plus SAVE on General, FT8, Log and Appearance. On Audio changes apply at once, on Memories each row has its own WRITE, Pi Hardware is read only. While Settings is open, the animations behind it pause (cycle bar, meters, spectrum, waterfalls) to save the browser's CPU; data and decoding go on, and the waterfalls draw what came in on close.


15 Remote power

A Shelly relay (Gen1 or Gen2/Plus/Pro, detected automatically) switches the radio's 13.8 V. The power switch in the title bar turns it on and off — before cutting the supply, a transmission and the sequencer are stopped. After switching off, power stays off for at least 3 s. While the radio is off a plate covers the page. Auto power-off switches the radio off when no browser has had the page open for the set time.

16 Troubleshooting

- CAT offline: check the by-id port and menu 026 = 3 (38400 Bd).
- No receive audio: CONNECT, then check RX GAIN and that MUTE/DROP are off.
- Nothing decoded: NTP must be synchronised (NTP lamp), mode DATA-U, the DIGI level in the green range.
- FT8 too quiet: FT8 TX drive (Settings ▸ Audio) and menu 050.
- No microphone: the page must be opened over HTTPS with the trusted CA.
- After a backend restart: reload the page and CONNECT again.
- No band strip under the waterfall: apt install voacapl, and set a locator in Settings ▸ General.

17 Technical reference

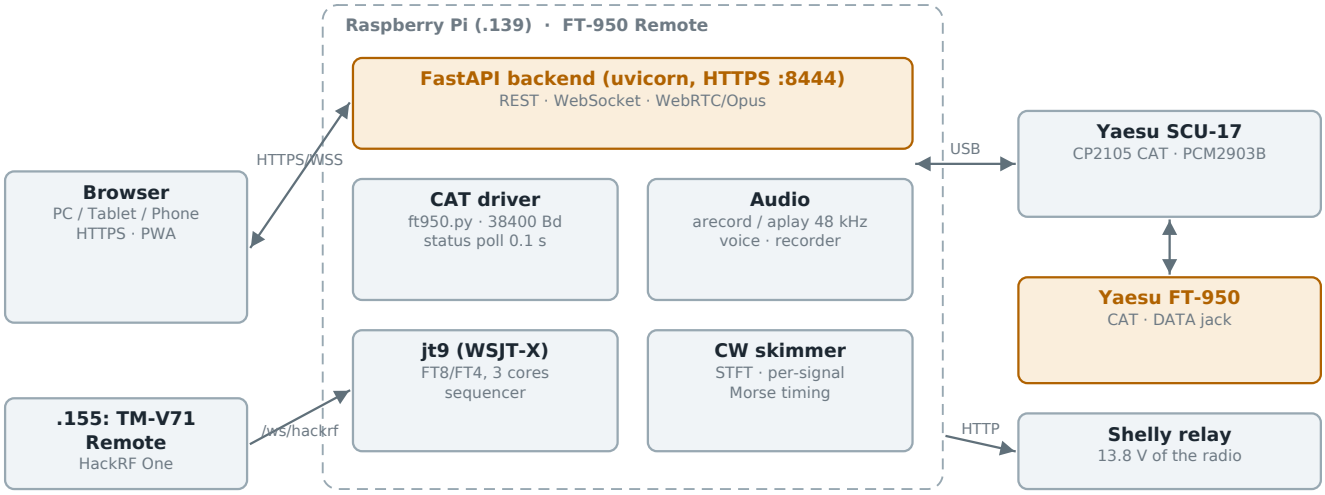

Backend

- FastAPI on uvicorn, systemd unit with RuntimeDirectory, StateDirectory, memory limits and Restart=always.
- ft950.py: CAT driver with read-back verification; radio_service.py polls frequency/mode/meters every 0.1 s and the receive chain every second.
- digi.py: UTC-anchored slices, jt9 in parallel sub-bands, adaptive depth, early and partner passes; sequencer.py: the QSO state machine.
- voice.py: WebRTC hub, PTT lease, pre-roll, AGC, compressor, pre-emphasis.
- cw.py: the CW skimmer; rtty.py: the RTTY skimmer and AFSK; dec_history.py: the decoder figures; hackrf_proxy.py; shelly.py; recorder.py.
- propagation.py: VOACAP band conditions — the ring of 36 paths, one run per UTC day, the day/night halves; GET /api/propagation.

Files on the Pi

```
backend/runtime.json      station data and credentials (0600, not in git)
backend/ex_defaults.json  saved FT-950 audio-menu defaults
backend/certs/            server certificate (from the private CA)
/run/ft950                decoder slices (tmpfs)
/var/lib/ft950            jt9 working data
backend/itshfbc/          VOACAP working tree (makeitshfbc copy)
backend/propagation.json  last sunspot number from NOAA
```

Source, issues and updates: github.com/CQ-DJ0SH/ft950-remote — GPL v3.