

TESTHEAD IN
UNDocked POSITION

DOCKING SOC TESTHEAD 1024 TO PROBER WITH HARDDOCKING


ENGINEERING RESPONSIBILITY		B1	USERS					
SYM	REVISIONS						APPROVED	DATE
A	AS ISSUED						Peter Hirschmann	07.12.99
B	DESIGN UPDATED						Peter Hirschmann	07.02.00
C	UPDATED TO VERGY						Peter Hirschmann	02.05.06

DOCKING AND UNDOCKING PROCEDURE :

1. INSTALL WAFER PROBER INTERFACE WITH PROBE CARD INTO PROBER
2. CHECK IF THE FLOATING CAPABILITY OF DUT-INTERFACE IS ENABLED
3. FOR THE FIRST TIME PRESS 'HARD UNDOCK' AND THEN BACK TO 'HARD NEUTRAL' ON THE REMOTE CONTROL TO MAKE SURE THAT THE PISTONS IN THE HARDDOCKING-CYLINDERS ARE ON THE TOP-LEVEL
4. OPEN ALL HANDLES OF MANIPULATOR TO RELEASE ALL TESTHEAD MOVEMENTS
5. MOVE TESTHEAD NEAR TO THE COARSE ALIGNMENT PINS
6. CHECK THE PARALLELISM BETWEEN TESTHEAD AND WAFERPROBER IN HORIZONTAL DIRECTION. USE PLANARIZE HANDLE FOR ADJUSTMENT
7. MOVE TESTHEAD CAREFULLY INTO COARSE ALIGNMENT PINS UNTIL THEY LOCKED (LISTEN FOR 'CLICK') THE HARDDOCKING THETA-CAPABILITY IS $\pm 1^\circ$
8. CHECK FINE ALIGNMENT PINS FOR CORRECT POSITION
9. PRESS 'HARD DOCK' ON REMOTE CONTROL - TESTHEAD IS PULLED INTO POSITION AND ADJUSTS VIA PREALIGNMENT PINS - IN THIS POSITION A SENSOR IS USED FOR BLOCKING THE MANIPULATOR MOVEMENT 'UP' AND 'DOWN' ON THE REMOTE CONTROL
10. PRESS 'DUT DOCK' ON REMOTE CONTROL TO CONNECT TESTHEAD POGOS WITH WPI DUT BOARD. IN THIS POSITION A SENSOR IS USED FOR BLOCKING 'HARD UNDOCK' AND THE MANIPULATOR MOVEMENT 'UP' AND 'DOWN' ON THE REMOTE CONTROL
11. TURN ALL CLAMPS OF MANIPULATOR INTO LOCKED POSITION
12. PRESS 'HARD NEUTRAL' ON THE REMOTE CONTROL
13. FOR UNDOCKING THE TESTHEAD OPEN CLAMP OF MANIPULATOR. PRESS 'DUT UNDOCK' AND UNLOCK-'ENABLE' SIMULTANEOUS ON THE REMOTE CONTROL. IN THIS POSITION THE SENSOR ENABLES 'HARD UNDOCK' ON THE REMOTE CONTROL
14. PRESS 'HARD UNDOCK' IN THIS POSITION THE SENSOR ENABLES 'UP' AND 'DOWN' FOR THE MANIPULATOR MOVEMENT ON THE REMOTE CONTROL
15. MOVE THE TESTHEAD AWAY BY USING 'UP' OR 'DOWN' ON THE REMOTE CONTROL


OVERRIDE-KEY:
THE 'OVERRIDE'-KEY ENABLES 'UP' AND 'DOWN' ON THE REMOTE CONTROL WHILE DUT BOARD IS DOCKED OR TESTHEAD IS HARDDOCKED !
USE ONLY WHEN THE DUT BOARD WITH STIFFENER IS NOT MOUNTED ON A HANDLER OR WAFER PROBER !

REMOTE CONTROL

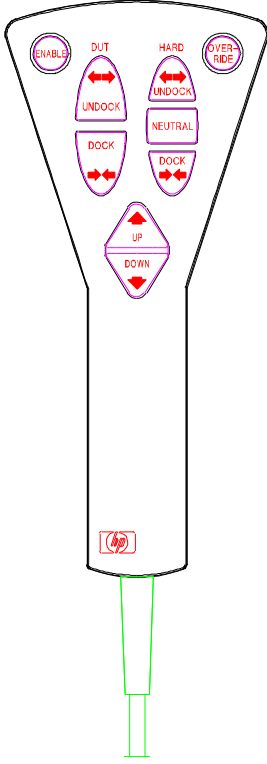

TESTHEAD IN
DOCKED POSITION

VIEW ON DUT BOARD
SCALE 1 : 20

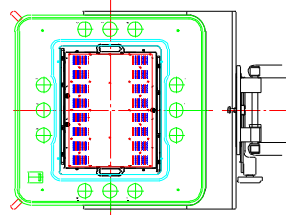

FILE xxxxx-xxxxx-05xxx
PART MASTER FILE IS 3D BODY
3D DISCREPANCIES:
CREATED ON SOLID DESIGNER REV 6.108 WITH HP-UX 10.20

VERIGY RESTRICTED
THIS DOCUMENT AND ANY ASSOCIATED DATA
CONTAIN RESTRICTED INFORMATION THAT IS
VERIGY PROPERTY.
ONLY DISCLOSE OR DUPLICATE FOR OTHERS
AS AUTHORIZED BY VERIGY.
STRENG VERTRAULICH
WEITERGABE AN DRITTE UND Vervielfältigungen
NUR MIT GENEHMIGUNG DES URHEBERERS.
SCHUTZMERK NACH DIN 34 BEACHTEN

TOLERANCES APPLY ONLY TO DESIGNATED
DIMENSIONS, UNLESS OTHERWISE SPECIFIED.
ADHERANCE TO DWG. A-5951-1561-1
(CORP. STD. SECTION 608) REQUIRED.
TOLERANCES : .XX $\pm 0.5mm$
XXX $\pm 0.2mm$
THIRD ANGLE PROJECTION
UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN MILLIMETRES
DO NOT SCALE
THIS DRAWING
SUPERSEDES DWG.

ITEM	QTY.	PART/MATERIAL DESCRIPTION	MATL-PART NO.	MATL-DWG NO.	MATL-SPEC.
Peter Hirschmann		DOCKING			
DRAWN BY	07.12.99	DATE			
Peter Hirschmann	07.12.99	DATE			
ENGINEER/CHECKER					
RELEASE TO PROD. PRCS ENG					
Corsten Eiler					
RELEASE TO PROD. MATL ENG					
TEMPORARY X FILENAME :					
SCALE 1 : 2.5					
SHEET 1 OF 1					
D-E6980-90193-1					