

CHAPTER 17

EMERGENCY EQUIPMENT

CHAPTER OVERVIEW

SECTION	TITLE
17-1	Equipment Description and Data
17-2	Troubleshooting
17-3	On Aircraft Inspections
17-4	Maintenance Procedures
17-5	Maintenance Procedures (BENCH)

17-1/(17-2 Blank)

SECTION 17-1

EQUIPMENT DESCRIPTION AND DATA

SECTION OVERVIEW

PARAGRAPH	TITLE
17-1-1	Cockpit Emergency Equipment Description and Data
17-1-2	Cabin Emergency Equipment Description and Data

17-1-1/(17-1-2 Blank)

17-1-1 **COCKPIT EMERGENCY EQUIPMENT DESCRIPTION AND DATA.**

The Cockpit Emergency Equipment consists of:

EQUIPMENT	LOCATION
Fire Extinguisher	Side Of Pilot’s Seat
Two First Aid Kits	Back Of Copilot’s Seat
Emergency Locator Transmitter	Right Of Pilot’s Seat

17-1-2 CABIN EMERGENCY EQUIPMENT DESCRIPTION AND DATA.

The Cabin Emergency Equipment consists of:

EQUIPMENT	LOCATION
Fire Extinguisher	Behind Pilot’s Seat
First Aid Kit	Back Of Copilot’s Seat
Crash Ax	Behind Lower Console

SECTION 17-2
TROUBLESHOOTING
NOT APPLICABLE

SECTION 17-3
ON AIRCRAFT INSPECTIONS
NOT APPLICABLE

SECTION 17-4

MAINTENANCE PROCEDURES

SECTION OVERVIEW

PARAGRAPH	TITLE
17-4-1	Cockpit Emergency Equipment
17-4-2	Cabin Emergency Equipment

17-4-1/(17-4-2 Blank)

17-4-1 COCKPIT EMERGENCY EQUIPMENT.

PARAGRAPH BREAKDOWN

		PAGE			PAGE
17-4-1.1	Replace Fire Extinguisher	17-4-1-1	17-4-1.2	Replace First Aid Kit	17-4-1-1

INITIAL SETUP

Tools

- Aircraft Mechanic’s Toolkit

17-4-1.1 Replace Fire Extinguisher.

17-4-1.1.1 Remove.

Unlatch and remove fire extinguisher from mounting bracket on pilot’s seat stowage panel (Figure 17-4-1-1, Detail A).

17-4-1.1.2 Install.

Position fire extinguisher on mounting bracket and fasten latch (Figure 17-4-1-1, Detail A).

17-4-1.2 Replace First Aid Kit.

NOTE

Replacement of both first aid kits is the same.

17-4-1.2.1 Remove.

Remove first aid kit from mounting studs on back of pilot’s or copilot’s seat by pulling and disengaging snap fasteners (Figure 17-4-1-1, Detail B).

17-4-1.2.2 Inspect.

Inspect replacement first aid kit for unbroken seal. If seal is broken, replace first aid kit.

17-4-1.2.3 Install.

Position replacement first aid kit on mounting studs on back of pilot’s or copilot’s seat and secure by pressing and engaging snap fasteners (Figure 17-4-1-1, Detail B).

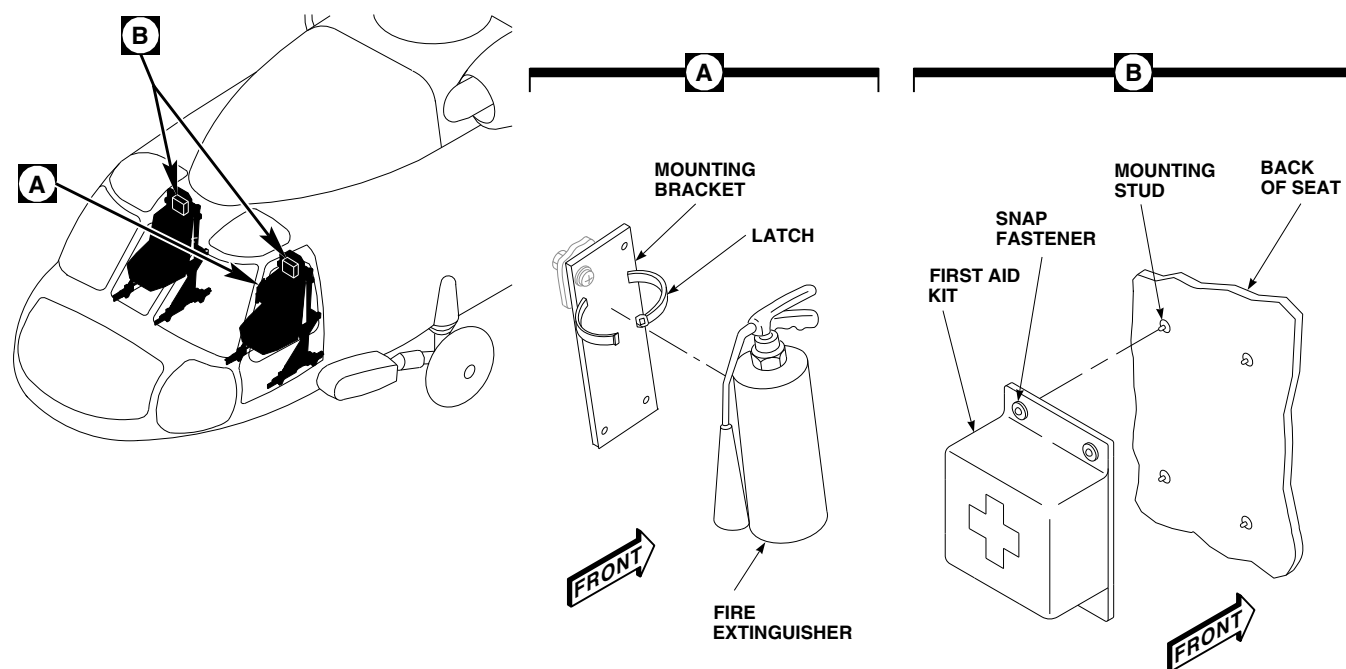
FA5260A
SA

FIGURE 17-4-1-1. COCKPIT EMERGENCY EQUIPMENT

17-4-2 CABIN EMERGENCY EQUIPMENT.

PARAGRAPH BREAKDOWN

		PAGE			PAGE
17-4-2.1	Replace Fire Extinguisher	17-4-2-1	17-4-2.3	Replace Crash Ax	17-4-2-1
17-4-2.2	Replace First Aid Kit	17-4-2-1			

INITIAL SETUP

Tools

- Aircraft Mechanic’s Toolkit

17-4-2.1 Replace Fire Extinguisher.

17-4-2.1.1 Remove.

Unlatch and remove fire extinguisher from mounting bracket on inner side of controls closure (Figure 17-4-2-1, Detail A).

17-4-2.1.2 Install.

Position fire extinguisher in mounting bracket and fasten latch (Figure 17-4-2-1, Detail A).

17-4-2.2 Replace First Aid Kit.

17-4-2.2.1 Remove.

Remove first aid kit from mounting studs on back of copilot’s seat by pulling and disengaging snap fasteners (Figure 17-4-2-1, Detail B).

17-4-2.2.2 Inspect.

Inspect replacement first aid kit for unbroken seal. If seal is broken, replace first aid kit.

17-4-2.2.3 Install.

Position replacement first aid kit on mounting studs on back of copilot’s seat and secure by pressing and engaging snap fasteners (Figure 17-4-2-1, Detail B).

17-4-2.3 Replace Crash Ax.

NOTE

Replacement of left and right crash ax is the same.

17-4-2.3.1 Remove.

Loosen turnlock fastener and remove crash ax from mount assembly (Figure 17-4-2-1, Detail C).

17-4-2.3.2 Install.

Install crash ax in mount assembly and secure with turnlock fastener (Figure 17-4-2-1, Detail C).

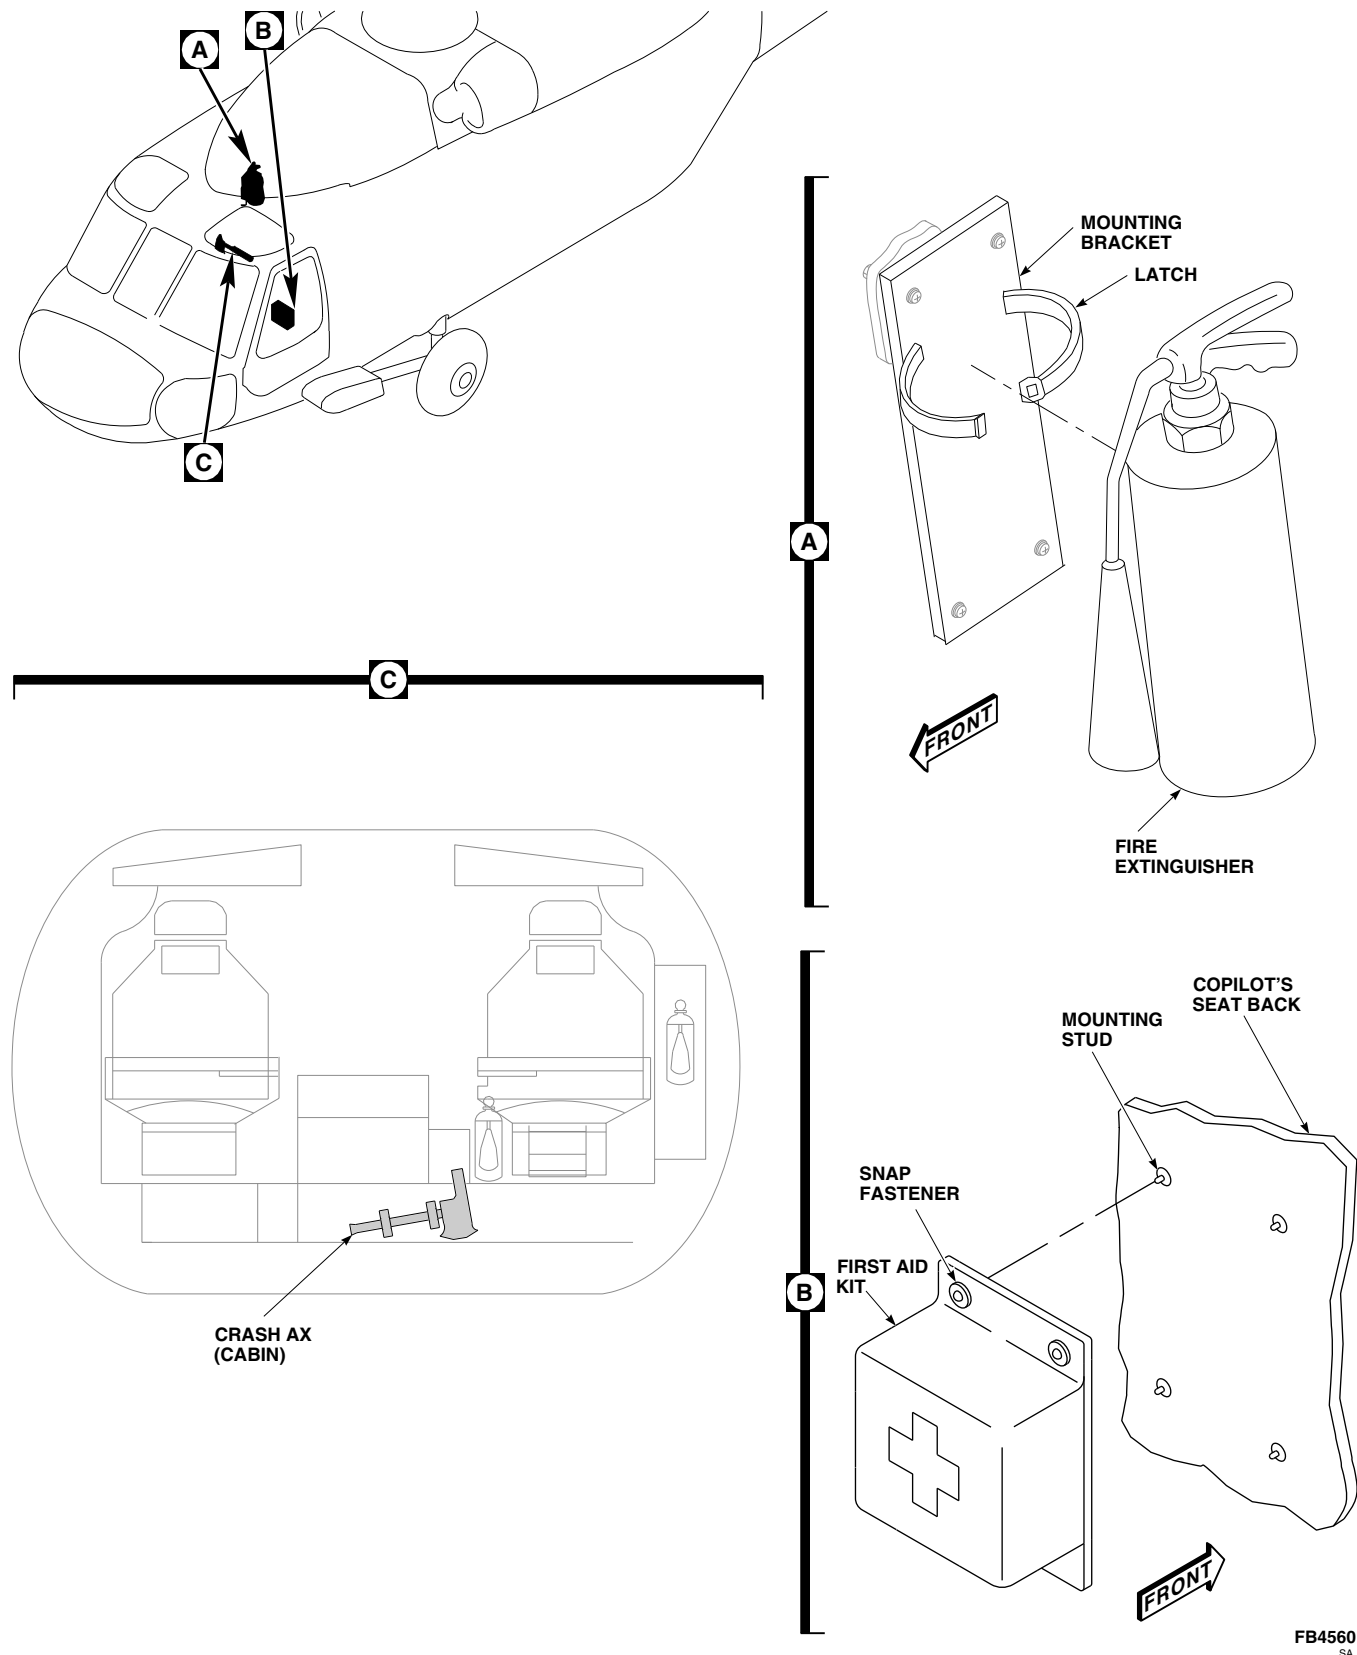


FIGURE 17-4-2-1. CABIN EMERGENCY EQUIPMENT

SECTION 17-5

MAINTENANCE PROCEDURES (BENCH)

NOT APPLICABLE

