


Camera Model Sony A7IV

Scenario Sports

Lighting Condition Low Light

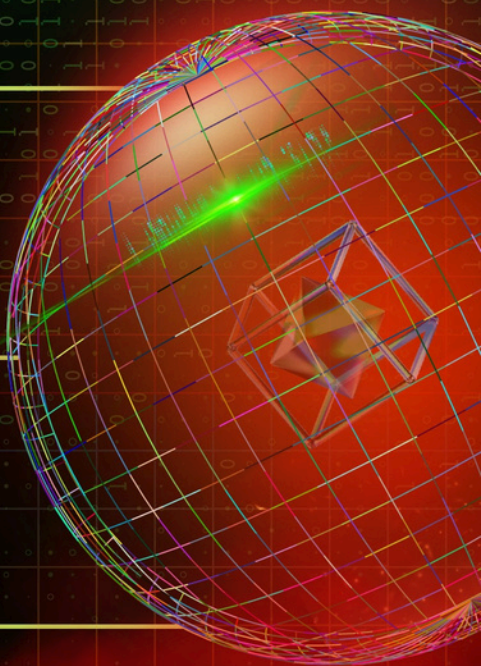

Recommended
Mode

Shutter
Priority

Shutter Speed

1/500s
(minimum)

Aperture

f/2.8–f/5.6

ISO

Auto, cap at 6400

Focus
Mode

Continuous
AF

Drive Mode

Continuous
High (10fps
mechanical)

White
Balance

Tungsten

Key Setting Note:

The A7IV's 10fps mechanical burst is adequate for most low-light sports but is not class-leading. Its real sports strength is the AF system inherited from the A1/A7R V lineage—the tracking is sticky and reliable even in dim gymnasium light. Set "AF Track Sens" to 2 (Responsive) for sports where subjects change speed or direction frequently. Use "AF Area" set to "Tracking: Expand Spot"—place the initial focus point on your subject and the camera will track them across the frame. Set "AF Subject Shift Sensitivity" to 1 (Locked On) to prevent the focus from jumping to a passing player when obstacles cross between you and the subject. Enable Silent Shooting for gymnasium sports where a mechanical shutter would be distracting; the A7IV's electronic shutter is fast enough for most indoor sports without rolling shutter distortion. Shoot in bursts of 5–10 frames to increase the odds of a sharp keeper in low-light motion.

Inner Signal Note:

"Low-light sports test the operator more than the camera. The A7IV will track the athlete, hold the focus, and deliver the frame—but it will not anticipate the play. The decisive moment is not found in burst rate. It is found in anticipation. The machine handles the tracking. You handle the timing. The camera does not know when the ball will leave the hand, when the leap will peak, or when the finish line will be crossed. That knowledge belongs to you. The keeper rate will be lower in dim light. Accept it. The grain will be visible. Accept it. The moment—the dive, the leap, the finish—is worth the noise."