
CYLINDER HEAD DISASSEMBLY (II)

id011000500500

1. Disassemble in the order indicated in the table.

1	Valve keeper (See Valve Keeper Disassembly Note.)
2	Upper valve spring seat
3	Valve spring
4	Valve
5	Valve seal (See Valve Seal Disassembly Note.)
6	Lower valve spring seat

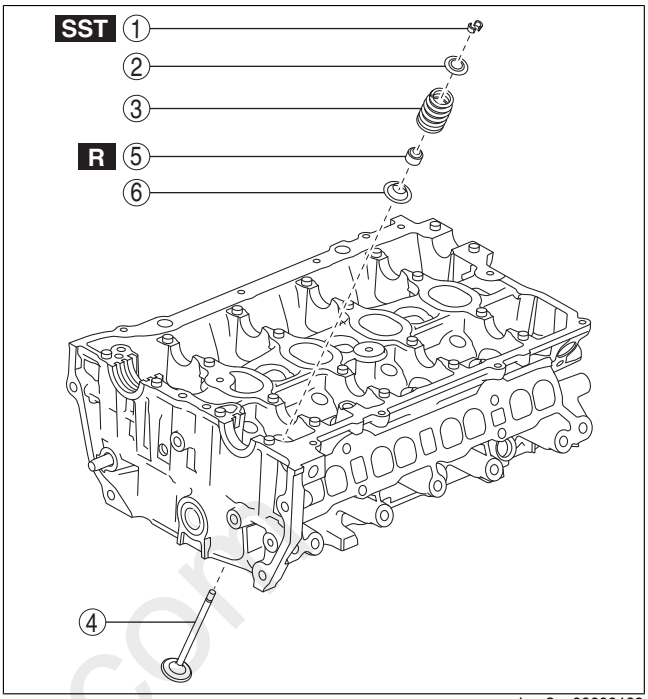


bpe2ue00000169

Valve Keeper Disassembly Note

1. Remove the valve keeper using the **SSTs**.


When using the SSTs (49 0636 100B, 49 B012 0A2)

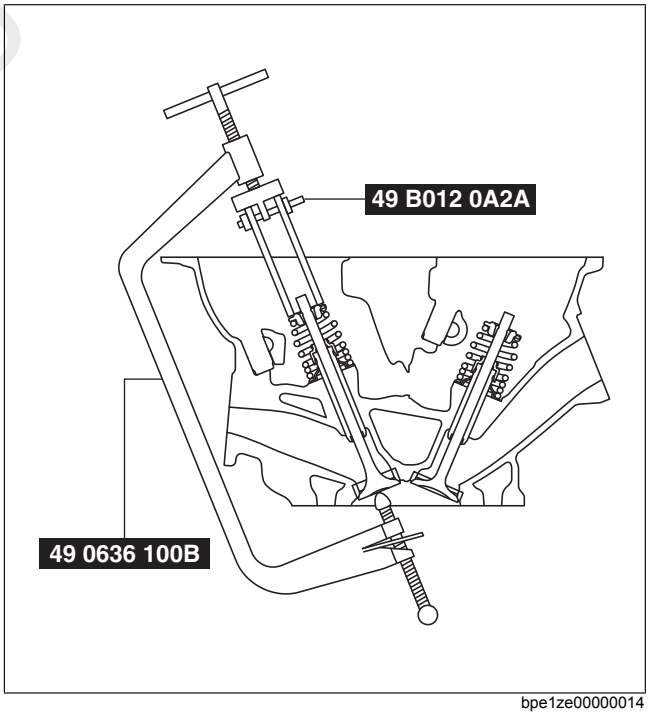

bpe1ze00000014

cardiagn.com


When using the SST (49 JE02 0A2) (Europe only)

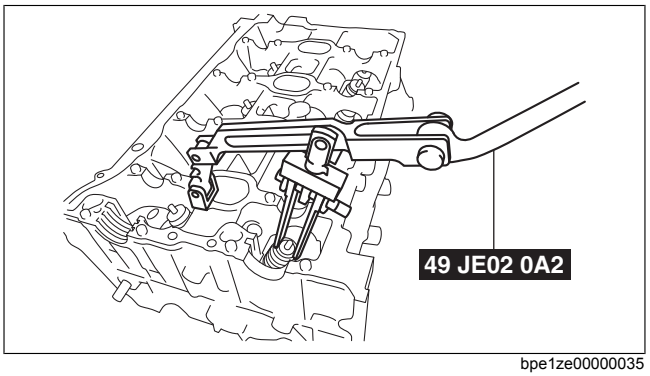

bpe1ze00000035

Valve Seal Disassembly Note

1. Remove the valve seal using the plier.

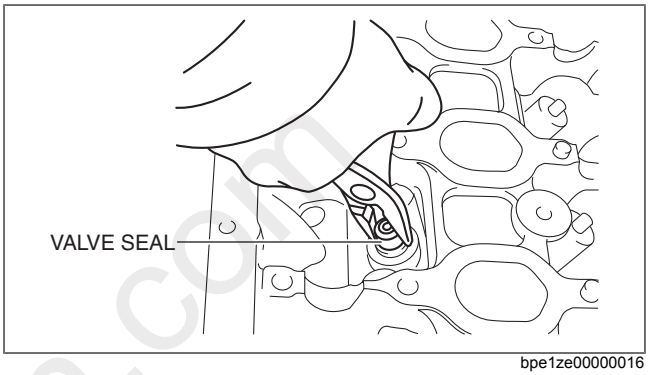

bpe1ze00000016

cardiagn.com