
CYLINDER BLOCK DISASSEMBLY (I)

id011000500600

SKYACTIV-G 1.3, SKYACTIV-G 1.5, SKYACTIV-G 2.0

1. Disassemble in the order indicated in the table.

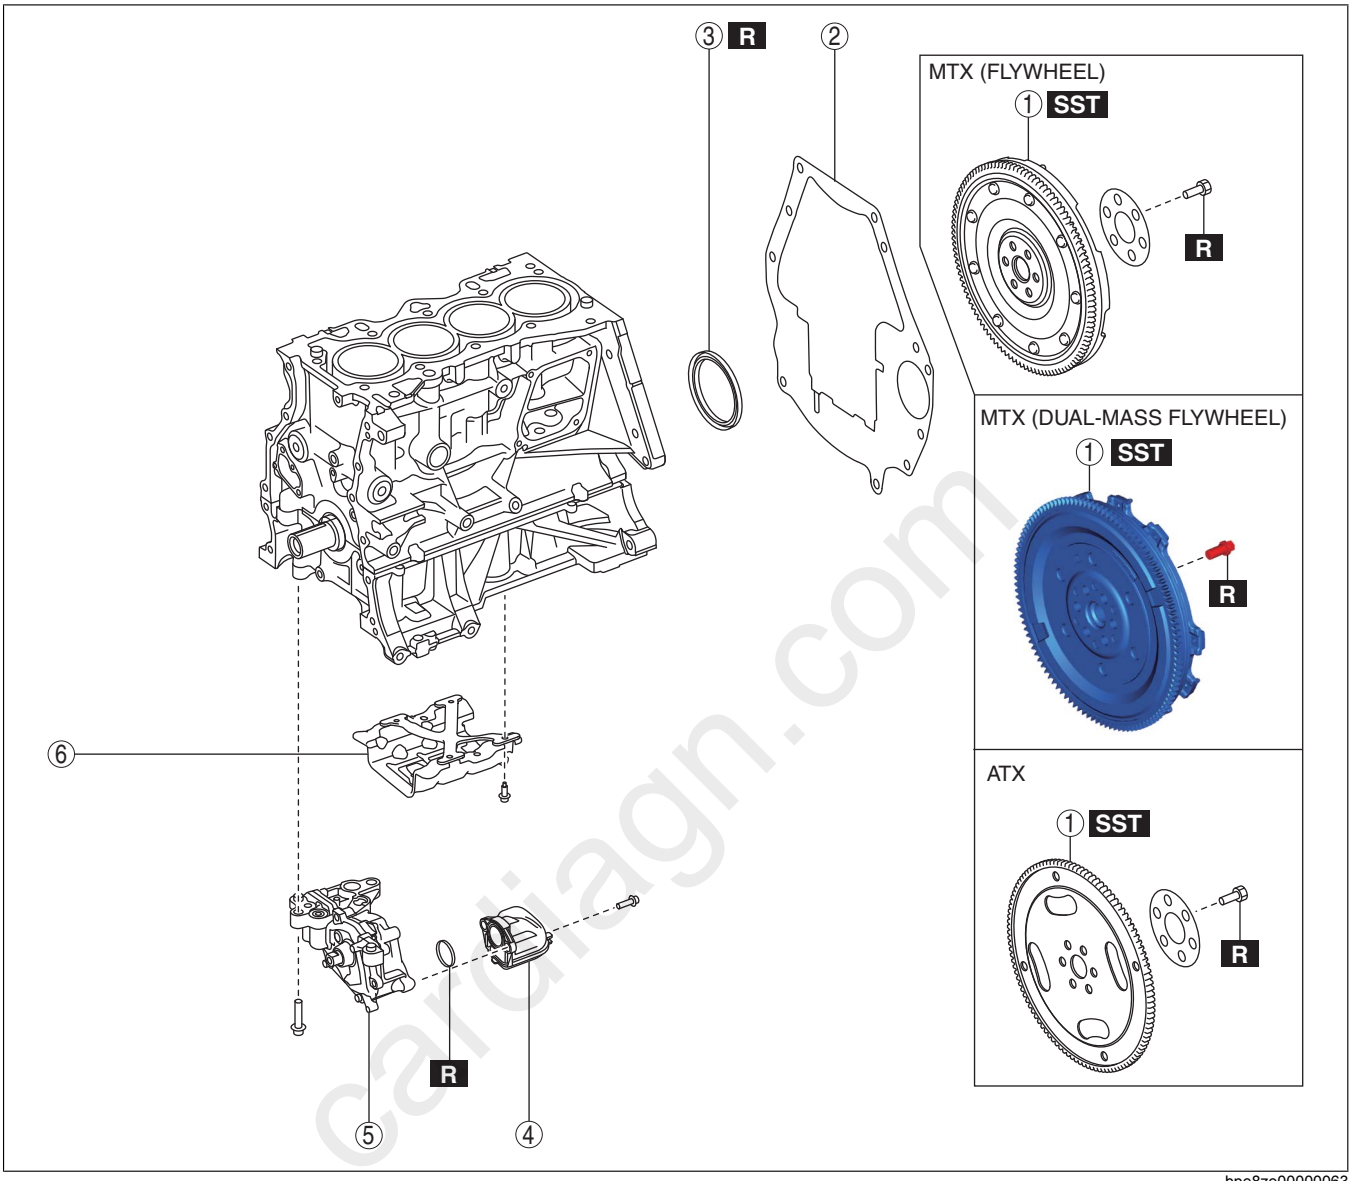

bpe8ze00000063


1	Flywheel (MTX)/ drive plate (ATX) (See Flywheel (MTX)/ drive plate (ATX) disassembly note (SKYACTIV-G 1.3, SKYACTIV-G 1.5, SKYACTIV-G 2.0).)
2	End plate
3	Rear oil seal (See Rear oil seal disassembly note (SKYACTIV-G 1.3, SKYACTIV-G 1.5, SKYACTIV-G 2.0).)

4	Oil strainer
5	Oil pump
6	Oil baffle plate

cardiagn.com

Flywheel (MTX)/ drive plate (ATX) disassembly note (SKYACTIV-G 1.3, SKYACTIV-G 1.5, SKYACTIV-G 2.0)


1. Hold the crankshaft using the **SST**.

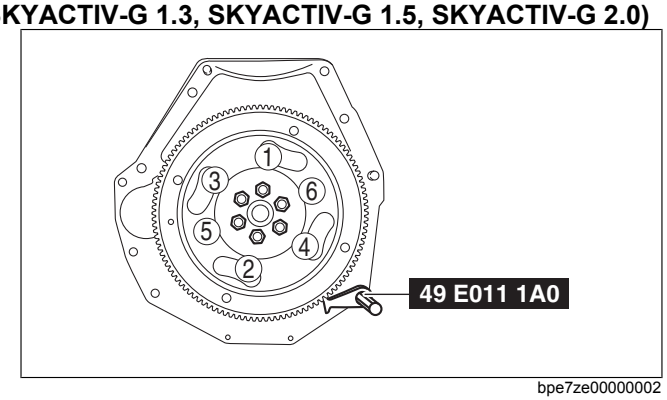

bpe7ze00000002

Rear oil seal disassembly note (SKYACTIV-G 1.3, SKYACTIV-G 1.5, SKYACTIV-G 2.0)

1. Cut the rear oil seal lip using a utility knife.
2. Remove the rear oil seal using a flathead screwdriver with the tip protected by a cloth to prevent damage to the crankshaft.

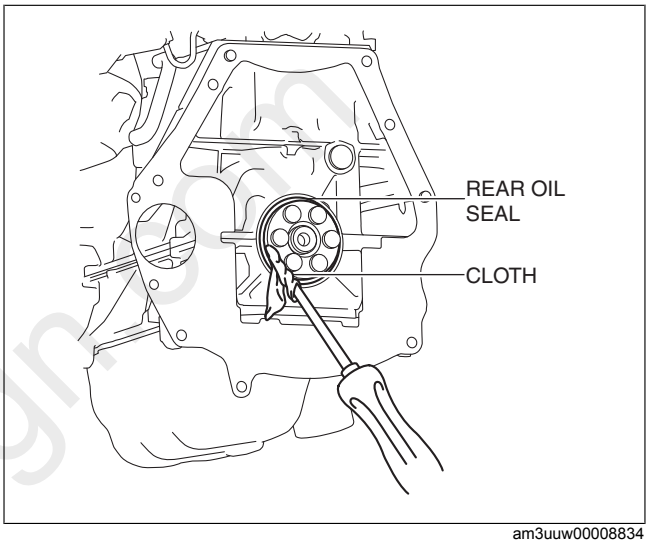


am3uuw00008834

SKYACTIV-G 2.5

1. Disassemble in the order indicated in the table.

cardiagn.com

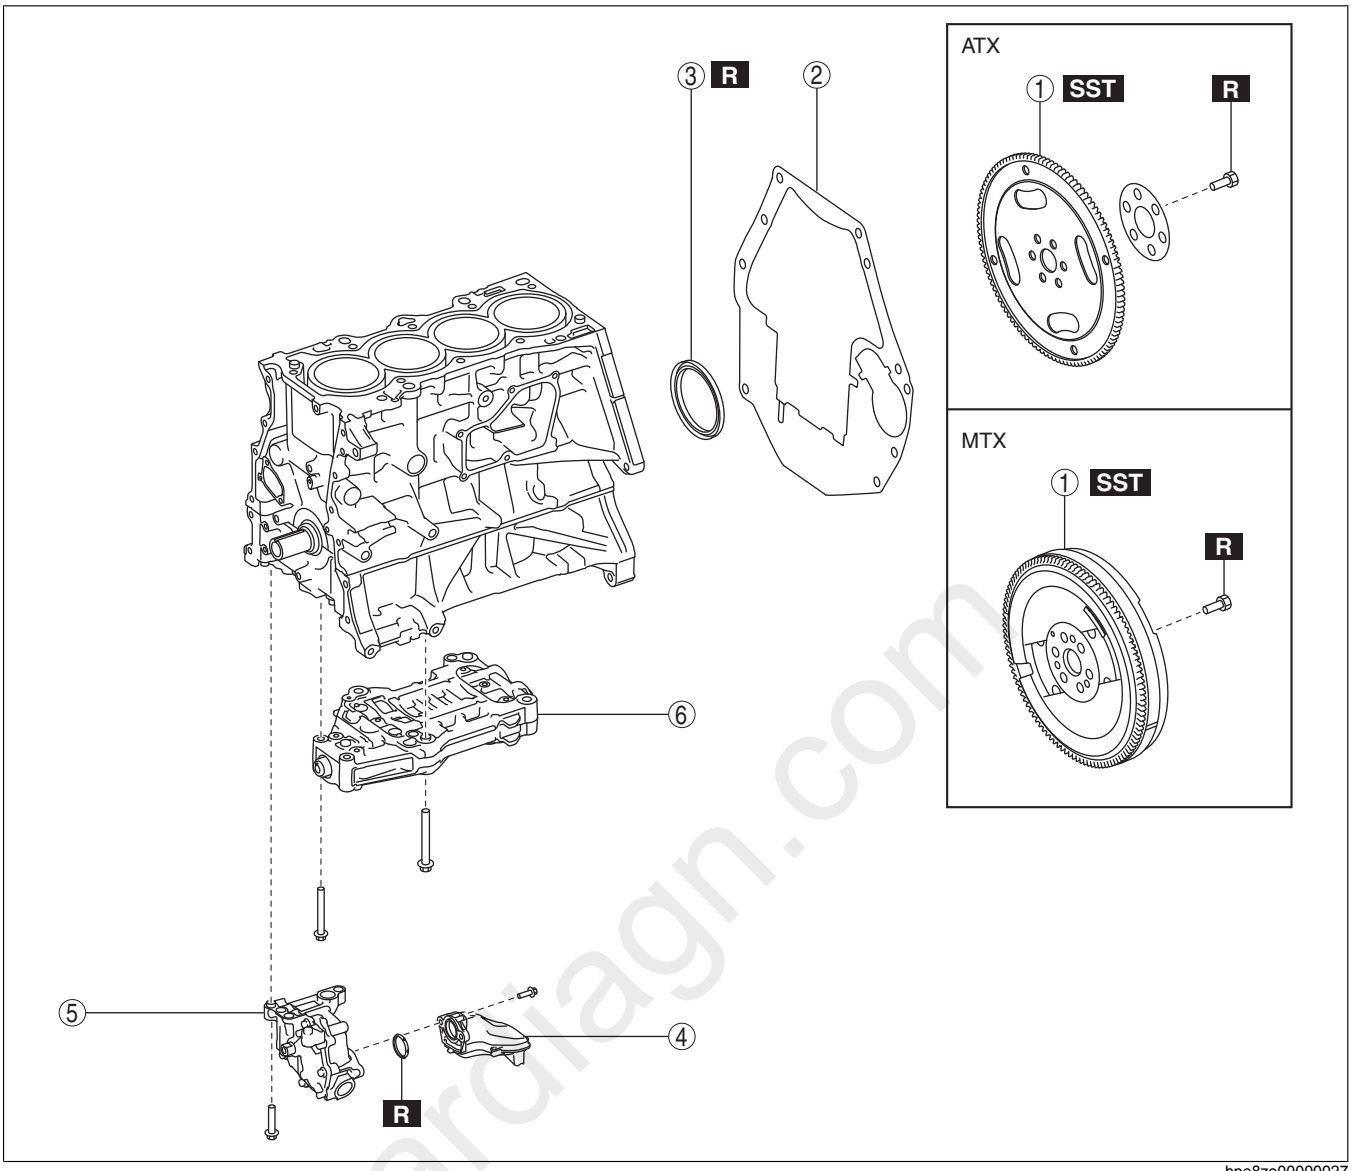

bpe8ze00000027

1	Dual-mass flywheel (MTX)/ drive plate (ATX) (See Dual-mass flywheel disassembly note (SKYACTIV-G 2.5, MTX).)
2	End plate
3	Rear oil seal (See Rear oil seal disassembly note (SKYACTIV-G 2.5).)


4	Oil strainer
5	Oil pump
6	Balancer unit

Dual-mass flywheel installation bolt disassembly note (SKYACTIV-G 2.5, MTX)

1. Hold the crankshaft using the **SST (49 E011 1A0)**.
2. Loosen the bolts uniformly and gradually in the order shown in the figure.

Note


- If the bolt installation holes are not positioned properly, perform the following procedure:

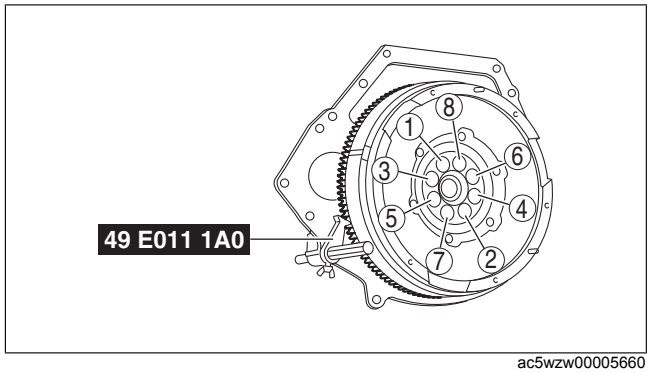

ac5wzw00005660


cardiagn.com

(1) Install the **SST (49 S120 710)** to the dual-mass flywheel.
(2) Rotate the dual-mass flywheel (secondary flywheel side) using the **SST (49 S120 710)**.
(3) When the bolt installation holes are positioned properly, hold the position and remove one of the bolts.

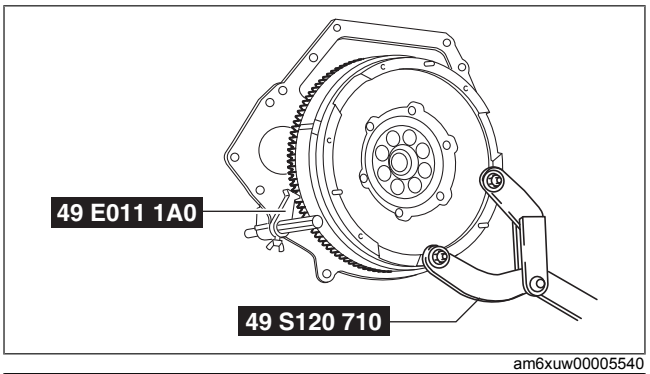

am6xuw00005540

(4) After removing the bolt, set up the **SST (49 G033 102)** to lock the dual-mass flywheel (secondary flywheel side) against rotation.

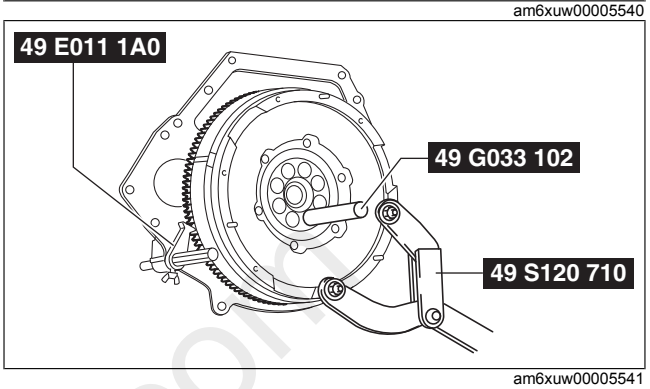


am6xuw00005541

Warning
- **If all of the bolts are removed without locking the dual-mass flywheel (secondary flywheel side) against rotation, the dual-mass flywheel (primary or secondary flywheel side) may rotate, resulting in injury. Therefore, always set up the SST (49 G033 102).**
- **When the bolts are removed from the dual-mass flywheel, always cover the bolt holes using tape. If the SST (49 G033 102) is removed while the operator's finger is inserted in the bolt hole, the dual-mass flywheel may rotate and the operator could be injured.**

(5) Remove the remaining bolts.

Drive plate installation bolt disassembly note (SKYACTIV-G 2.5, ATX)
1. Hold the crankshaft using the **SST**.
2. Loosen the bolts uniformly and gradually in the order shown in the figure.

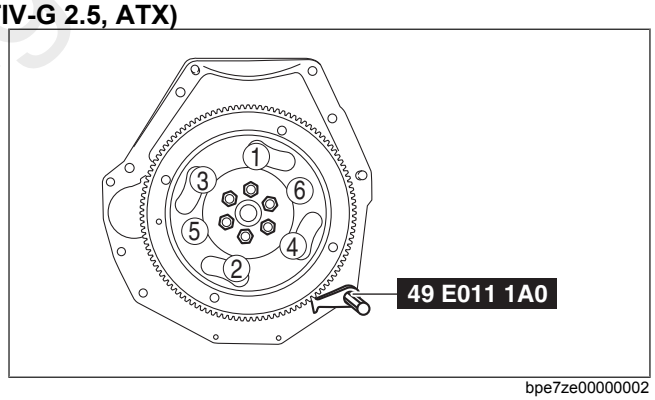

bpe7ze00000002


Dual-mass flywheel disassembly note (SKYACTIV-G 2.5, MTX)

Note
- When reusing the dual-mass flywheel, do not remove the **SST (49 G033 102)** locking the dual-mass flywheel (secondary flywheel side) against rotation.

Rear oil seal disassembly note (SKYACTIV-G 2.5)
1. Cut the rear oil seal lip using a utility knife.

cardiagn.com

2. Remove the rear oil seal using a flathead screwdriver with the tip protected by a cloth to prevent damage to the crankshaft.

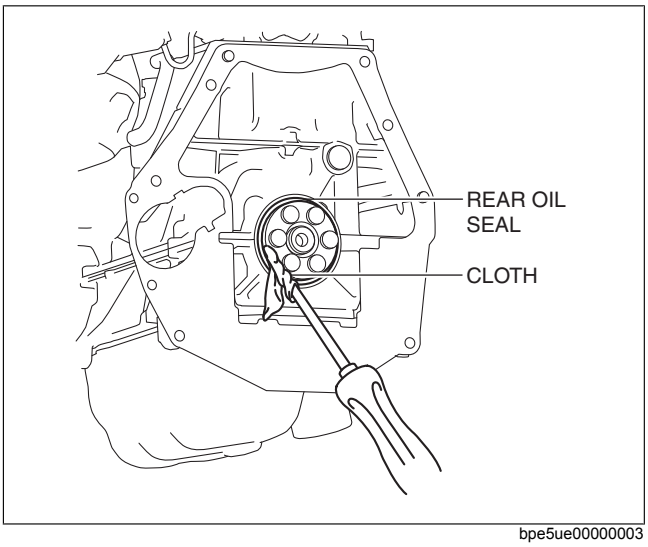

bpe5ue00000003

cardiagn.com