
CYLINDER HEAD ASSEMBLY (I)

id011000504300

1. Assemble in the order indicated in the table.

1	Lower valve spring seat
2	Valve seal (See Valve Seal Assembly Note.)
3	Valve
4	Valve spring (See Valve Spring Assembly Note.)
5	Upper valve spring seat
6	Valve keeper (See Valve Keeper Assembly Note.)

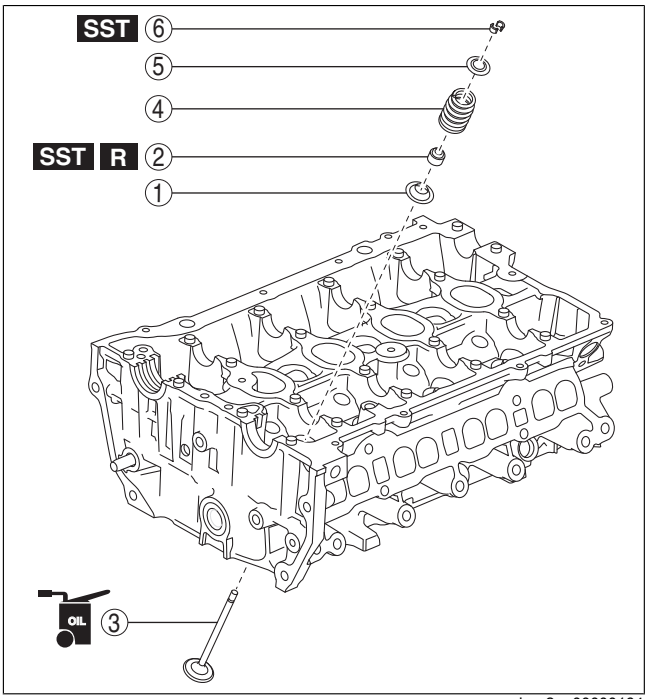


bpe2ue00000164

Valve Seal Assembly Note

1. Press in the valve seal to the valve guide using the **SST** by hand.

   Valve seal identification color
   IN: GREEN
   EX: GRAY

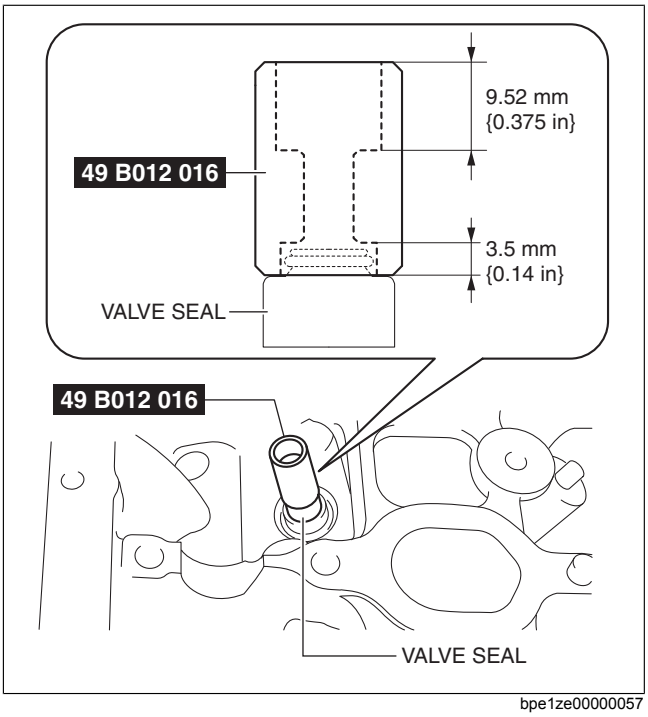


bpe1ze00000057

Valve Spring Assembly Note

Caution


- **The valve springs differ depending on the IN and EX sides.Therefore, verify the free length or identification paint beforehand and inspect the valve springs.**

SKYACTIV-G 1.3, SKYACTIV-G 1.5 (Except MX-5 (ND))

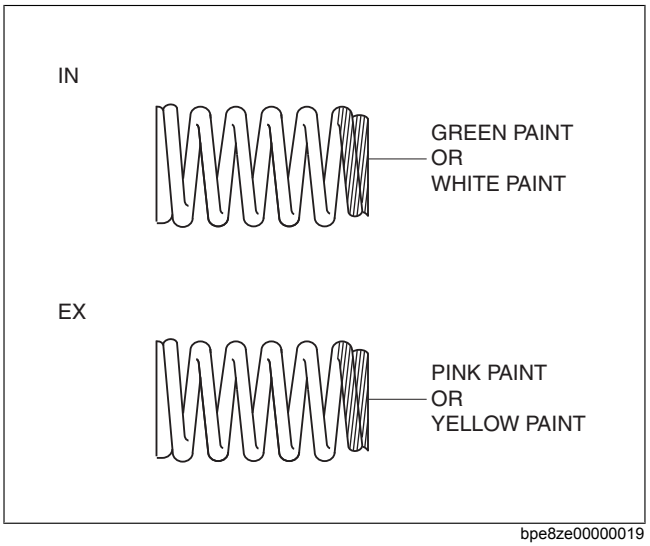


bpe8ze00000019

SKYACTIV-G 1.5 (MX-5 (ND))

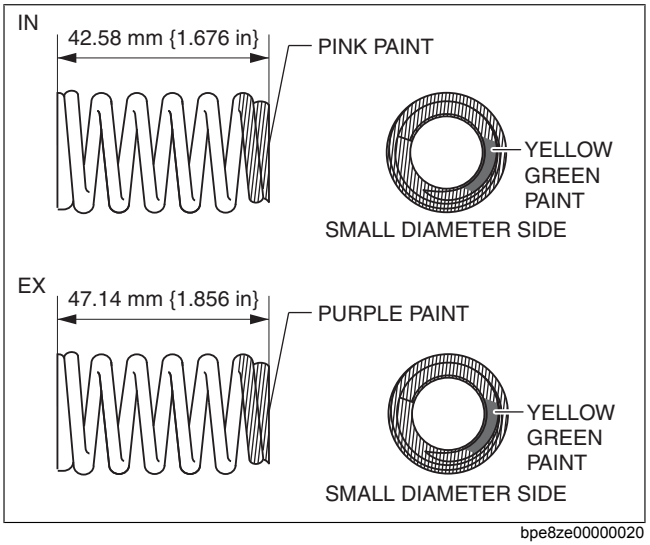


bpe8ze00000020

SKYACTIV-G 2.0 Except MX-5 (ND) VIN Serial No.300001-

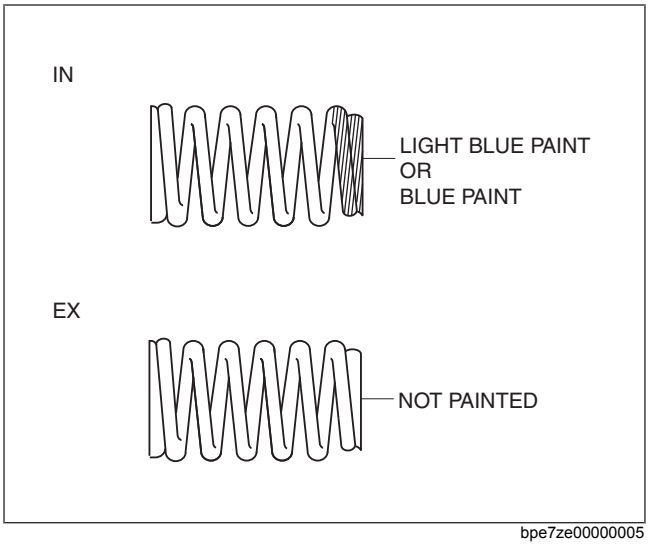


bpe7ze00000005

SKYACTIV-G 2.0 MX-5 (ND) VIN Serial No.300001-

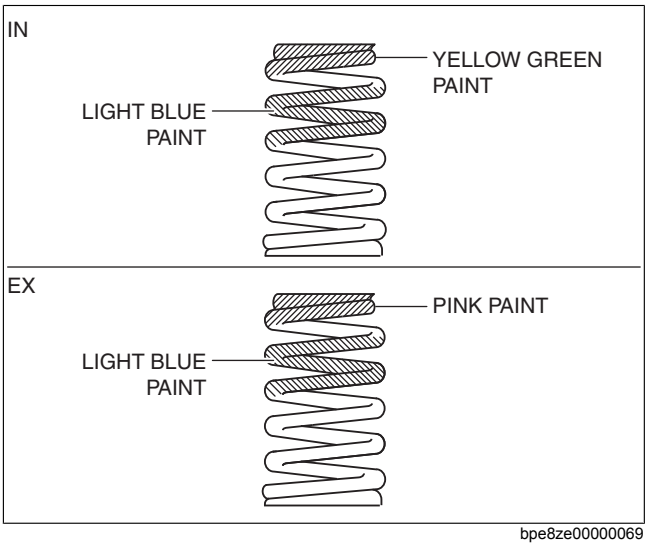

bpe8ze00000069

SKYACTIV-G 2.5

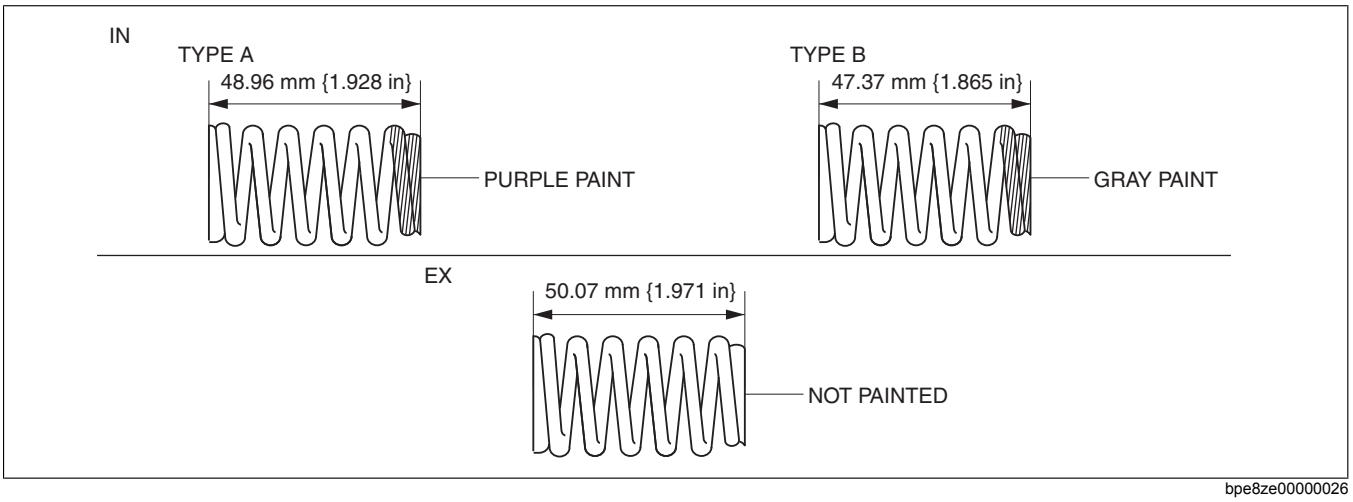


bpe8ze00000026

1. Assemble the valve spring with the small diameter side of the valve spring facing upward.

Valve Keeper Assembly Note


1. Install the valve keeper using the **SST**.

When using the SSTs (49 0636 100B, 49 B012 0A2)

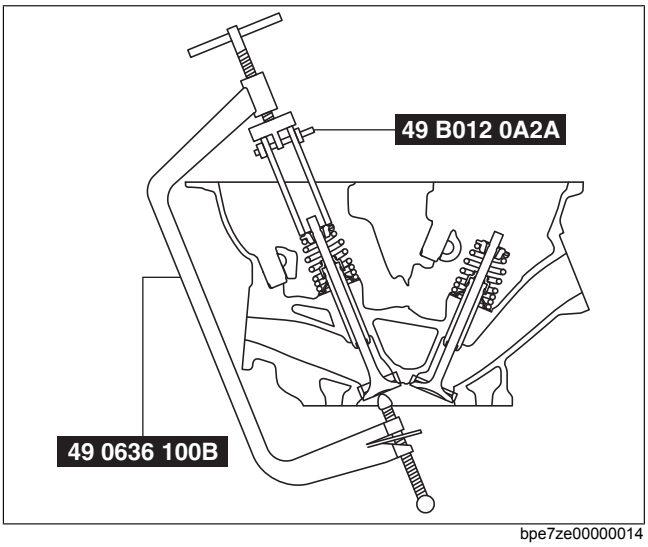

bpe7ze00000014

When using the SST (49 JE02 0A2) (Europe only)

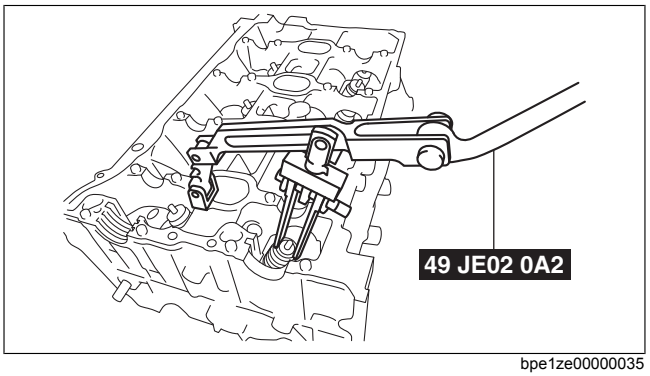

bpe1ze00000035