OIL JET VALVE INSPECTION

id011000505900

1. Apply compressed air to oil jet valve A and verify that air passes through oil jet valve B.
   - If air does not flow, replace the oil jet valve.
   - If there is air flow with air compressor of less than **180 kPa {1.84 kgf/cm^2, 26.1 psi}**, replace the oil jet valve.

Oil jet valve opening pressure

180—220 kPa {1.84—2.24 kgf/cm^2, 26.2—31.9 psi}

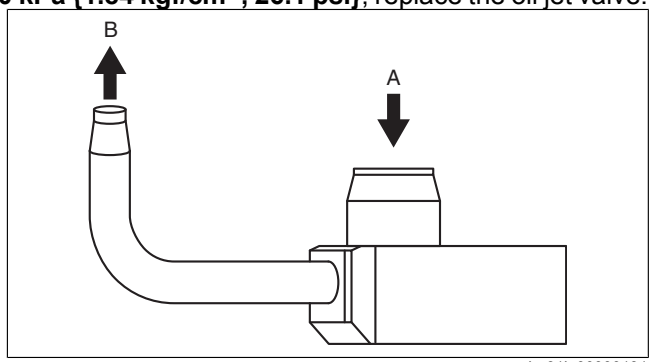

bp31je00000131