
CYLINDER BLOCK INSPECTION

id011000507200

1. Measure the cylinder block for distortion in six directions as shown in the figure using a straight edge and feeler gauge.
   - If it exceeds the maximum specification, replace the cylinder block.


Maximum distortion, head gasket side of the cylinder block
0.10 mm {0.0039 in}

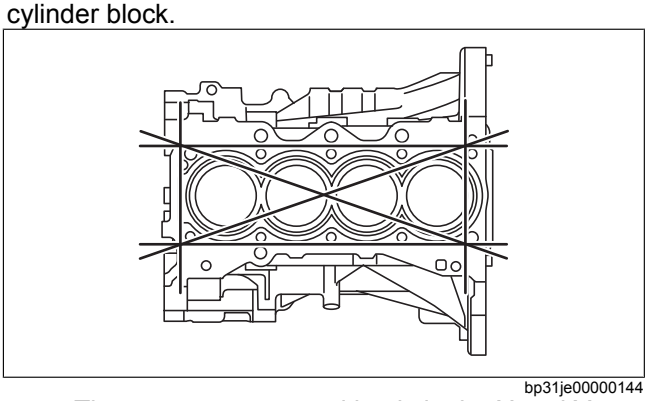

bp31je00000144

2. Measure the cylinder bore diameter using the cylinder gauge. The measurement position is in the X and Y directions at a point **43.9 mm {1.73 in}** below the top surface of the cylinder as shown in the figure.
   - If it is not within the specification, replace the cylinder block.

Standard cylinder bore diameter
SKYACTIV-G 1.3: 71.000—71.030 mm {2.7953—2.7964 in}
SKYACTIV-G 1.5: 74.500—74.530 mm {2.9331—2.9342 in}
SKYACTIV-G 2.0: 83.500—83.530 mm {3.2875—3.2885 in}
SKYACTIV-G 2.5: 89.000—89.030 mm {3.5040—3.5051 in}

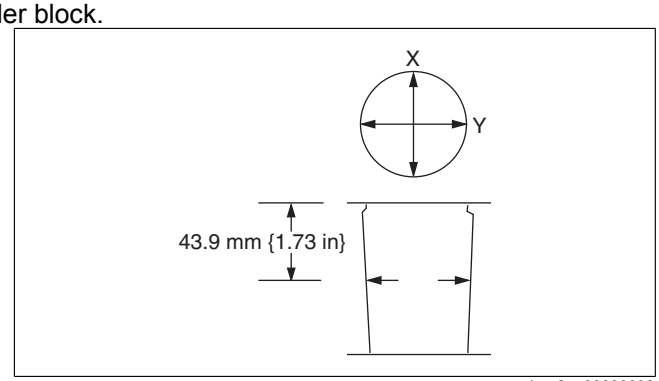

bpe2ue00000098