
PISTON RING INSPECTION


id011000592300

1. Using the piston, press the piston ring parallel into the cylinder to **43.9 mm {1.73 in}** from the upper end of the cylinder block.

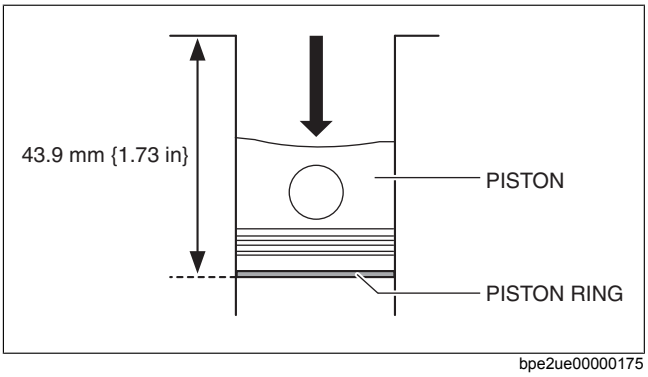

bpe2ue00000175

2. Measure the piston ring end gap using a feeler gauge.
   - If it exceeds the maximum specification, replace the piston ring.

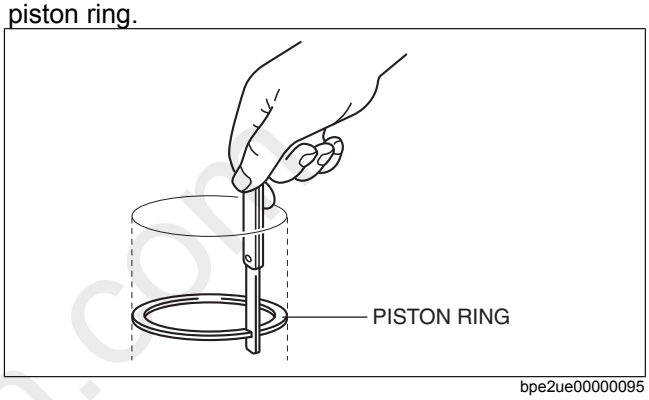

bpe2ue00000095

Standard piston ring end gap [SKYACTIV-G 1.3, SKYACTIV-G 1.5]
Top: 0.12—0.17 mm {0.0048—0.0066 in}
Second: 0.17—0.27 mm {0.0067—0.0106 in}
Oil (Rail): 0.10—0.35 mm {0.0040—0.0137 in}

Standard piston ring end gap [SKYACTIV-G 2.0, SKYACTIV-G 2.5]
Top: 0.13—0.18 mm {0.0052—0.0070 in}
Second: 0.18—0.28 mm {0.008—0.011 in}
Oil (Rail): 0.10—0.35 mm {0.004—0.013 in}

Maximum piston ring end gap [SKYACTIV-G 1.3]
Top: 0.34 mm {0.0132 in}
Second: 0.44 mm {0.0172 in}
Oil (Rail): 0.52 mm {0.0203 in}

Maximum piston ring end gap [SKYACTIV-G 1.5, SKYACTIV-G 2.0, SKYACTIV-G 2.5]
Top: 0.35 mm {0.0136 in}
Second: 0.45 mm {0.0176 in}
Oil (Rail): 0.52 mm {0.0203 in}

cardiagn.com