
OIL CONTROL VALVE (OCV) INSPECTION

id011000801400

Coil Resistance Inspection

1. Measure the resistance between terminals A and B using an ohmmeter.
   - If it is not within the specification, replace the OCV.

OCV coil resistance
6.9—7.5 ohms [20°C {68°F}]

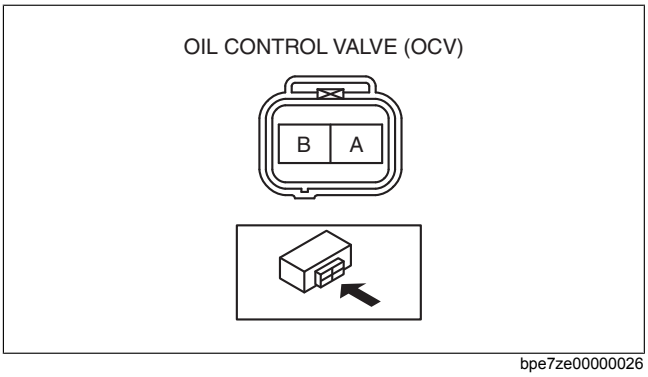


bpe7ze00000026

Spool Valve Operation Inspection


1. Verify that the spool valve inside the OCV is at the position shown in the figure.
   - If there is any malfunction, replace the OCV.

Note
- When applying battery positive voltage between the OCV terminals, the connection can be either of the following:
  — Positive battery cable to terminal A, negative battery cable to terminal B
  — Positive battery cable to terminal B, negative battery cable to terminal A

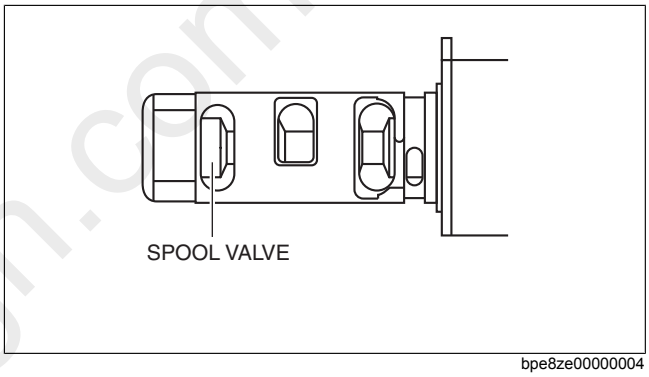


bpe8ze00000004

2. Verify that the spool valve moves in the direction shown in the figure when battery voltage is applied between OCV terminals A and B.
   - If there is any malfunction, replace the OCV.

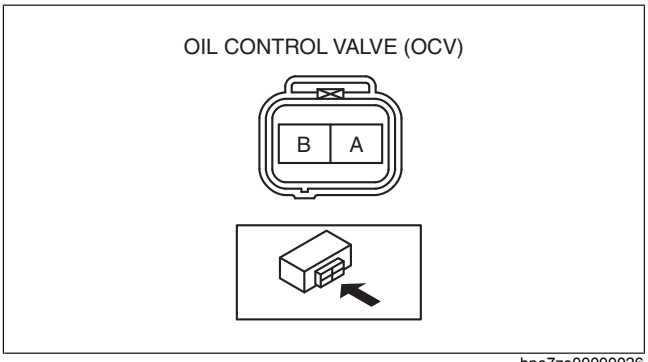

bpe7ze00000026

3. Stop applying battery positive voltage and verify that the spool valve returns to its original position.
   - If there is any malfunction, replace the OCV.

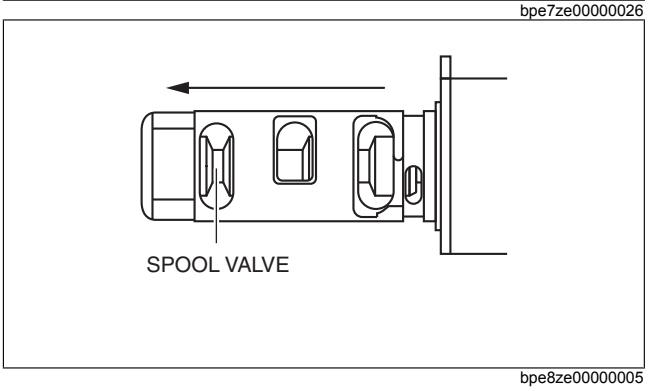

bpe8ze00000005

cardiagn.com