
VALVE SEAT INSPECTION/REPAIR

id011000501300

1. Measure the contact width of the valve face and the valve seat using the valve lapping compound.
   - If it is not within the specification, resurface the valve seat using the **45°** valve seat cutter.


   Standard valve seat contact width
   1.2—2.0 mm {0.048—0.078 in}

   Valve seat angle
   45°

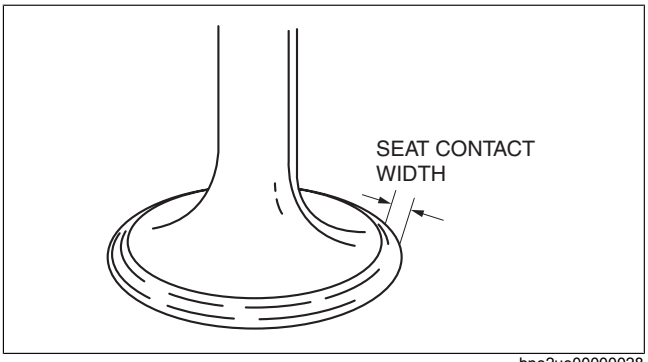

bpe2ue00000028


2. Verify that the area where the valve seat contacts the valve face is centered.
   - If the seating position is too high, correct the valve seat using a **60°** (IN) **75°** (EX) valve seat cutter and a **45°** valve seat cutter.
   - If the seating position is too low, correct the valve seat using a **30°** valve seat cutter and a **45°** valve seat cutter.

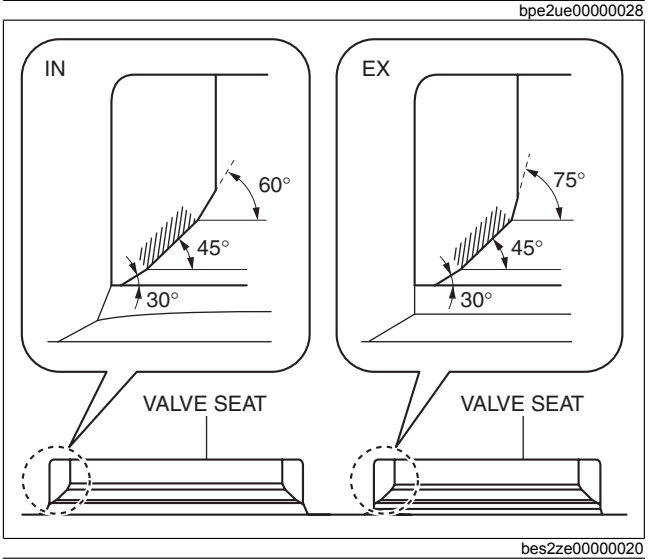

bes2ze00000020

3. Inspect the valve seat for sinkage.
   - If it is not within the specification, replace the cylinder head.

   Standard valve seat sinkage amount
   IN: 0.39—0.79 mm {0.016—0.031 in}
   EX: 0.47—0.87 mm {0.019—0.034 in}

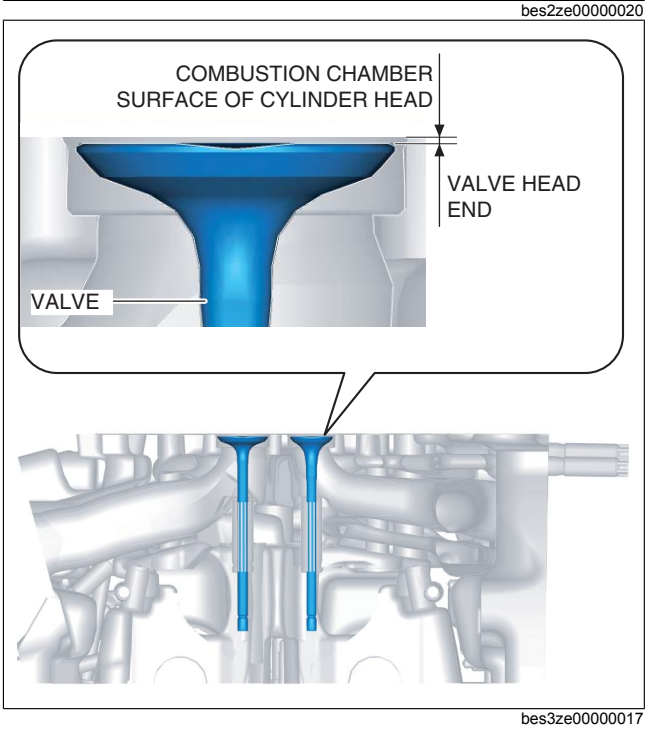

bes3ze00000017