
CONNECTING ROD INSPECTION

id011000502800

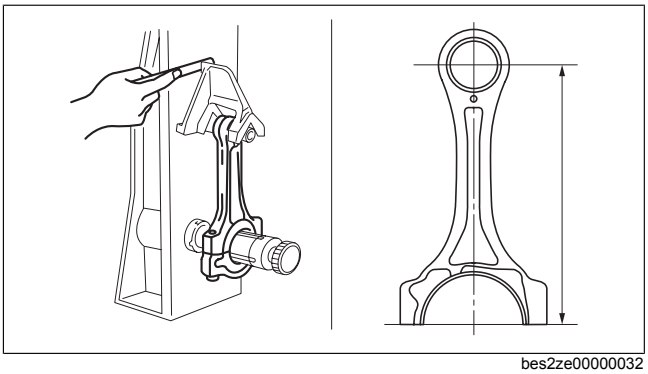

bes2ze00000032

1. Inspect the connecting rod for bending and distortion using the connecting rod aligner.
   - If it exceeds the maximum specification, replace the connecting rod.

   Maximum connecting rod bending
   0.08 mm {0.003 in}

   Maximum connecting rod distortion
   0.08 mm {0.003 in}

   Connecting rod center-to-center distance
   138.19 mm {5.4406 in}