
CYLINDER HEAD ASSEMBLY (I)

id011000504300

Caution

- **The end of the glow plug protrudes from the cylinder head (tightened surface of cylinder block). When removing/installing the cylinder head and placing the cylinder head on a workbench, be careful not to allow the end of the glow plug to contact the cylinder block or workbench. Otherwise, the end of the glow plug could be damaged.**

1. Assemble in the order indicated in the table.

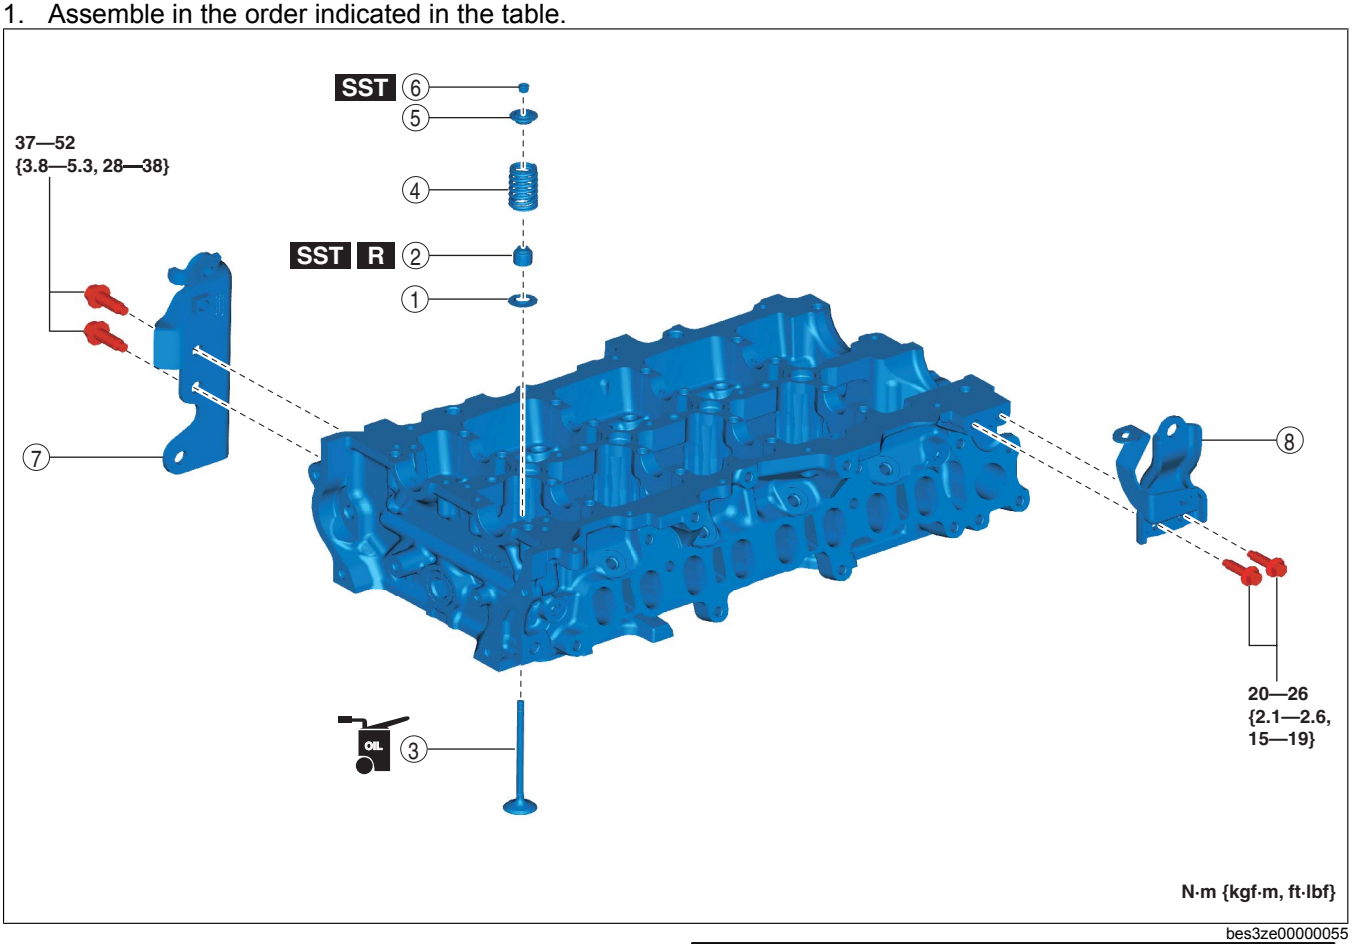

bes3ze00000055


1	Lower valve spring seat
2	Valve seal (See Valve Seal Assembly Note.)
3	Valve
4	Valve spring (See Valve Spring Assembly Note.)
5	Upper valve spring seat
6	Valve keeper (See Valve Keeper Assembly Note.)
7	Hanger bracket
8	Seal cover bracket

Valve Seal Assembly Note

1. Place the valve seal on the valve guide.


Valve seal identification color
IN: GREEN
EX: GRAY

2. Set the **SST** to the valve seal in the direction shown in the figure.

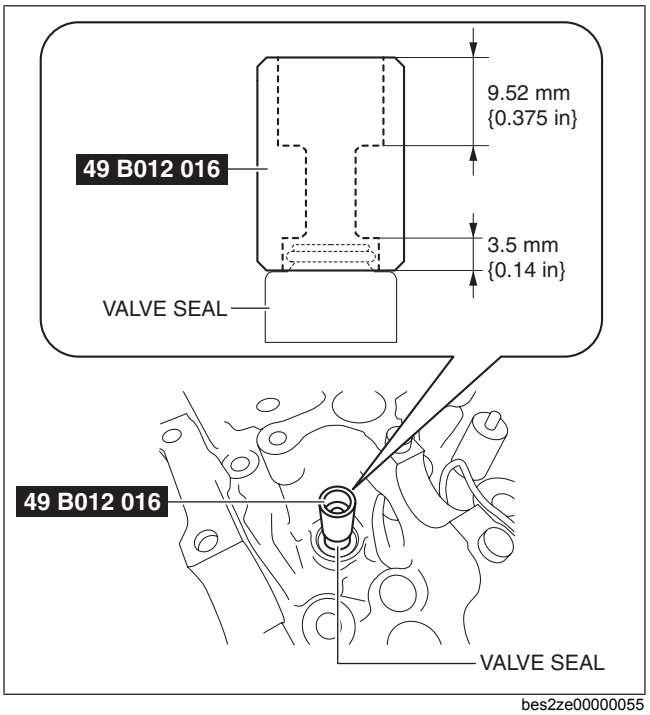

bes2ze00000055

3. Press in the **SST** by hand and install the valve seal to the valve guide.
   Intake side
   Insert the valve seal by applying a load of 300—450 N {30.6—45.8 kgf, 67.5—101.0 lbf}.
   Exhaust side
   Insert the valve seal until height A of the valve seal is 16.63—17.91 mm {0.6548—0.7051 in}.

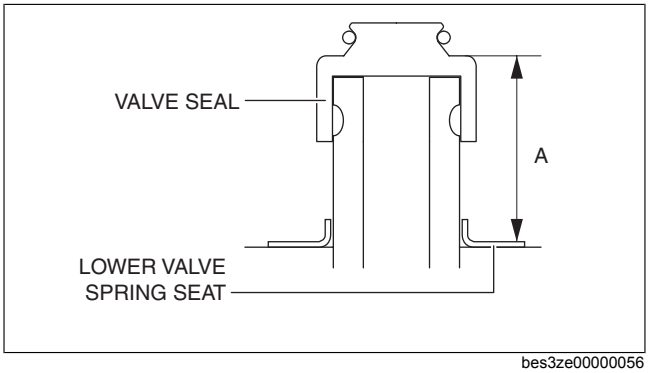


bes3ze00000056

Valve Spring Assembly Note

Caution
- **The valve springs differ depending on IN and EX sides. Therefore, verify the free length or identification paint beforehand and assemble the valve springs correctly.**

1. Assemble the valve spring with the small diameter side of the valve spring facing upward.

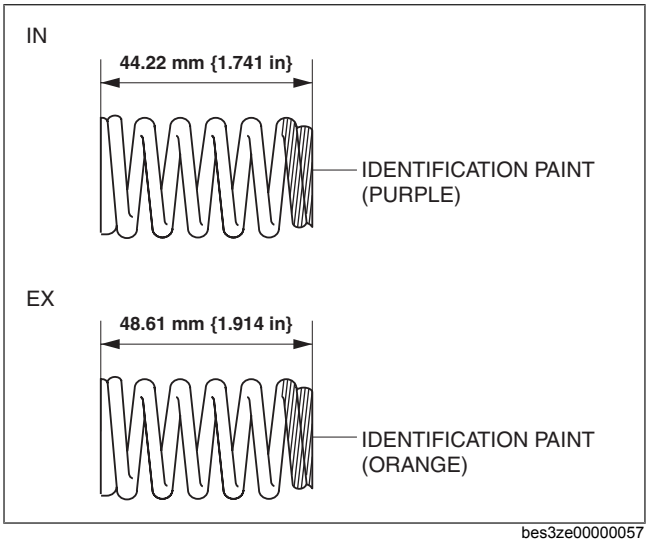


bes3ze00000057

Valve Keeper Assembly Note


1. Install the valve keeper using the **SSTs**.

When using the SSTs (49 0636 100B, 49 B012 0A2A)

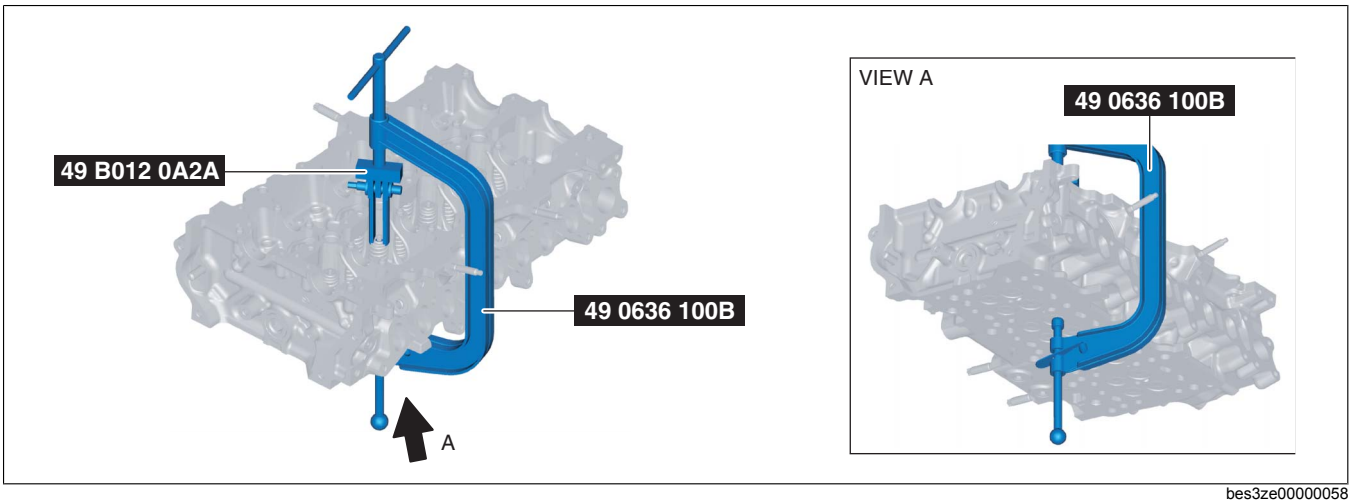

bes3ze00000058

When using the SST (49 JE02 0A2) (Europe only)

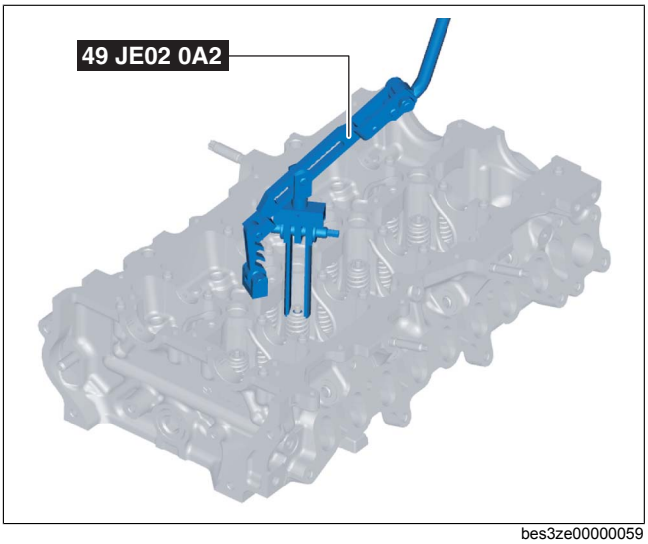

bes3ze00000059