OIL JET VALVE INSPECTION

id011000505900

1. Apply compressed air to oil jet valve A and verify that air passes through oil jet valve B.
   - If air does not flow, replace the oil jet valve.
   - If there is air flow with air compressor of less than **70 kPa {0.71 kgf/cm^2, 10 psi}**, replace the oil jet valve.

   Oil jet valve opening pressure

   70—110 kPa {0.72—1.12 kgf/cm^2, 11.0—15.9 psi}

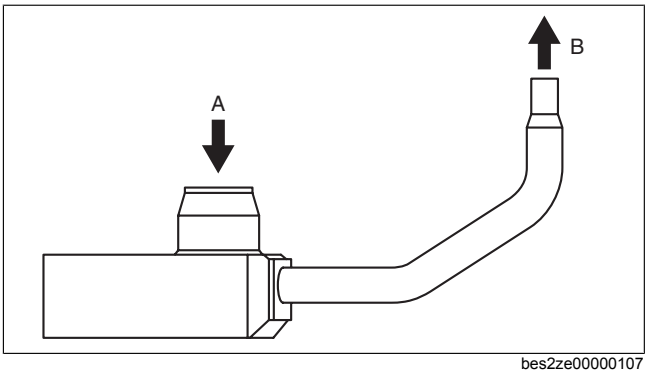

bes2ze00000107