
CYLINDER BLOCK INSPECTION

id011000507200


1. Measure the distortion of the following using a straight edge and feeler gauge.
   (1) Measure the distortion in six directions as shown in the figure.
      • If it exceeds the maximum specification, replace the cylinder block.

   Maximum distortion, head gasket side of the cylinder block [Other than between cylinder bores]
   0.10 mm {0.0039 in}

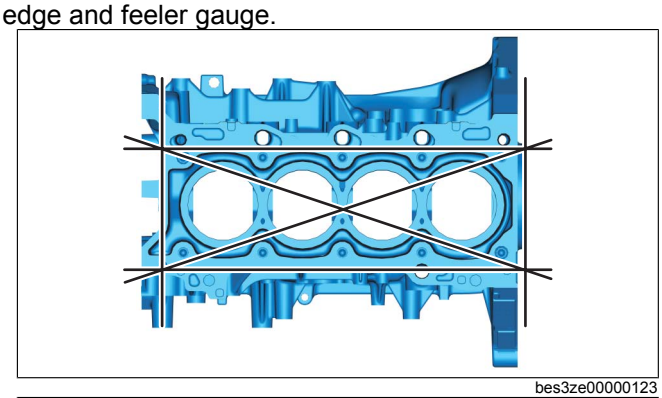

bes3ze00000123


   (2) Measure the distortion in three directions (between cylinder bores) as shown in the figure.

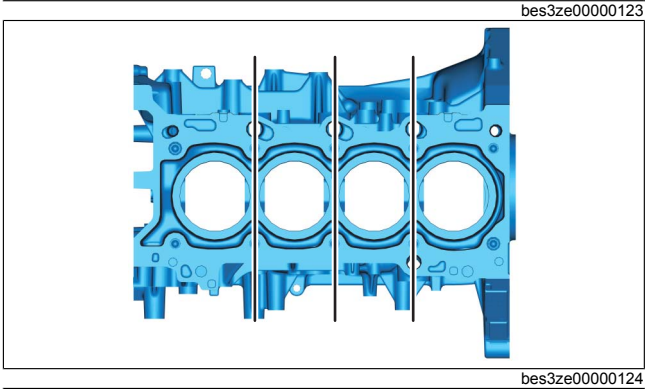

bes3ze00000124

      • If it exceeds the maximum specification, replace the cylinder block.


   Maximum distortion, head gasket side of the cylinder block [between cylinder bores]
   Distortion on head gasket surface is convex:
   0.015 mm {0.00059 in}
   Distortion on head gasket surface is concave:
   0.045 mm {0.0018 in}

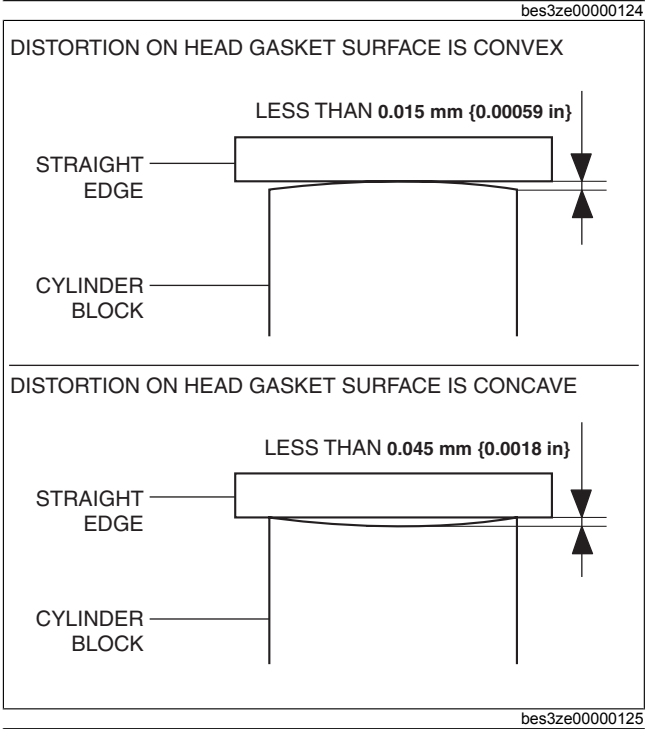

bes3ze00000125

2. Measure the cylinder bore diameter using the cylinder gauge. The measurement position is in the X and Y directions at a point **46.9 mm {1.85 in}** below the top surface of the cylinder as shown in the figure.
   • If it is not within the specification, replace the cylinder block.

   Standard cylinder bore diameter
   76.000—76.022 mm {2.9922—2.9929 in}

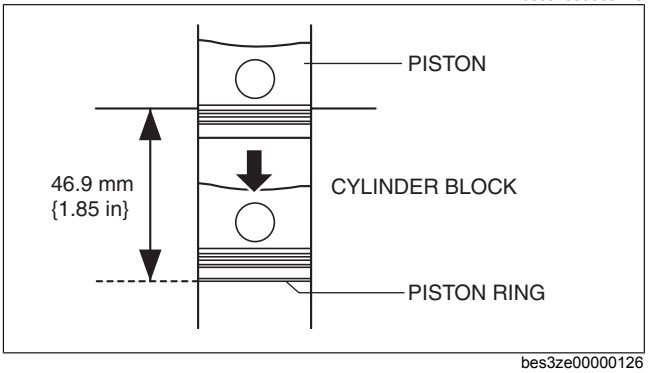

bes3ze00000126