
PISTON PIN INSPECTION

id011000507500

Caution
- **If the piston or piston pin is replaced, replace the piston, piston pin and the snap ring as a single component.**

1. Measure the piston pin outer diameter using the micrometer. Measurement positions total eight and are in the X and Y directions, at four points (A, B, C, and D) as shown in the figure.

   Standard piston pin outer diameter
   23.995—24.000 mm {0.94469—0.94488 in}

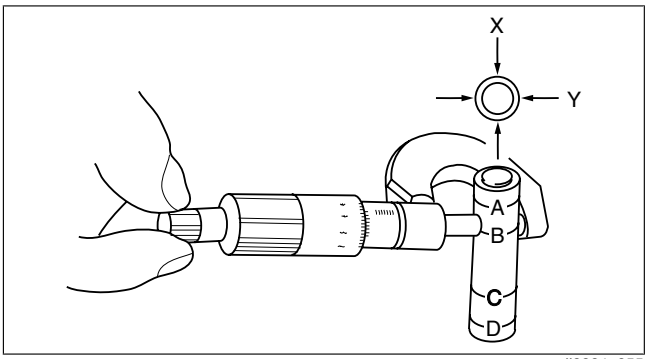


adj2224e255

2. Measure the piston pin hole diameter using the caliper gauge. Measurement positions total eight and are in the X and Y directions, at four points (A, B, C, and D) as shown in the figure.

   Standard piston pin hole diameter
   24.005—24.013 mm {0.94508—0.94539 in}

3. Calculate the clearance between the piston pin hole diameter and the piston pin outer diameter.
   - If it is not within the specification, replace the piston or the piston pin.

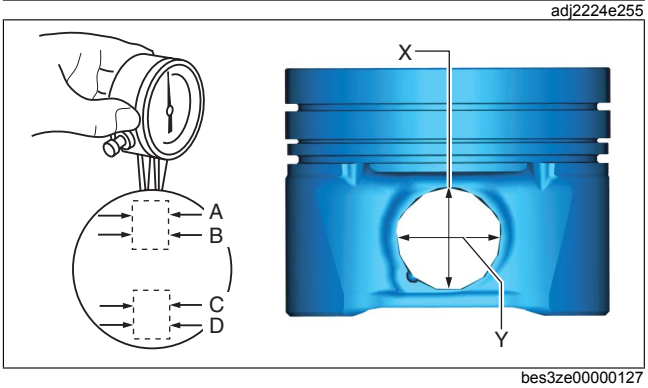


bes3ze00000127

   Standard clearance between piston pin hole diameter and piston pin outer diameter
   0.005—0.018 mm {0.0002—0.0007 in}

4. Measure the inner diameter on the small end of the connecting rod using the caliper gauge in the X and Y directions as shown in the figure.

   Standard connecting rod small end inner diameter
   24.010—24.021 mm {0.94528—0.94570 in}

5. Calculate the clearance between the inner diameter on the small end of the connecting rod and the piston pin outer diameter.
   - If it is not within the specification, replace the connecting rod or the piston pin.

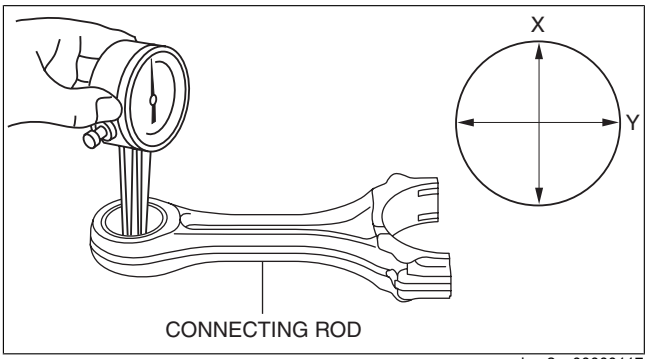

bes2ze00000117

   Standard clearance between connecting rod small end inner diameter and piston pin outer diameter
   0.010—0.026 mm {0.0004—0.0010 in}