
TRANSFER DISASSEMBLY [EW6AX-EL]

id0316h2000200

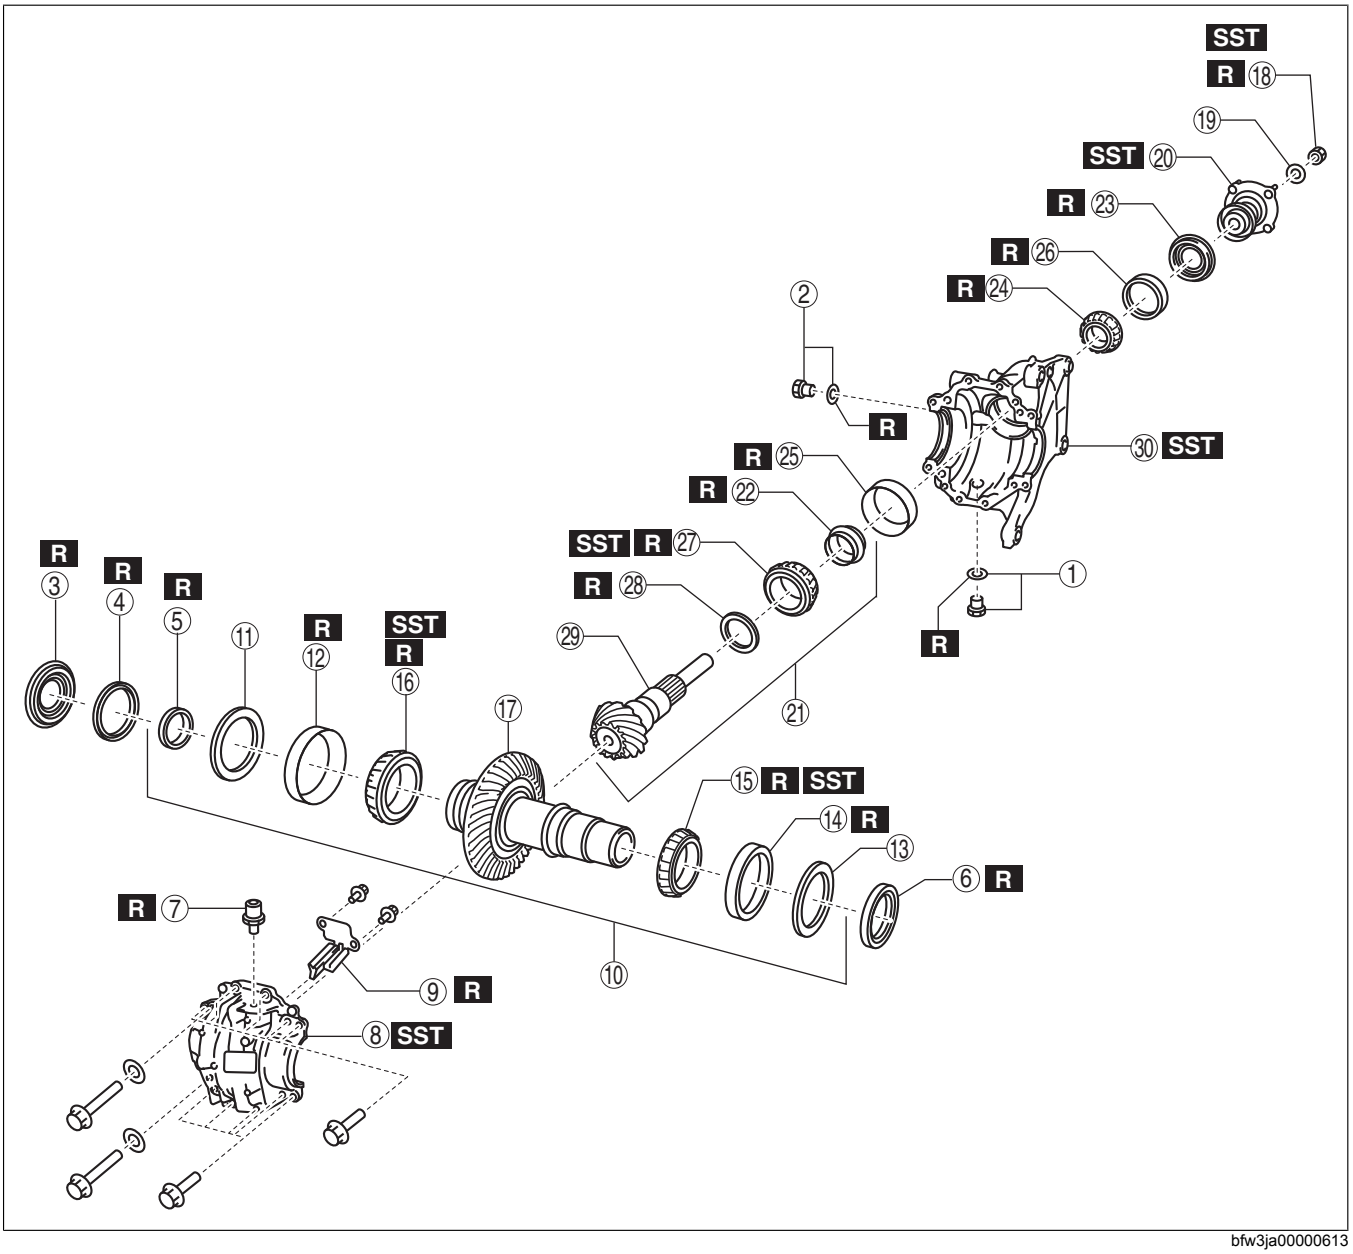


bfw3ja00000613

1	Drain plug, washer
2	Oil level plug, washer
3	Transfer oil seal (RH) No.1
4	Transfer oil seal (RH) No.2
5	Transfer oil seal (RH) No.3
6	Transfer oil seal (LH)
7	Breather
8	Drive gear case
9	Baffle plate
10	Ring gear shaft component
11	Adjustment shim (RH)
12	Bearing outer race (RH)
13	Adjustment shim (LH)
14	Bearing outer race (LH)
15	Bearing inner race (LH)
16	Bearing inner race (RH)
17	Ring gear shaft
18	Locknut
19	Washer
20	Companion flange component


21	Drive pinion gear component
22	Collapsible spacer
23	Oil seal
24	Bearing inner race (rear)
25	Bearing outer race (front)
26	Bearing outer race (rear)
27	Bearing inner race (front)
28	Spacer
29	Drive pinion gear
30	Front carrier

1. Remove the drain plug and washer.
2. Remove the oil level plug and washer.
3. Insert a tape-wrapped flathead screwdriver into the notch of the transfer and remove the transfer oil seal (RH) No.1.

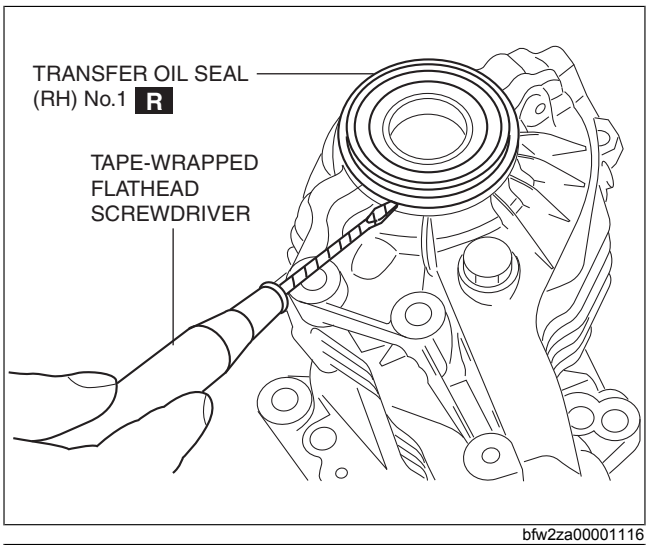


bfw2za00001116

4. Insert a tape-wrapped flathead screwdriver into the lip area of the transfer oil seal (RH) No.2 as shown in the figure and remove the transfer oil seal (RH) No.2.

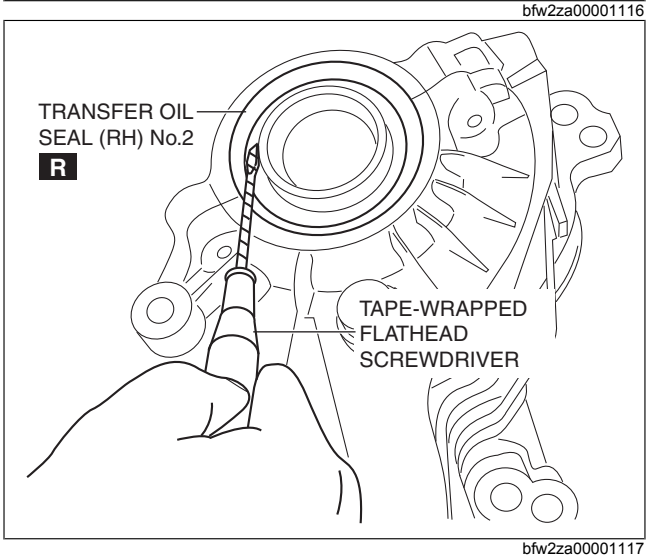


bfw2za00001117

5. Remove the transfer oil seal (RH) No.3 using a tape-wrapped flathead screwdriver.

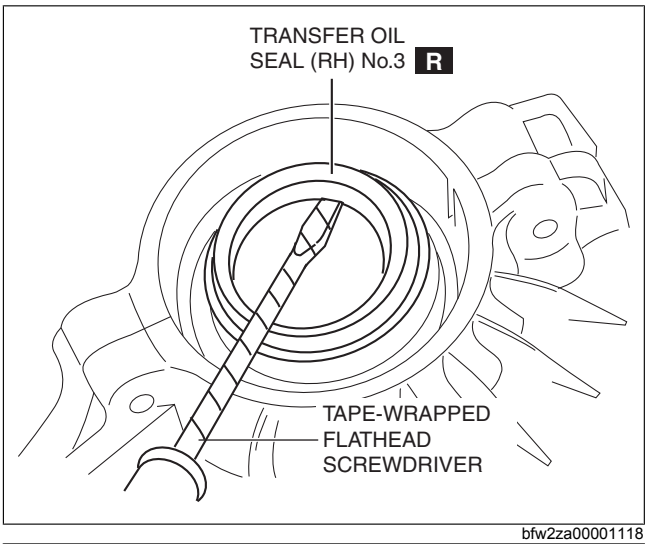


bfw2za00001118

6. Insert a tape-wrapped flathead screwdriver into the lip area of the transfer oil seal (LH) as shown in the figure and remove the transfer oil seal (LH).
7. Remove the breather.

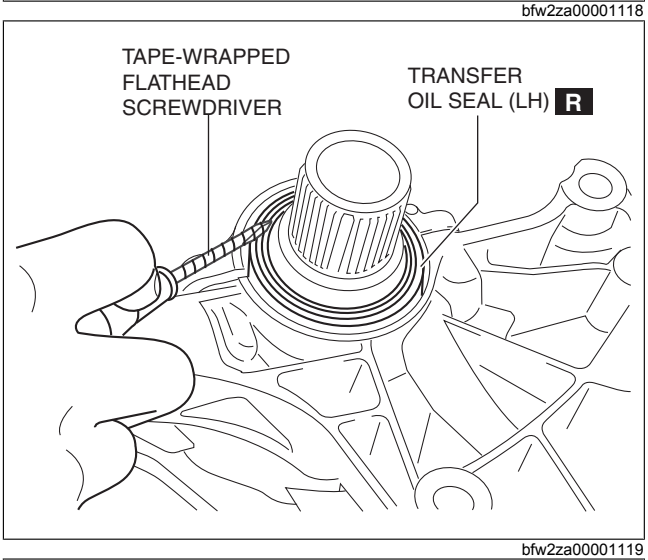

bfw2za00001119


8. Remove the drive gear case installation bolts (2 large, 10 small).

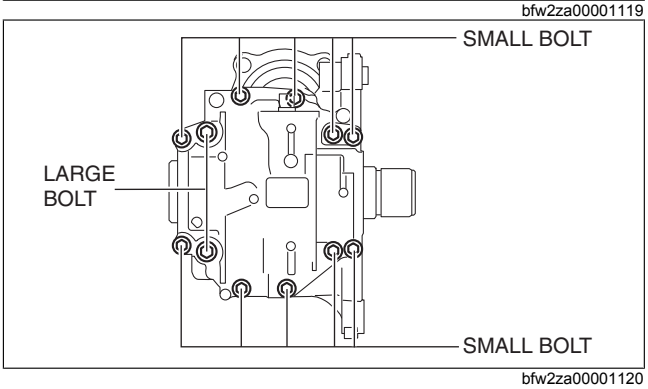

bfw2za00001120


9. Install the **SSTs** to the transfer component as shown in the figure.
10. Remove the drive gear case using a tape-wrapped flathead screwdriver.

Caution
- **When removing the drive gear case, the ring gear shaft component comes off with the case and could drop and be damaged. Perform the drive gear case removal carefully.**

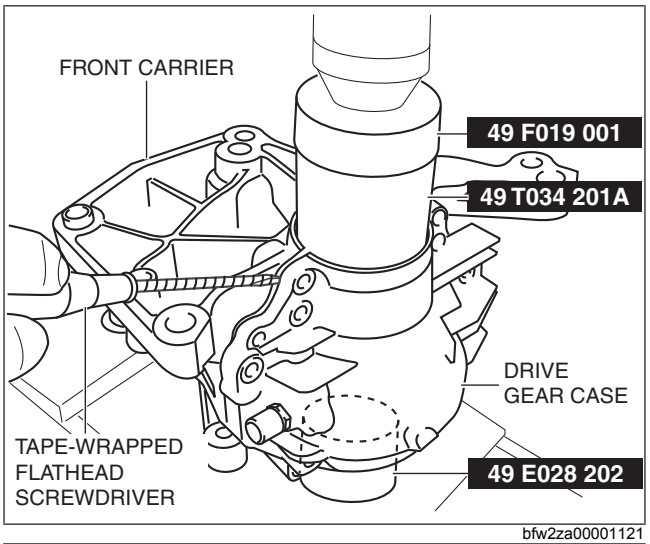

bfw2za00001121

11. Remove the baffle plate.

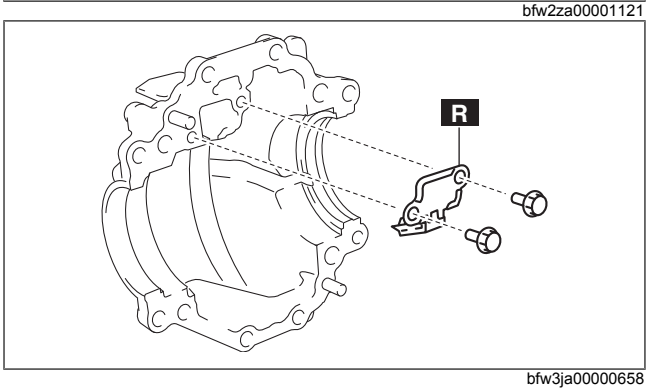


bfw3ja00000658

12. Remove the front carrier from the ring gear shaft component.


Note
- If it is difficult to remove the front carrier from the ring gear shaft component, lightly tap the front carrier with a plastic hammer to remove it.

13. Remove the **SSTs**.
14. Remove the adjustment shim (RH) and bearing outer race (RH).
15. Remove the adjustment shim (LH) and bearing outer race (LH).

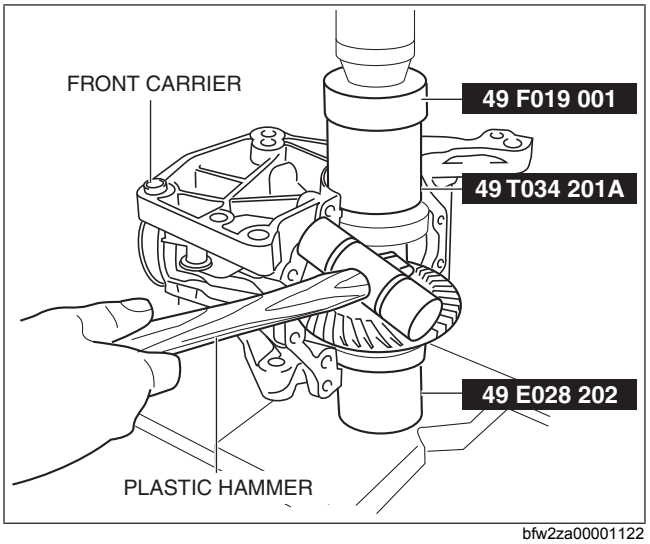


bfw2za00001122

16. Remove the bearing inner race (LH) using the **SST**.

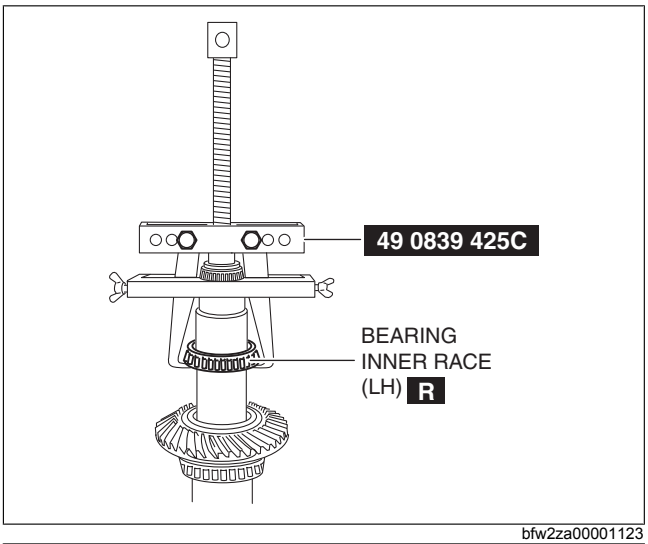

bfw2za00001123

17. Remove the bearing inner race (RH) using the **SST**.

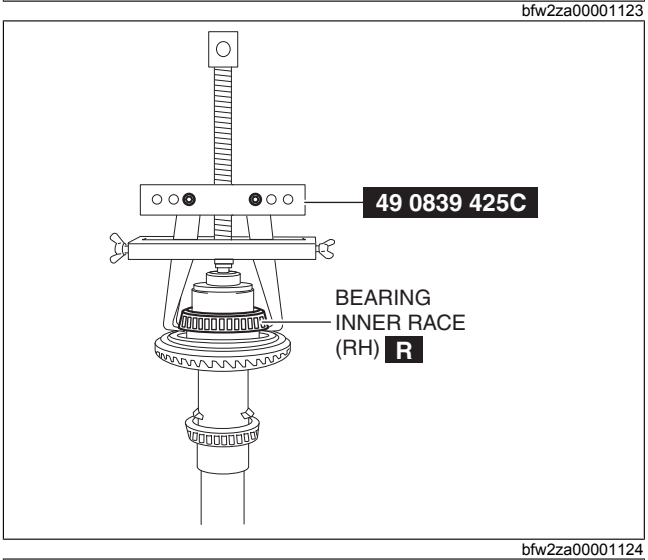


bfw2za00001124

18. Secure the companion flange using the **SST** and a vise, and remove the locknut.


    Note
    - If the nuts for installing the propeller shaft are used when installing the **SST** to the companion flange, install the **SST** through an appropriate washer because the nut diameter is small.

19. Remove the washer.

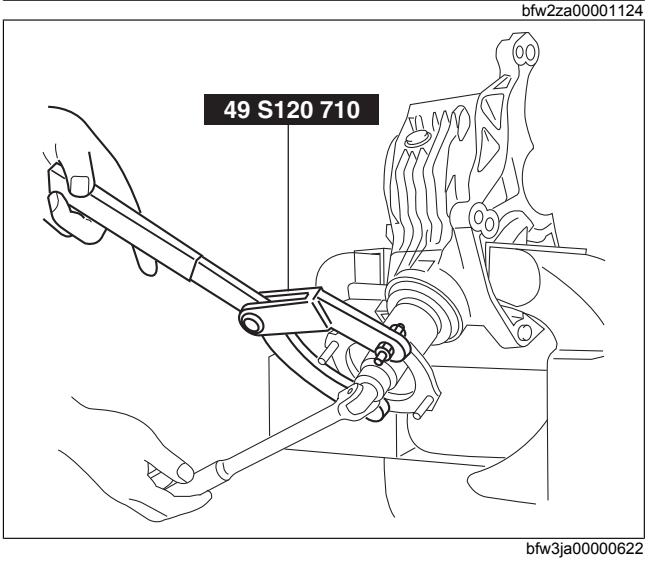


bfw3ja00000622

20. Remove the companion flange component using the **SST** and vice.

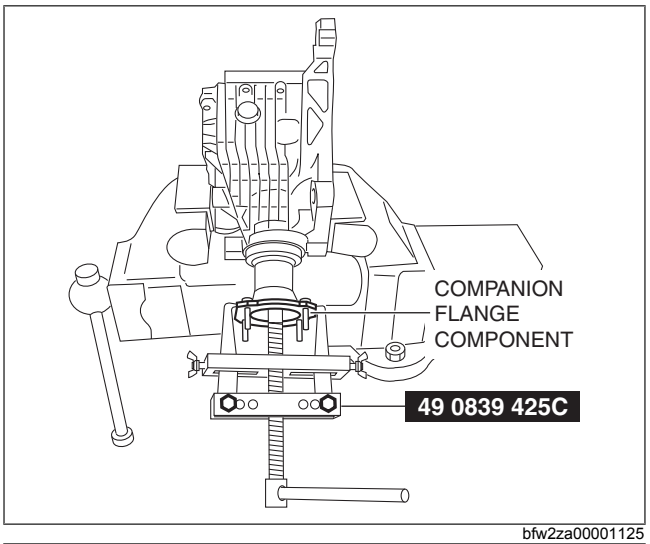


bfw2za00001125

21. Install a locknut to the thread area of the drive pinion gear.
22. Lightly tap the locknut with a copper hammer and remove the drive pinion gear component.
23. Remove the collapsible spacer.

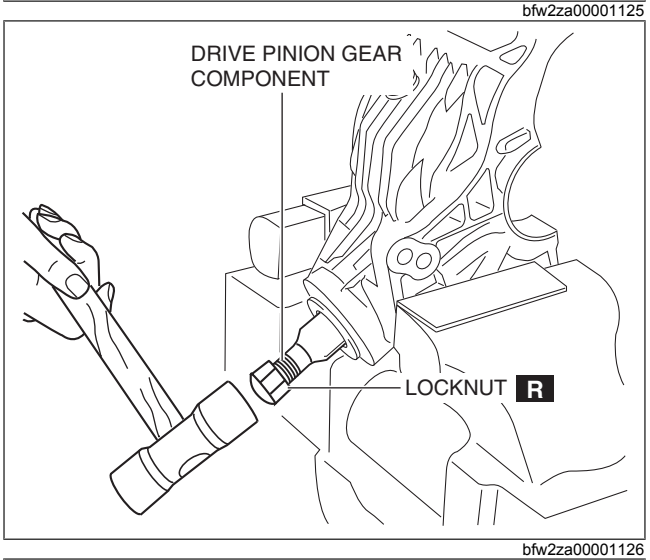


bfw2za00001126

24. Remove the oil seal using a tape-wrapped flathead screwdriver.
25. Remove the bearing inner race (rear).

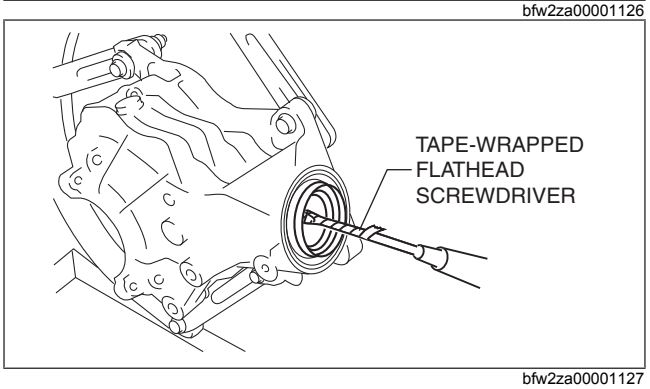


bfw2za00001127

26. Set the brass bar to the bearing outer race (front) end surface at the notches of the front carrier in two locations. Lightly tap the end surfaces of the outer race alternately using the brass bar and hammer, and remove the bearing outer race (front).

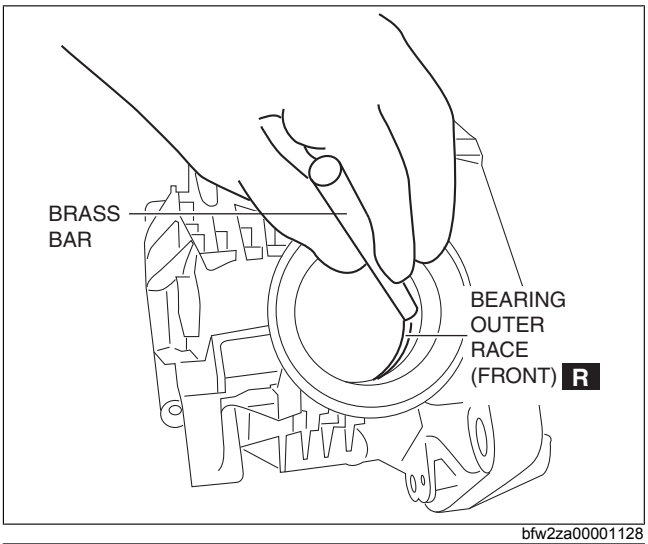

bfw2za00001128

27. Set the brass bar to the bearing outer race (rear) end surface at the notches of the front carrier in two locations. Lightly tap the end surfaces of the outer race alternately using the brass bar and hammer, and remove the bearing outer race (rear).

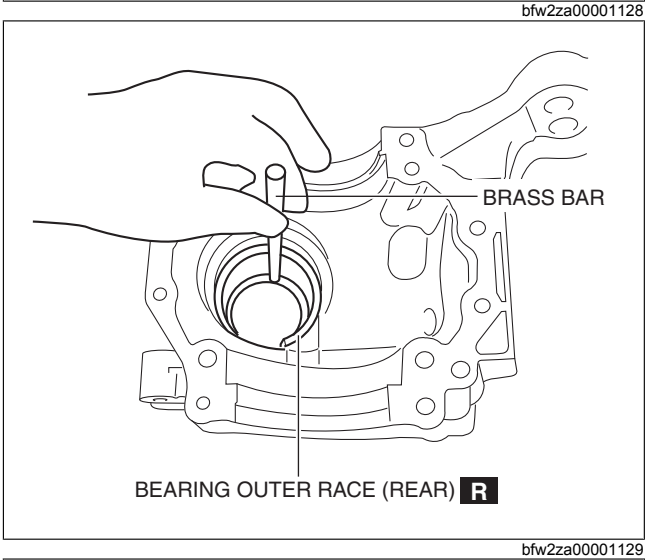


bfw2za00001129

28. Remove the bearing inner race (front) using the **SST** and a press, and a steel plate.

    Note
    - Install the **SST** with the tapered sides pointing towards the drive pinion gear.

29. Remove the spacer.

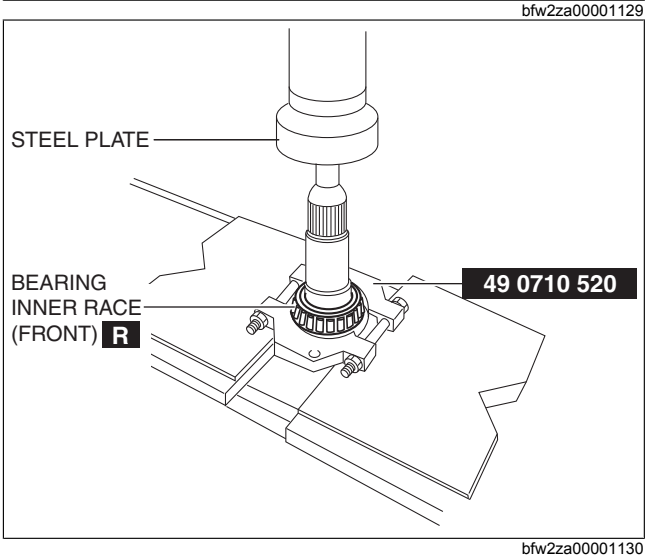

bfw2za00001130