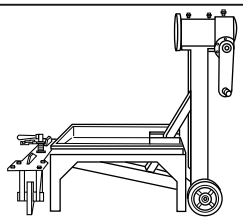
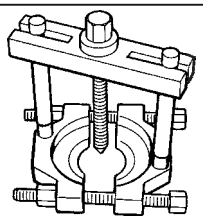
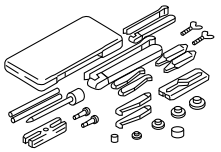
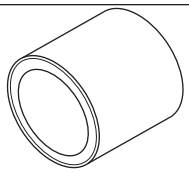
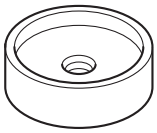

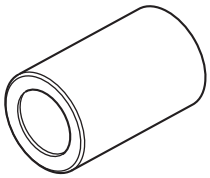
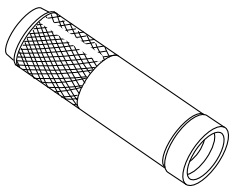
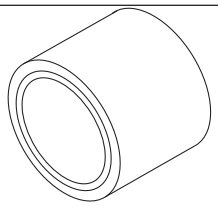
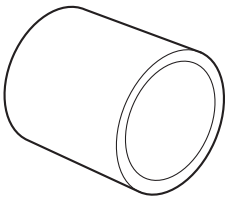
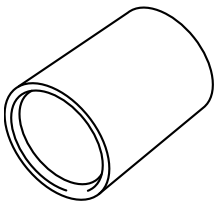
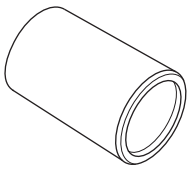
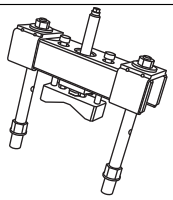
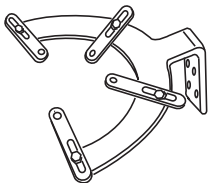
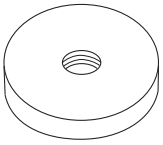

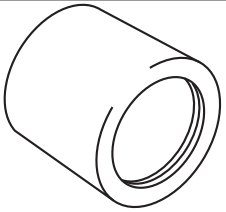
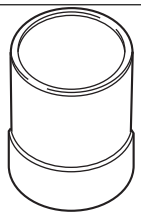
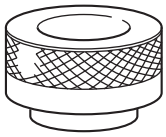
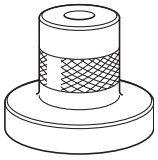

DRIVELINE/AXLE SST [FW6AX-EL]

id0360f1160300

49 0107 680A Engine stand 	49 0710 520 Universal bearing puller 	49 0839 425C Bearing puller set 
49 E028 202 Support block 	49 F019 001 Oil seal installer 	49 F027 003 Handle 
49 F034 201 Dust boot installer 	49 F401 331 Body 	49 G026 103 Support block 
49 G028 203 Support 	49 H028 202 Block 	49 H028 301 Dust boot installer 
49 JP01 002 Holder side bearing 	49 M005 561 Differential carrier hanger 	49 S120 710 Coupling flange holder 
49 T017 002 Bearing installer 	49 T028 205 Attachment 	49 T034 201A Dust boot installer 
49 UA01 785 Dust boot installer 	49 V001 525 Bearing installer 	49 V001 795 Oil seal installer 
49 W038 001 Shaft 	49 W038 002 Nut 	–