
AUTOMATIC TRANSAXLE LOCATION INDEX [FW6A-EL/FW6AX-EL]

id0517006602z3

Automatic Transaxle 1

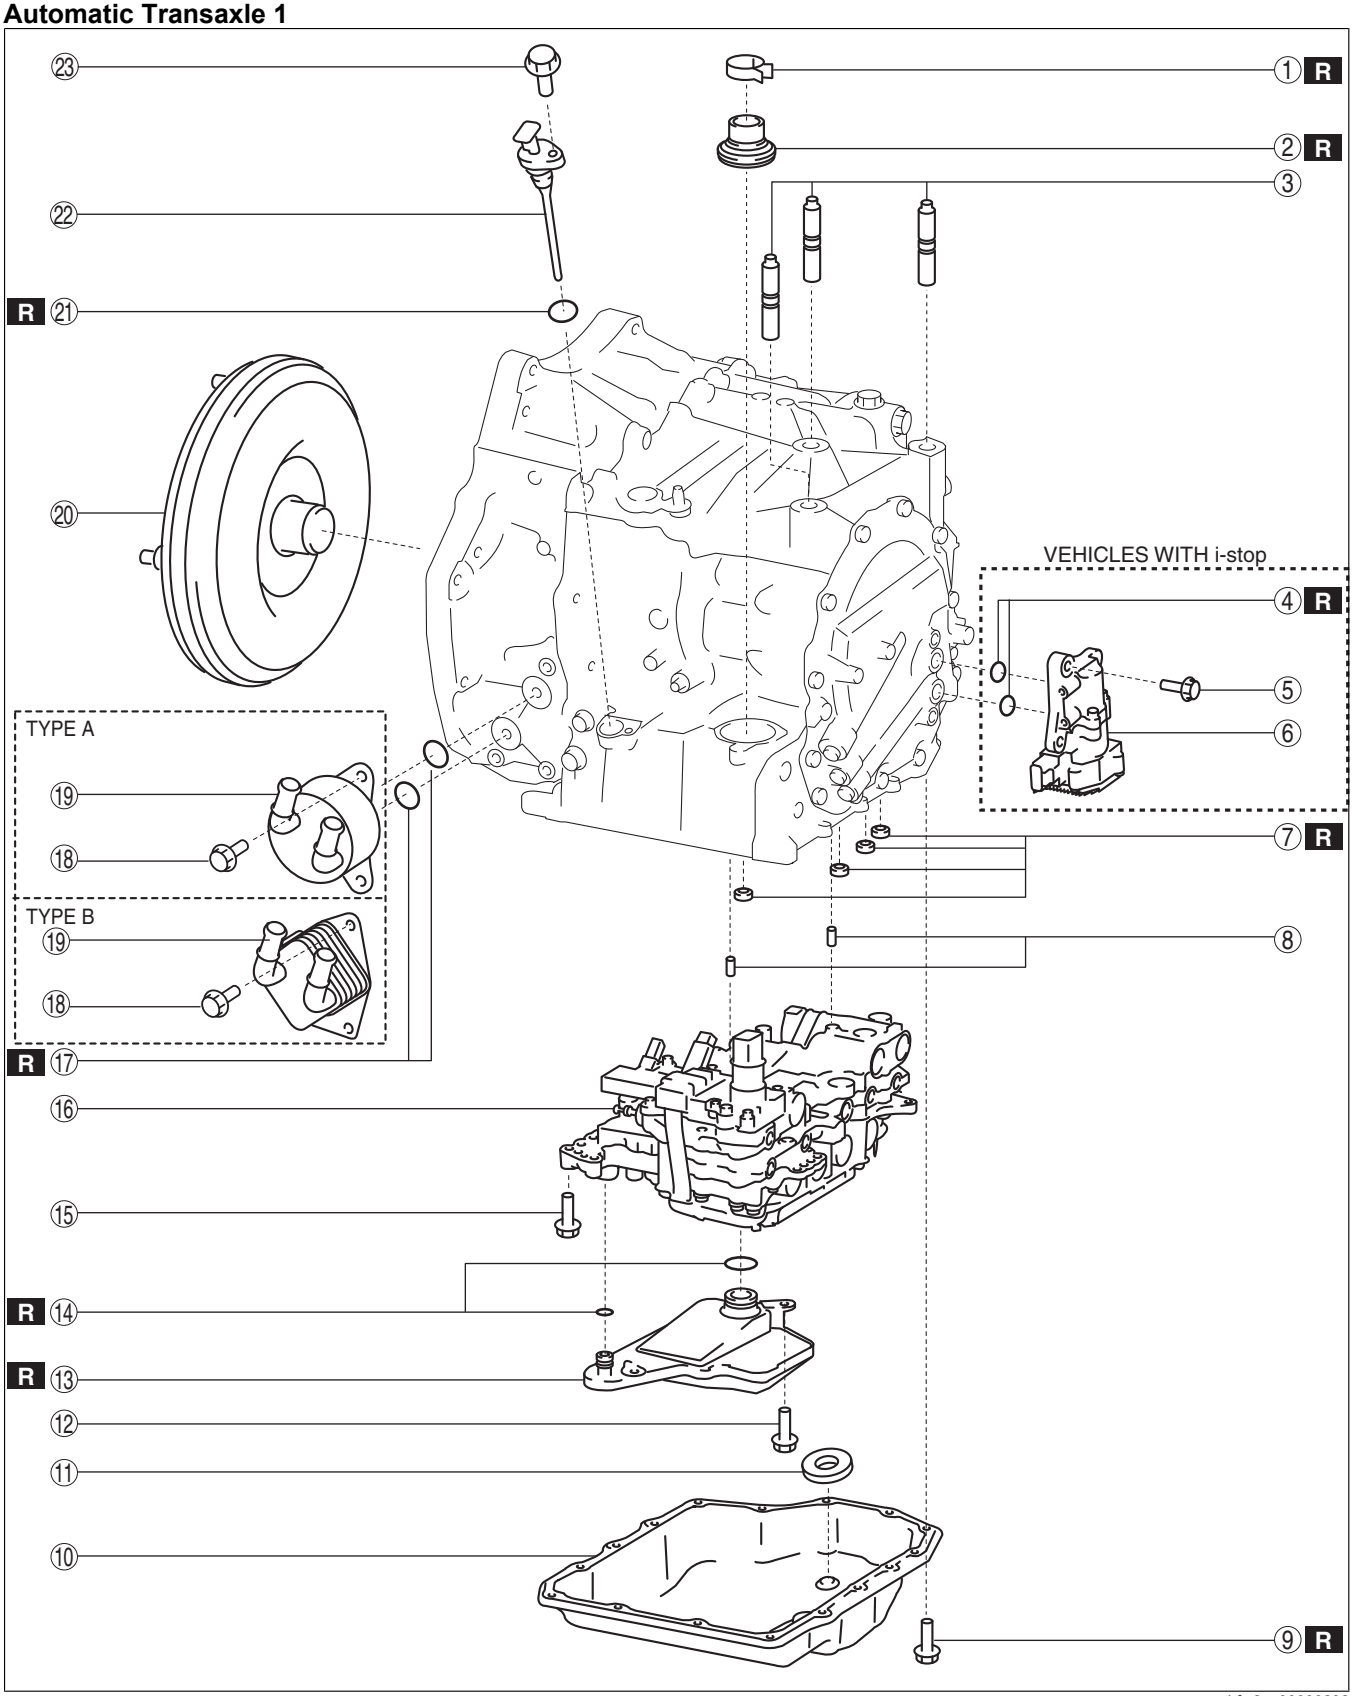


bfw2za00000232

1	Hose clamp (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
2	Oil seal (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)

3	Stud bolt (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
4	O-ring (Vehicles with i-stop) (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
5	3 bolts (Vehicles with i-stop) (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
6	Electric AT oil pump (Vehicles with i-stop) (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
7	Gasket (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
8	Dowel pin (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
9	16 bolts (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
10	Oil pan (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
11	Magnet (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
12	2 bolts (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
13	Oil strainer (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
14	O-ring (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
15	11 bolts (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
16	Control valve body (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].) (See Control Valve Body.)
17	O-ring (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
18	3 bolts (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
19	Oil cooler • Type A: cylindrical oil cooler • Type B: cubic-shaped oil cooler (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].) (See OIL COOLER CLEANING.) (See OIL COOLER INSPECTION.)
20	Torque converter (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].) (See TORQUE CONVERTER CLEANING.) (See TORQUE CONVERTER INSPECTION.)
21	O-ring (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
22	Dipstick (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
23	Bolt (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)


Automatic Transaxle 2

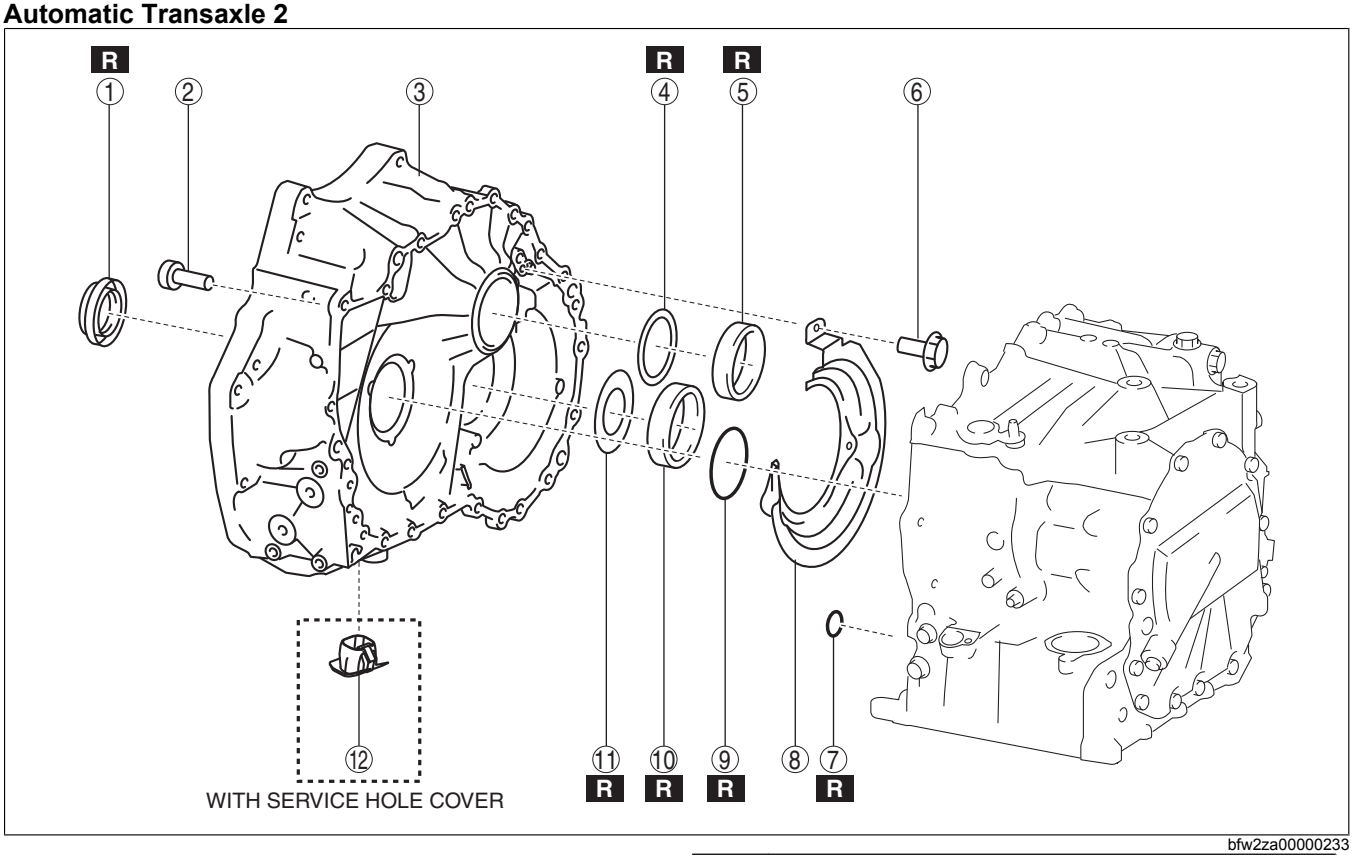

bfw2za00000233

1	Oil seal (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
2	24 bolts (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
3	Converter housing (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
4	Shim (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].) (See SECONDARY GEAR AND OUTPUT GEAR PRELOAD MEASUREMENT/ADJUSTMENT [FW6A-EL/FW6AX-EL].)
5	Bearing race (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
6	3 bolts (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
7	O-ring (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
8	Baffle plate (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
9	O-ring (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
10	Bearing race (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
11	Shim (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].) (See RING GEAR AND DIFFERENTIAL PRELOAD MEASUREMENT/ADJUSTMENT [FW6A-EL/FW6AX-EL].)
12	Service hole cover (With service hole cover) (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)

Automatic Transaxle 3

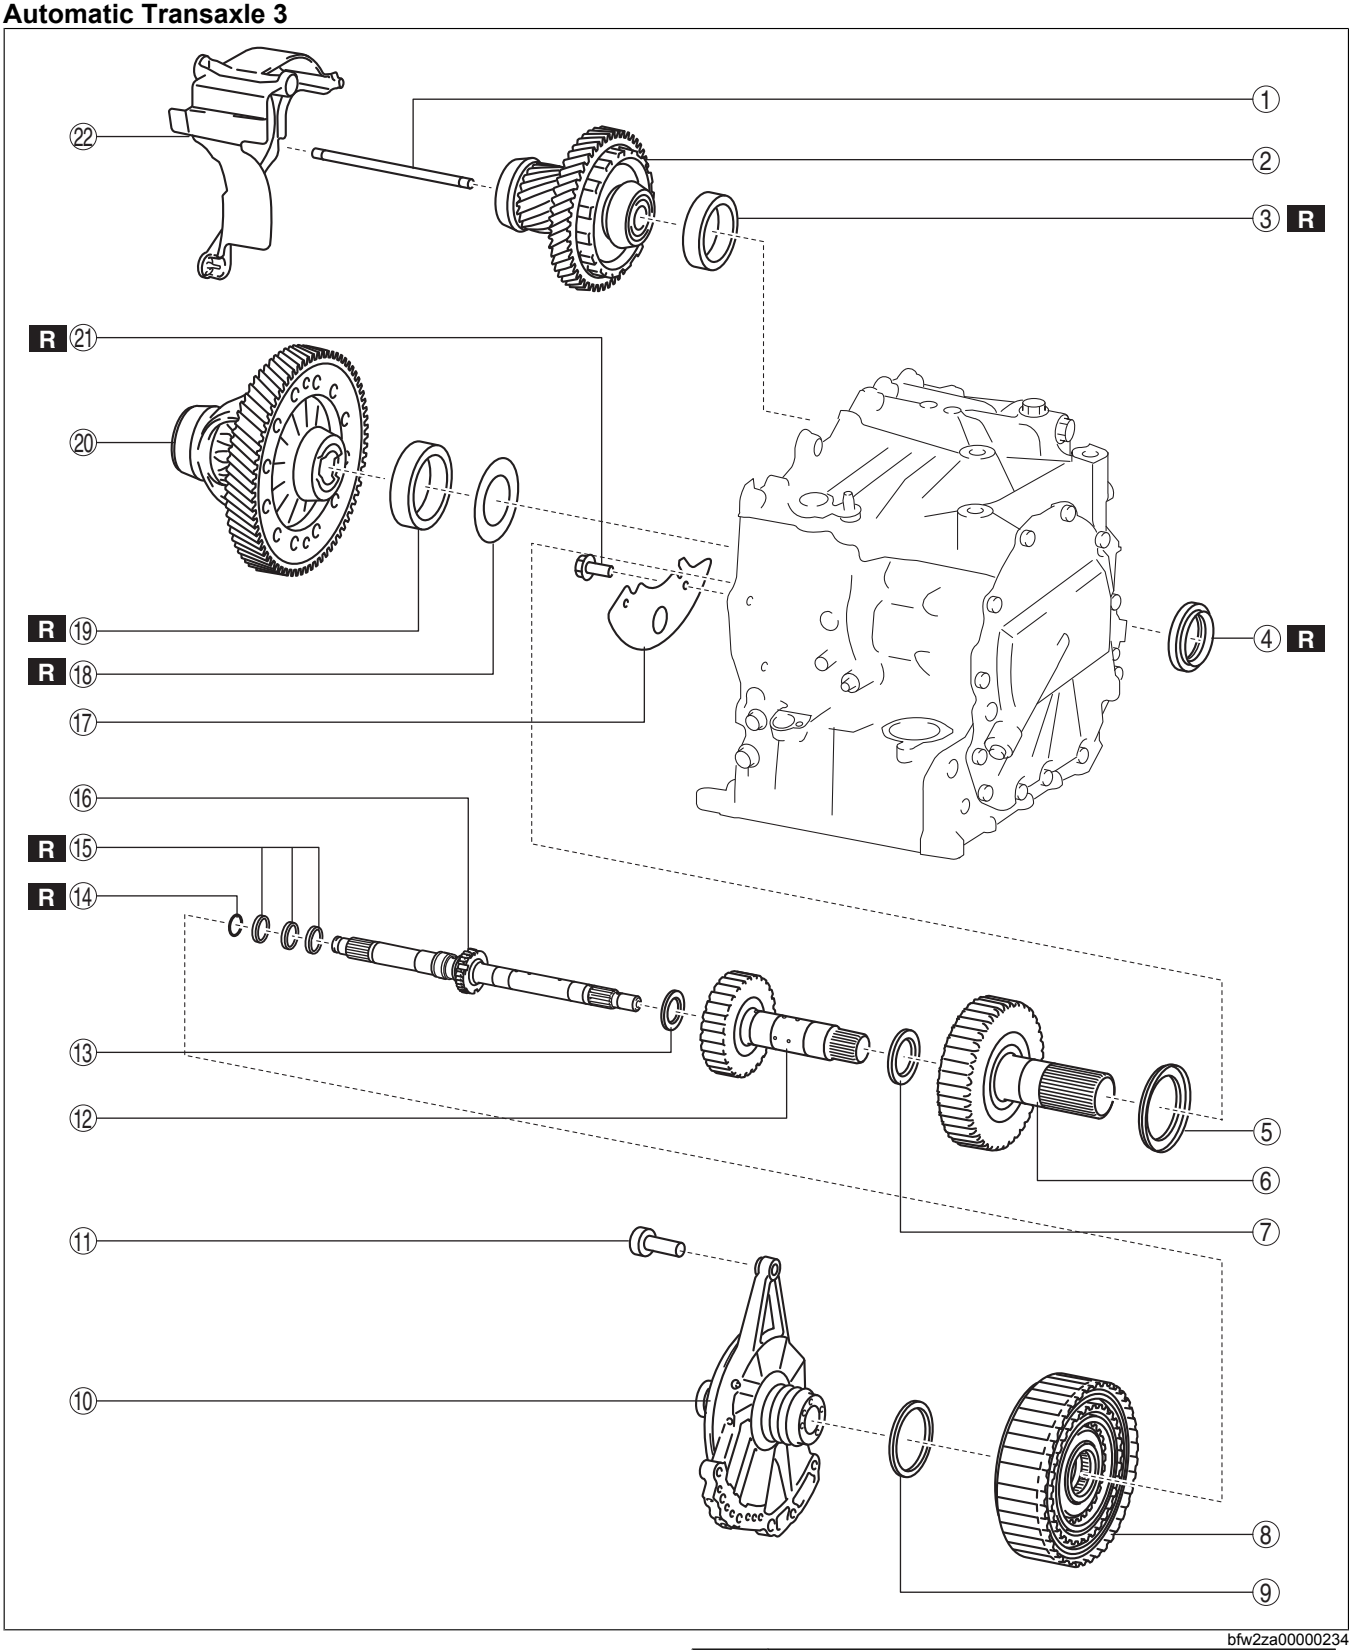


bfw2za00000234

1	Oil pipe (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)

2	Secondary gear and output gear (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].) (See Secondary Gear and Output Gear.)

3	Bearing race (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
4	Oil seal (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
5	Thrust needle bearing (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].) (See THRUST NEEDLE BEARING INSPECTION.)
6	Low clutch hub (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].) (See LOW CLUTCH HUB INSPECTION.)
7	Thrust needle bearing (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].) (See THRUST NEEDLE BEARING INSPECTION.)
8	High clutch component and low clutch component (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].) (See High Clutch Component And Low Clutch Component (SKYACTIV-G 1.5).) (See High Clutch Component And Low Clutch Component (SKYACTIV-G 2.0, SKYACTIV-G 2.5).)
9	Thrust needle bearing (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].) (See THRUST NEEDLE BEARING INSPECTION.)
10	Oil pump (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].) (See Oil Pump.)
11	7 bolts (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
12	High clutch hub (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH HUB INSPECTION.)
13	Thrust needle bearing (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].) (See THRUST NEEDLE BEARING INSPECTION.)
14	D-ring (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
15	Seal ring (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
16	Turbine shaft (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
17	Baffle plate (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
18	Shim (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
19	Bearing race (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
20	Ring gear and differential (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].) (See Ring Gear and Differential.)
21	2 bolts (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
22	Baffle plate (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)

Automatic Transaxle 4 (SKYACTIV-G 1.5)

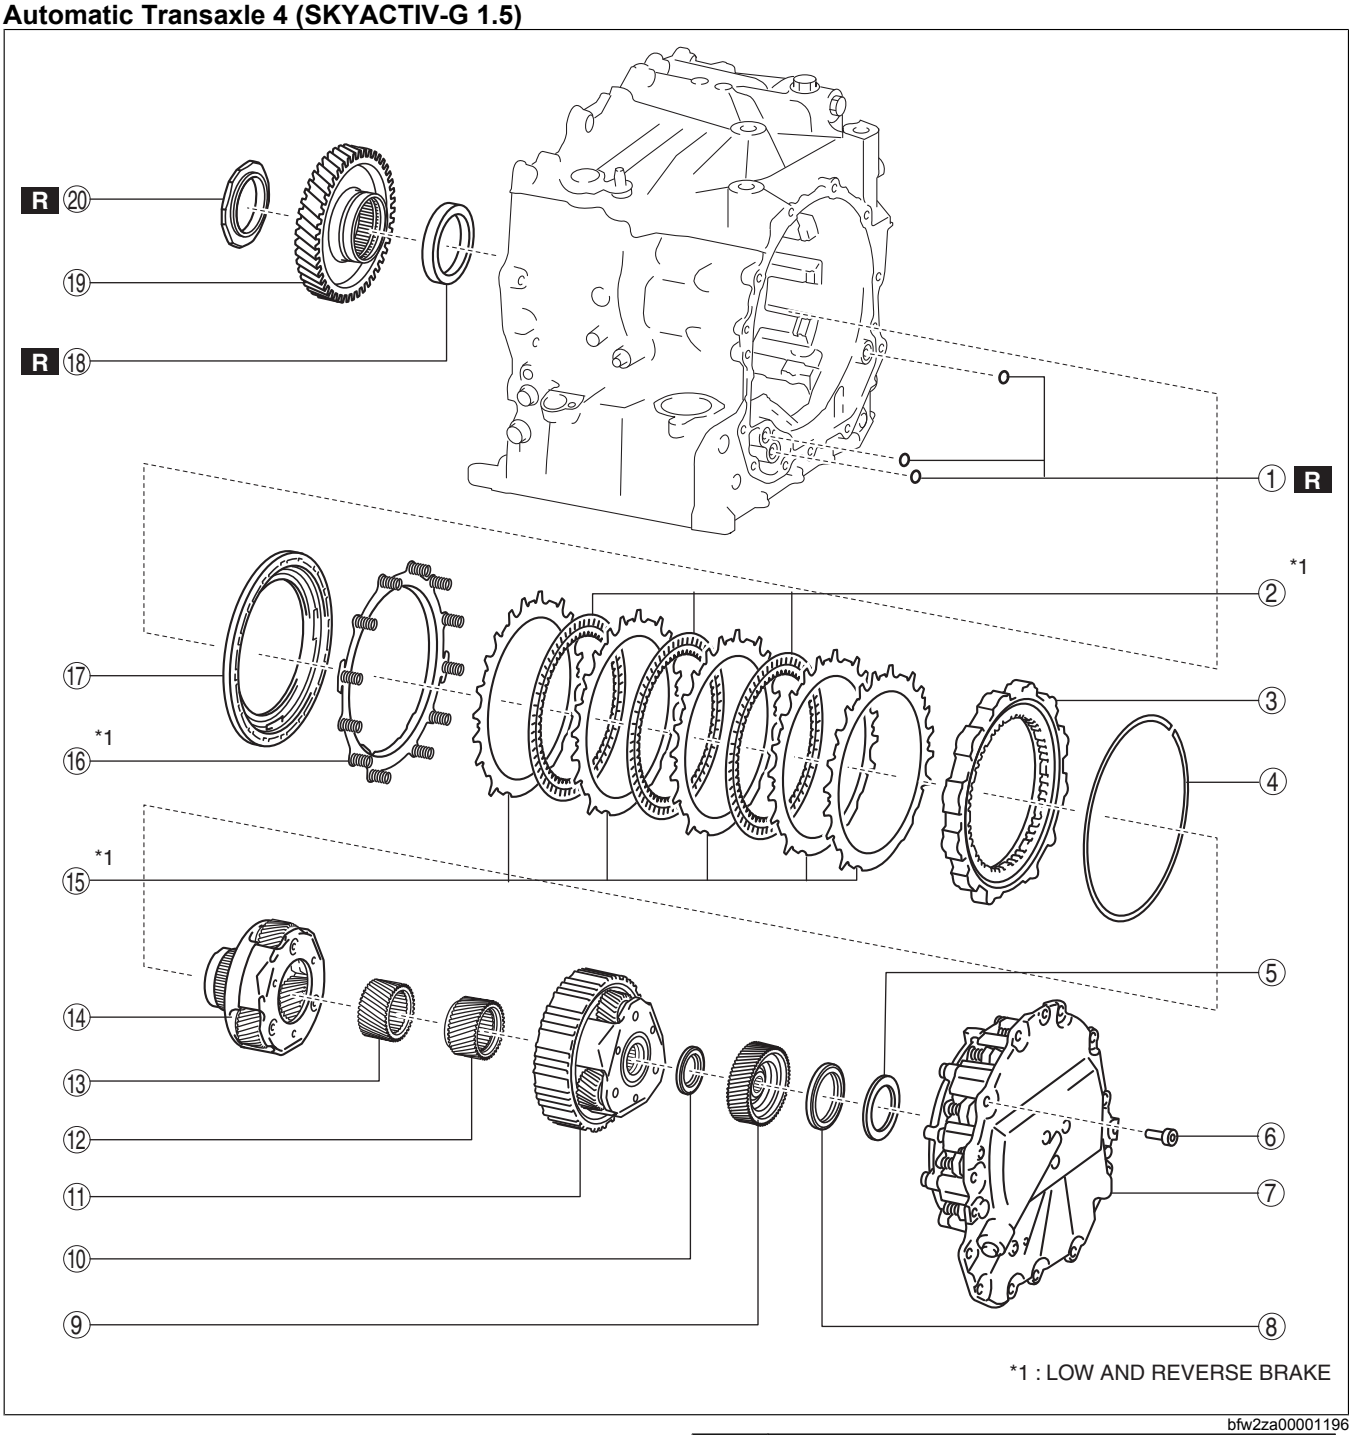


bfw2za00001196

1	O-ring (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
2	Drive plate (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].) (See LOW AND REVERSE BRAKE INSPECTION.)

3	One-way clutch (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].) (See ONE-WAY CLUTCH INSPECTION.)
4	Snap ring (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].) (See LOW AND REVERSE BRAKE CLEARANCE MEASUREMENT/ADJUSTMENT.)

5	Shim (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].) (See TOTAL END PLAY MEASUREMENT/ ADJUSTMENT.)
6	12 bolts (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
7	End cover component (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].) (See End Cover Component (SKYACTIV-G 1.5).)
8	Thrust needle bearing (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].) (See THRUST NEEDLE BEARING INSPECTION.)
9	Reduction sun gear (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
10	Thrust needle bearing (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].) (See THRUST NEEDLE BEARING INSPECTION.)
11	Rear planetary gear (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].) (See High Clutch Component And Low Clutch Component (SKYACTIV-G 1.5).)
12	Rear sun gear (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
13	Front sun gear (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
14	Front planetary gear (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].) (See FRONT PLANETARY GEAR INSPECTION.)
15	Driven plate (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
16	Springs and retainer component (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
17	Low and reverse brake piston (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
18	Angular contact ball bearing (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].)
19	Primary gear (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
20	Locknut (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)

Automatic Transaxle 4 (SKYACTIV-G 2.0, SKYACTIV-G 2.5)

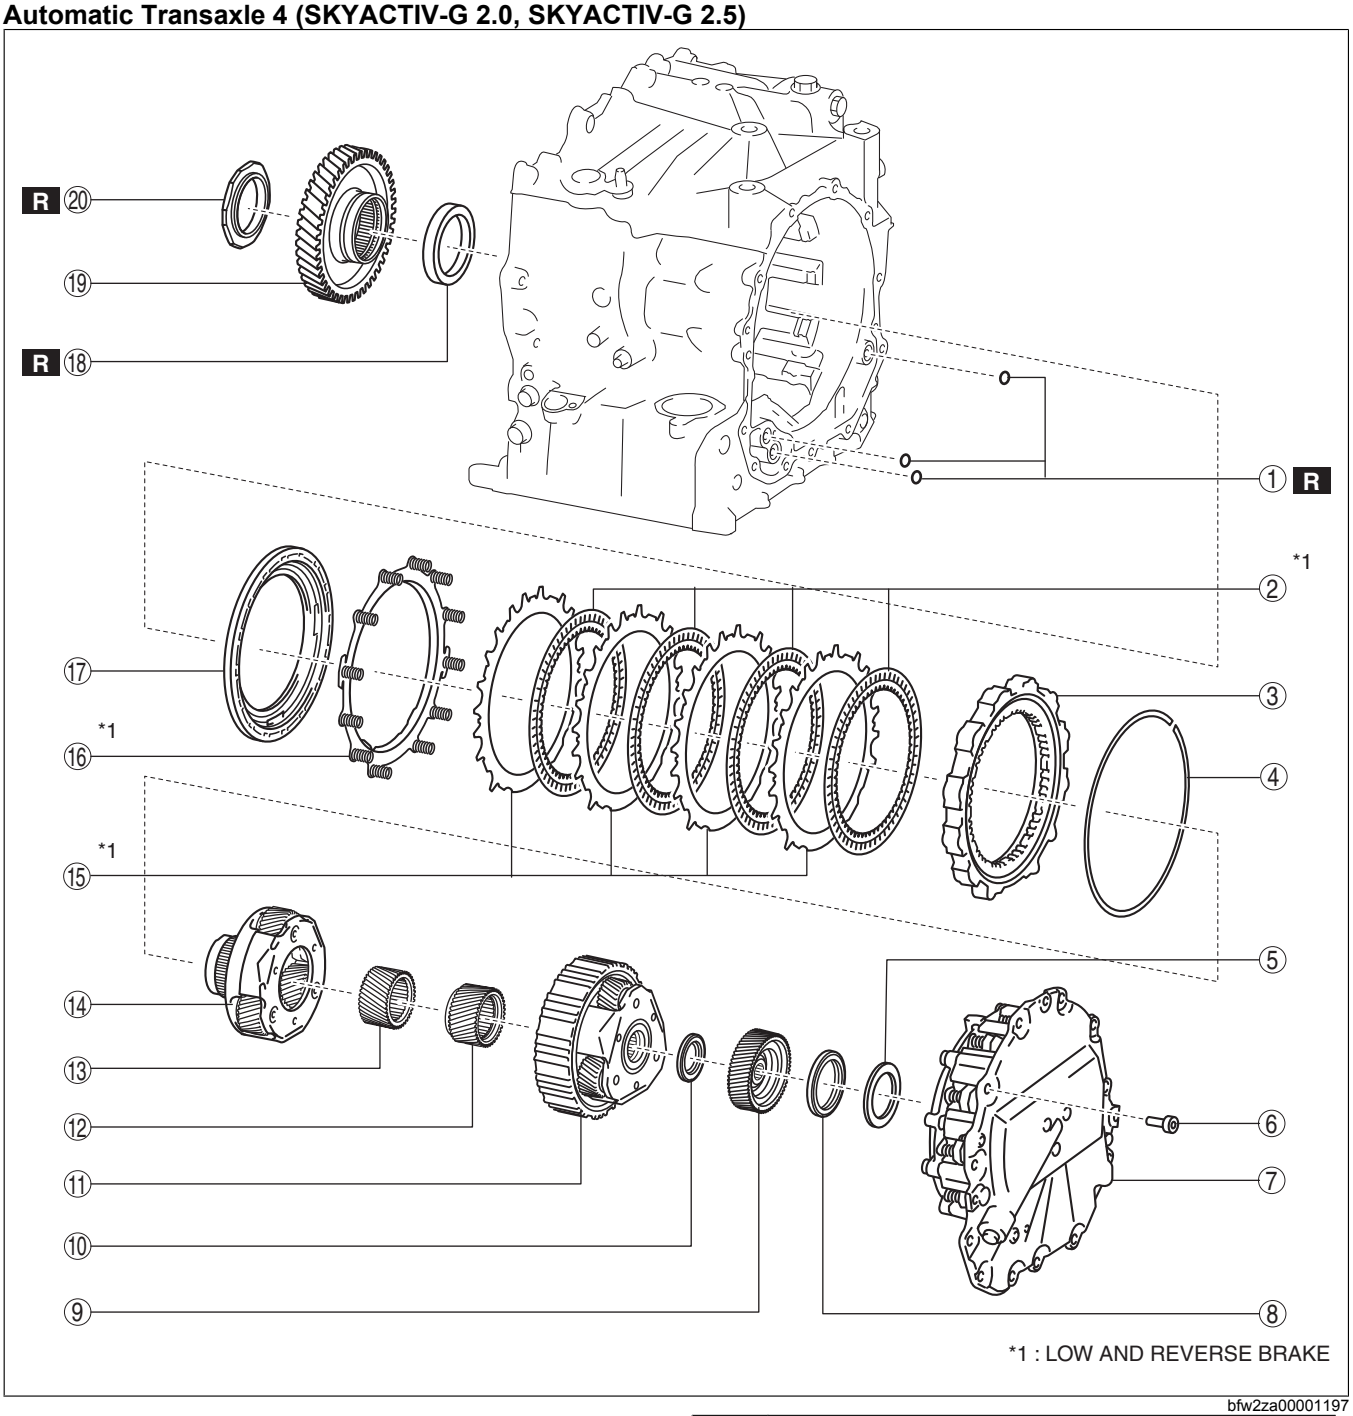


bfw2za00001197

1	O-ring (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
2	Drive plate (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].) (See LOW AND REVERSE BRAKE INSPECTION.)

3	One-way clutch (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].) (See ONE-WAY CLUTCH INSPECTION.)
4	Snap ring (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].) (See LOW AND REVERSE BRAKE CLEARANCE MEASUREMENT/ADJUSTMENT.)

5	Shim (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].) (See TOTAL END PLAY MEASUREMENT/ ADJUSTMENT.)
6	12 bolts (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
7	End cover component (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].) (See End Cover Component (SKYACTIV-G 2.0, SKYACTIV-G 2.5).)
8	Thrust needle bearing (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].) (See THRUST NEEDLE BEARING INSPECTION.)
9	Reduction sun gear (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
10	Thrust needle bearing (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].) (See THRUST NEEDLE BEARING INSPECTION.)
11	Rear planetary gear (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].) (See Rear Planetary Gear.)
12	Rear sun gear (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
13	Front sun gear (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
14	Front planetary gear (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].) (See FRONT PLANETARY GEAR INSPECTION.)
15	Driven plate (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
16	Springs and retainer component (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
17	Low and reverse brake piston (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
18	Angular contact ball bearing (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].)
19	Primary gear (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
20	Locknut (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)

Automatic Transaxle 5

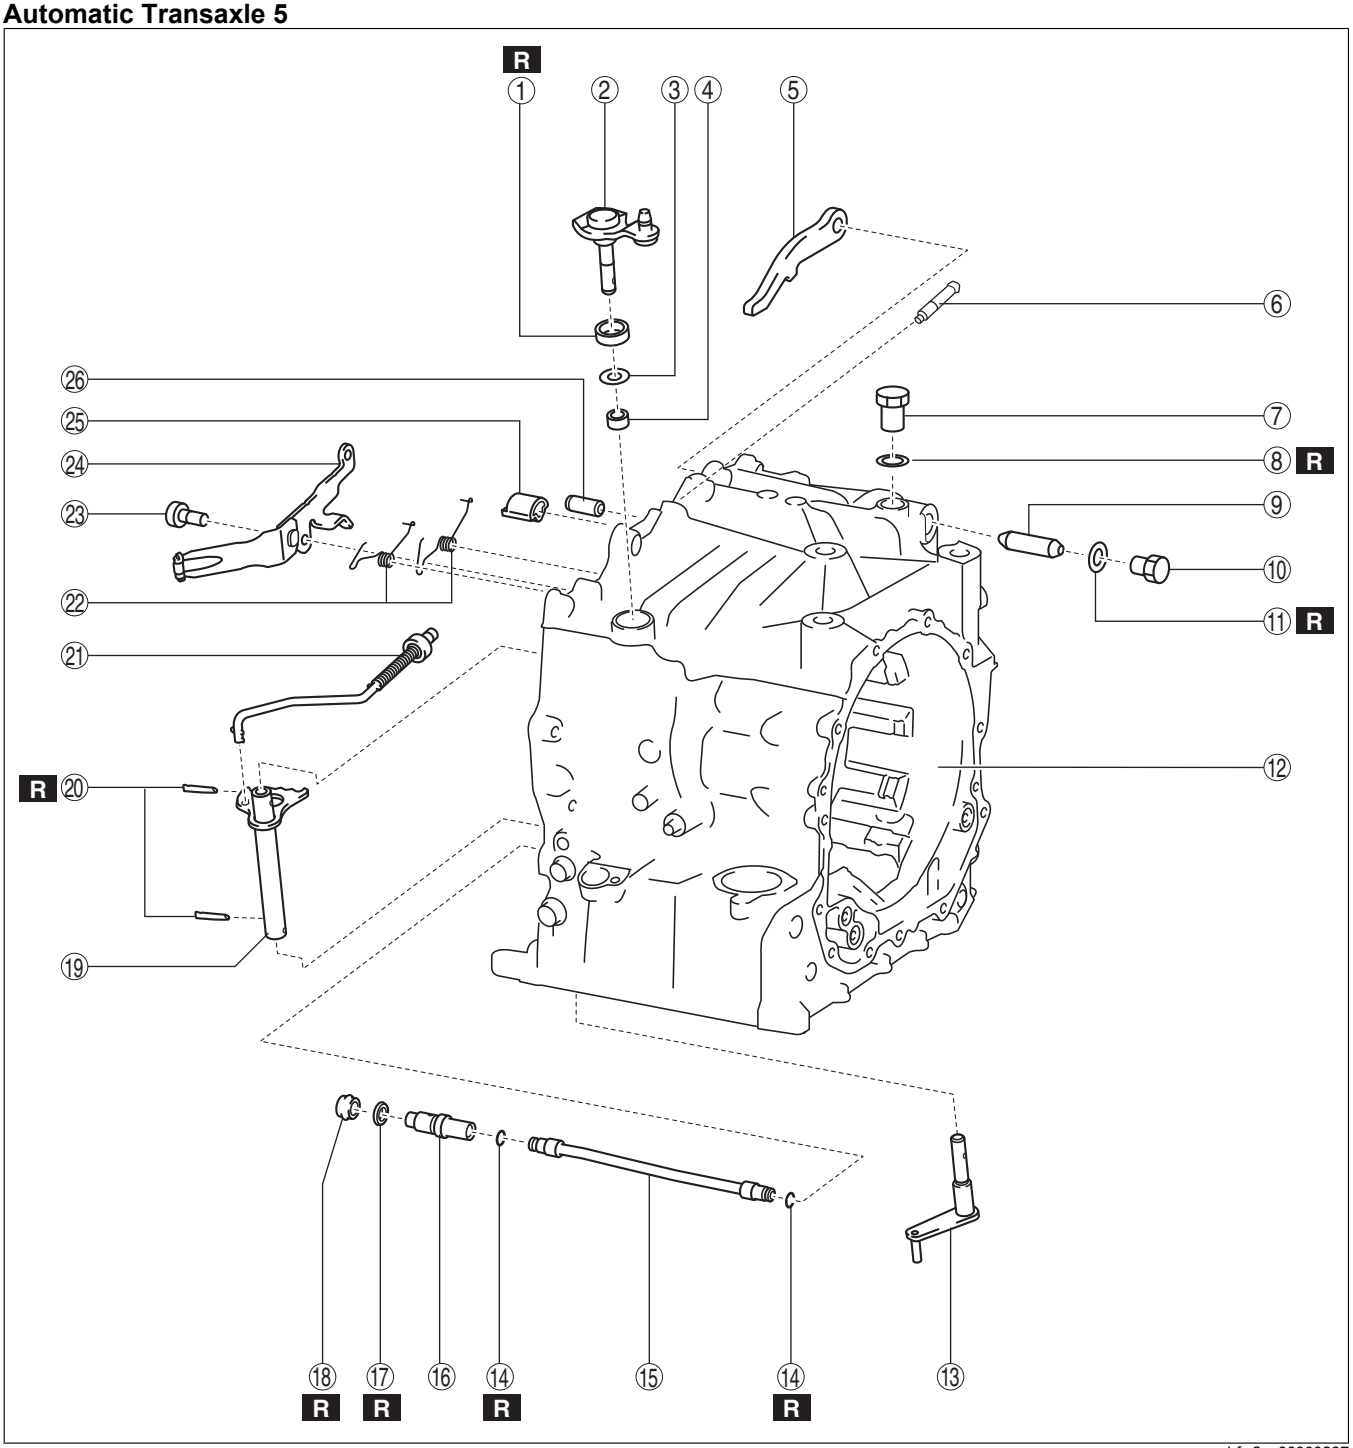


bfw2za00000237

1	Oil seal (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].) (See OIL SEAL (PARKING SHIFT LEVER) REPLACEMENT [FW6A-EL/FW6AX-EL].)
2	Parking shift lever component (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)

3	Washer (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
4	Radial needle bearing (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
5	Parking pawl (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)

6	Breather pipe (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
7	Plug (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
8	Gasket (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
9	Parking pawl shaft (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
10	Plug (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
11	Gasket (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
12	Transaxle case (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
13	Parking assist lever component (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
14	O-ring (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
15	Oil pipe (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
16	Connector (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
17	Gasket (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
18	Gasket (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
19	Manual plate component (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
20	Roll pin (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
21	Parking rod component (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
22	Pawl return spring (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
23	2 bolts (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
24	Detent bracket component (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
25	Support actuator (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)
26	Parking pawl pin (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6A-EL/FW6AX-EL].)


Oil Pump

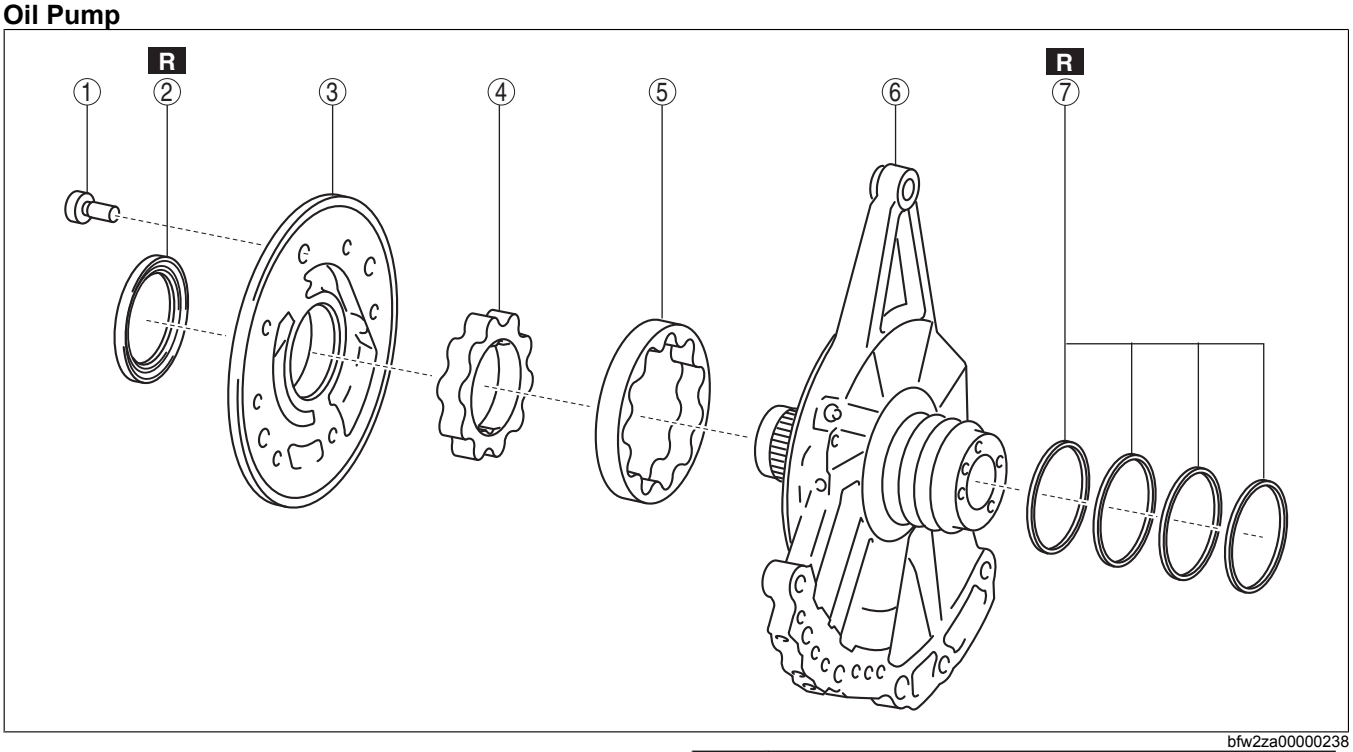

bfw2za00000238

1	7 bolts (See OIL PUMP DISASSEMBLY.) (See OIL PUMP ASSEMBLY.)
2	Oil seal (See OIL PUMP DISASSEMBLY.) (See OIL PUMP ASSEMBLY.) (See OIL SEAL (OIL PUMP) REPLACEMENT [FW6A-EL/FW6AX-EL].)
3	Oil pump cover (See OIL PUMP DISASSEMBLY.) (See OIL PUMP ASSEMBLY.) (See OIL PUMP INSPECTION.)
4	Inner rotor (See OIL PUMP DISASSEMBLY.) (See OIL PUMP ASSEMBLY.) (See OIL PUMP INSPECTION.)
5	Outer rotor (See OIL PUMP DISASSEMBLY.) (See OIL PUMP ASSEMBLY.) (See OIL PUMP INSPECTION.)
6	Oil pump housing (See OIL PUMP DISASSEMBLY.) (See OIL PUMP ASSEMBLY.) (See OIL PUMP INSPECTION.)
7	Seal ring (See OIL PUMP DISASSEMBLY.) (See OIL PUMP ASSEMBLY.)

High Clutch Component And Low Clutch Component (SKYACTIV-G 1.5)

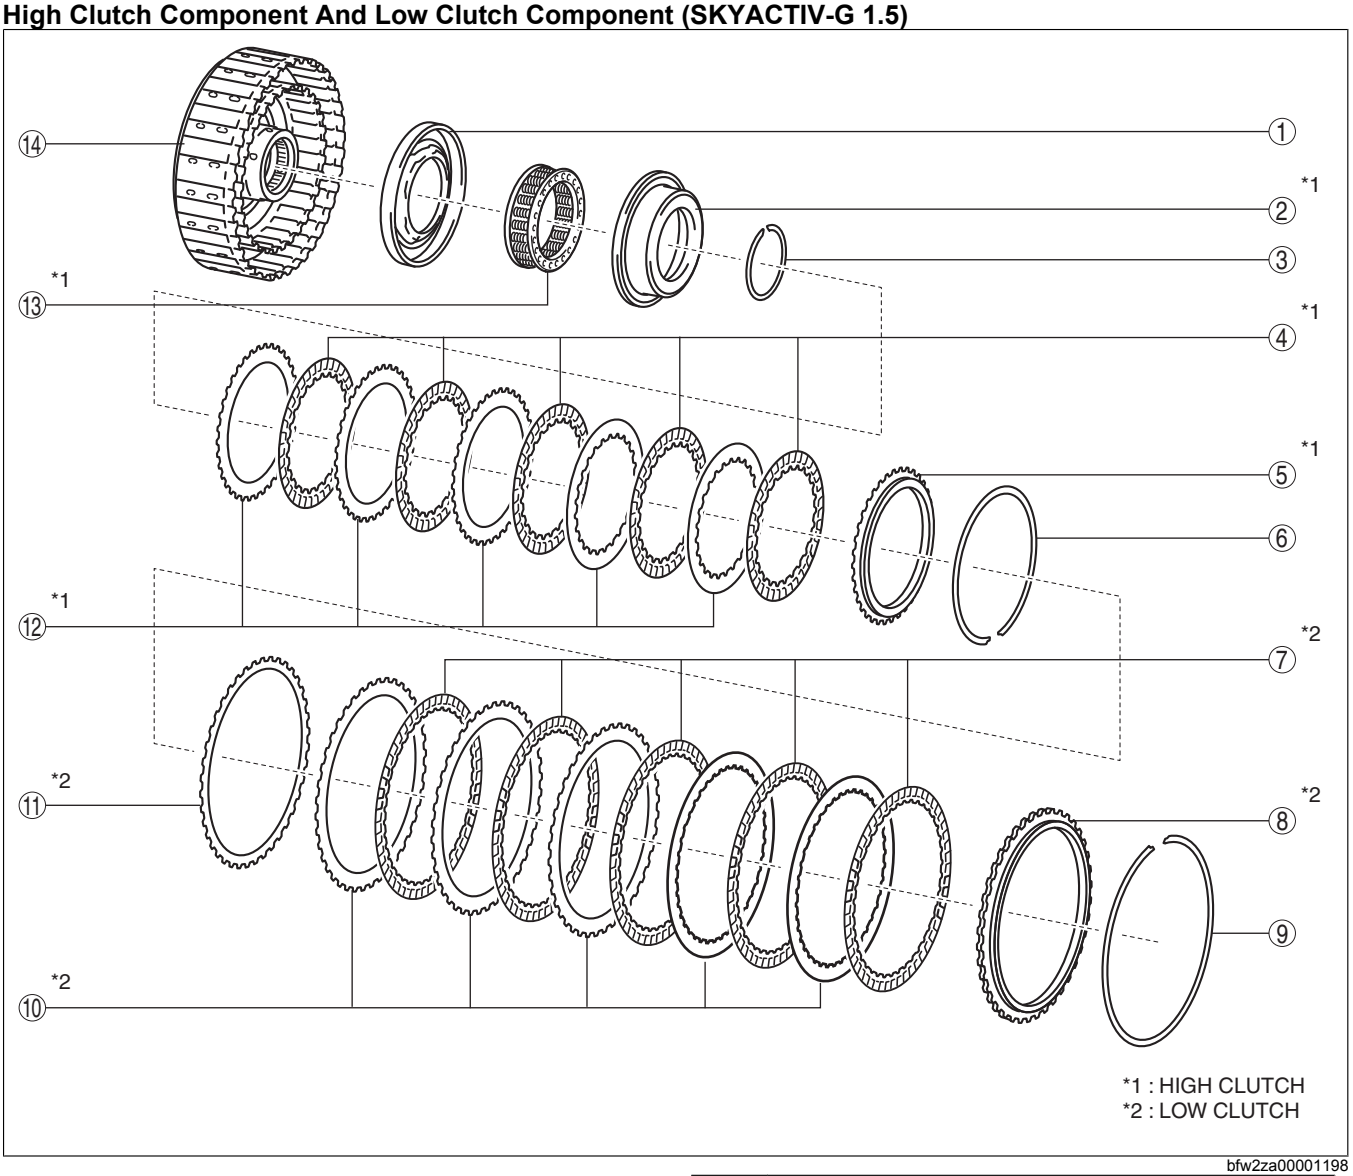


bfw2za00001198

1	High clutch piston (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)
2	Seal plate (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)
3	Snap ring (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)
4	Drive plate (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH INSPECTION.)
5	Retaining plate (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)
6	Snap ring (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH CLEARANCE MEASUREMENT/ADJUSTMENT.)

7	Drive plate (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].) (See LOW CLUTCH INSPECTION.)
8	Retaining plate (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)
9	Snap ring (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].) (See LOW CLUTCH CLEARANCE MEASUREMENT/ADJUSTMENT.)
10	Driven plate (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)
11	Wave spring (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)
12	Driven plate (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)
13	Springs and retainer component (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH INSPECTION.)
14	High clutch drum and low clutch drum component (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH INSPECTION.)

High Clutch Component And Low Clutch Component (SKYACTIV-G 2.0, SKYACTIV-G 2.5)

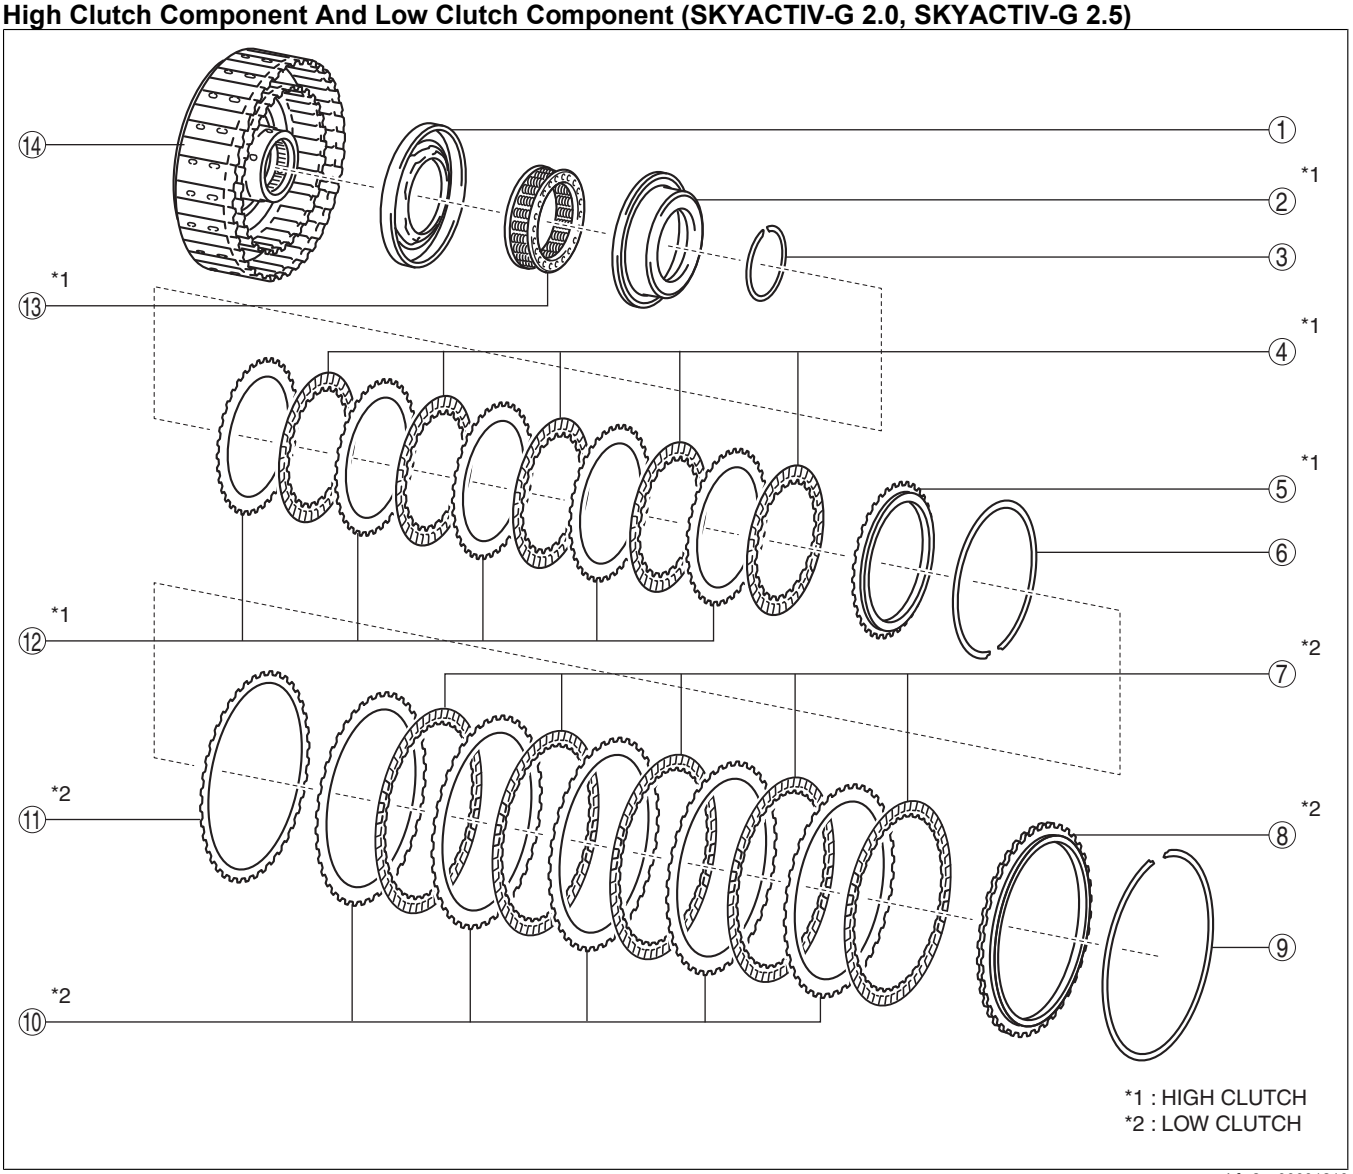


bfw2za00001210

1	High clutch piston (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)
2	Seal plate (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)
3	Snap ring (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)
4	Drive plate (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH INSPECTION.)
5	Retaining plate (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)

6	Snap ring (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH CLEARANCE MEASUREMENT/ADJUSTMENT.)
7	Drive plate (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].) (See LOW CLUTCH INSPECTION.)
8	Retaining plate (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)
9	Snap ring (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].) (See LOW CLUTCH CLEARANCE MEASUREMENT/ADJUSTMENT.)
10	Driven plate (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)
11	Wave spring (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)
12	Driven plate (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)
13	Springs and retainer component (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH INSPECTION.)
14	High clutch drum and low clutch drum component (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH COMPONENT AND LOW CLUTCH COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].) (See HIGH CLUTCH INSPECTION.)

Rear Planetary Gear

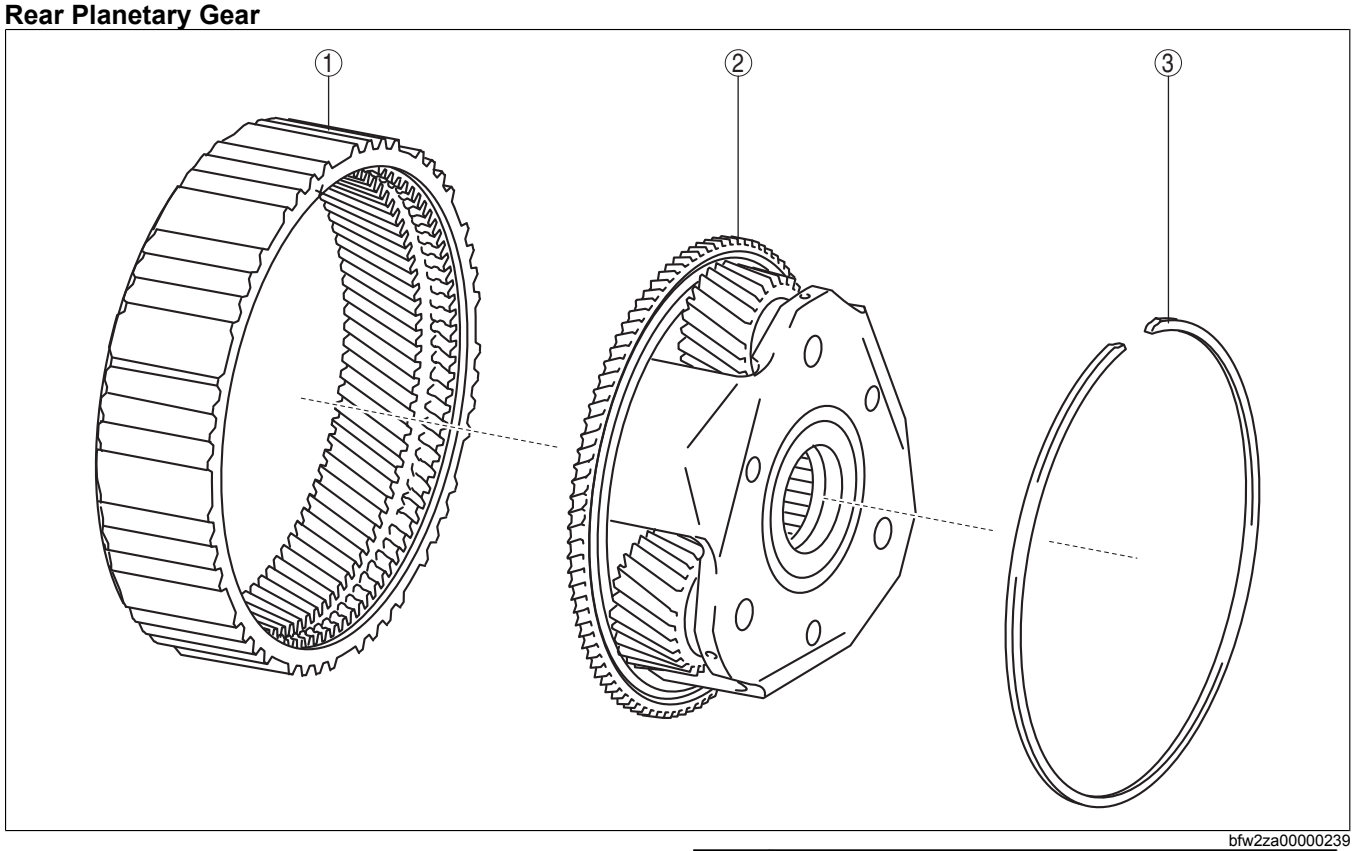


bfw2za00000239

1	Front internal gear (See REAR PLANETARY GEAR DISASSEMBLY.) (See REAR PLANETARY GEAR ASSEMBLY.)
2	Rear planetary carrier (See REAR PLANETARY GEAR DISASSEMBLY.) (See REAR PLANETARY GEAR ASSEMBLY.) (See REAR PLANETARY GEAR INSPECTION.)

3	Snap ring (See REAR PLANETARY GEAR DISASSEMBLY.) (See REAR PLANETARY GEAR ASSEMBLY.)

Secondary Gear and Output Gear

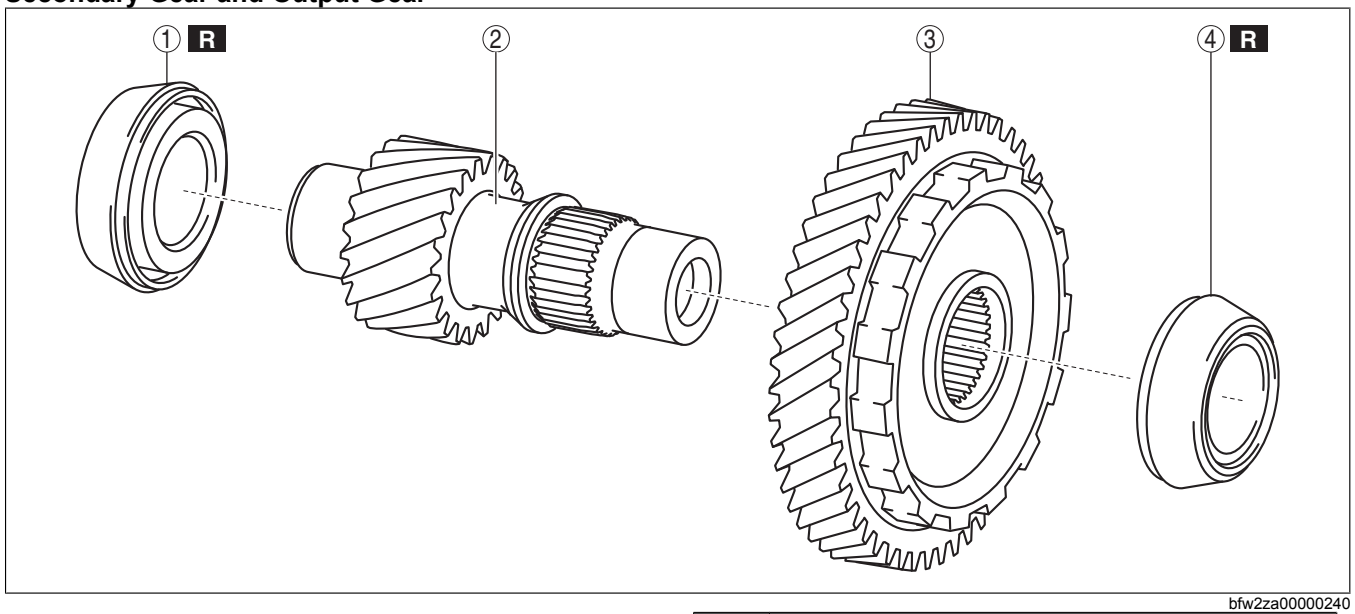

bfw2za00000240


1	Tapered roller bearing (See SECONDARY GEAR AND OUTPUT GEAR DISASSEMBLY.) (See SECONDARY GEAR AND OUTPUT GEAR ASSEMBLY.) (See SECONDARY GEAR AND OUTPUT GEAR INSPECTION.)

2	Output gear (See SECONDARY GEAR AND OUTPUT GEAR DISASSEMBLY.) (See SECONDARY GEAR AND OUTPUT GEAR ASSEMBLY.)

3	Secondary gear (See SECONDARY GEAR AND OUTPUT GEAR DISASSEMBLY.) (See SECONDARY GEAR AND OUTPUT GEAR ASSEMBLY.)

4	Tapered roller bearing (See SECONDARY GEAR AND OUTPUT GEAR DISASSEMBLY.) (See SECONDARY GEAR AND OUTPUT GEAR ASSEMBLY.) (See SECONDARY GEAR AND OUTPUT GEAR INSPECTION.)

Ring Gear and Differential

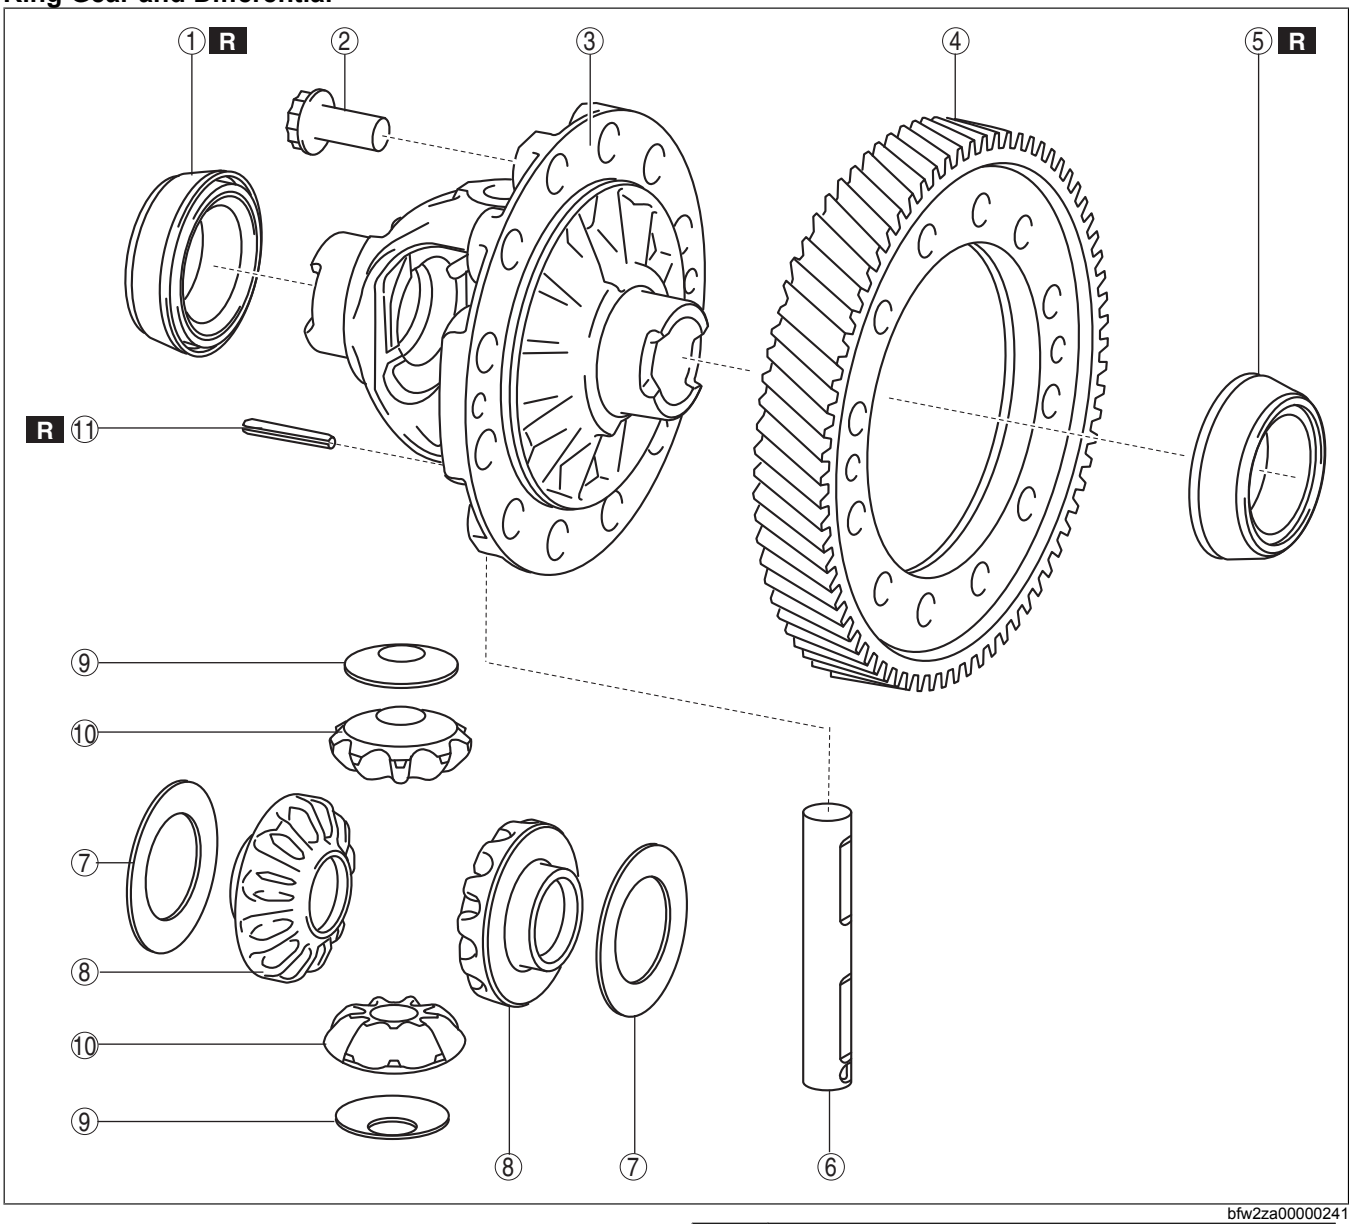


bfw2za00000241

1	Tapered roller bearing (See RING GEAR AND DIFFERENTIAL DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See RING GEAR AND DIFFERENTIAL ASSEMBLY [FW6A-EL/FW6AX-EL].) (See RING GEAR AND DIFFERENTIAL INSPECTION [FW6A-EL/FW6AX-EL].)
2	12 bolts (See RING GEAR AND DIFFERENTIAL DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See RING GEAR AND DIFFERENTIAL ASSEMBLY [FW6A-EL/FW6AX-EL].)

3	Differential gear case (See RING GEAR AND DIFFERENTIAL DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See RING GEAR AND DIFFERENTIAL ASSEMBLY [FW6A-EL/FW6AX-EL].) (See RING GEAR AND DIFFERENTIAL INSPECTION [FW6A-EL/FW6AX-EL].)
4	Ring gear (See RING GEAR AND DIFFERENTIAL DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See RING GEAR AND DIFFERENTIAL ASSEMBLY [FW6A-EL/FW6AX-EL].)

5	Tapered roller bearing (See RING GEAR AND DIFFERENTIAL DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See RING GEAR AND DIFFERENTIAL ASSEMBLY [FW6A-EL/FW6AX-EL].) (See RING GEAR AND DIFFERENTIAL INSPECTION [FW6A-EL/FW6AX-EL].)
6	Pinion shaft (See RING GEAR AND DIFFERENTIAL DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See RING GEAR AND DIFFERENTIAL ASSEMBLY [FW6A-EL/FW6AX-EL].)
7	Thrust washer (See RING GEAR AND DIFFERENTIAL DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See RING GEAR AND DIFFERENTIAL ASSEMBLY [FW6A-EL/FW6AX-EL].) (See DIFFERENTIAL BACKLASH MEASUREMENT/ADJUSTMENT [FW6A-EL/FW6AX-EL].)
8	Side gear (See RING GEAR AND DIFFERENTIAL DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See RING GEAR AND DIFFERENTIAL ASSEMBLY [FW6A-EL/FW6AX-EL].)
9	Thrust washer (See RING GEAR AND DIFFERENTIAL DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See RING GEAR AND DIFFERENTIAL ASSEMBLY [FW6A-EL/FW6AX-EL].)
10	Pinion gear (See RING GEAR AND DIFFERENTIAL DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See RING GEAR AND DIFFERENTIAL ASSEMBLY [FW6A-EL/FW6AX-EL].)
11	Roll pin (See RING GEAR AND DIFFERENTIAL DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See RING GEAR AND DIFFERENTIAL ASSEMBLY [FW6A-EL/FW6AX-EL].)


End Cover Component (SKYACTIV-G 1.5)

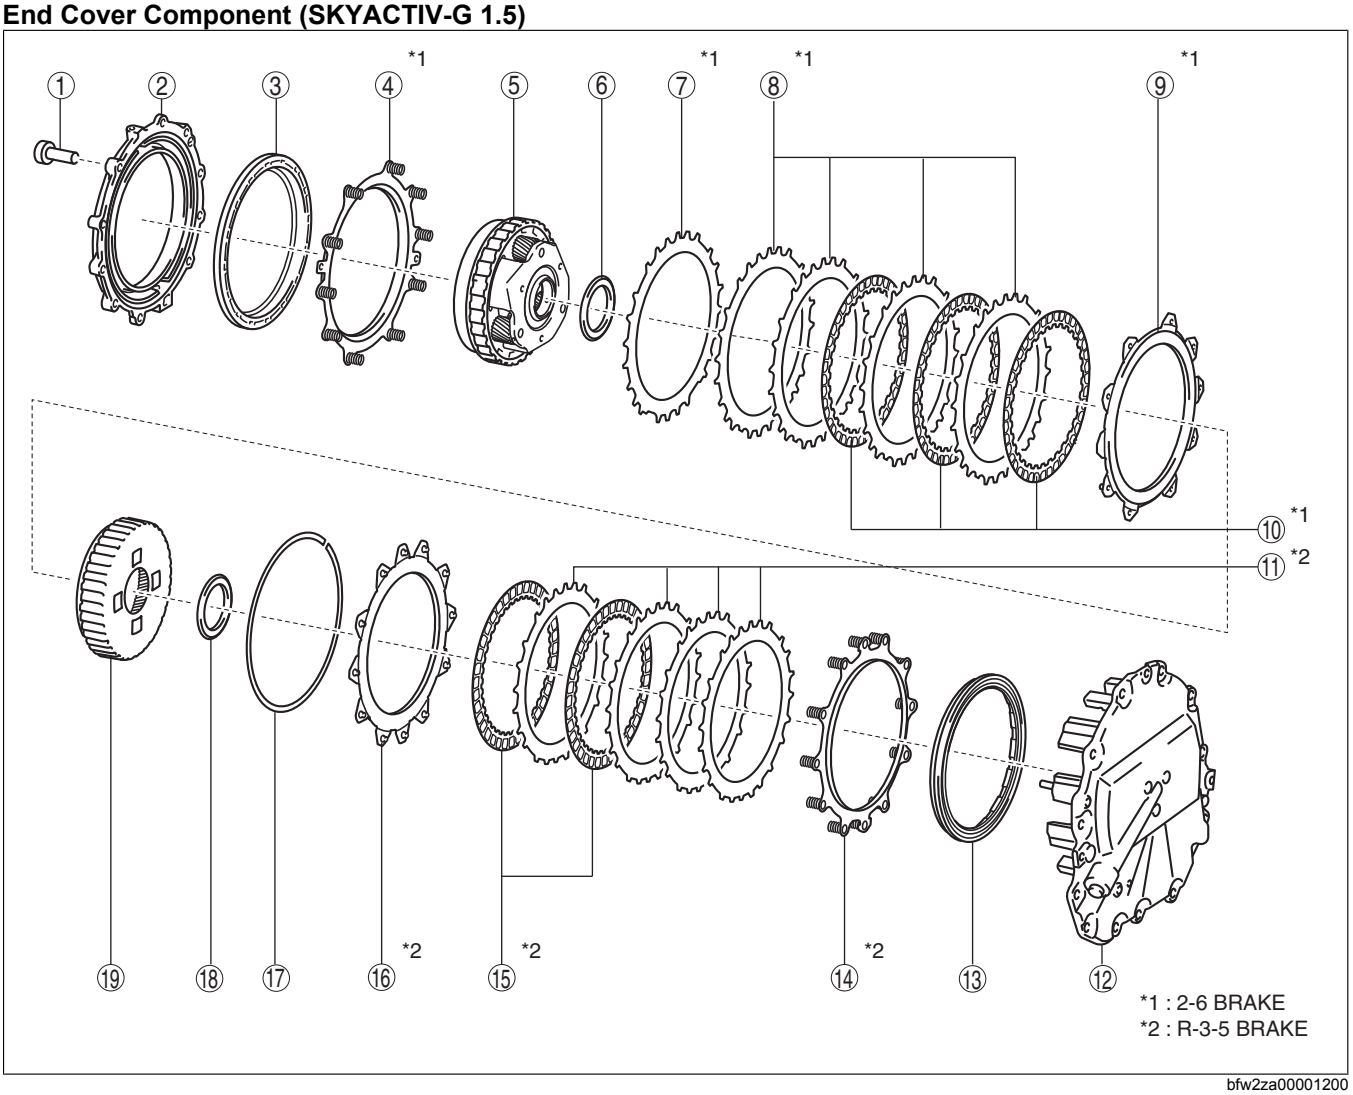

bfw2za00001200

1	8 bolts (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)
2	Brake housing (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)
3	2-6 brake piston (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)
4	Springs and retainer component (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)
5	Reduction planetary gear (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].) (See Reduction Planetary Gear.)
6	Thrust needle bearing (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].) (See THRUST NEEDLE BEARING INSPECTION.)
7	Retaining plate (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].) (See 2-6 BRAKE CLEARANCE MEASUREMENT/ ADJUSTMENT.)
8	Driven plate (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)
9	Retaining plate (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)
10	Drive plate (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].) (See 2-6 BRAKE INSPECTION.)
11	Driven plate (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)
12	End cover (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER INSPECTION.)
13	R-3-5 brake piston (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)
14	Springs and retainer component (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)
15	Drive plate (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].) (See R-3-5 BRAKE INSPECTION.)
16	Retaining plate (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)
17	Snap ring (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].) (See R-3-5 BRAKE CLEARANCE MEASUREMENT/ ADJUSTMENT.)
18	Thrust needle bearing (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].) (See THRUST NEEDLE BEARING INSPECTION.)
19	Reduction internal gear (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)

End Cover Component (SKYACTIV-G 2.0, SKYACTIV-G 2.5)

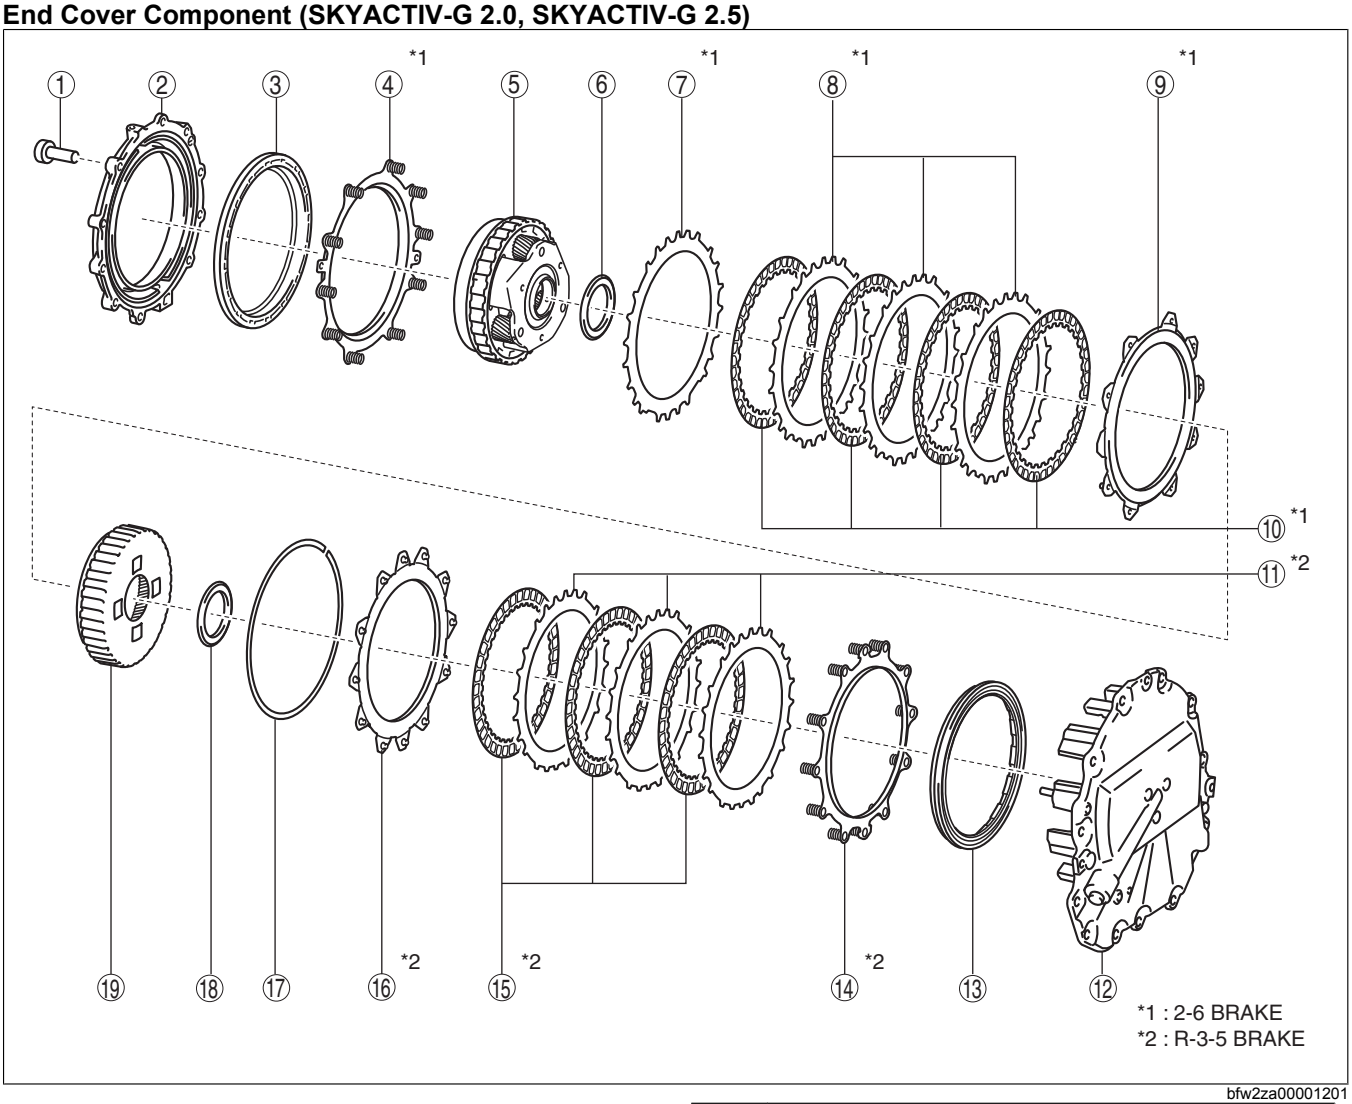


bfw2za00001201

1	8 bolts (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)
2	Brake housing (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)
3	2-6 brake piston (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)
4	Springs and retainer component (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)
5	Reduction planetary gear (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].) (See Reduction Planetary Gear.)
6	Thrust needle bearing (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].) (See THRUST NEEDLE BEARING INSPECTION.)
7	Retaining plate (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].) (See 2-6 BRAKE CLEARANCE MEASUREMENT/ ADJUSTMENT.)
8	Driven plate (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)
9	Retaining plate (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)

10	Drive plate (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].) (See 2-6 BRAKE INSPECTION.)
11	Driven plate (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)
12	End cover (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER INSPECTION.)
13	R-3-5 brake piston (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)
14	Springs and retainer component (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)
15	Drive plate (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].) (See R-3-5 BRAKE INSPECTION.)
16	Retaining plate (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)
17	Snap ring (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].) (See R-3-5 BRAKE CLEARANCE MEASUREMENT/ADJUSTMENT.)
18	Thrust needle bearing (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].) (See THRUST NEEDLE BEARING INSPECTION.)
19	Reduction internal gear (See END COVER COMPONENT DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See END COVER COMPONENT ASSEMBLY [FW6A-EL/FW6AX-EL].)

Reduction Planetary Gear

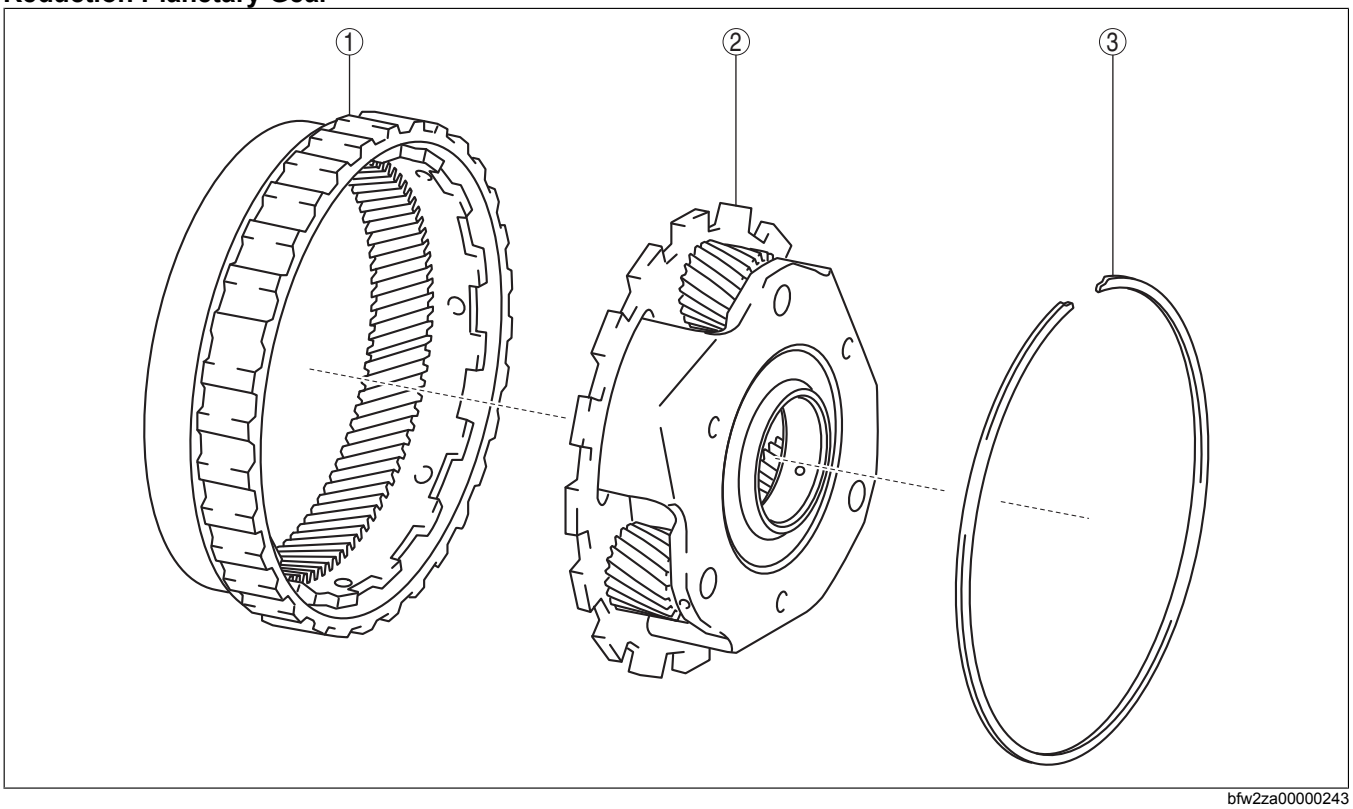


bfw2za00000243

1	Rear internal gear (See REDUCTION PLANETARY GEAR DISASSEMBLY.) (See REDUCTION PLANETARY GEAR ASSEMBLY.)

2	Reduction planetary carrier (See REDUCTION PLANETARY GEAR DISASSEMBLY.) (See REDUCTION PLANETARY GEAR ASSEMBLY.) (See REDUCTION PLANETARY GEAR INSPECTION.)

3	Snap ring (See REDUCTION PLANETARY GEAR DISASSEMBLY.) (See REDUCTION PLANETARY GEAR ASSEMBLY.)

Control Valve Body

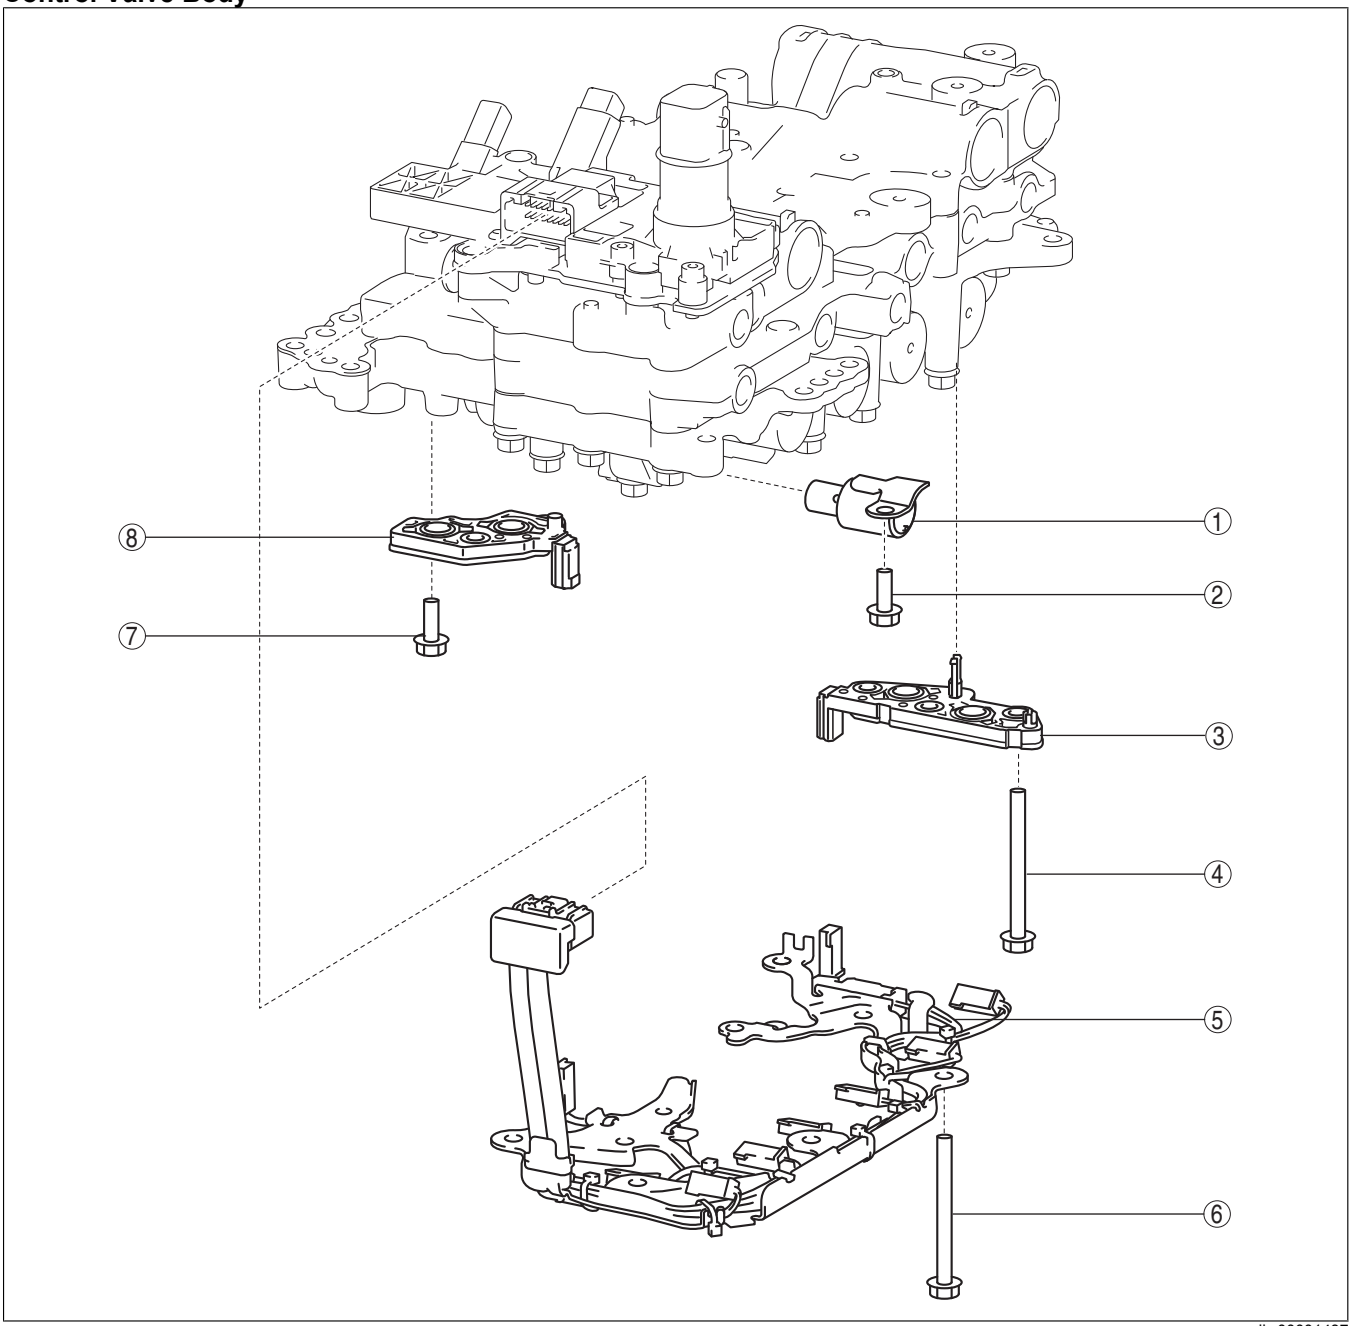

azzjjw00001437

1	ON/OFF solenoid (See CONTROL VALVE BODY DISASSEMBLY.) (See CONTROL VALVE BODY ASSEMBLY.)
2	Bolt (See CONTROL VALVE BODY DISASSEMBLY.) (See CONTROL VALVE BODY ASSEMBLY.)
3	Oil pressure switch A (See CONTROL VALVE BODY DISASSEMBLY.) (See CONTROL VALVE BODY ASSEMBLY.)

4	3 bolts (See CONTROL VALVE BODY DISASSEMBLY.) (See CONTROL VALVE BODY ASSEMBLY.)
5	Coupler component (See CONTROL VALVE BODY DISASSEMBLY.) (See CONTROL VALVE BODY ASSEMBLY.)
6	8 bolts (See CONTROL VALVE BODY DISASSEMBLY.) (See CONTROL VALVE BODY ASSEMBLY.)

7	3 bolts (See CONTROL VALVE BODY DISASSEMBLY.) (See CONTROL VALVE BODY ASSEMBLY.)

8	Oil pressure switch B (See CONTROL VALVE BODY DISASSEMBLY.) (See CONTROL VALVE BODY ASSEMBLY.)