## AUTOMATIC TRANSAXLE CLEANING


id051700660300

### Cleaning Before Disassembly

1. Clean the outside of the transaxle using steam or degreaser before disassembly.

**Caution**

- **If foreign matter, water, or degreaser penetrates the transaxle and connector, it could cause a malfunction. Before cleaning the outside of the transaxle, plug the position shown in the figure with the packing tape.**

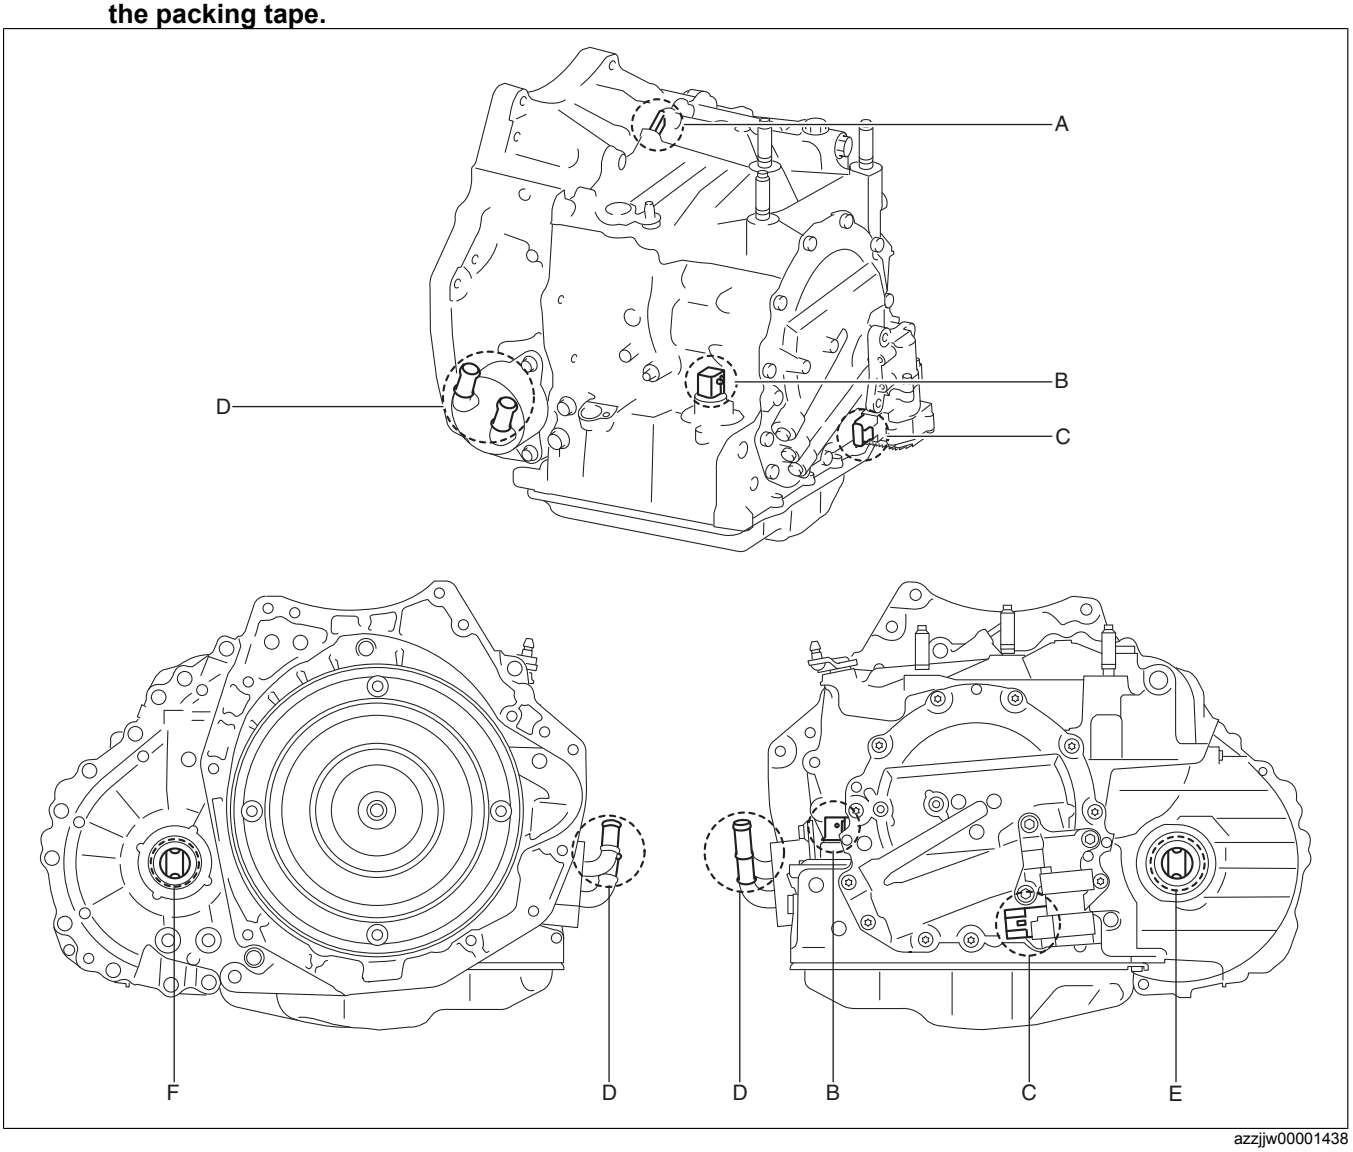


azzjjw00001438

**A: Breather pipe**
**B: Control valve body connector**
**C: Electric AT oil pump connector (only vehicles with i-stop)**
**D: Oil cooler**
**E: Oil seal**
**F: Oil seal**

2. Dry the outside of the transaxle with an air compressor.

**Warning**

- **Always wear protective eye wear when using the air compressor. Otherwise, ATF or dirt particles blown off by the air compressor could get into the eyes.**

**Cleaning After Disassembly**

**Caution**
- **Do not clean the following parts, otherwise foreign matter or degreaser may penetrate the oil passage or internal part:**
  - **— Control valve body (including the following parts:)**
    - **ON/OFF solenoid**
    - **Oil pressure switch A**
    - **Oil pressure switch B**
    - **Coupler component**
  - **— Electric AT oil pump (only vehicles with i-stop)**

1. Clean the torque converter. (See TORQUE CONVERTER CLEANING.)

**Caution**
- **To prevent damage to the parts, do not clean the inside of the torque converter using degreaser.**

2. Clean the oil cooler. (See OIL COOLER CLEANING.)

**Caution**
- **To prevent damage to the parts, do not clean the inside of the oil cooler using degreaser.**

3. Flush dirt on the surface of the drive plate with ATF (ATF FZ).

**Caution**
- **To prevent damage to the parts, do not clean the drive plate using degreaser.**

4. Clean the disassembled parts using degreaser and dry them using an air compressor. In addition, clean the oil passage using the air compressor.

**Warning**
- **Always wear protective eye wear when using the air compressor. Otherwise, ATF or dirt particles blown off by the air compressor could get into the eyes.**


**Caution**
- **To prevent damage to parts, do not clean aluminum and rubber parts using alkaline agent.**
- **To prevent damage to parts, do not clean rubber parts using white gasoline and kerosene.**

**Cleaning After Assembly**

1. Remove the ATF or foreign matter adhering to the outside of the transaxle using degreaser or the air compressor.

**Warning**
- **Always wear protective eye wear when using the air compressor. Otherwise, ATF or dirt particles blown off by the air compressor could get into the eyes.**

**Caution**
- **If foreign matter, water, or degreaser penetrates the transaxle and connector, it could cause a malfunction. Before cleaning the outside of the transaxle, plug the position shown in the figure with the packing tape.**

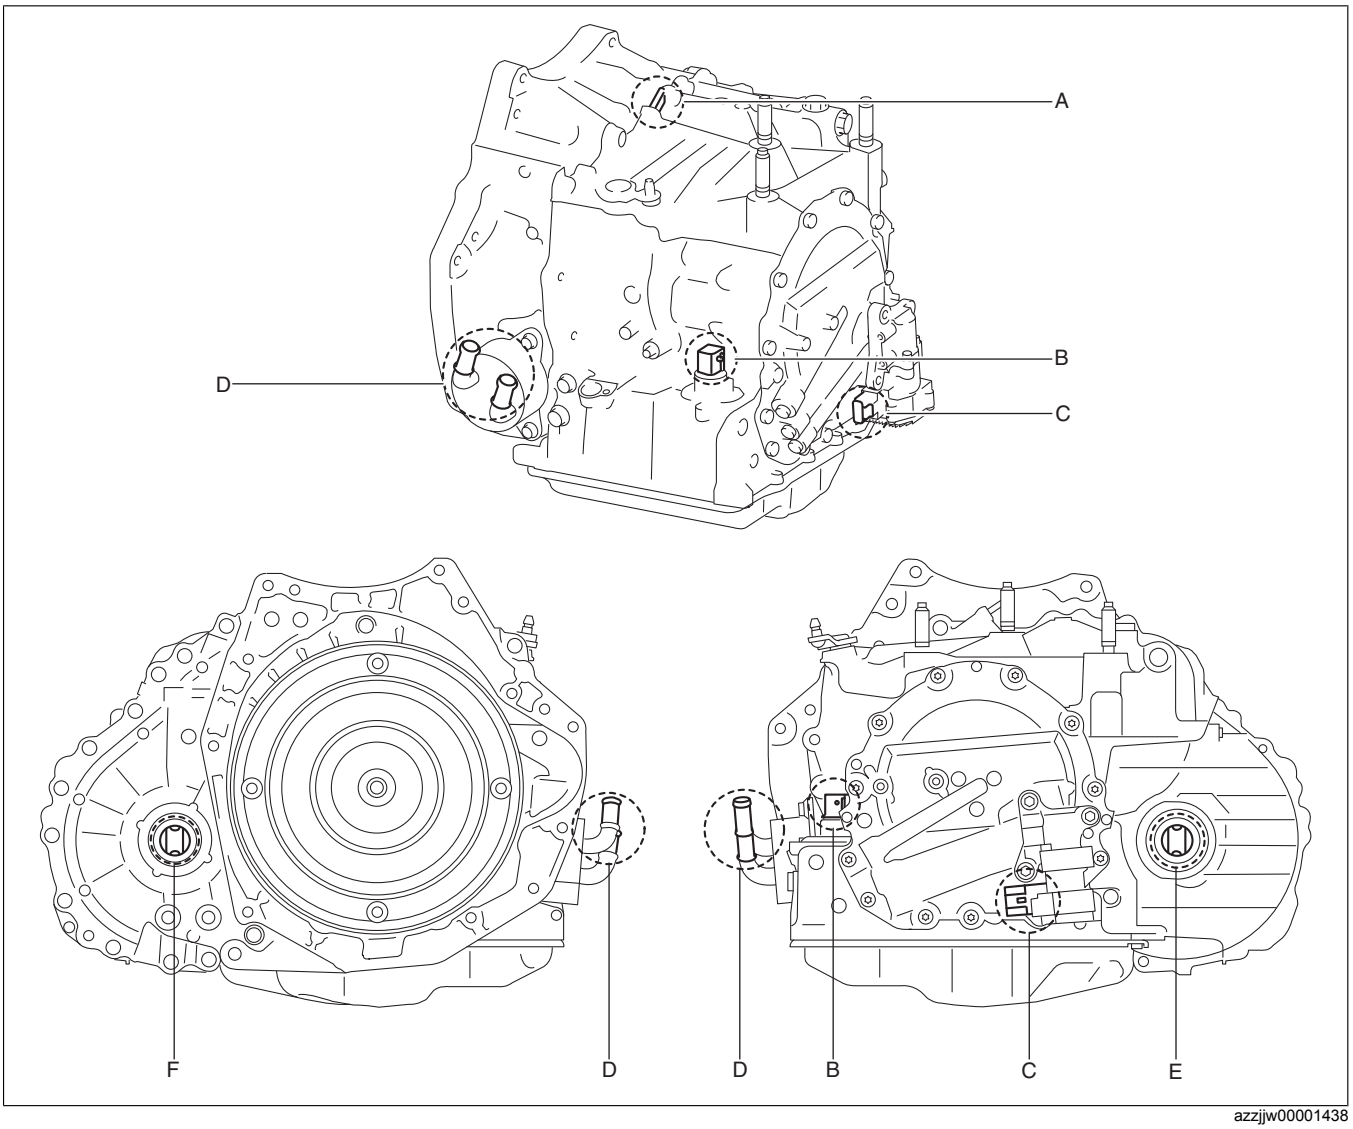



azzjjw00001438

**A: Breather pipe**
**B: Control valve body connector**
**C: Electric AT oil pump connector (only vehicles with i-stop)**
**D: Oil cooler**
**E: Oil seal**
**F: Oil seal**

2. Verify that there is no ATF or foreign matter on the connector shown in the figure.

A : Control valve body connector
B : Electric AT oil pump connector (only vehicles with i-stop)

- If there is ATF or foreign matter on the connector shown in the figure, remove it.

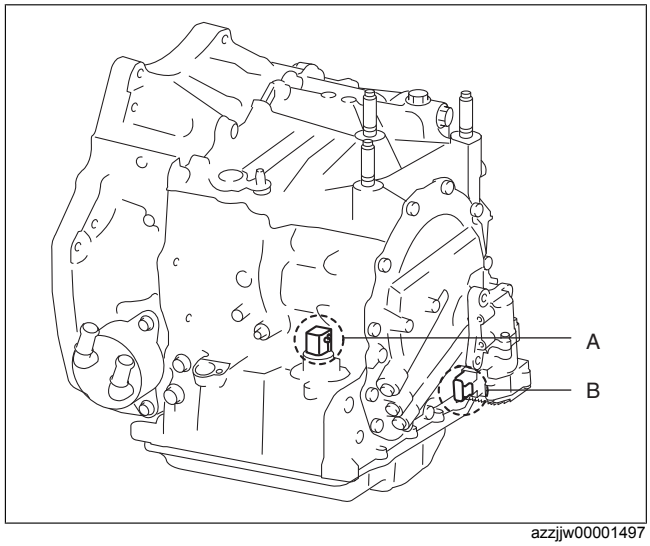


azzjjw00001497