
## SECONDARY GEAR AND OUTPUT GEAR DISASSEMBLY

id051700661000

### Structural View

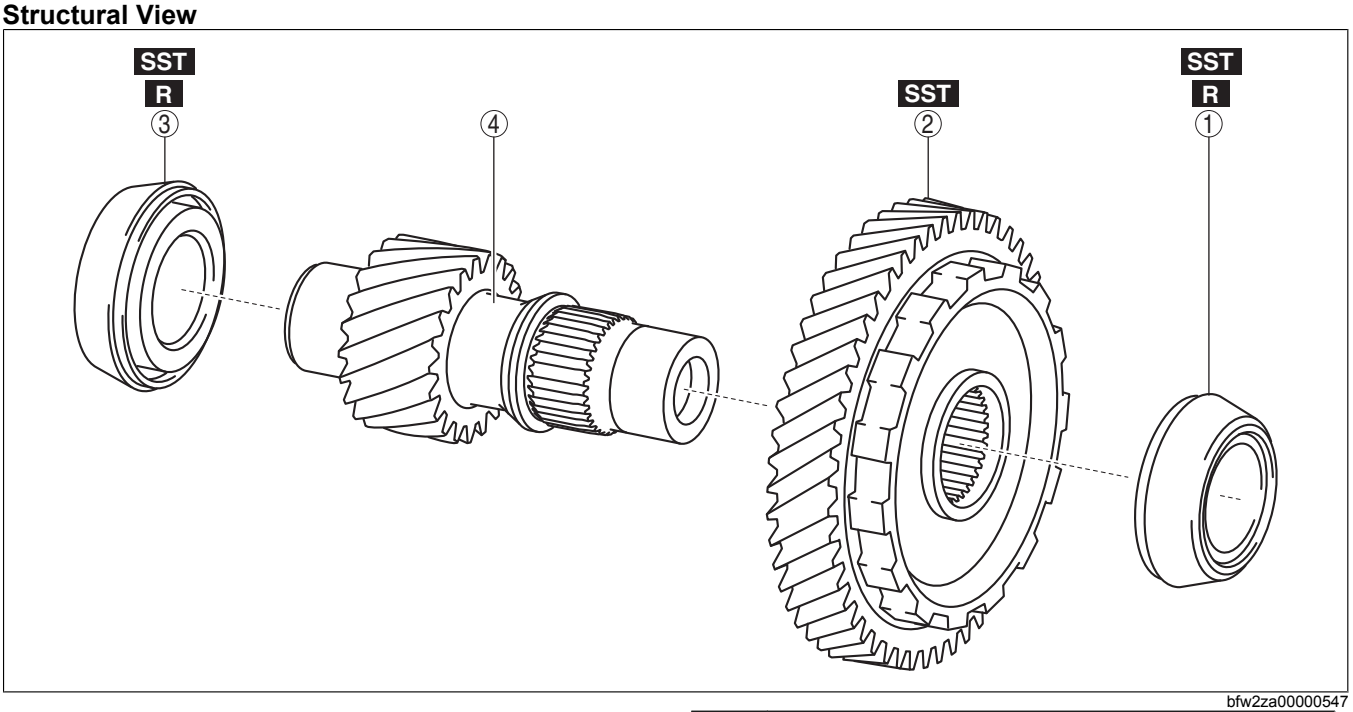


bfw2za00000547

| | |
|---|---|
| 1 | Taper roller bearing (transaxle case side) |
| 2 | Secondary gear |
| 3 | Taper roller bearing (converter housing side) |
| 4 | Output gear |

### Disassembly Procedure

1. Perform the following inspection:


**Caution**

- **If there is no malfunction based on the results of the inspection, it not necessary to disassemble the secondary gear and output gear.**

- Visual inspection of parts (See VISUAL INSPECTION OF PARTS [EW6A-EL/EW6AX-EL])(See VISUAL INSPECTION OF PARTS [FW6A-EL/FW6AX-EL])
- Secondary gear and output gear inspection (See SECONDARY GEAR AND OUTPUT GEAR INSPECTION)
- If there is a malfunction, disassemble the secondary gear and output gear and replace the malfunctioning part with a new part.


2. Using the SST and press, remove the secondary gear and the taper roller bearing (transaxle case side).

A : Press

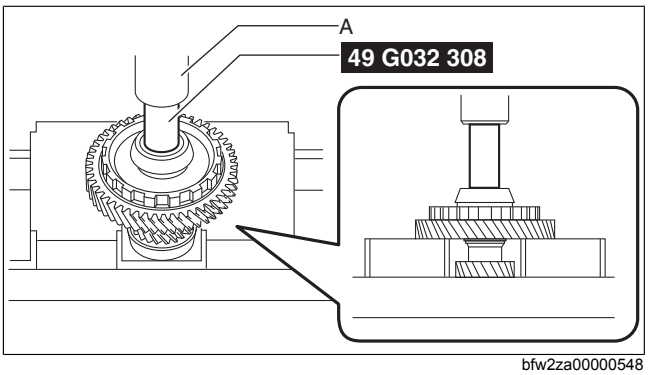


bfw2za00000548


A : Taper roller bearing (transaxle case side)
B : Secondary gear

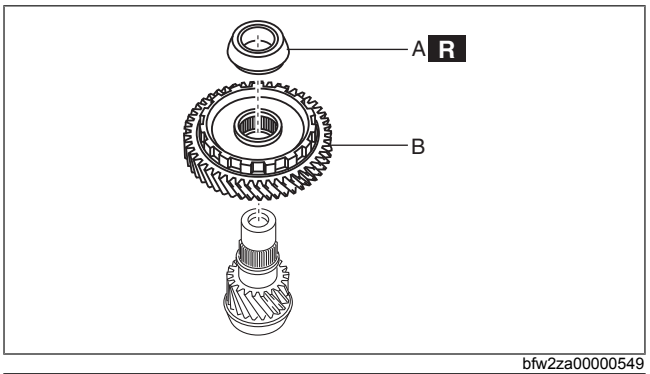

bfw2za00000549


3. Using the SSTs and press, remove the taper roller bearing (converter housing side).

A : Press

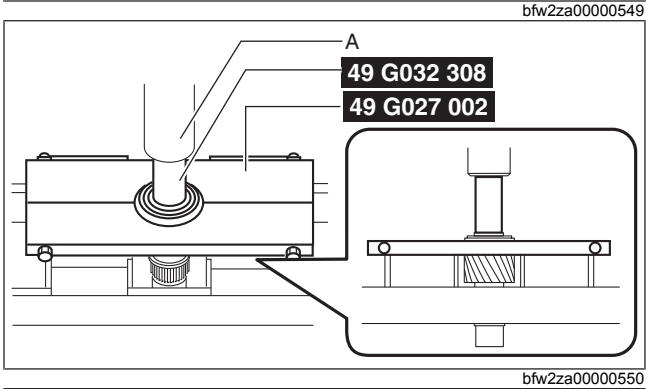

bfw2za00000550

4. Clean the disassembled parts. (See AUTOMATIC TRANSAXLE CLEANING.)

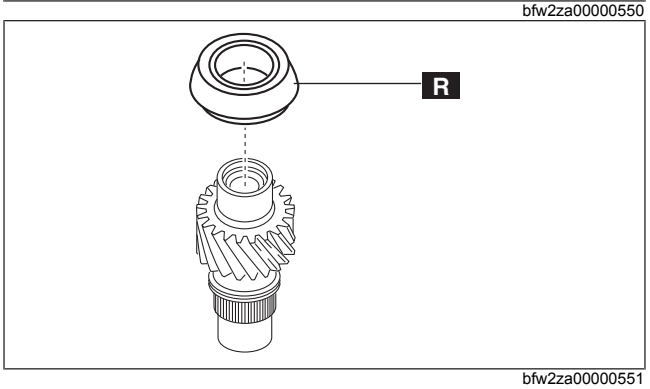

bfw2za00000551