
RING GEAR AND DIFFERENTIAL DISASSEMBLY [EW6A-EL/EW6AX-EL]

id051700661114

Structural View

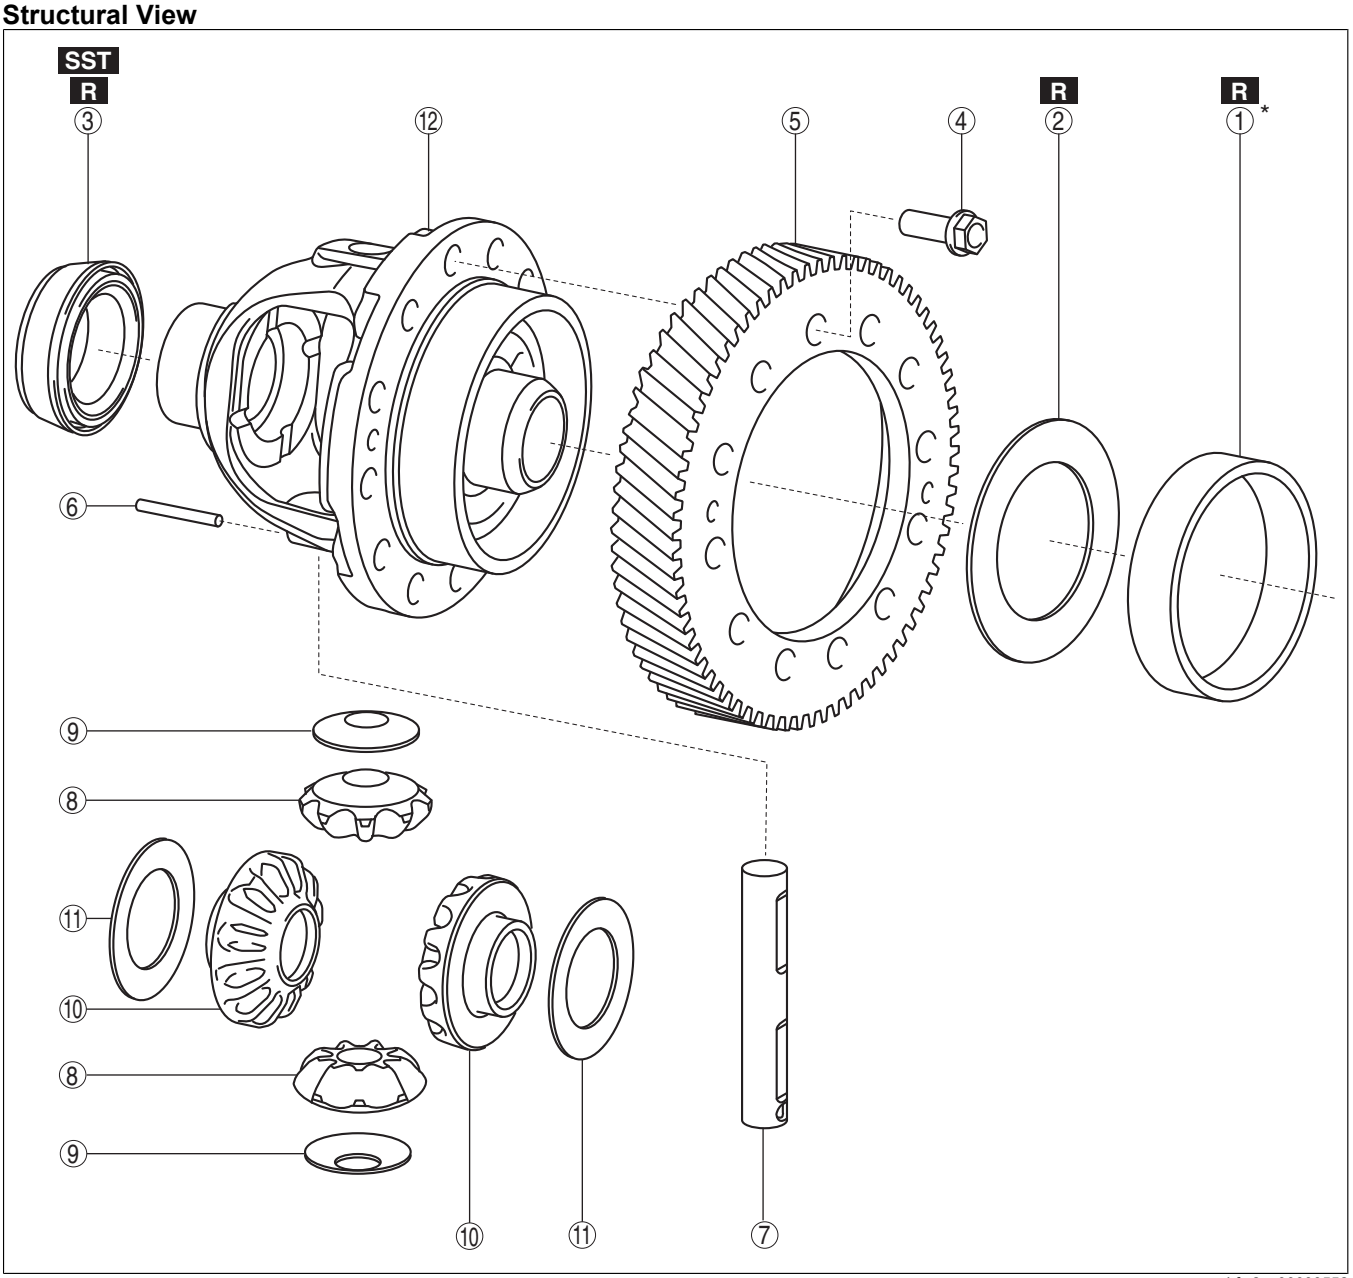

bfw2za00000552

1	Bearing race*
2	Shim
3	Taper roller bearing
4	12 bolts
5	Ring gear
6	Pin
7	Pinion shaft

8	Pinion gear
9	Thrust washer
10	Side gear
11	Thrust washer
12	Differential gear case

* : When replacing the tapered roller bearing on the transaxle side, replace the bearing race with a new one.

Disassembly Procedure

1. Perform the following inspection:


Caution


- **If there is no malfunction based on the results of the inspection, it not necessary to disassemble the ring gear and differential.**

- Visual inspection of parts (See VISUAL INSPECTION OF PARTS [EW6A-EL/EW6AX-EL])
- Ring gear and differential inspection (See RING GEAR AND DIFFERENTIAL INSPECTION [EW6A-EL/EW6AX-EL])

- If there is a malfunction, disassemble the ring gear and differential and replace the malfunctioning part with a new part.

2. Remove the bearing race and shim using a pin punch.

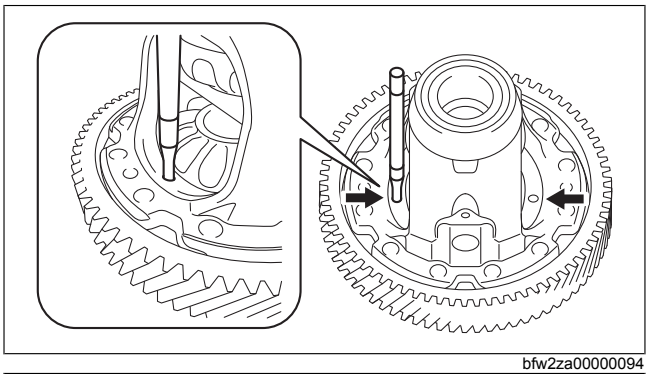
bfw2za00000094

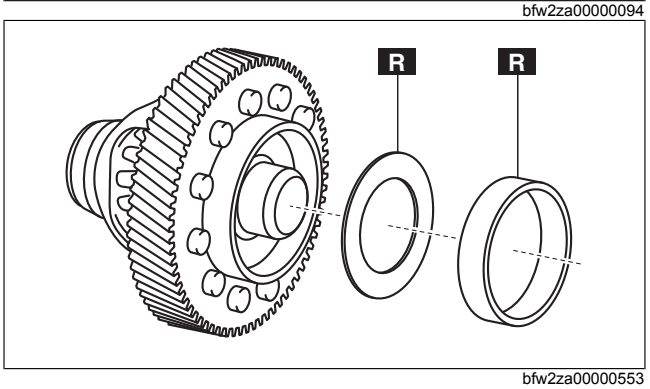


bfw2za00000553

3. Remove the taper roller bearing using the following procedure:
   (1) Secure the ring gear and differential in a vise.

Caution
- **Insert a protective plate between the vise and the part so as not to damage the part.**


A : Vise

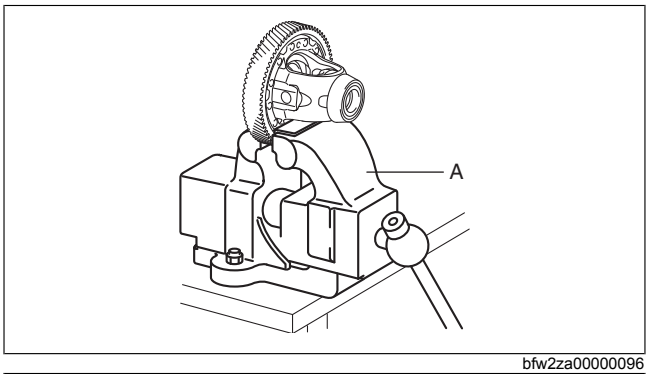


bfw2za00000096

   (2) Remove the taper roller bearing using the SST.

A : Vise

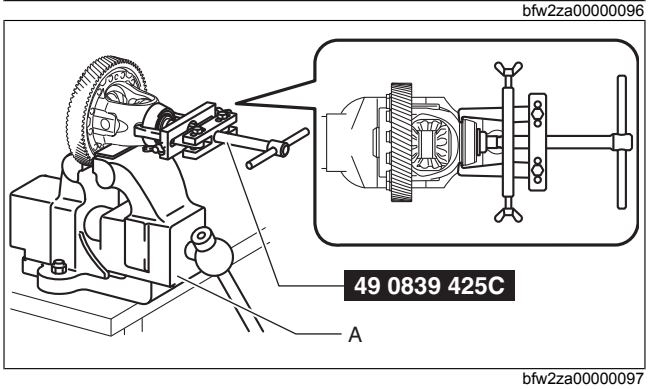


bfw2za00000097

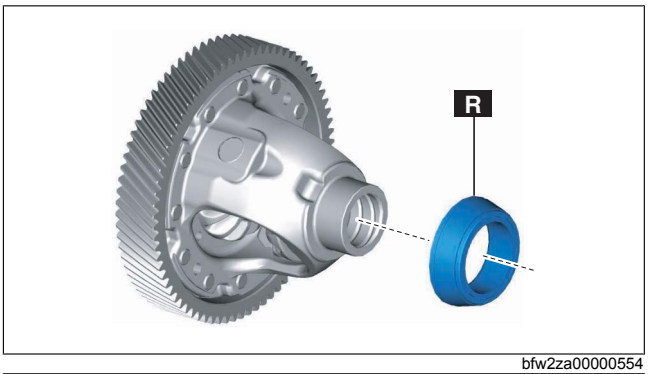

bfw2za00000554


(3) Remove the ring gear and differential from the vise.

A : Vise

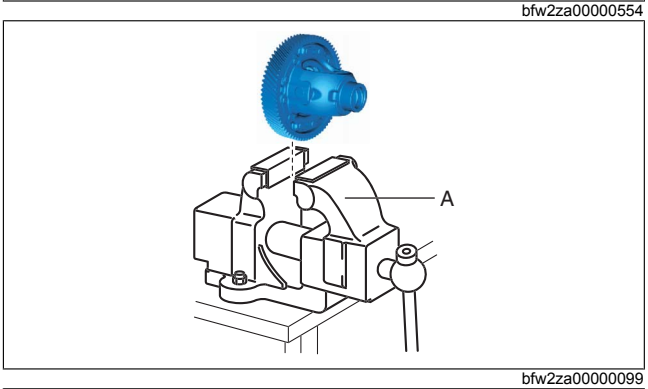

bfw2za00000099

4. Remove the ring gear using the following procedure:

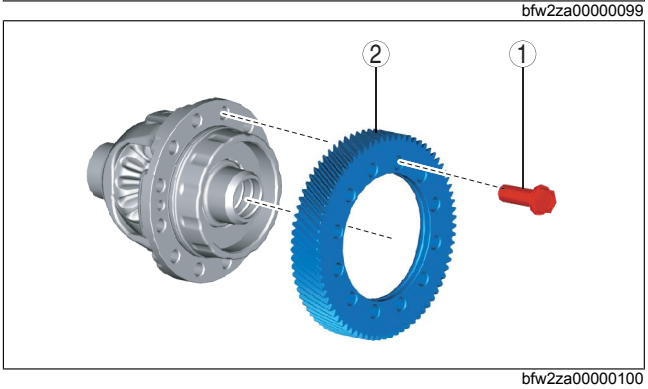


bfw2za00000100

(1) Secure the ring gear and differential in a vise.

Caution

- **Insert a protective plate between the vise and the part so as not to damage the part.**

A : Vise

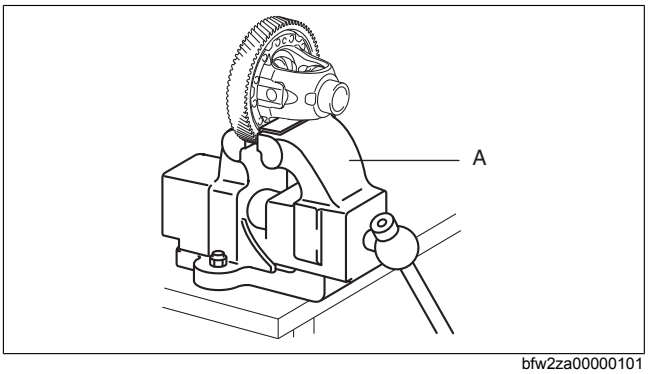

bfw2za00000101


(2) Loosen the bolts shown in the figure.

Caution

- **Only loosen the bolts, do not remove them, otherwise the ring gear and differential will fall off.**

Note


- Change the securing position of the ring gear and differential with the vise and loosen all of the bolts shown in the figure.

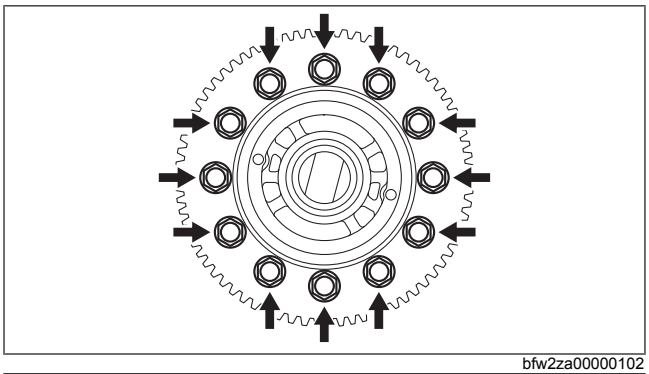

bfw2za00000102


(3) Remove the ring gear and differential from the vise.

A : Vise

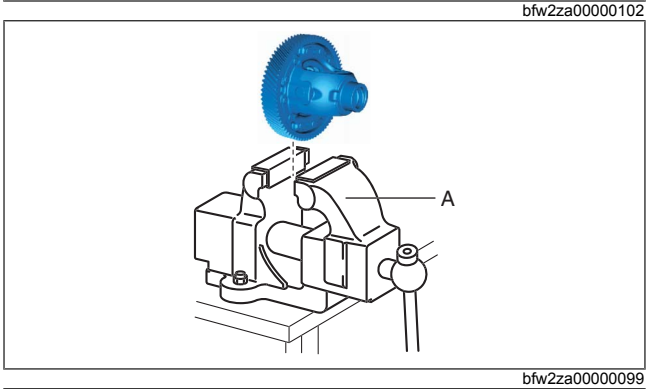


bfw2za00000099

(4) Remove the bolts shown in the figure.

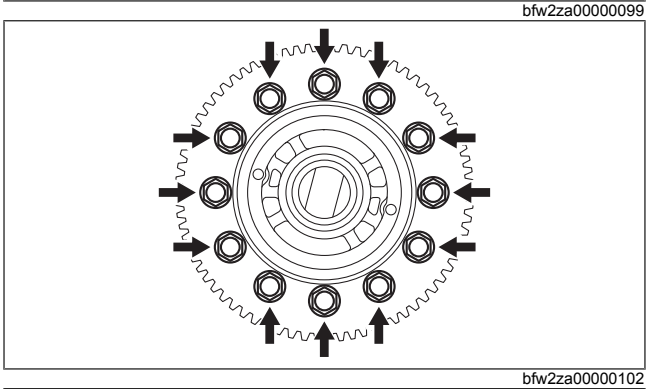


bfw2za00000102

(5) Lightly tap the ring gear with a plastic hammer and remove the ring gear.

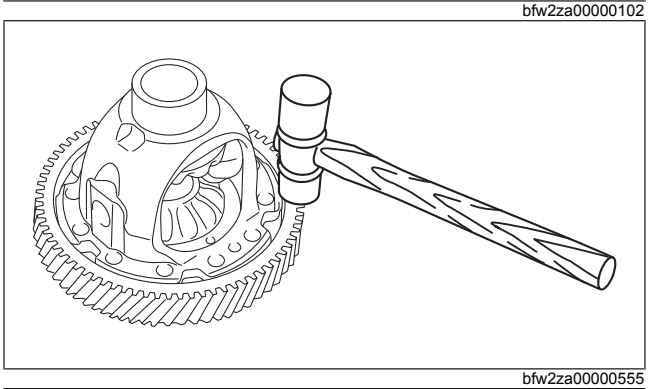

bfw2za00000555

1	12 bolts
2	Ring gear

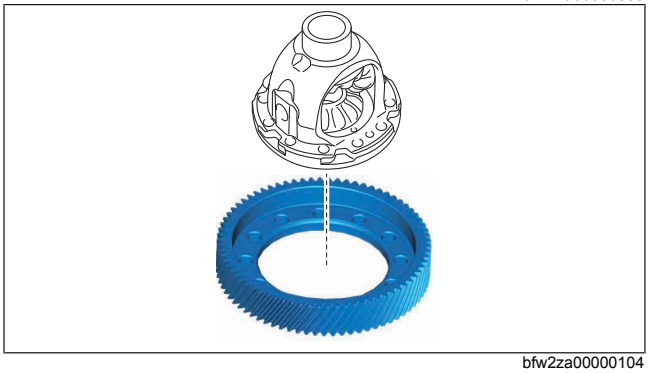


bfw2za00000104

5. Remove the pin using the following procedure:

(1) Remove the crimped portion of the pin using a drill.

Warning
- **Since metal chips could get into the eyes, wear protective eye wear whenever using a drill.**


Caution
- **To prevent damage to the pin, do not excessively gouge the differential gear case when removing the crimps.**

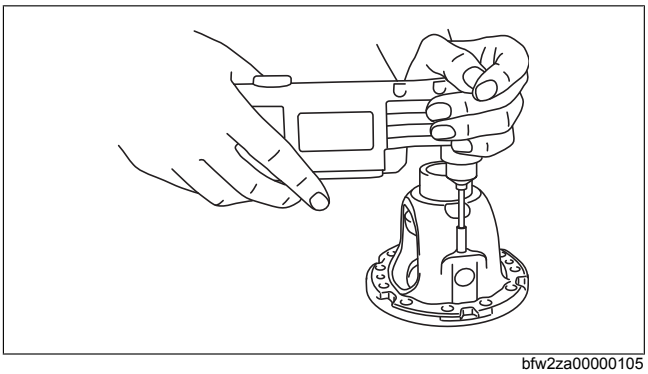
bfw2za00000105


(2) Insert the screw into the pin as shown in the figure.

Note
- size: M3×0.5, length: 10 mm {0.394 in} or more


(3) Pull the screw installed in Step (2) and remove the pin.

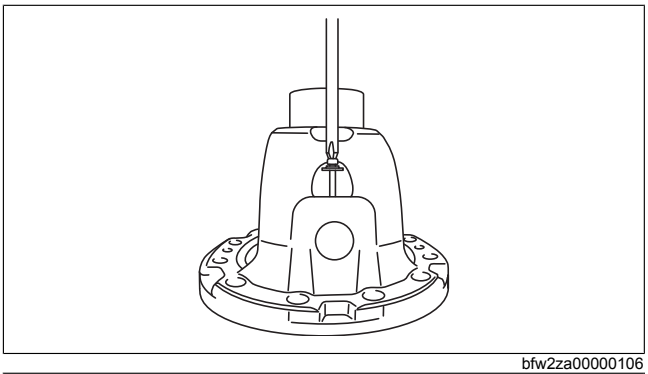
bfw2za00000106


6. Remove the pinion shaft.

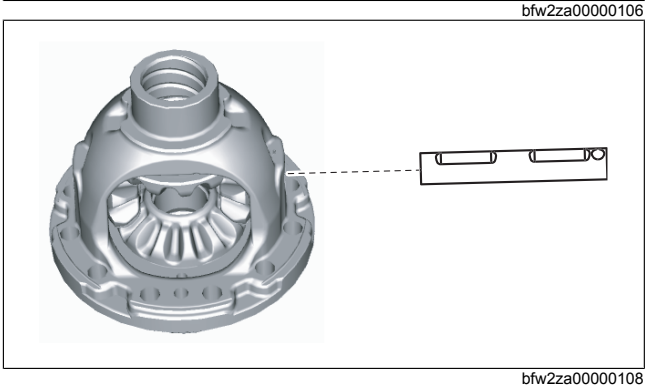
bfw2za00000108


7. Remove the pinion gears using the following procedure:
   (1) Rotate the pinion gears as shown in the figure.

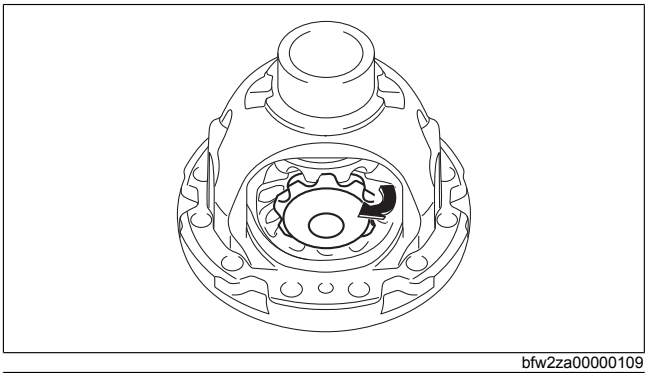
bfw2za00000109

   (2) Remove the pinion gears.

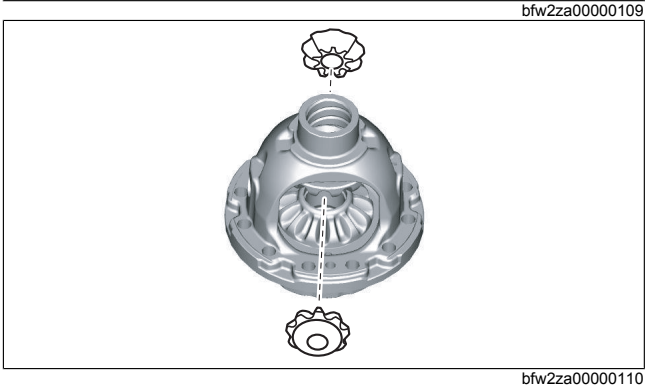

bfw2za00000110

8. Remove the thrust washers from the pinion gears.

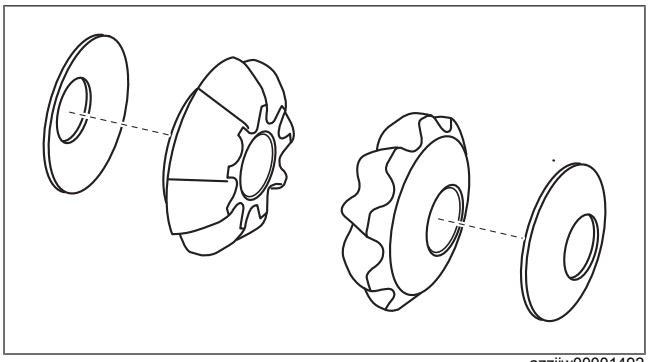


azzjjw00001492

9. Remove the side gears.

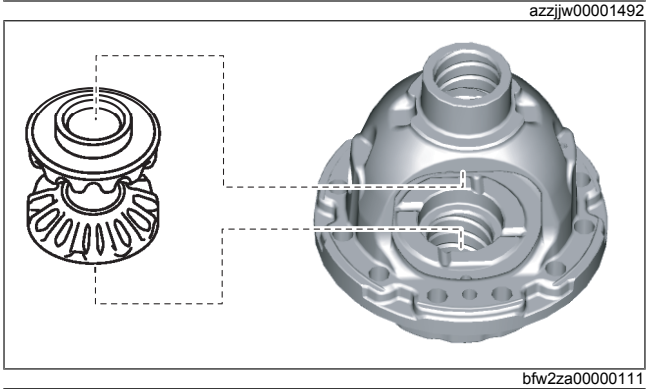

bfw2za00000111

10. Remove the thrust washers from the side gears.
11. Clean the disassembled parts. (See AUTOMATIC TRANSAXLE CLEANING.)

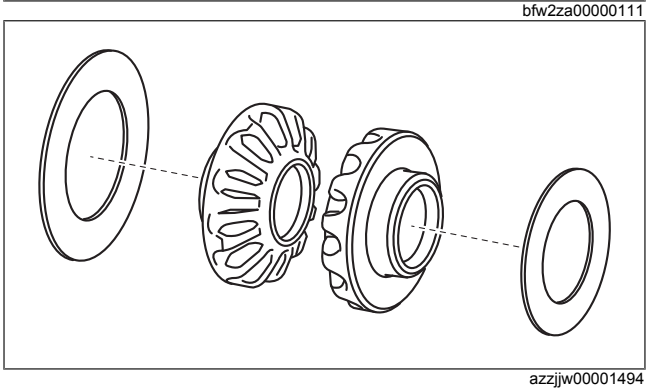

azzjjw00001494