
REDUCTION PLANETARY GEAR DISASSEMBLY

id051700661300

Structural View

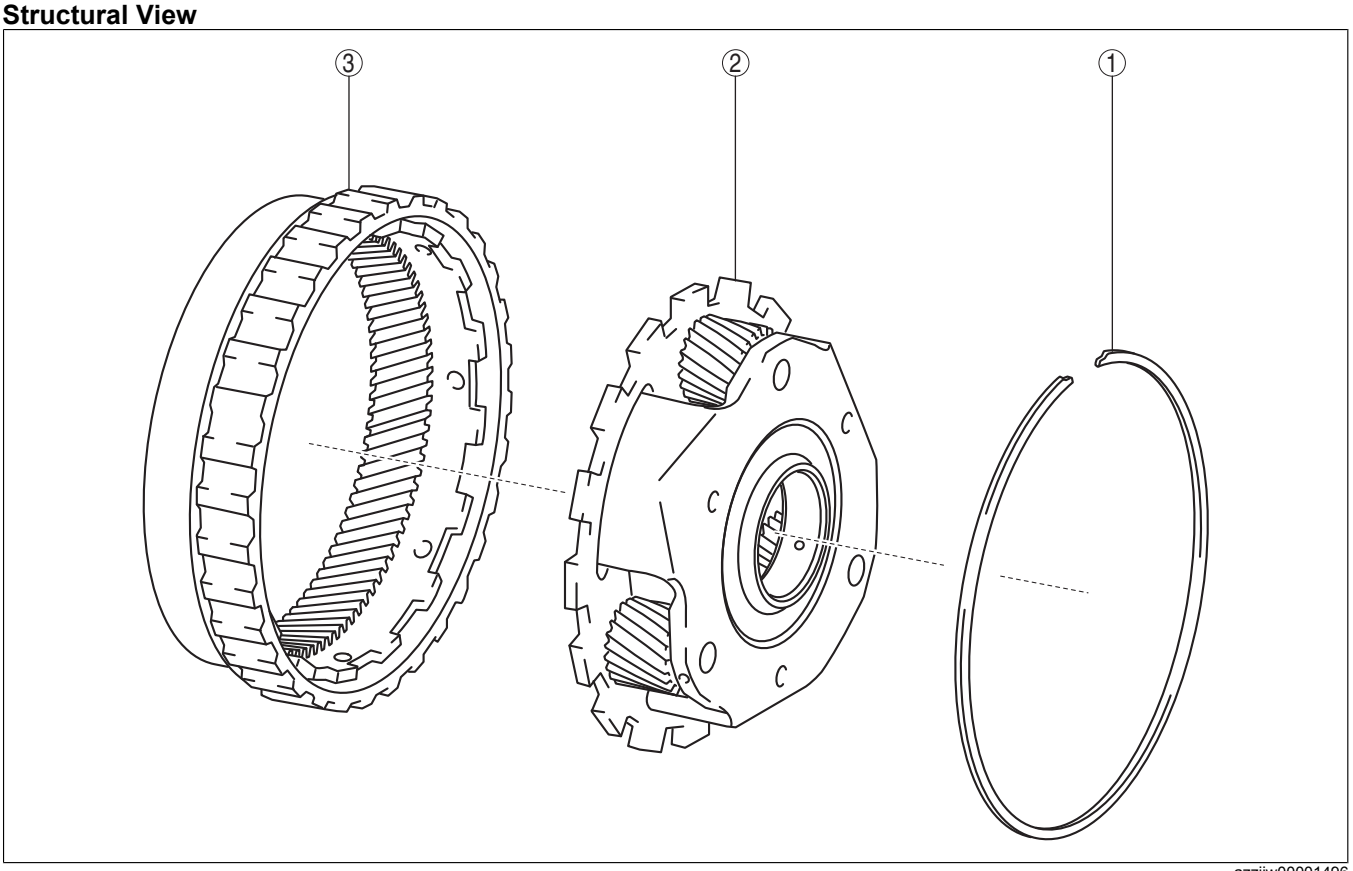

azzjjw00001496

1	Snap ring
2	Reduction planetary carrier
3	Rear internal gear


Disassembly Procedure

1. Perform the following inspection:

   Caution
   - **If there is no malfunction based on the results of the inspection, it is not necessary to disassemble the reduction planetary gear.**


   - Visual inspection of parts (See VISUAL INSPECTION OF PARTS [EW6A-EL/EW6AX-EL])(See VISUAL INSPECTION OF PARTS [FW6A-EL/FW6AX-EL])
   - Reduction planetary gear inspection (See REDUCTION PLANETARY GEAR INSPECTION)
   - If there is a malfunction, disassemble the reduction planetary gear and replace the malfunctioning part with a new part.

2. Remove the snap ring.

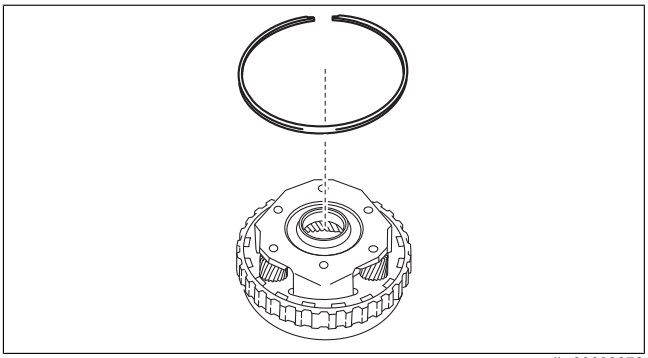

azzjjw00000872

3. Remove the reduction planetary carrier.
4. Clean the disassembled parts. (See AUTOMATIC TRANSAXLE CLEANING.)

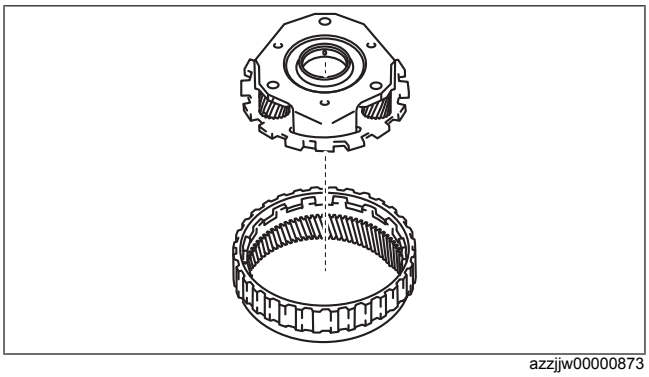

azzjjw00000873