## VISUAL INSPECTION OF PARTS [FW6A-EL/FW6AX-EL]


id0517006617z3

1. Visually inspect the parts according to the following table and replace a malfunctioning part with a new one.


**Note**
- Check the color depending on the condition to specify the malfunctioning part.

| Part name (mechanism name) | Inspection item |
|---|---|
| Gear | Missing teeth or tooth loss |
| | Peeling on tooth surface |
| | Other damage (cracks, wear, impact, deformation, burning or seizure) |
| Tapered roller bearing | Peeling on sliding surface |
| | Cage deformation |
| | Discoloration due to burning (temper color) |
| | Other damage (cracks, wear, impact, deformation, burning or seizure) |
| Thrust needle bearing | Peeling on sliding surface |
| | Discoloration due to burning (temper color) |
| | Other damage (cracks, wear, impact, deformation, burning or seizure) |
| Radial needle bearing | Peeling on sliding surface |
| | Cage deformation |
| | Discoloration due to burning (temper color) |
| | Other damage (cracks, wear, impact, deformation, burning or seizure) |
| Clutch (brake) drive plate | Facing peeling |
| | Discoloration due to burning (temper color) |
| | Other damage (cracks, wear, impact, deformation, burning or seizure) |
| Clutch (brake) piston and seal plate | Lip (rubber) tear or wear |
| | Other damage (cracks, impact, deformation) |
| Clutch (brake) springs and retainer component | Spring removal |
| | Spring deformation (significant attitude) |
| | Retainer deformation |
| | Other damage (cracks, wear, impact) |
| Parts other than the above | External appearance damage (cracks, wear, impact, deformation, burning or seizure) |

2. Verify that there is no bushing adhesion trace or significant sliding trace on the following bushing sliding part.
   - Torque converter
     - — If there is a malfunction, replace the torque converter with a new one.
   - Turbine shaft
     - — If there is a malfunction, replace the turbine shaft with a new one.

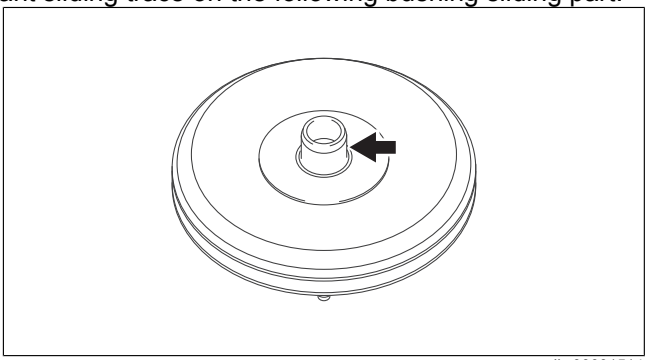


azzjjw00001514

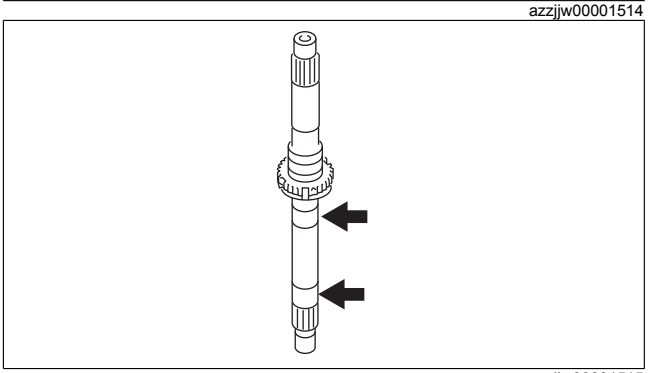


azzjjw00001515

- High clutch hub
  — If there is a malfunction, replace the high clutch hub with a new one.
- End cover
  — If there is a malfunction, replace the end cover with a new one.

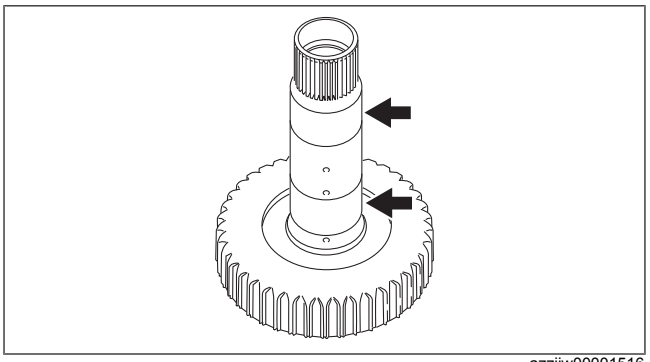


azzjjw00001516

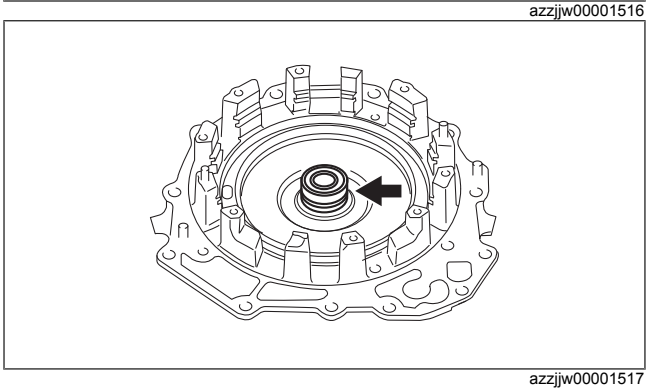


azzjjw00001517

3. Verify that there is no significant sliding trace on the following journal part.
   - Ring gear and differential

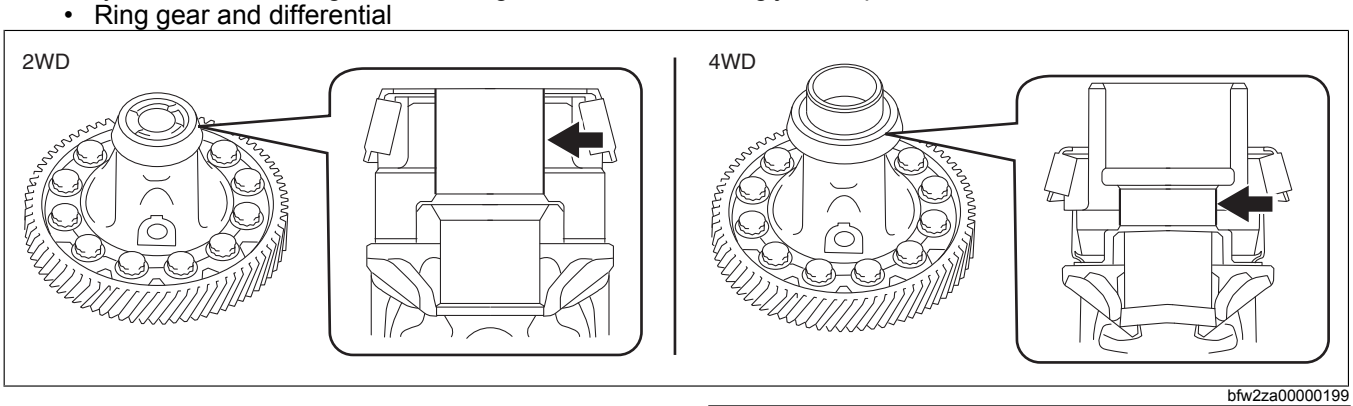


bfw2za00000199

   — If there is a malfunction, disassemble the ring gear and differential and replace the differential gear case with a new one. (See RING GEAR AND DIFFERENTIAL DISASSEMBLY [FW6A-EL/FW6AX-EL].) (See RING GEAR AND DIFFERENTIAL ASSEMBLY [FW6A-EL/FW6AX-EL].)

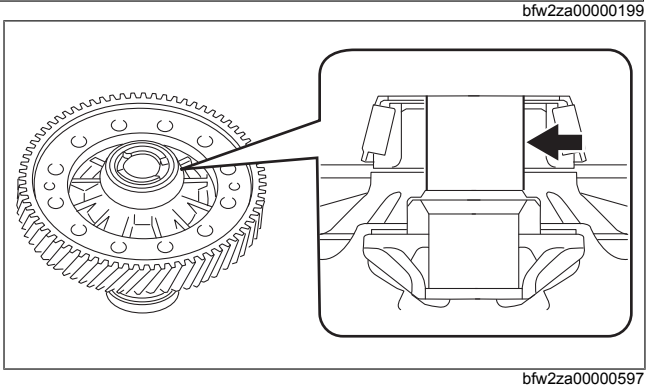


bfw2za00000597


- Drive shaft
  — If there is a malfunction, disassemble the drive shaft and replace the outer ring with a new one.

**Note**
- For the drive shaft disassembly/assembly procedure, verify the Workshop Manual.

- Joint shaft
  — If there is a malfunction, replace the joint shaft with a new one.

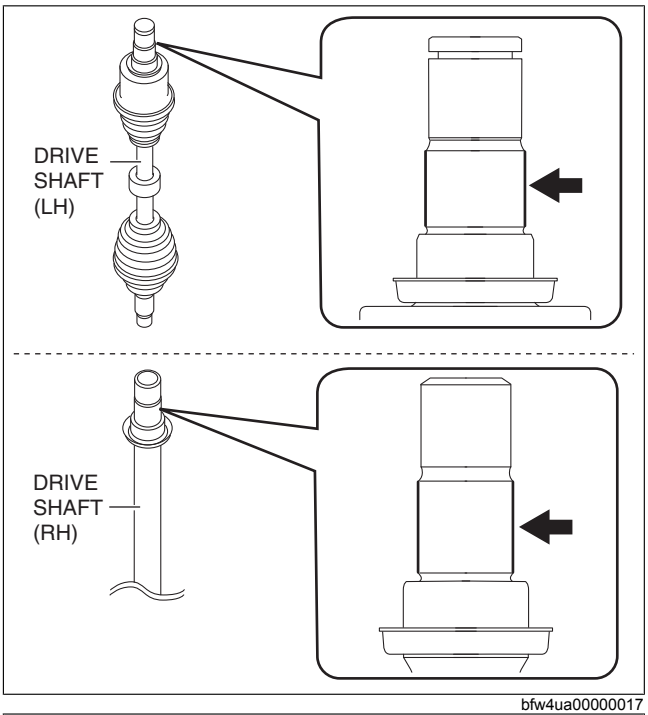

bfw4ua00000017

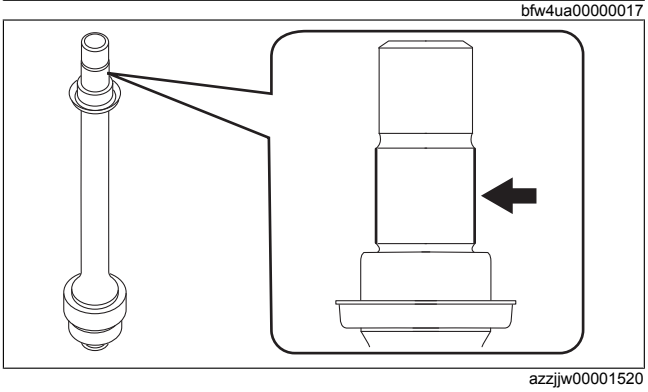
azzjjw00001520