
RING GEAR AND DIFFERENTIAL INSPECTION [EW6A-EL/EW6AX-EL]

id051700662414

Taper Roller Bearing Inspection


1. Place the ring gear and differential with the ring gear side pointing upward on a workbench.

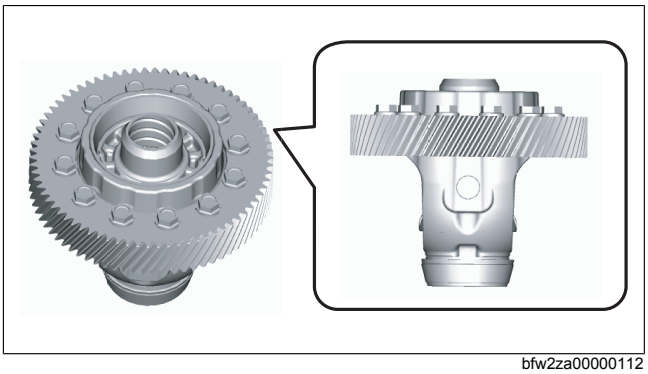


bfw2za00000112

2. Assemble the taper roller bearing to the ring gear and differential.

Note
- Taper roller bearing size: Inner diameter approx. 65 mm {2.6 in}

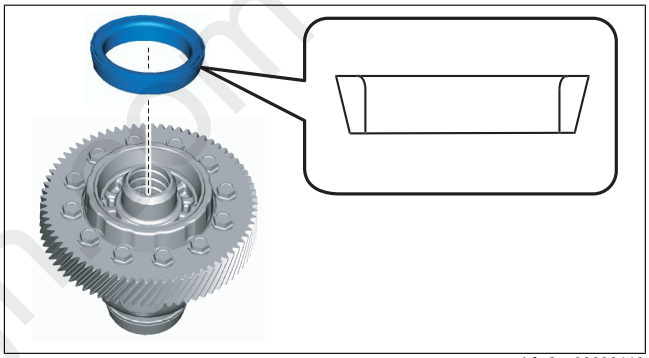


bfw2za00000113

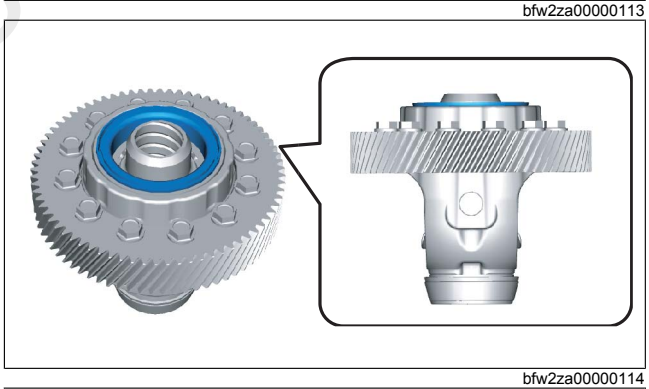

bfw2za00000114


3. With a load applied by hand to the taper roller bearing, rotate the taper roller bearing and verify that there is no malfunction in the taper roller bearing (rotation sticking).
   - If there is a malfunction, disassemble the ring gear and differential and replace the taper roller bearing with a new one.
     (See RING GEAR AND DIFFERENTIAL DISASSEMBLY [EW6A-EL/EW6AX-EL].)
     (See RING GEAR AND DIFFERENTIAL ASSEMBLY [EW6A-EL/EW6AX-EL].)

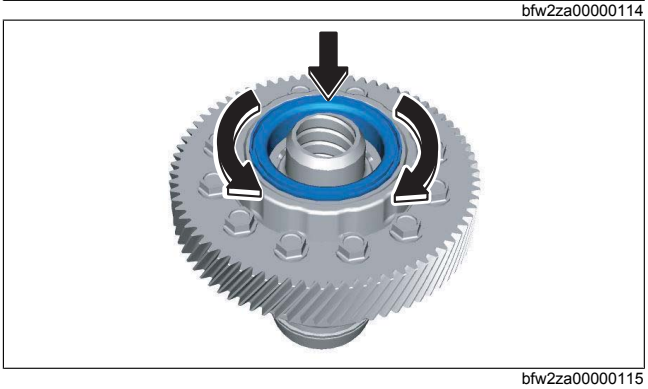

bfw2za00000115


cardiagn.com

4. Remove the bearing race.

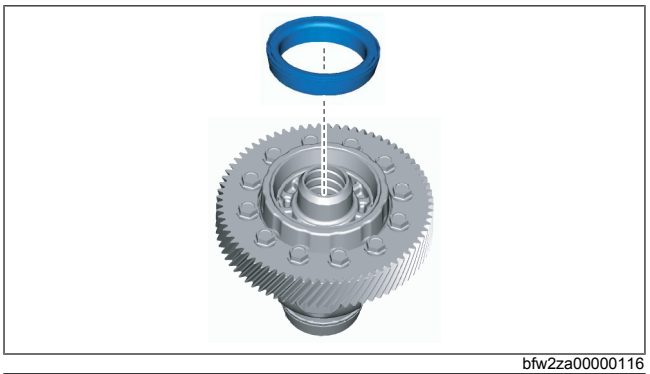

bfw2za00000116


5. Place the ring gear and differential with the ring gear side pointing downward on a workbench.

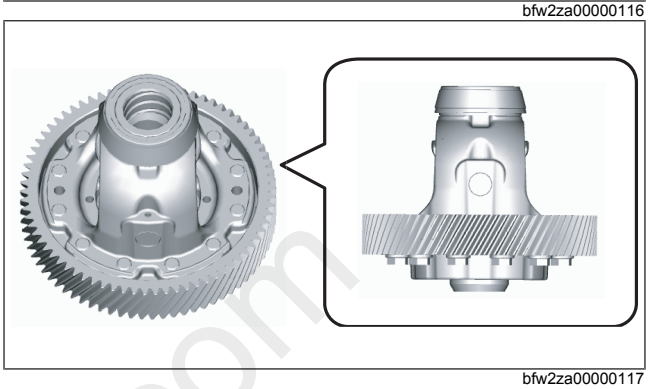


bfw2za00000117

6. Assemble the bearing race to the ring gear and differential.

Note
- Bearing race size: Outer diameter approx. 80 mm {3.1 in} (2WD)
- Bearing race size: Outer diameter approx. 90 mm {3.5 in} (4WD)

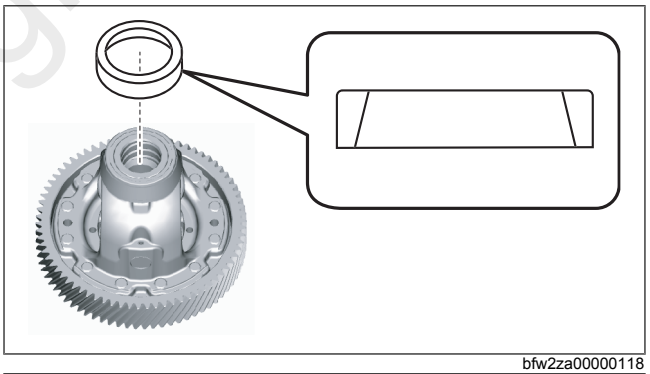


bfw2za00000118

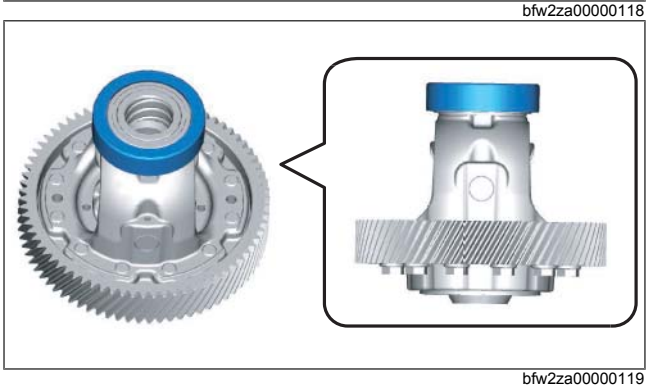


bfw2za00000119

cardiagn.com

7. With a load applied by hand to the bearing race, rotate the bearing race and verify that there is no malfunction in the taper roller bearing (rotation sticking).
   - If there is a malfunction, disassemble the ring gear and differential and replace the taper roller bearing with a new one.
     (See RING GEAR AND DIFFERENTIAL DISASSEMBLY [EW6A-EL/EW6AX-EL].)
     (See RING GEAR AND DIFFERENTIAL ASSEMBLY [EW6A-EL/EW6AX-EL].)

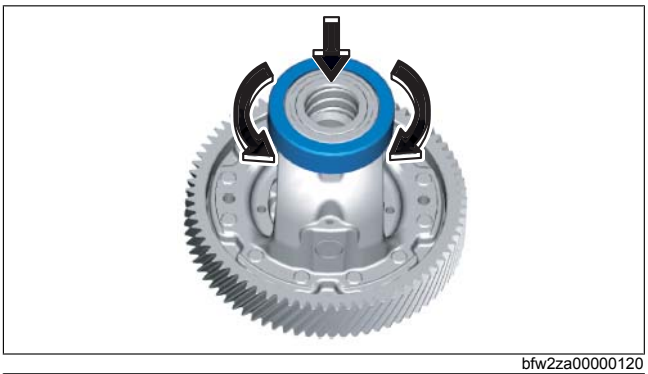
bfw2za00000120


8. Remove the bearing race.

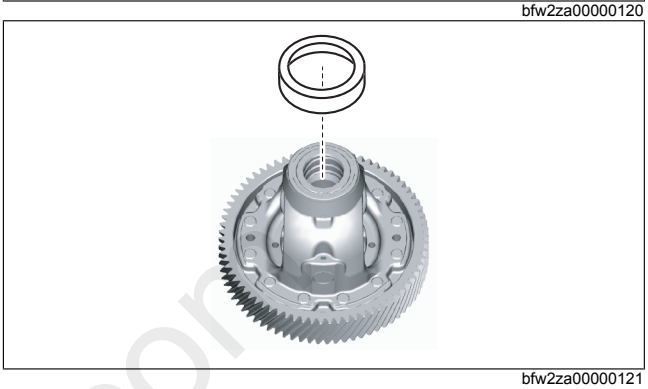
bfw2za00000121

Differential Journal Inspection

1. Measure the inner diameter of the journal (front side) shown in the figure.

Note
- When measuring, measure near the center of the journal avoiding the oil groove, and then calculate the average value of the X and Y directions as shown in the figure.
- Recommended measuring instrument: Cylinder gauge or caliper gauge

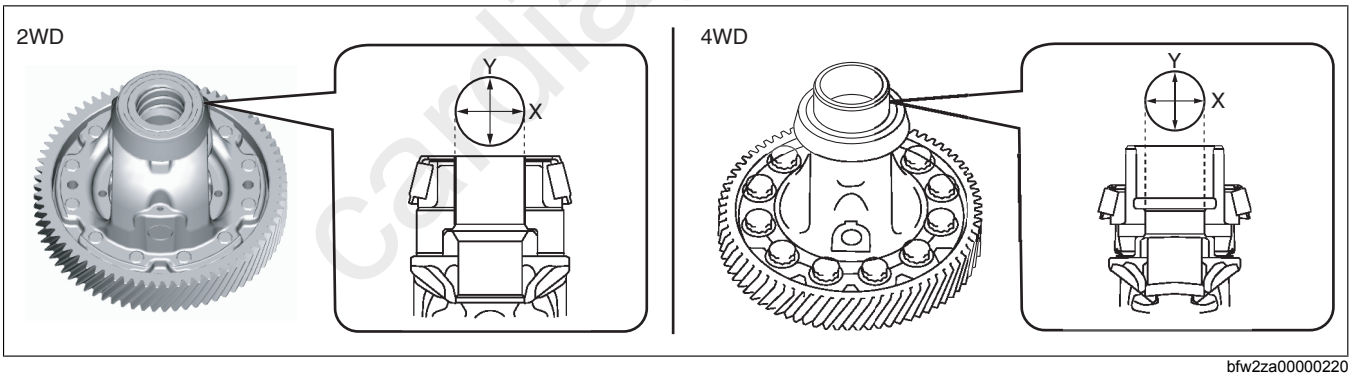

bfw2za00000220

Maximum:
33.545 mm {1.3207 in}

- If it is more than the maximum specification, disassemble the ring gear and differential and replace the differential gear case with a new one.
  (See RING GEAR AND DIFFERENTIAL DISASSEMBLY [EW6A-EL/EW6AX-EL].)
  (See RING GEAR AND DIFFERENTIAL ASSEMBLY [EW6A-EL/EW6AX-EL].)


2. Measure the inner diameter of the journal (rear side) shown in the figure.

Note
- When measuring, measure near the center of the journal avoiding the oil groove, and then calculate the average value of the X and Y directions as shown in the figure.
- Recommended measuring instrument: Cylinder gauge or caliper gauge
- The inner diameter of the journal (rear side) differs depending on the vehicle model.

carlia5n.com

Maximum:
33.545 mm {1.3207 in}

- If it is more than the maximum specification, disassemble the ring gear and differential and replace the differential gear case with a new one.
  (See RING GEAR AND DIFFERENTIAL DISASSEMBLY [EW6A-EL/EW6AX-EL].)
  (See RING GEAR AND DIFFERENTIAL ASSEMBLY [EW6A-EL/EW6AX-EL].)

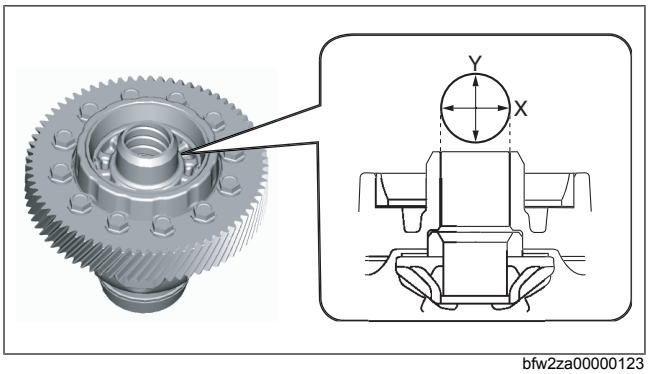

bfw2za00000123

Differential Backlash Inspection

1. Perform the following the inspection and measurement/adjustment in the order and replace a malfunctioning part with a new one.
   (1) Drive shaft journal inspection (See DRIVE SHAFT JOURNAL INSPECTION.)
   (2) Differential backlash measurement/adjustment (See DIFFERENTIAL BACKLASH MEASUREMENT/ADJUSTMENT [EW6A-EL/EW6AX-EL].)

cardiagn.com