
RING GEAR AND DIFFERENTIAL INSPECTION [FW6A-EL/FW6AX-EL]

id0517006624z3

Taper Roller Bearing Inspection


1. Place the ring gear and differential with the ring gear side pointing upward on a workbench.

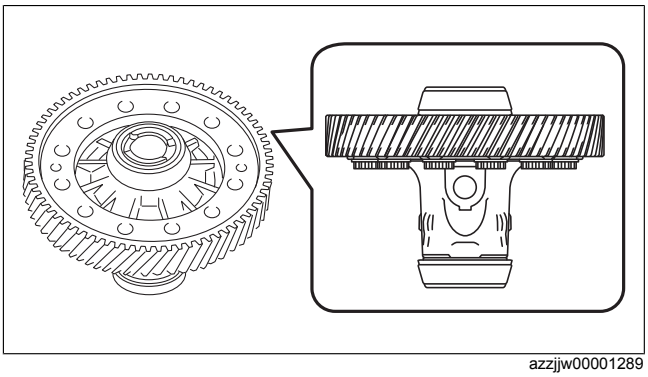


azzjjw00001289

2. Assemble the bearing race to the ring gear and differential.

Note
- Bearing race size: Outer diameter approx. 80 mm {3.1 in}

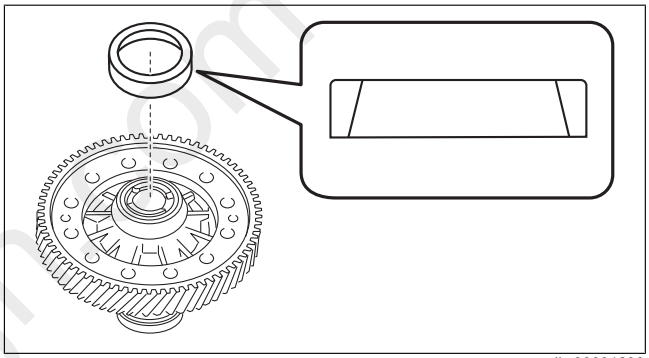


azzjjw00001290

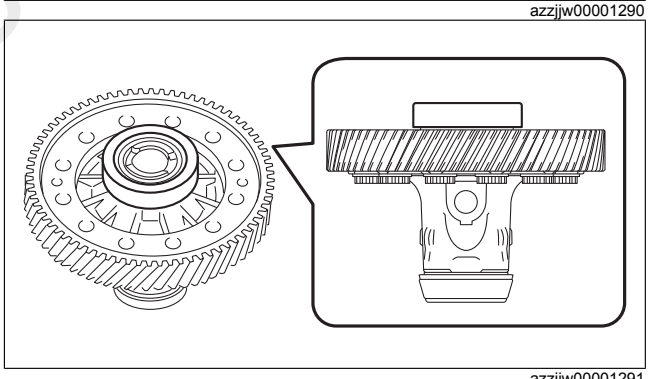

azzjjw00001291


3. With a load applied by hand to the bearing race, rotate the bearing race and verify that there is no malfunction in the taper roller bearing (rotation sticking).
   - If there is a malfunction, disassemble the ring gear and differential and replace the taper roller bearing with a new one.
     (See RING GEAR AND DIFFERENTIAL DISASSEMBLY [FW6A-EL/FW6AX-EL].)
     (See RING GEAR AND DIFFERENTIAL ASSEMBLY [FW6A-EL/FW6AX-EL].)

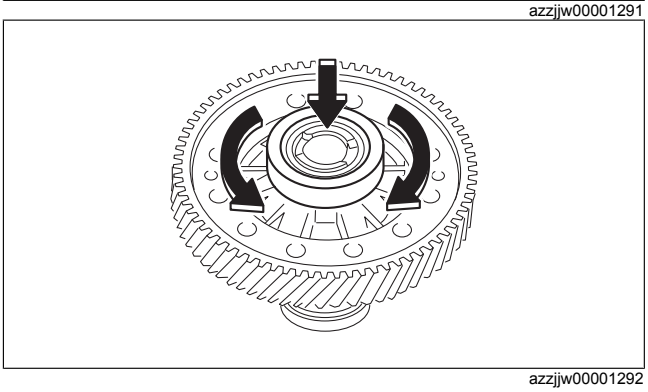

azzjjw00001292


cardiagn.com

4. Remove the bearing race.

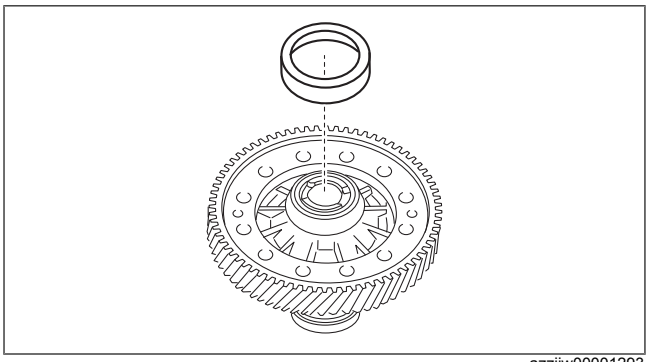

azzjjw00001293


5. Place the ring gear and differential with the ring gear side pointing downward on a workbench.

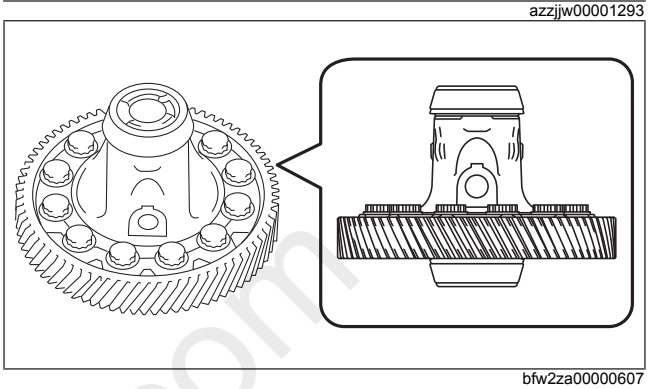


bfw2za00000607

6. Assemble the bearing race to the ring gear and differential.

Note
- Bearing race size: Outer diameter approx. 80 mm {3.1 in} (2WD)
- Bearing race size: Outer diameter approx. 90 mm {3.5 in} (4WD)

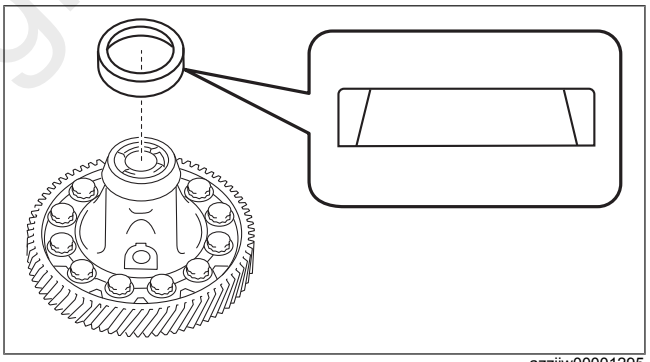


azzjjw00001295

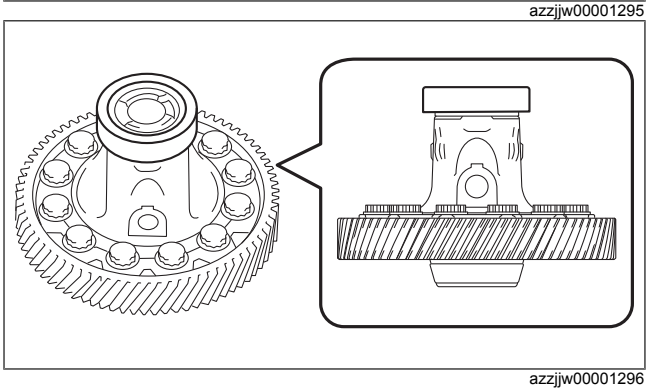


azzjjw00001296

cardiagn.com

7. With a load applied by hand to the bearing race, rotate the bearing race and verify that there is no malfunction in the taper roller bearing (rotation sticking).
   - If there is a malfunction, disassemble the ring gear and differential and replace the taper roller bearing with a new one.
     (See RING GEAR AND DIFFERENTIAL DISASSEMBLY [FW6A-EL/FW6AX-EL].)
     (See RING GEAR AND DIFFERENTIAL ASSEMBLY [FW6A-EL/FW6AX-EL].)

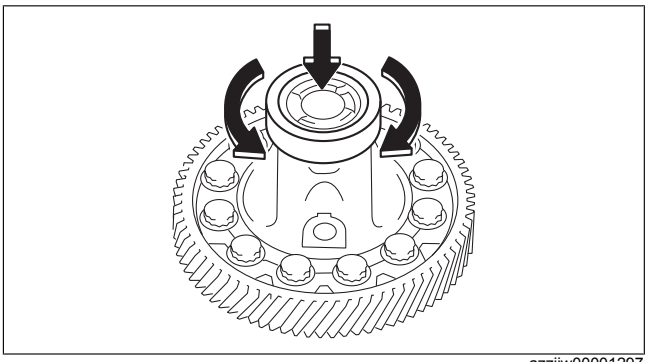
azzjjw00001297


8. Remove the bearing race.

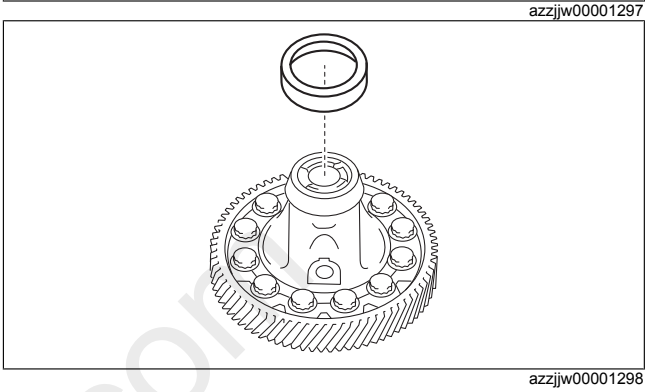
azzjjw00001298

Differential Journal Inspection

1. Measure the inner diameter of the journal (front side) shown in the figure.

Note
- When measuring, measure near the center of the journal avoiding the oil groove, and then calculate the average value of the X and Y directions as shown in the figure.
- Recommended measuring instrument: Cylinder gauge or caliper gauge
- The inner diameter of the journal (front side) differs depending on the vehicle model.

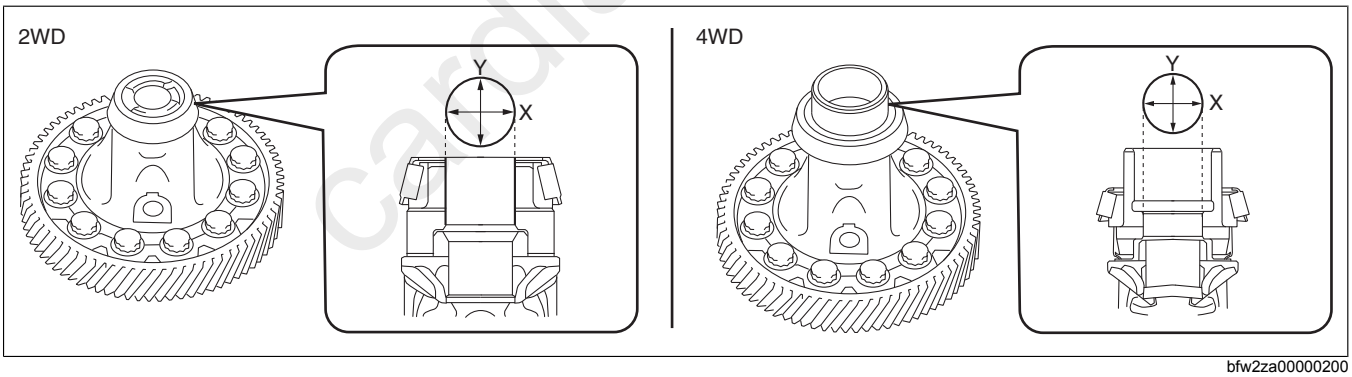

bfw2za00000200

Maximum:
Type A: 30.048 mm {1.1830 in}
Type B: 33.545 mm {1.3207 in}

- If it is more than the maximum specification, disassemble the ring gear and differential and replace the differential gear case with a new one.
  (See RING GEAR AND DIFFERENTIAL DISASSEMBLY [FW6A-EL/FW6AX-EL].)
  (See RING GEAR AND DIFFERENTIAL ASSEMBLY [FW6A-EL/FW6AX-EL].)


2. Measure the inner diameter of the journal (rear side) shown in the figure.

Note
- When measuring, measure near the center of the journal avoiding the oil groove, and then calculate the average value of the X and Y directions as shown in the figure.
- Recommended measuring instrument: Cylinder gauge or caliper gauge
- The inner diameter of the journal (rear side) differs depending on the vehicle model.

cardiagn.com

Maximum:
Type A: 30.048 mm {1.1830 in}
Type B: 33.545 mm {1.3207 in}

- If it is more than the maximum specification, disassemble the ring gear and differential and replace the differential gear case with a new one.
  (See RING GEAR AND DIFFERENTIAL DISASSEMBLY [FW6A-EL/FW6AX-EL].)
  (See RING GEAR AND DIFFERENTIAL ASSEMBLY [FW6A-EL/FW6AX-EL].)

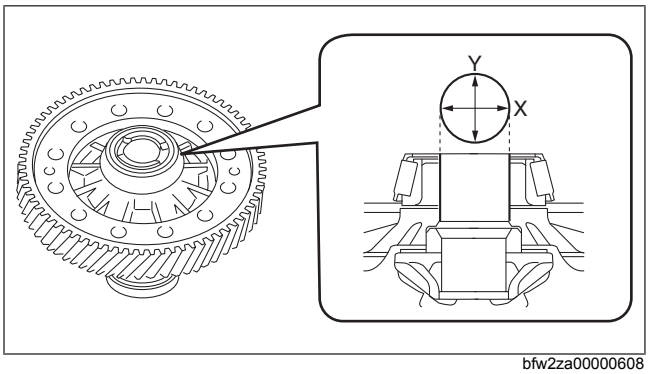

bfw2za00000608

Differential Backlash Inspection

1. Perform the following the inspection and measurement/adjustment in the order and replace a malfunctioning part with a new one.
   (1) Drive shaft journal inspection (See DRIVE SHAFT JOURNAL INSPECTION.)
   (2) Differential backlash measurement/adjustment (See DIFFERENTIAL BACKLASH MEASUREMENT/ADJUSTMENT [FW6A-EL/FW6AX-EL].)

cardiagn.com