
REDUCTION PLANETARY GEAR ASSEMBLY

id051700663900

Structural View

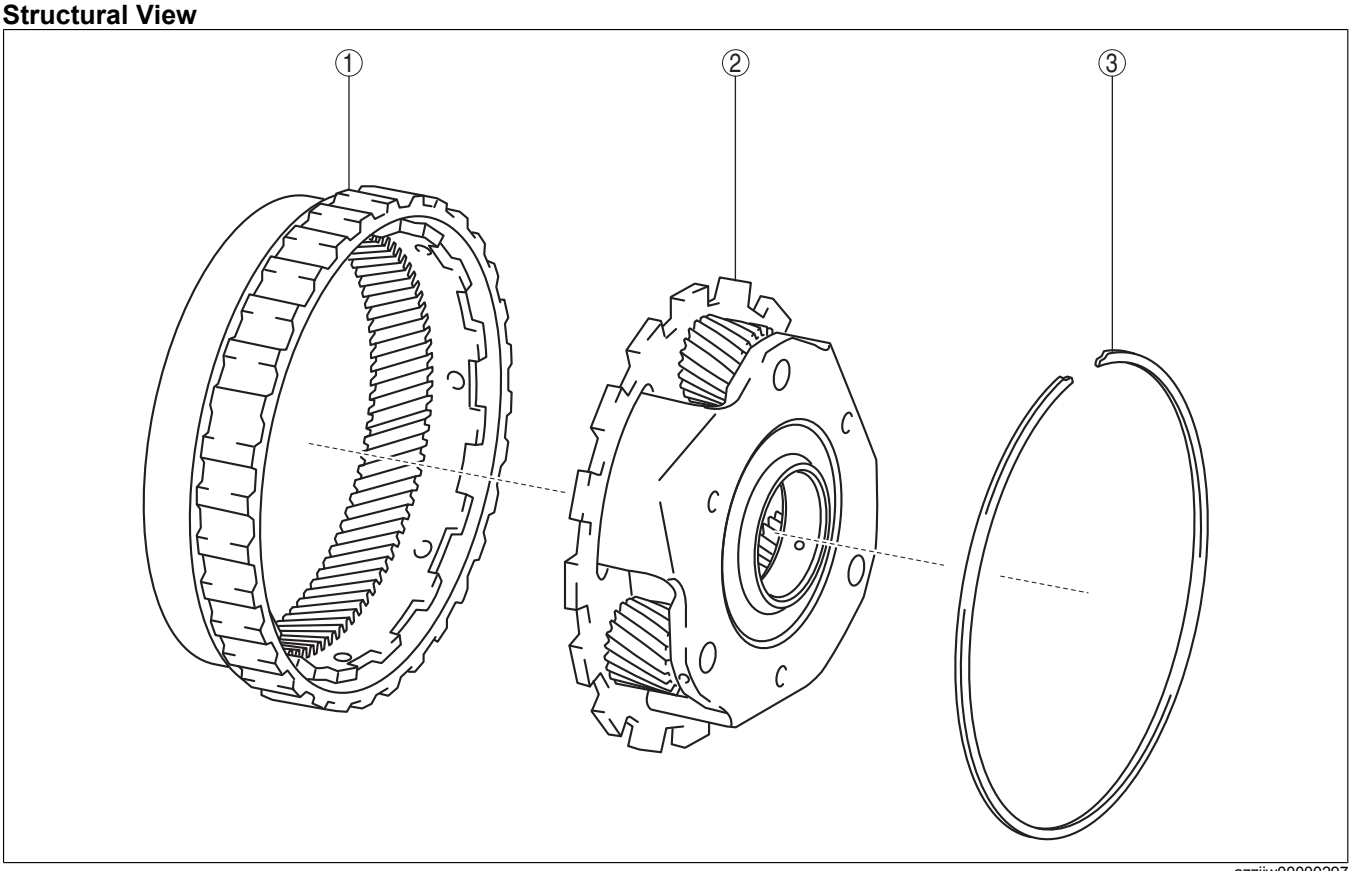


azzjjw00000297


1	Rear internal gear
2	Reduction planetary carrier
3	Snap ring (outer diameter approx. 142.5 mm {5.610 in})

Assembly Procedure

1. Assemble the reduction planetary carrier.

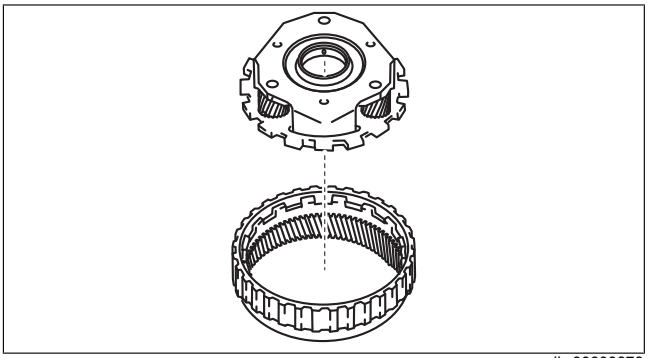

azzjjw00000878

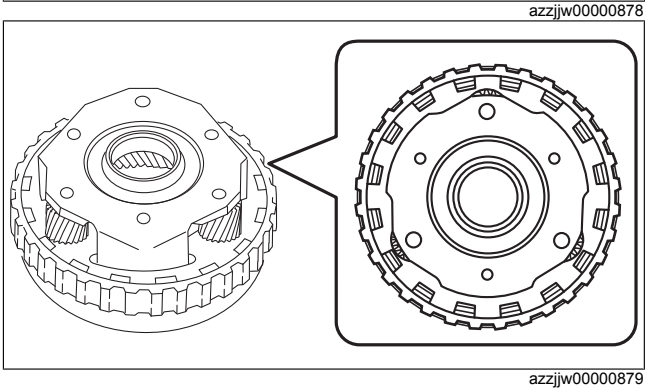

azzjjw00000879


2. Assemble the snap ring.

Caution


- **After assembling the snap ring, verify that the snap ring is securely inserted into the bottom of the snap ring groove.**

Note

- Snap ring size: Outer diameter approx. 142.5 mm {5.610 in}

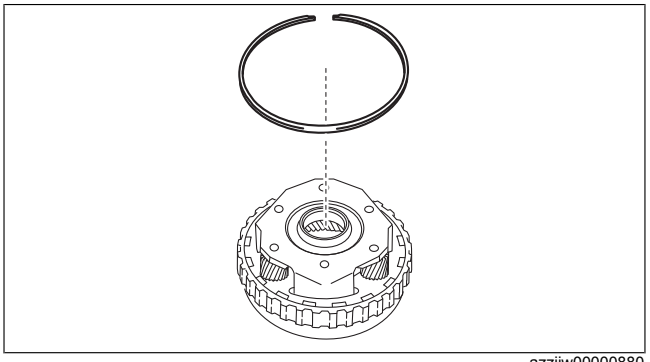

azzjjw00000880

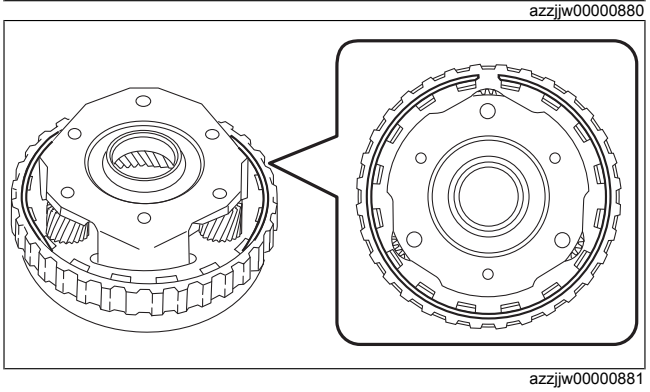

azzjjw00000881