
SECONDARY GEAR AND OUTPUT GEAR ASSEMBLY

id051700664000

Structural View

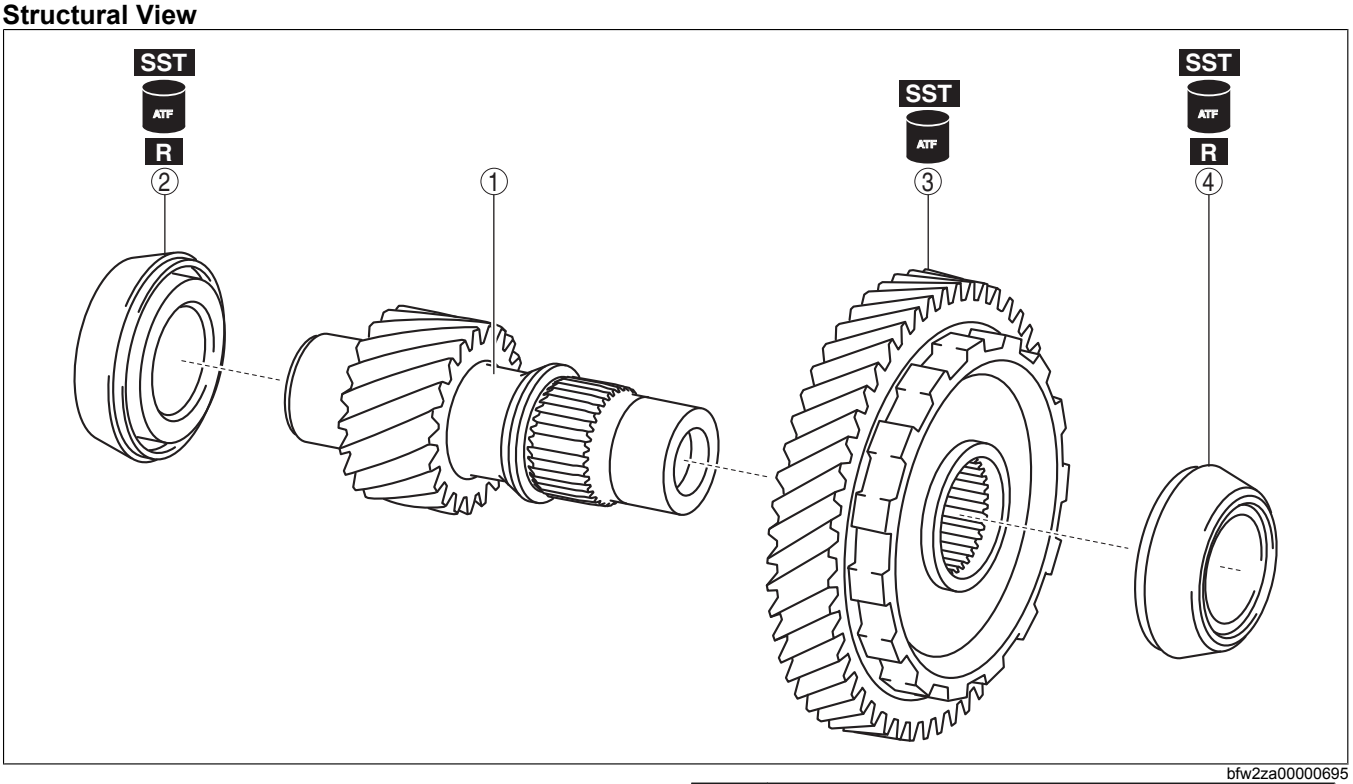

bfw2za00000695

1	Output gear
2	Taper roller bearing (converter housing side) (inner diameter 35.5 mm {1.398 in})
3	Secondary gear
4	Taper roller bearing (transaxle case side) (inner diameter 35 mm {1.378 in})

Assembly Procedure

1. Assemble a new taper roller bearing (converter housing side) using the following procedure:


Caution

- **Use a new taper roller bearing. If taper roller bearing with a deformed cage are reused, it may cause a transaxle malfunction.**

Note


- Taper roller bearing size: Inner diameter approx. 35.5 mm {1.398 in}

(1) Apply ATF (ATF FZ) to the engagement area of the new taper roller bearing and output gear.
(2) Using the SST and press, assemble the new taper roller bearing.

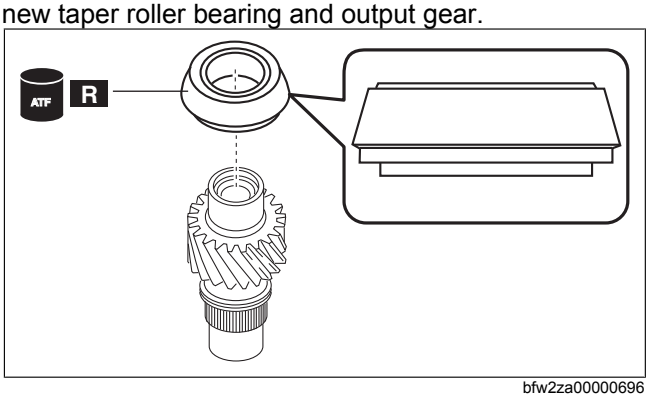


bfw2za00000696

A : Press

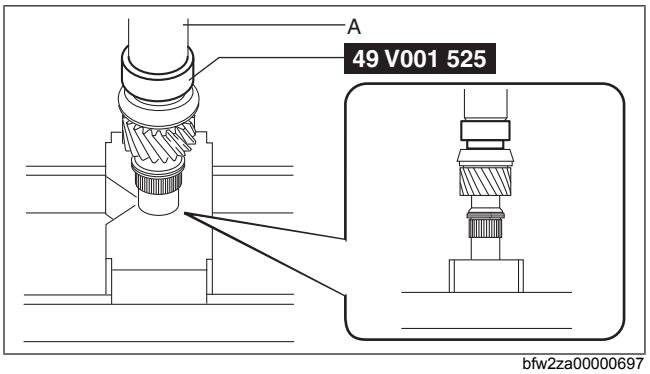


bfw2za00000697

2. Assemble the secondary gear using the following procedure:
   (1) Apply ATF (ATF FZ) to the engagement area (spline area) of the secondary gear and output gear.
   (2) Using the SST and press, assemble the secondary gear.

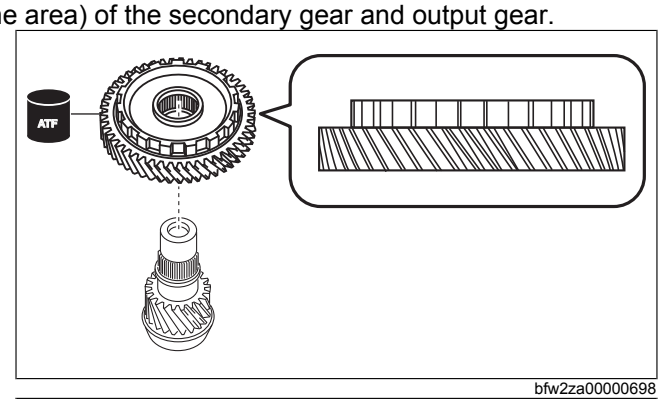

bfw2za00000698

A : Press

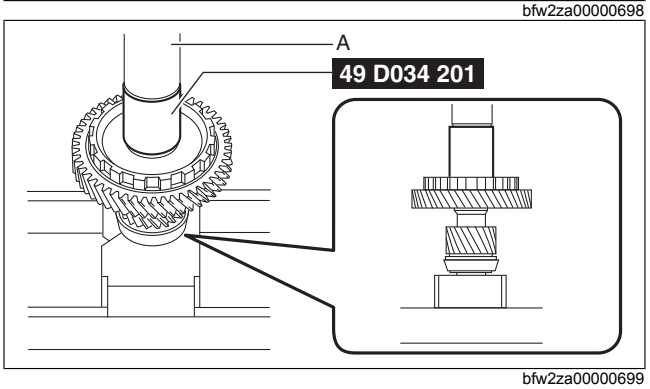


bfw2za00000699

3. Assemble the taper roller bearing (transaxle case side) using the following procedure:


Note
- Taper roller bearing size: Inner diameter approx. 35 mm {1.378 in}

   (1) Apply ATF (ATF FZ) to the engagement area of the taper roller bearing and output gear.
   (2) Using the SST and press, assemble the taper roller bearing.

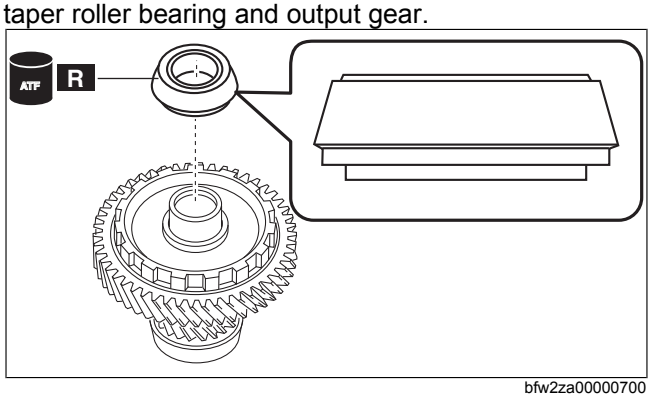

bfw2za00000700

A : Press

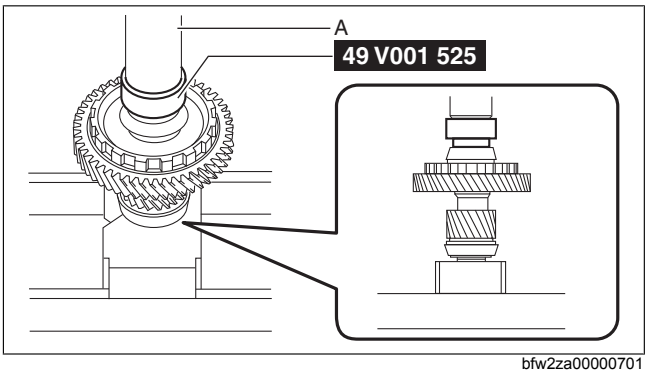

bfw2za00000701