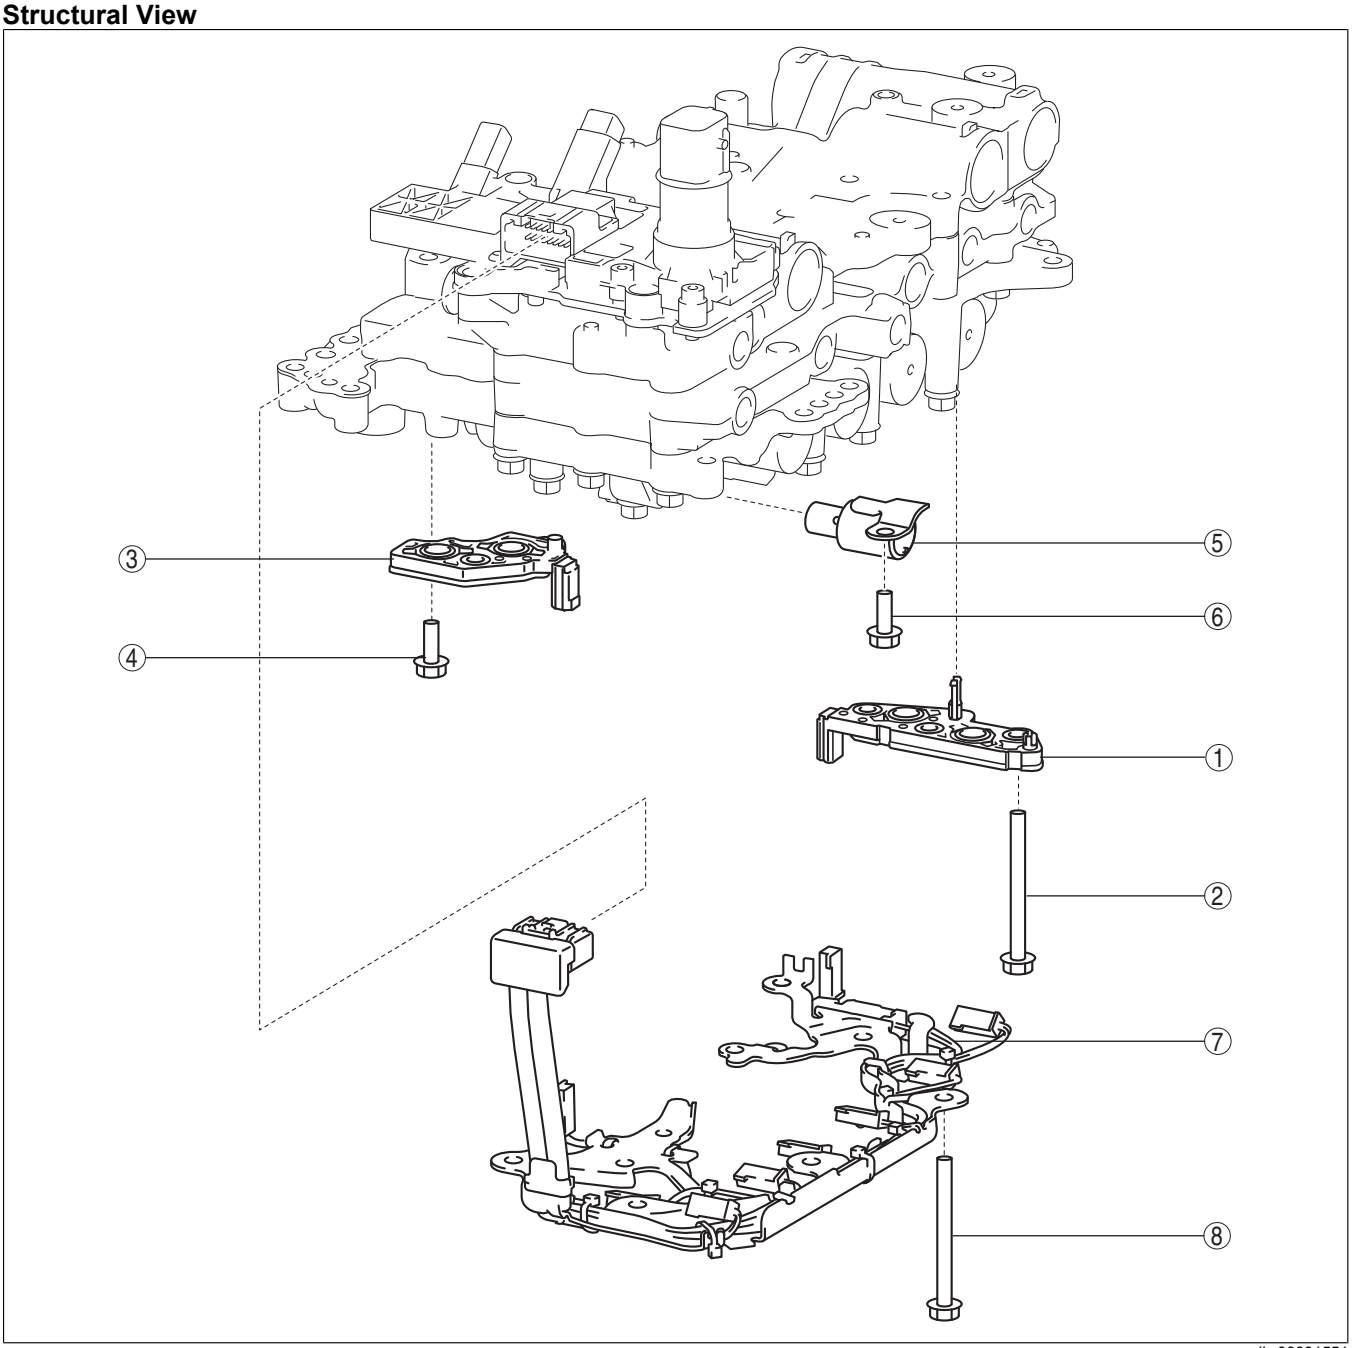
CONTROL VALVE BODY ASSEMBLY

id051700664300

Structural View



azzjjw00001551

1	Oil pressure switch A
2	3 bolts (M6×1.0 bolt, length to approx. 60 mm {2.4 in})
3	Oil pressure switch B
4	2 bolts (M6×1.0 bolt, length to approx. 60 mm {2.4 in}) 1 bolt (M6×1.0 bolt, length to approx. 16 mm {0.63 in})
5	ON/OFF solenoid

6	Bolt (M6×1.0 bolt, length to approx. 16 mm {0.63 in})
7	Coupler component
8	6 bolts (M6×1.0 bolt, length to approx. 80 mm {3.1 in}) 1 bolt (M6×1.0 bolt, length to approx. 60 mm {2.4 in}) 1 bolt (M6×1.0 bolt, length to approx. 16 mm {0.63 in})

Assembly Procedure

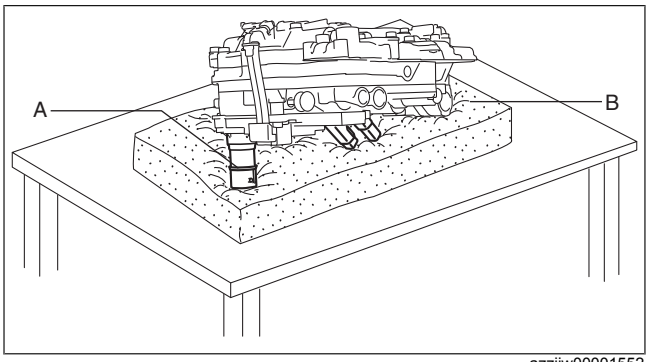
Caution

- **Do not drop or apply an impact to the control valve body. Replace the control valve body with a new one if it was dropped or received an impact.**

1. Place the control valve body with the TCM side pointing downward on an impact-absorbing material as shown in the figure.

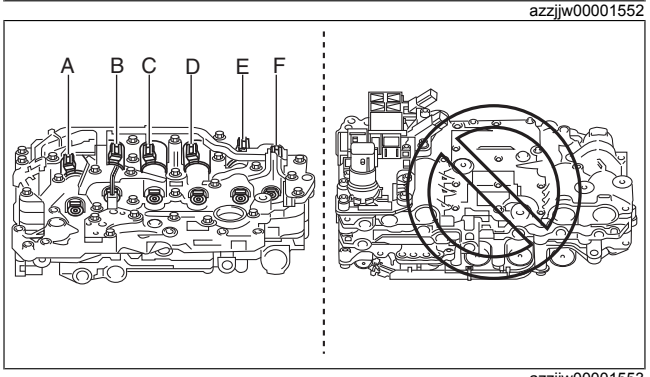
Caution
- **Placing the TCM side pointed downward on a workbench directly could damage the TCM. If the TCM side is placed pointed downward, place the control valve body on an impact-absorbing material so that the TCM does not contact the workbench directly.**
- **If the control valve body is placed on the workbench with the TCM side pointing upward, the pins securing the solenoids shown in the figure could fall off and become lost.**
  If the solenoid installation position shown in the figure is changed, it will cause a malfunction.
  To prevent the pin securing the solenoid from falling, always place the control valve body on an impact-absorbing material with the TCM side pointing downward until the coupler component is assembled.

A : TCM
B : Impact-absorbing material



azzjjw00001552

A : Shift solenoid No.1
B : Shift solenoid No.4
C : TCC control solenoid
D : Shift solenoid No.3
E : Shift solenoid No.2
F : Pressure control solenoid

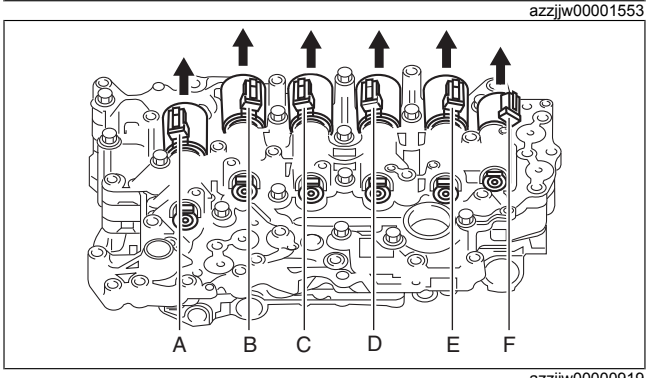


azzjjw00001553

2. Verify that the pins securing the pressure control solenoid, TCC control valve, and each shift solenoid are not removed using the following procedure:

   (1) Pull each solenoid in the direction of the arrow shown in the figure and verify that it is secured.

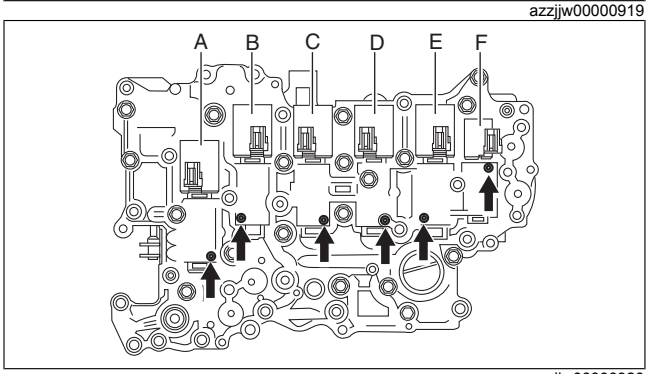
A : Shift solenoid No.1
B : Shift solenoid No.4
C : TCC control solenoid
D : Shift solenoid No.3
E : Shift solenoid No.2
F : Pressure control solenoid



azzjjw00000919

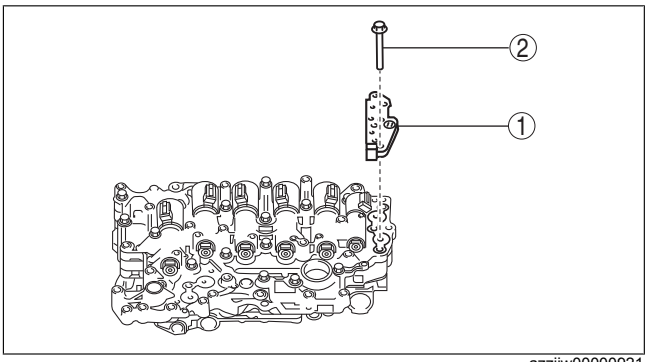
- If there is a malfunction, assemble the pin securing the solenoid to the malfunctioning part.

A : Shift solenoid No.1
B : Shift solenoid No.4
C : TCC control solenoid
D : Shift solenoid No.3
E : Shift solenoid No.2
F : Pressure control solenoid



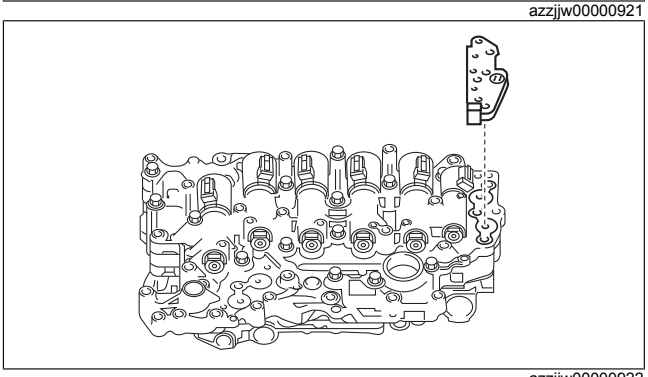
azzjjw00000920

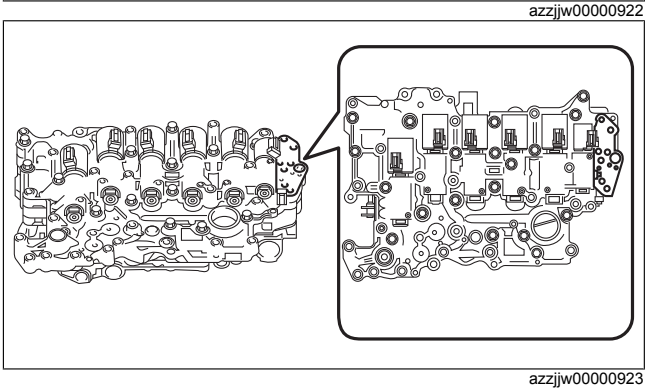
3. Assemble the oil pressure switch A using the following procedure:



azzjjw00000921

(1) Assemble the oil pressure switch A.

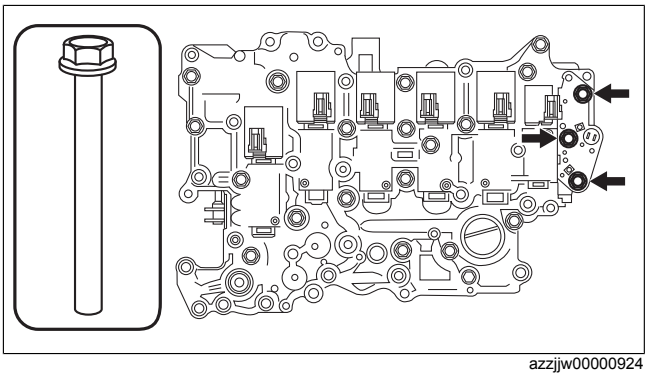

azzjjw00000922


azzjjw00000923

(2) Assemble and tighten the bolts shown in the figure.

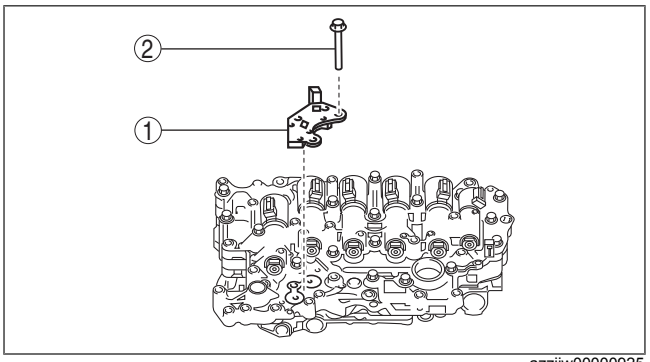
Note
- Bolt size: M6×1.0 bolt, length to approx. 60 mm {2.4 in}

Tightening torque
9—10 N·m {92—101 kgf·cm, 80—88 in·lbf}


azzjjw00000924

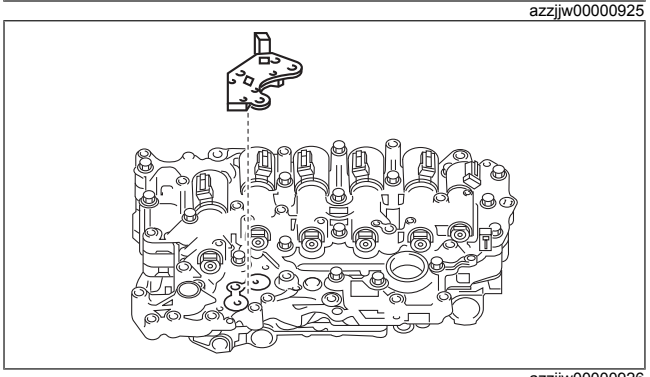
1	Oil pressure switch A
2	3 bolts (M6×1.0 bolt, length to approx. 60 mm {2.4 in})

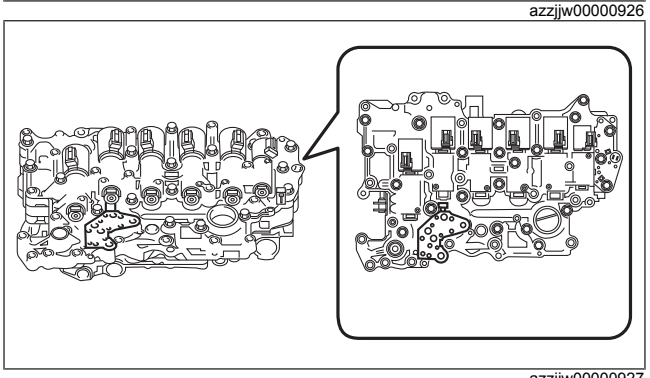
4. Assemble the oil pressure switch B using the following procedure:



azzjjw00000925

(1) Assemble the oil pressure switch B.

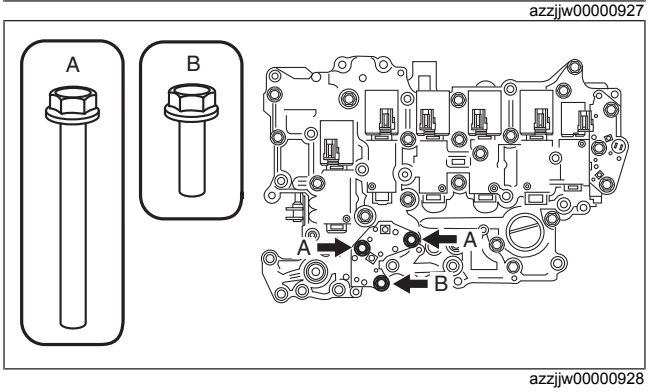

azzjjw00000926


azzjjw00000927

(2) Assemble and tighten the bolts shown in the figure.

A : Bolt (M6×1.0 bolt, length to approx. 60 mm {2.4 in})
B : Bolt (M6×1.0 bolt, length to approx. 16 mm {0.63 in})

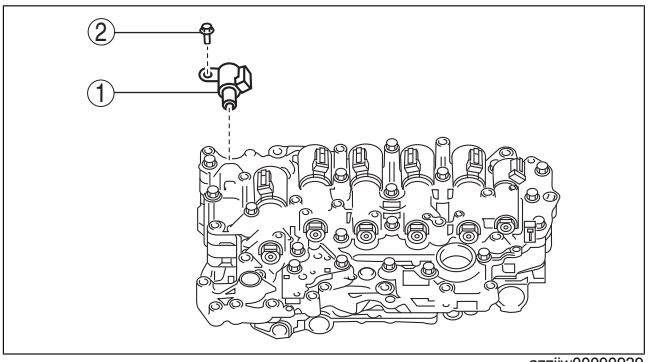
Tightening torque
9—10 N·m {92—101 kgf·cm, 80—88 in·lbf}



azzjjw00000928

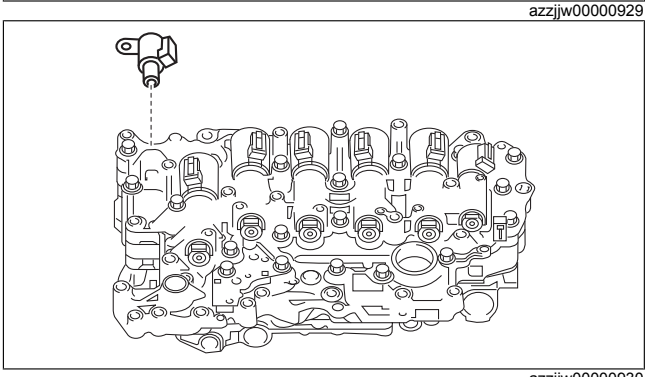
1	Oil pressure switch B
2	2 bolts (M6×1.0 bolt, length to approx. 60 mm {2.4 in}) 1 bolt (M6×1.0 bolt, length to approx. 16 mm {0.63 in})

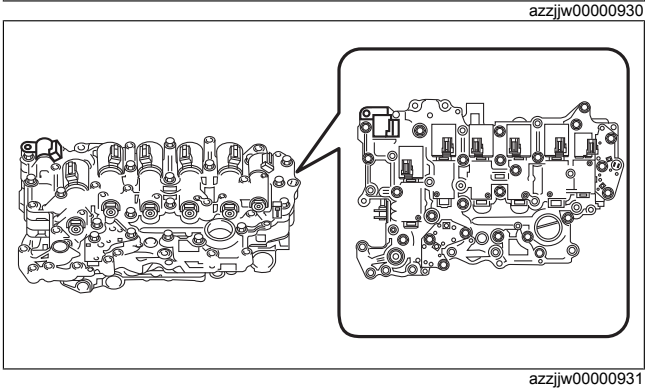
5. Assemble the ON/OFF solenoid using the following procedure:



azzjjw00000929

(1) Assemble the ON/OFF solenoid.


azzjjw00000930

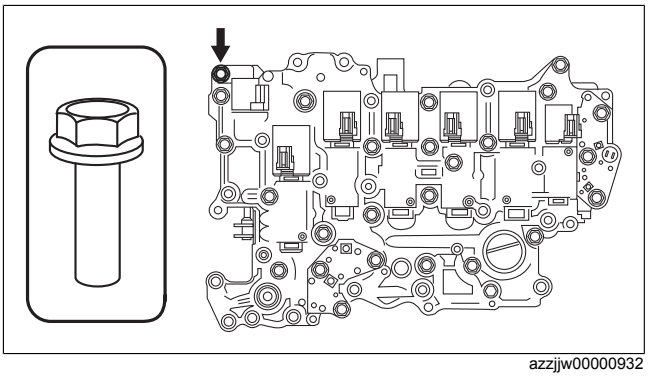

azzjjw00000931

(2) Assemble and tighten the bolt shown in the figure.

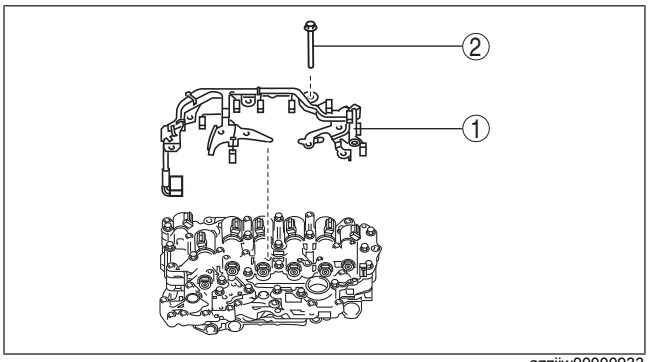
Note
- Bolt size: M6×1.0 bolt, length to approx. 16 mm {0.63 in}

Tightening torque
9—10 N·m {92—101 kgf·cm, 80—88 in·lbf}

1	ON/OFF solenoid
2	Bolt (M6×1.0 bolt, length to approx. 16 mm {0.63 in})

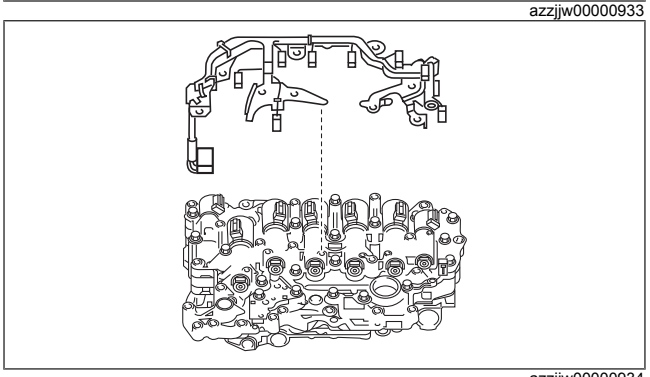

azzjjw00000932

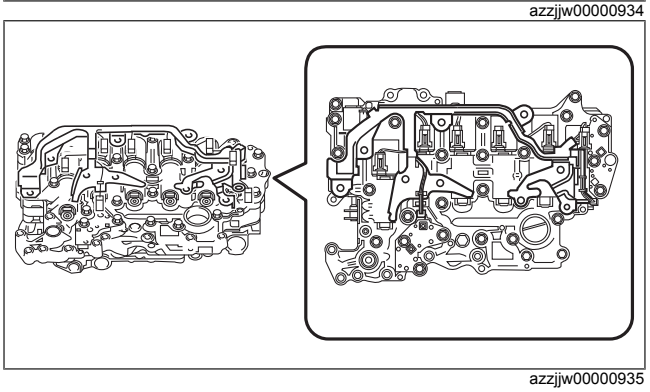
6. Assemble the coupler component using the following procedure:



azzjjw00000933

(1) Assemble the coupler component.

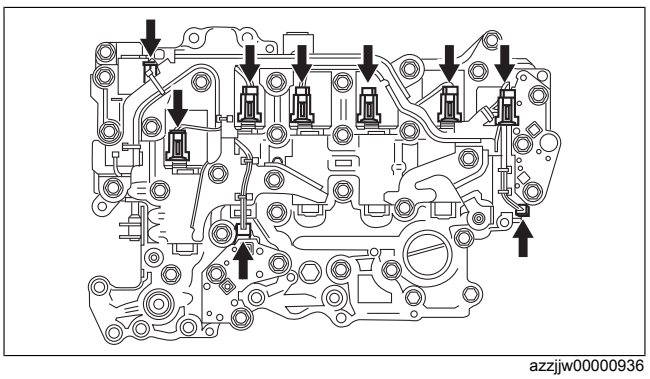

azzjjw00000934


azzjjw00000935

(2) Connect the connectors shown in the figure.

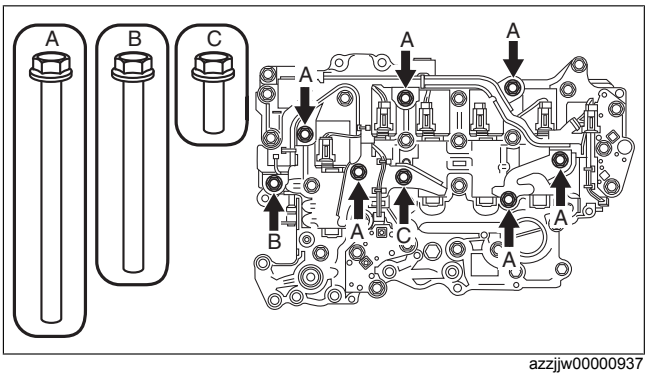
Caution

- **When connecting a connector, insert it straight until it is securely locked.**


azzjjw00000936

(3) Assemble and tighten the bolts shown in the figure.

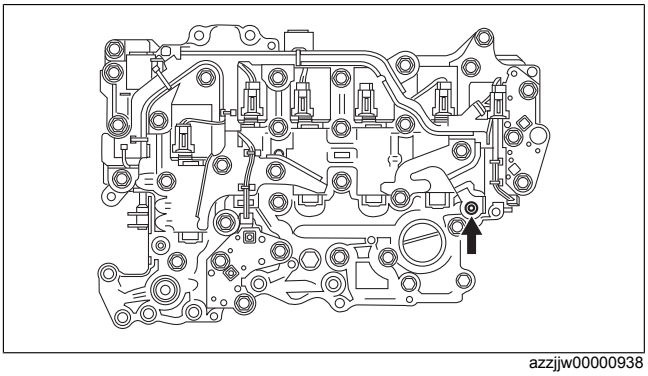
A : Bolt (M6×1.0 bolt, length to approx. 80 mm {3.1 in})
B : Bolt (M6×1.0 bolt, length to approx. 60 mm {2.4 in})
C : Bolt (M6×1.0 bolt, length to approx. 16 mm {0.63 in})



azzjjw00000937

Caution
- **Tighten the bolts while pressing the coupler component so that the bolt hole shown in the figure and coupler component hole do not shift.**

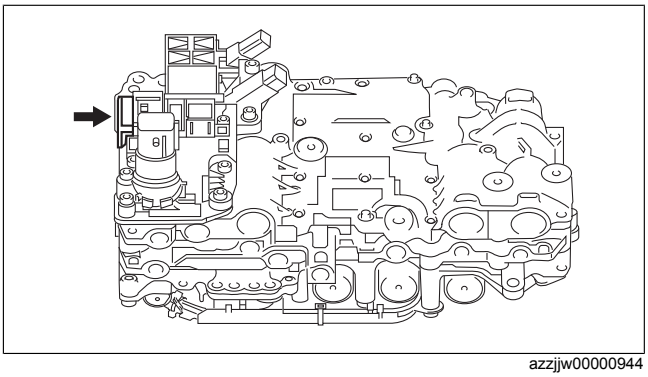
Tightening torque
9—10 N·m {92—101 kgf·cm, 80—88 in·lbf}


azzjjw00000938

(4) Connect the connector shown in the figure.

Caution
- **When connecting a connector, insert it at a straight angle until it is securely locked.**

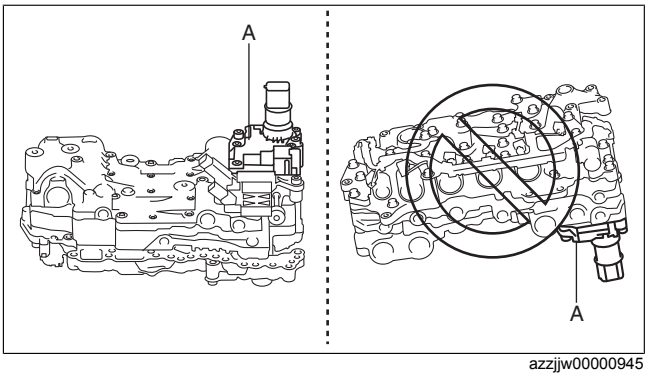
1	Coupler component
2	6 bolts (M6×1.0 bolt, length to approx. 80 mm {3.1 in}) 1 bolt (M6×1.0 bolt, length to approx. 60 mm {2.4 in}) 1 bolt (M6×1.0 bolt, length to approx. 16 mm {0.63 in})


azzjjw00000944

7. Place the assembled control valve body with the TCM side pointing upward on a workbench.

Caution
- **Place the assembled control valve body with the TCM side pointing upward on a workbench. If it is placed with the TCM side pointing downward on the workbench, the TCM could be damaged.**

A : TCM



azzjjw00000945