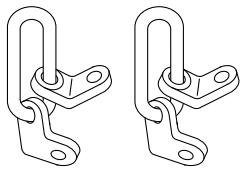
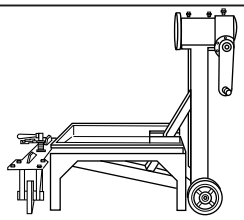
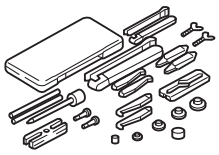
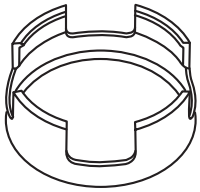
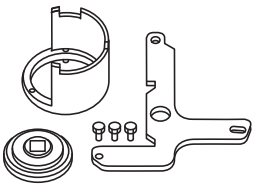
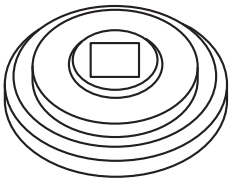
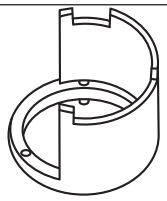
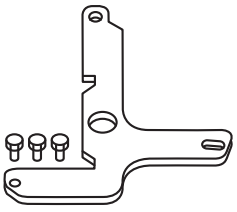
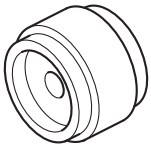
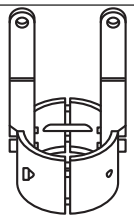
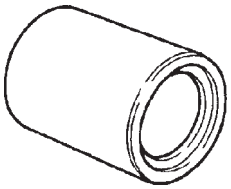
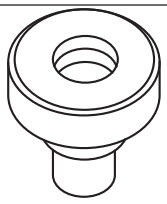
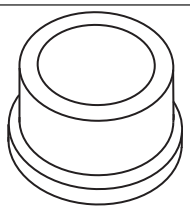
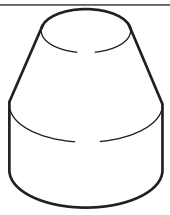
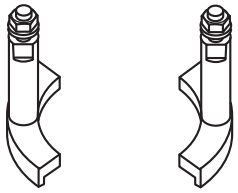
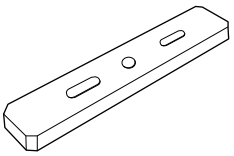
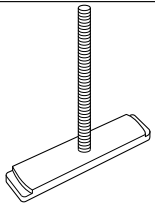
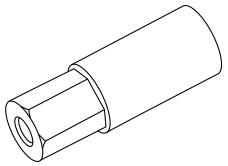
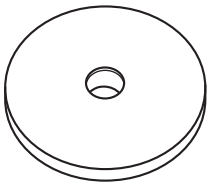
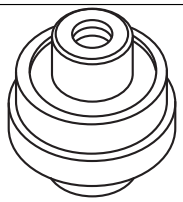
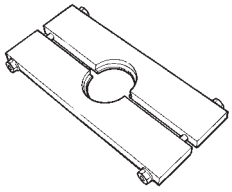
SERVICE TOOLS [EW6A-EL/EW6AX-EL]

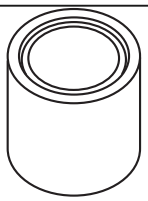
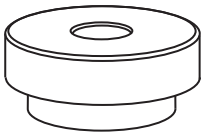
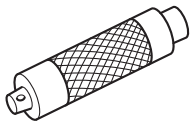


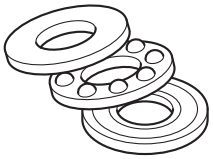
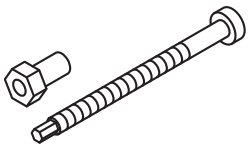
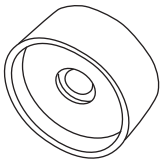
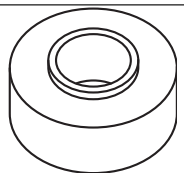
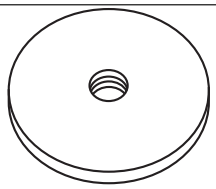
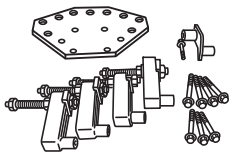
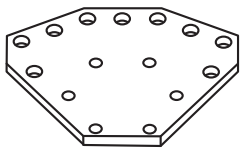
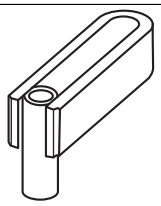
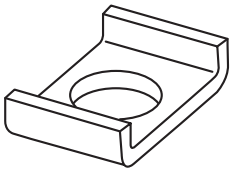
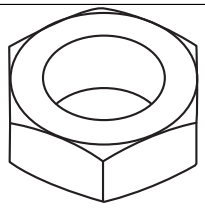
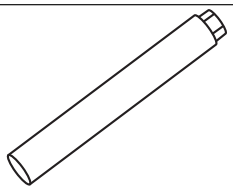
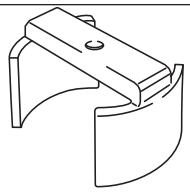
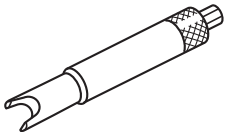
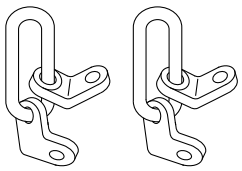
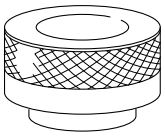
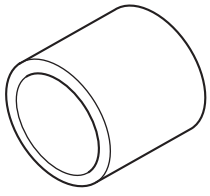
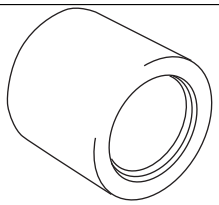
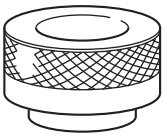
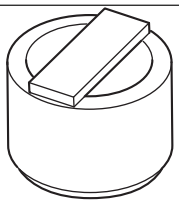

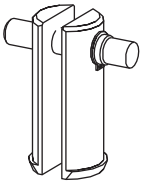
id0560008043d7

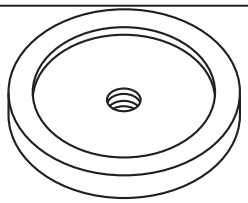
Example of description
Ford manufactured **SSTs** are as follows: Mazda and Ford **SST** numbers can be referenced.

1:49 UN30 3050 2:303-050 Engine lifting bracket	

1: Mazda **SST** number
2: Ford **SST** number

1:49 0107 680A 2:− Engine stand 	1:49 0839 425C 2:− Bearing puller set 	1:49 B019 002 2:− Body 
1:49 B019 0A4 2:− Locknut wrench set 	1:49 B019 027 2:− Socket (component part for 49 B019 0A4) 	1:49 B019 028 2:− Holder (component part for 49 B019 0A4) 
1:49 B019 029 2:− Plate (component part for 49 B019 0A4) 	1:49 B025 001 2:− Body 	1:49 D019 007 2:− Puller 
1:49 D034 201 2:− Dust boot installer 	1:49 F011 104 2:− Installer 	1:49 F027 005 2:− Attachment for 62 bearing (component part for 49 F027 0A1) 
1:49 F027 009 2:− Attachment for 68 and 77 bearing 	1:49 F034 210 2:− Clip guide 	1:49 G019 025 2:− Body B 
1:49 G019 026 2:− Plate 	1:49 G019 027 2:− Attachment A 	1:49 G019 029 2:− Nut 
1:49 G019 030 2:− Plate 	1:49 G026 102 2:− Bearing replacer 	1:49 G027 002 2:− Removing plate 

1:49 G028 201 2:− Support block 	1:49 G030 728 2:− Attachment B 	1:49 G030 797 2:− Handle 
1:49 G032 308 2:− Oil seal installer 	1:49 G033 102 2:− Handle 	1:49 G034 205 2:− Bearing 
1:49 H028 201 2:− Shaft 	1:49 H028 204 2:− Attachment 	1:49 H028 205 2:− Guide 
1:49 J027 001 2:− Bearing installer 	1:49 L010 1A0 2:− Engine hanger set 	1:49 L010 101 2:− Plate (component part for 49 L010 1A0) 
1:49 L010 102 2:− Arm (component part for 49 L010 1A0) 	1:49 L010 103 2:− Hook (component part for 49 L010 1A0) 	1:49 L010 104 2:− Nut (component part for 49 L010 1A0) 
1:49 L010 105 2:− Bolt (component part for 49 L010 1A0) 	1:49 M005 796 2:− Body 	1:49 T019 003 2:− Body 
1:49 T027 001 2:− Preload adopter (component part for 49 G030 380D) 	1:49 UN30 3050 2:303-050 Engine lifting bracket 	1:49 UB71 525 2:− Bearing installer 
1:49 U027 003 2:− Oil seal installer 	1:49 U034 204 2:− Dust boot installer 	1:49 V001 525 2:− Bearing installer 
1:49 W011 102 2:− Oil seal installer 	1:49 W032 2A0 2:− Bearing remover set 	1:49 W033 102 2:− Remover (component part for 49 W033 1A1) 

1:49 W033 105 2:– Oil seal installer 	–	–