
OIL SEAL (PARKING SHIFT LEVER) REPLACEMENT

id051700660500

Note
- Perform the following servicing only if the oil seal is replaced due to ATF leakage from the oil seal (parking shift lever).


1. Clean the outside of the transaxle. (See AUTOMATIC TRANSAXLE CLEANING.)
2. Remove the electric AT oil pump using the following procedure: (only vehicles with i-stop)

Caution
- **Do not drop or apply a shock to the electric AT oil pump. Replace the electric AT oil pump with a new one if it was dropped or received an impact.**
- **Do not disassemble the electric AT oil pump. Replace the electric AT oil pump if it has been disassembled.**
- **Verify that there is no sealant or foreign matter in the electrical AT oil pump and transaxle. Otherwise, it could cause a malfunction.**
- **Be careful not to scratch or damage the aligning surfaces of the electric AT oil pump and end cover and the O-ring installation area so as not to cause ATF leakage.**

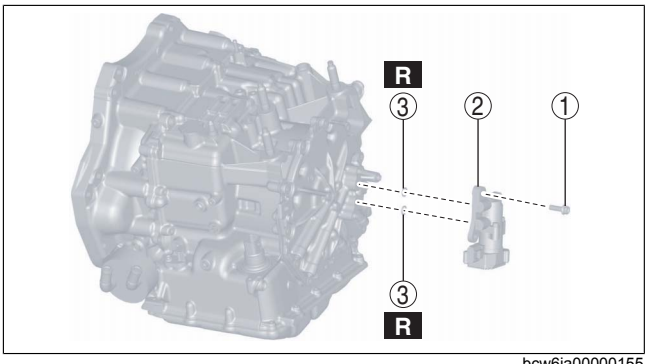

bcw6ja00000155


(1) Remove the bolts shown in the figure.

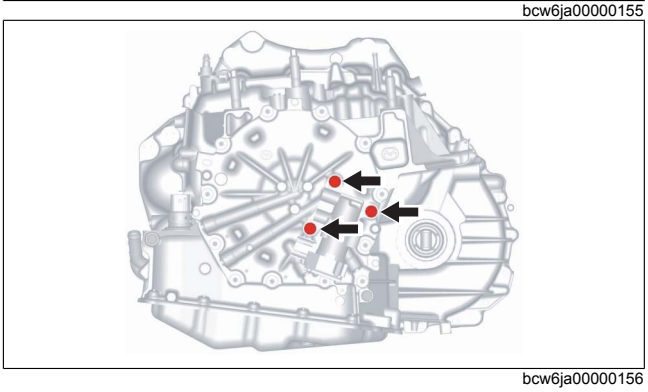


bcw6ja00000156

(2) Remove the electric AT oil pump.

Note
- Shake the electric AT oil pump by hand as shown in the figure and remove it.

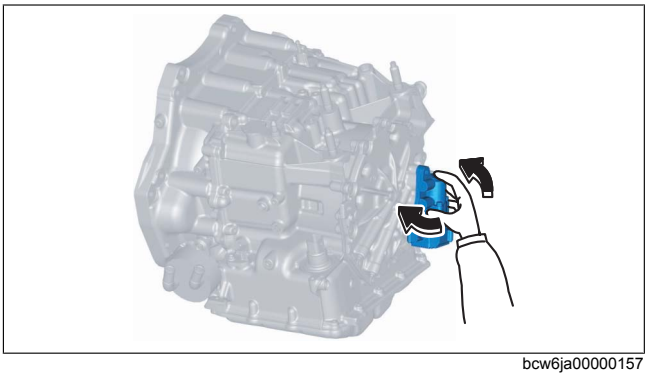


bcw6ja00000157

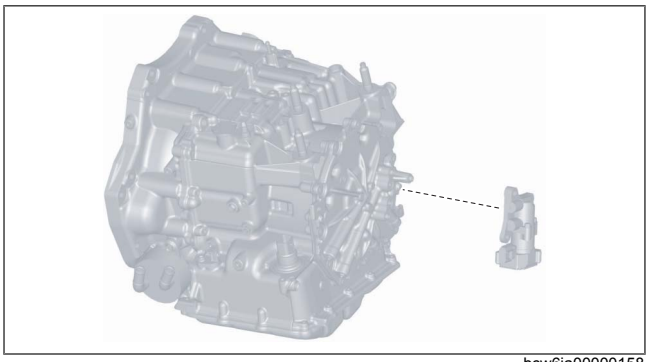

bcw6ja00000158


(3) Remove the O-rings.

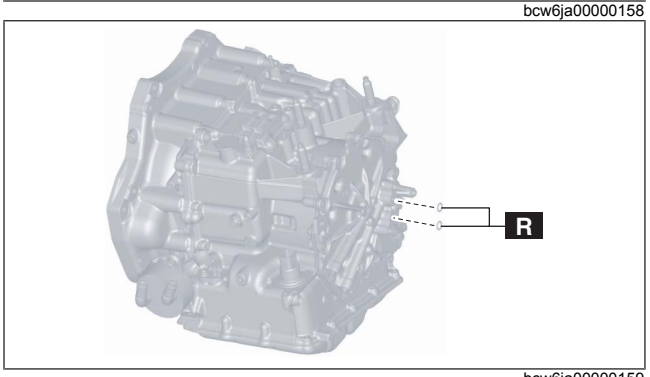

bcw6ja00000159


1	3 bolts
2	Electric AT oil pump
3	O-ring

3. Remove the stud bolts.

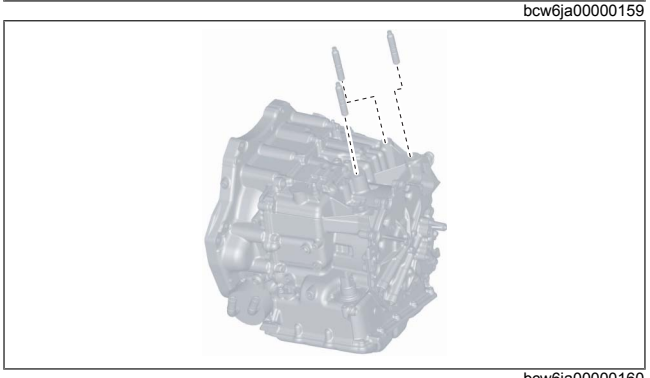

bcw6ja00000160

4. Remove the torque converter.

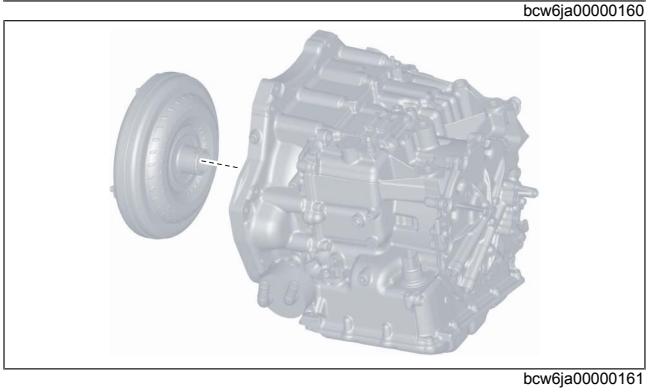

bcw6ja00000161

5. Install the transaxle to the SST (engine stand) using the following procedure:


Caution

- **When installing the transaxle to the SST (engine stand) using chain hoists, be careful not to allow the transaxle (oil cooler in particular) to contact the SST (engine stand). If the transaxle contacts the SST, verify the areas which are contacted and replace damaged parts with new ones.**

(1) Install the SSTs to the transaxle using the following procedure.

Note
- When installing the SST (49 L010 1A0) to the transaxle (stud bolt holes), use new part number: 9YA02 1440 or M14 x 1.5 bolt, length 100 mm {3.94 in}.
- When installing the SST (49 UN30 3050) to the transaxle, use new part number: 9YA02 1015, or M10 x 1.5 bolts (length 35 mm {1.4 in}).


1) Temporarily install the arms (49 L010 102) using new part number: 9YA02 1440, or M14 x 1.5 bolts, length 100 mm {3.94 in}

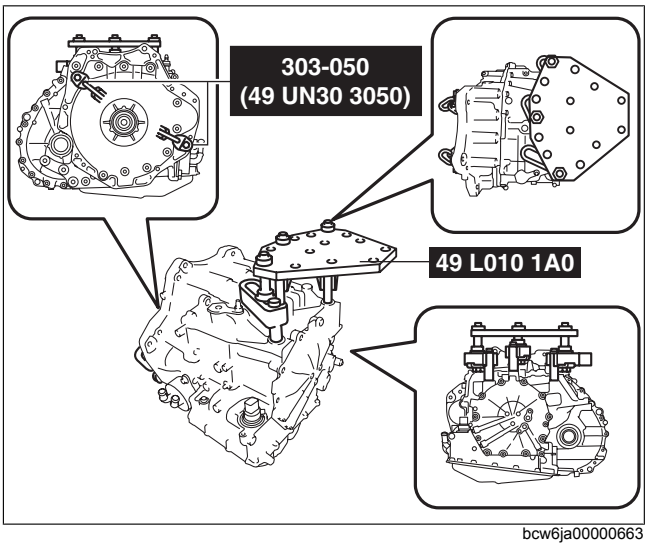

bcw6ja00000663

Note
- To adjust the installation position of the SST in Step 3), temporarily tighten the bolts.

A : Part number: 9YA02 1440, or M14 x 1.5 bolt, length 100 mm {3.94 in}

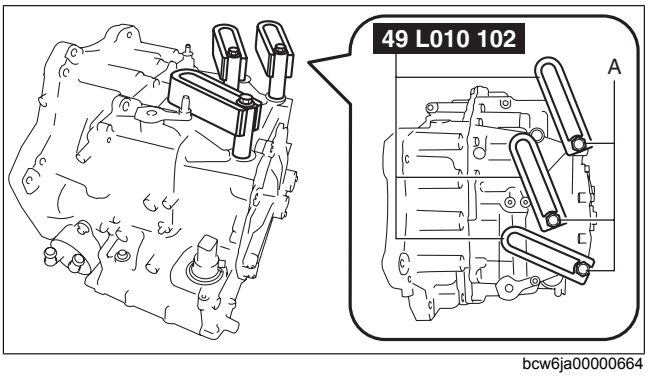


bcw6ja00000664

2) Assemble the SST (49 L010 1A0).

Note
- Use bolts (49 L010 105) with a length of 138 mm {5.43 in}.

A : Washer
B : Approx. 20 mm {0.79 in}
C : Approx. 18 mm {0.71 in}
D : Approx. 47 mm {1.9 in}

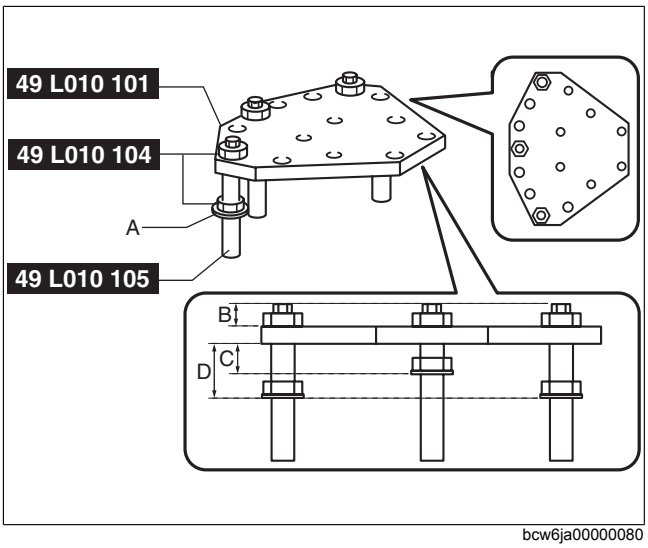

bcw6ja00000080

3) Install the SST assembled in Step 2).

Note
- Adjust so that the plate (49 L010 101) and arms (49 L010 102) are level, and install.


A : Washer
B : Level out

4) Verify that nothing other than the SST arms (49 L010 102) installation area contacts the transaxle.

Caution
- **If something other than the SST arms (49 L010 102) installation area contacts the transaxle, readjust the SST to prevent damaging the part.**

5) Tighten the nuts and bolts.

Tightening torque
- **Bolt: Part number: 9YA02 1440, or M14 x 1.5 bolt, length 100 mm {3.94 in}**
  40—52 N·m {4.1—5.3 kgf·m, 30—38 ft·lbf}
- **Nut: 49 L010 104**
  140—160 N·m {15—16 kgf·m, 104—118 ft·lbf}

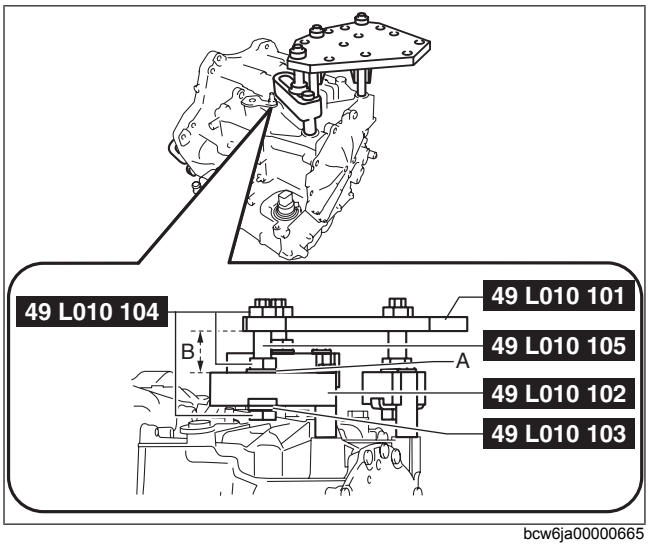


bcw6ja00000665

6) Assemble the SSTs using part number: 9YA02 1015, or M10 x 1.5 bolt (length 35 mm {1.4 in}).

A : Part number: 9YA02 1015, or M10 x 1.5 bolt, length 35 mm {1.4 in}

Tightening torque
38—52 N·m {3.9—5.3 kgf·m, 29—38 ft·lbf}

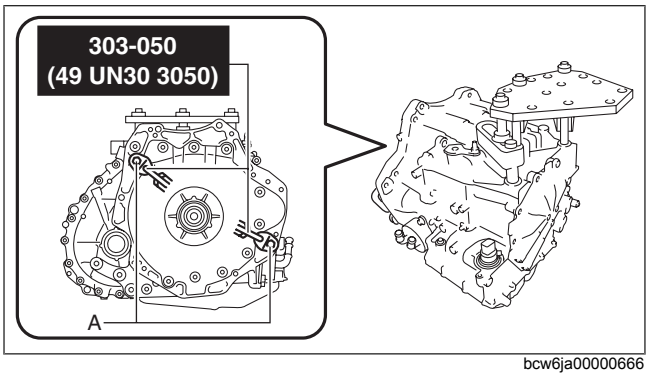

bcw6ja00000666


(2) Using chain hoists, install the transaxle to the SST (engine stand) using part number: 9YA02 A220, or M12 x 1.75 bolt, length 40 mm {1.6 in}.

Caution
- **When installing the transaxle to the SST (engine stand) using chain hoists, be careful not to allow the transaxle (oil cooler in particular) to contact the SST (engine stand). If the transaxle contacts the SST, verify the areas which are contacted and replace damaged parts with new ones.**

Note
- Tighten the four locations with bolts and securely install the transaxle to the SST (engine stand).

A : Part number: 9YA02 A220, or M12 x 1.75 bolt, length 40 mm {1.6 in}


Tightening torque
88—118 N·m {9.0—12 kgf·m, 65—87 ft·lbf}

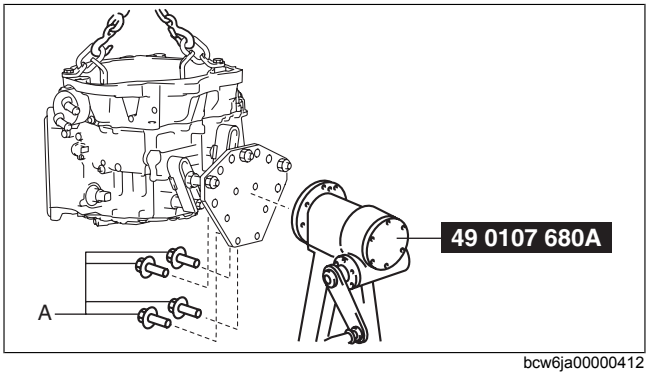

bcw6ja00000412


(3) Remove the SSTs.

A : Part number: 9YA02 1015, or M10 x 1.5 bolt, length 35 mm {1.4 in}

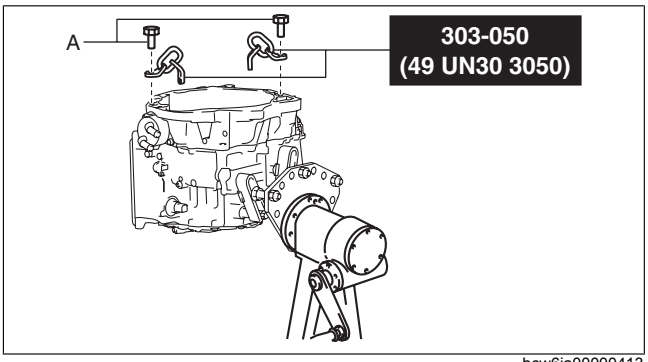

bcw6ja00000413

6. Remove the converter housing using the following procedure:

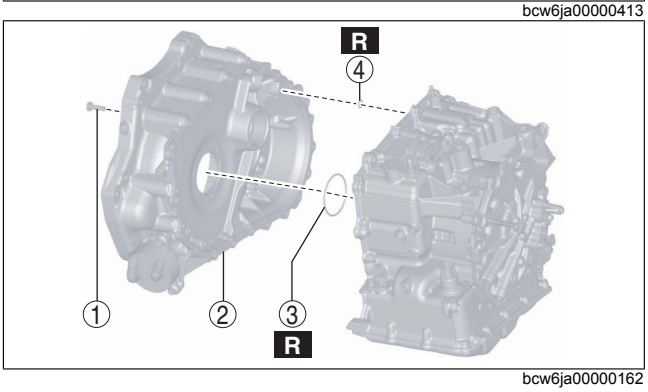


bcw6ja00000162

(1) Remove the bolts shown in the figure.


Caution

- **Sealant has been applied to the removed bolts. If the bolts are reused it could cause ATF leakage, therefore when performing assembly use new bolts.**

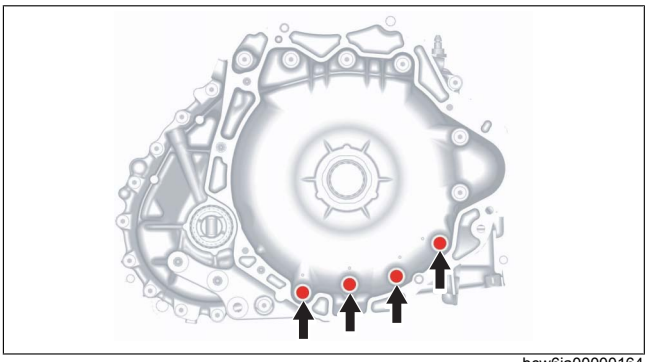


bcw6ja00000164

(2) Remove the bolts shown in the figure.

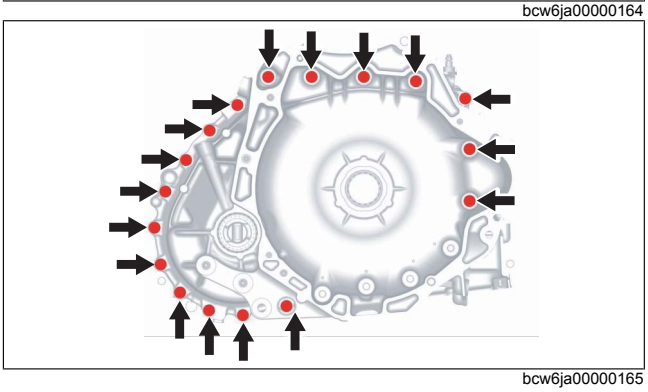


bcw6ja00000165

(3) Lightly tap the converter housing using a plastic hammer to remove it.

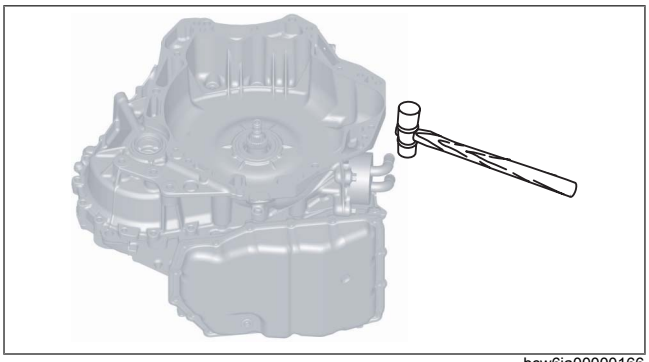


bcw6ja00000166

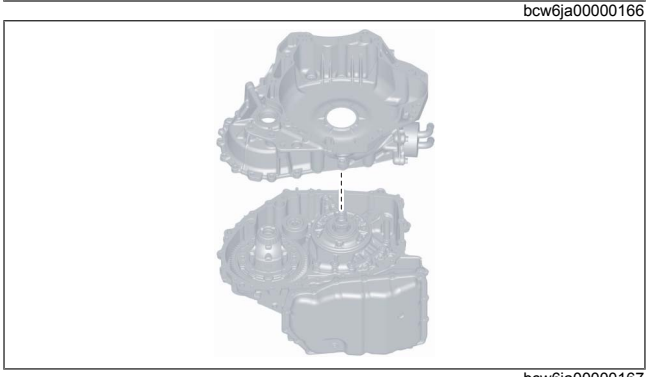

bcw6ja00000167


(4) Remove the O-rings.

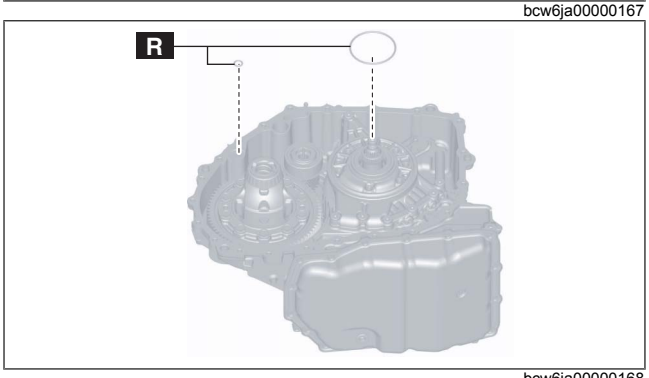

bcw6ja00000168


1	21 bolts
2	Converter housing
3	O-ring (oil pump)
4	O-ring

7. Remove the oil pump using the following procedure:

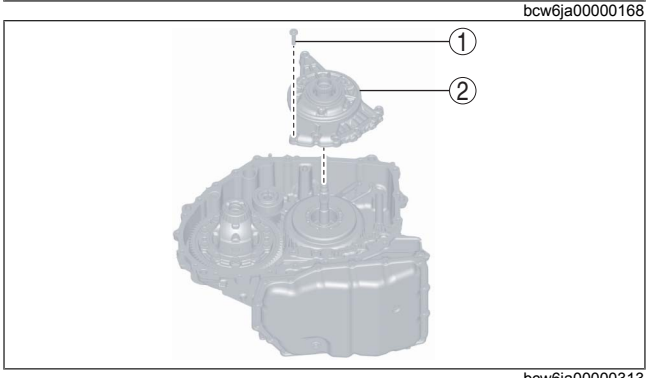

bcw6ja00000313


(1) Remove the bolts shown in the figure.

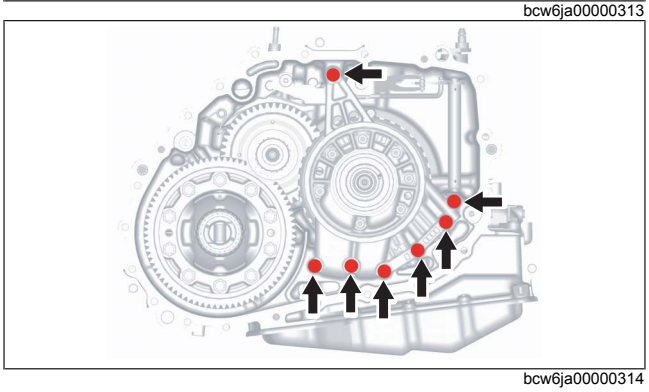

bcw6ja00000314


(2) Remove the oil pump.

1	7 bolts
2	Oil pump

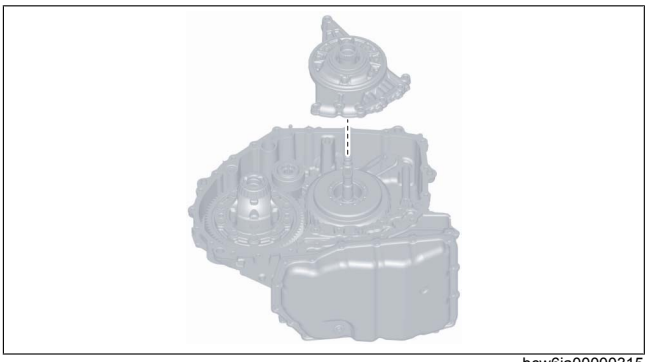


bcw6ja00000315

8. Remove the thrust washer.

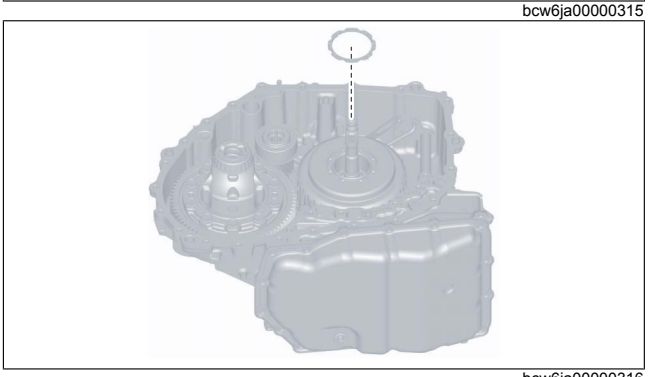


bcw6ja00000316

9. Remove the clutch component.

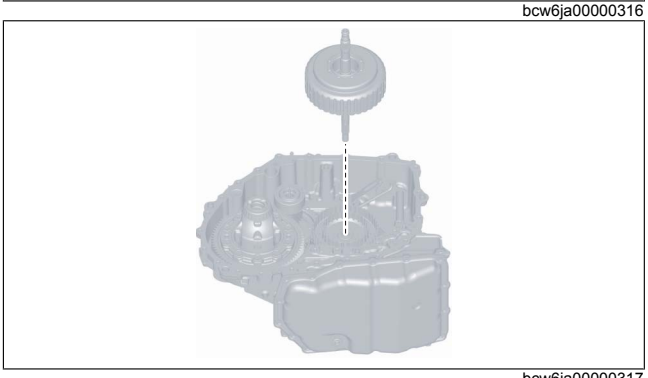

bcw6ja00000317

10. Remove the D-rings from the clutch component.

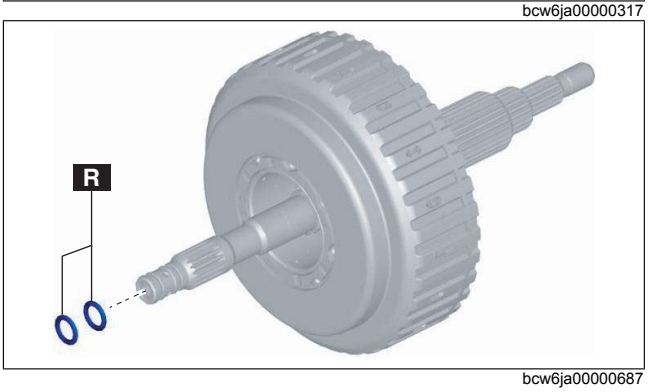


bcw6ja00000687


11. Remove the seal ring from the clutch component.

Caution
- **Only remove the seal ring when replacing it.**
- **Do not damage the shaft part of the clutch component.**
- **Collect all fragments if the seal ring is damaged.**

Note
- Remove the seal ring using a precision driver (flathead).

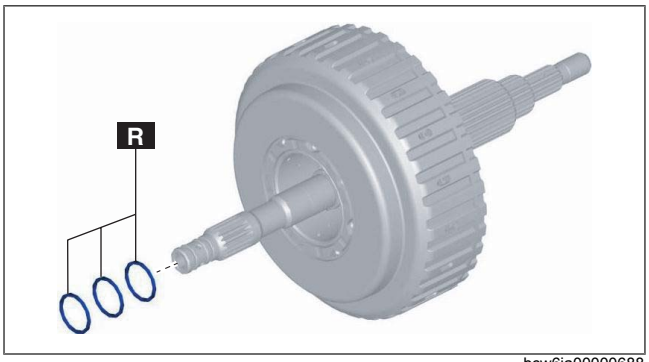


bcw6ja00000688

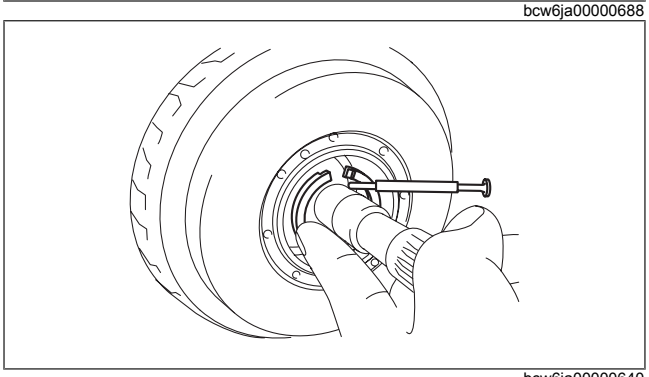


bcw6ja00000640

12. Remove the thrust needle bearing.

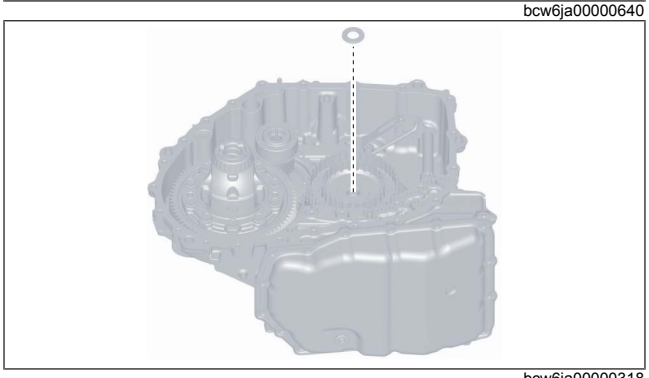


bcw6ja00000318

13. Remove the high clutch hub.

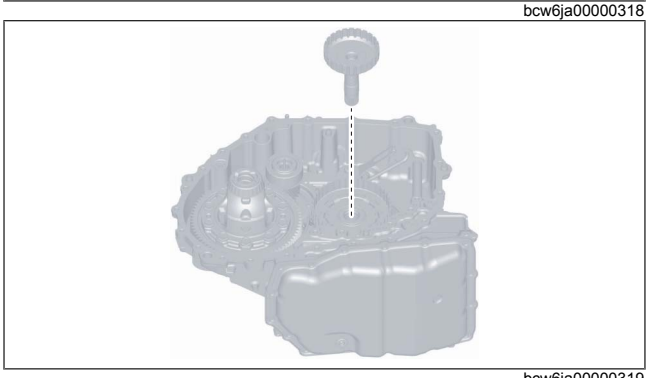


bcw6ja00000319

14. Remove the thrust needle bearing.

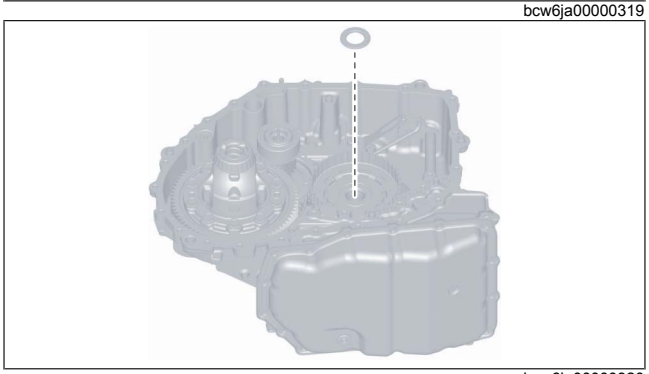


bcw6ja00000320

15. Remove the low clutch hub.

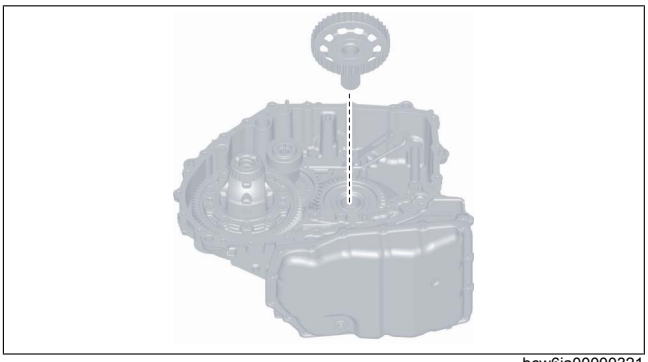


bcw6ja00000321

16. Remove the thrust needle bearing.

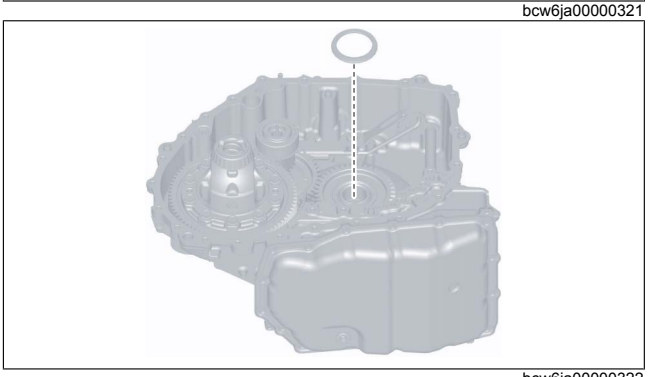


bcw6ja00000322

17. Remove the ring gear and differential.

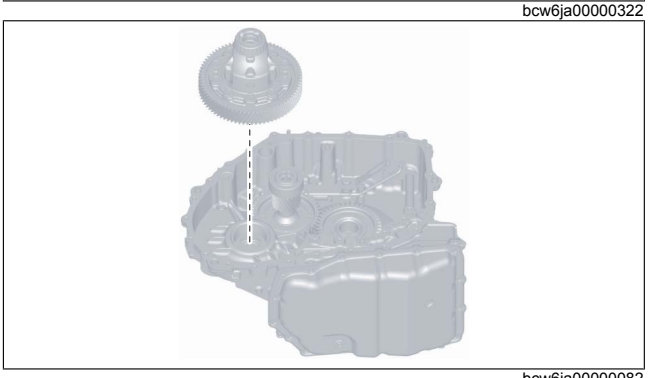


bcw6ja00000082

18. Remove the thrust needle bearing.

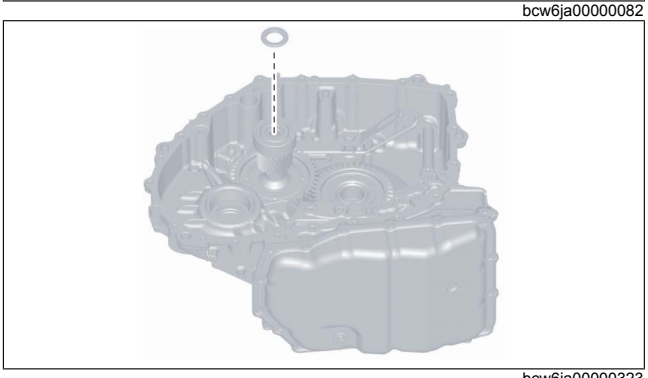


bcw6ja00000323

19. Remove the oil pipe.

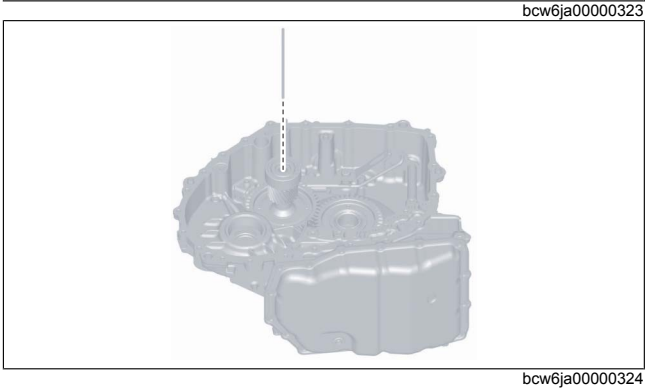


bcw6ja00000324

20. Remove the secondary gear and output gear.

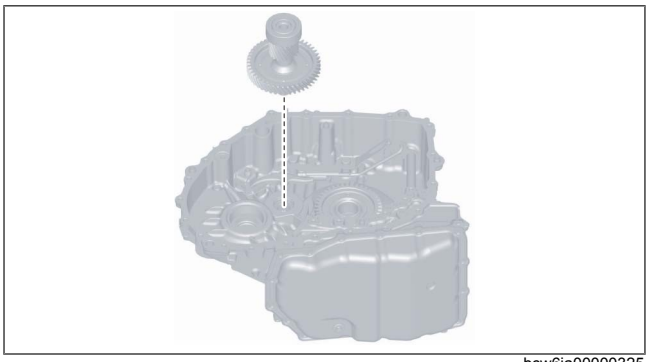

bcw6ja00000325

21. Remove the thrust needle bearing.

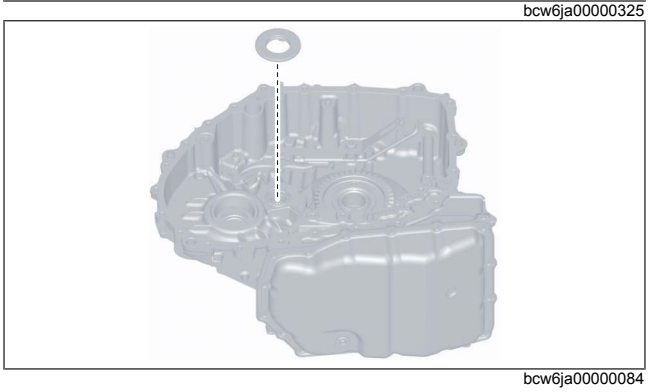


bcw6ja00000084

22. Remove the roll pin using the following procedure:
    (1) Verify that the parking shift lever component is in the P position.

Caution
- **If the parking shift lever component is in a position other than P, shift the parking shift lever component to the P position as shown in the figure.**


A : Parking shift lever component
B : Manual plate component
C : Detent bracket component

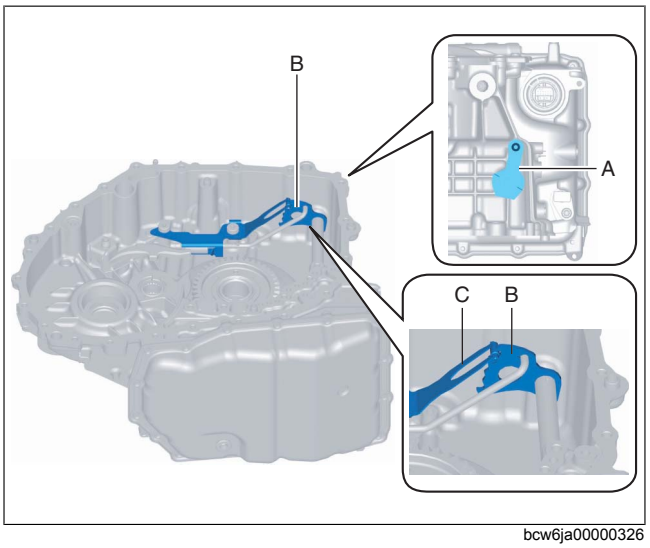


bcw6ja00000326

    (2) Remove the roll pin shown in the figure using a pin punch.


Note
- Use a pin punch with an end outer diameter of 3 mm {0.119 in} or more and less than 4 mm {0.157 in}.

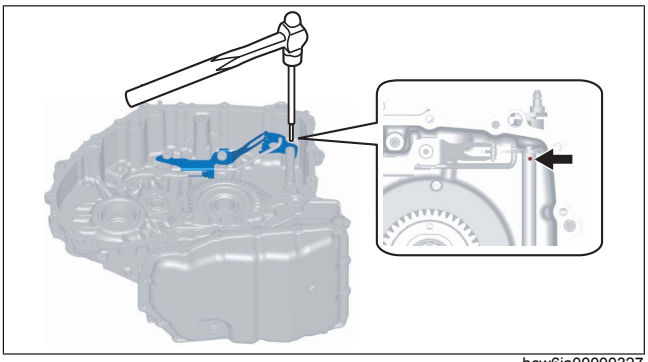
bcw6ja00000327

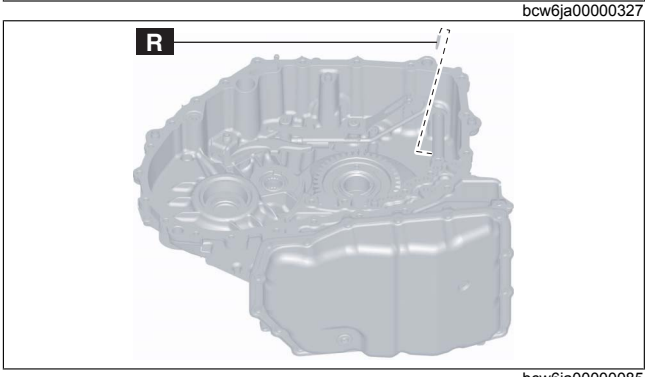


bcw6ja00000085

23. Remove the parking shift lever component.

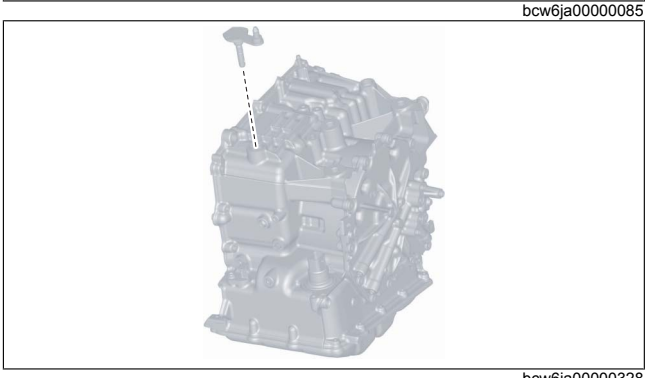
bcw6ja00000328


24. Remove the oil seal.

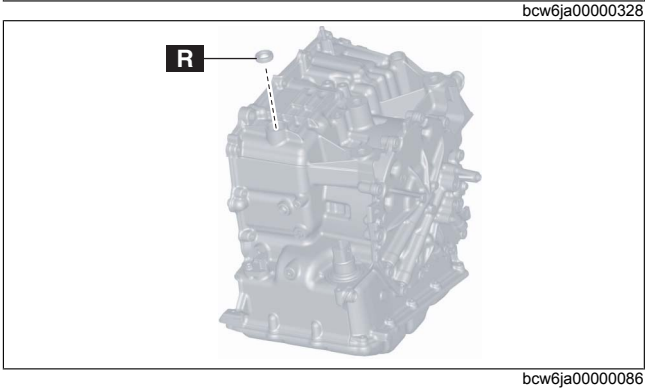

bcw6ja00000086

Caution

- **If the washer comes off together when the oil seal is removed, clean the washer and assemble it.**
  A: Washer

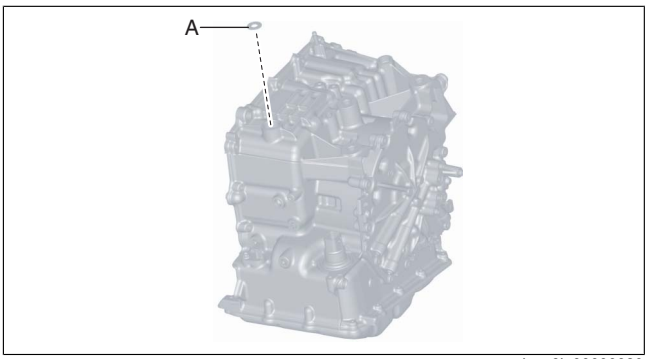


bcw6ja00000329

25. Assemble a new oil seal using the following procedure:


Caution
- **If an oil seal is reused it could cause ATF leakage, therefore use a new oil seal.**

(1) Apply ATF (ATF FZ) to the engagement area of the new oil seal and transaxle case.
(2) Apply ATF (ATF FZ) to the lip of the new oil seal.
(3) Assemble the new oil seal to the position shown in the figure using the SST.

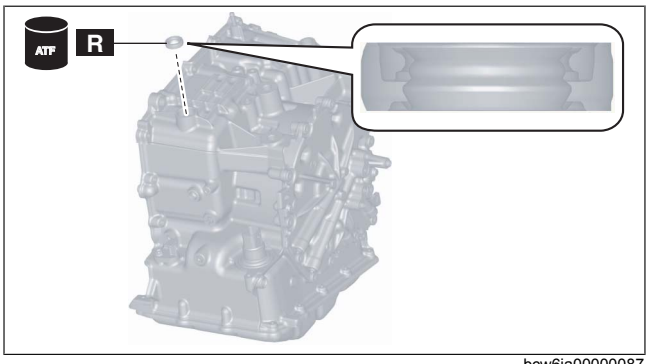

bcw6ja00000087


A : -0.3—0.3 mm {-0.01—0.01 in}

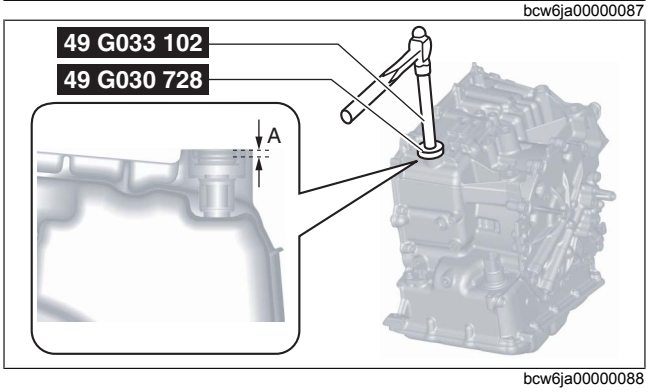

bcw6ja00000088

26. Assemble the parking shift lever component.


Note
- Pass the end of the parking shift lever component through the assembly hole (radial needle bearing) of the transaxle case, and assemble it to the manual plate component.

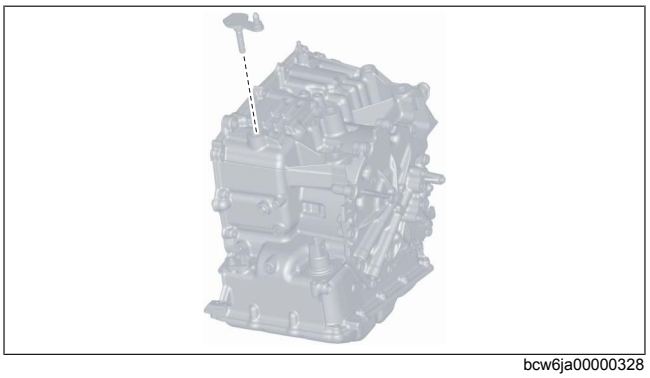
bcw6ja00000328

27. Assemble new roll pins using the following procedure:

(1) Set the manual plate component and parking shift lever component as shown in the figure and align with the roll pin hole.


A : Roll pin hole
B : Manual plate component
C : Parking shift lever component
D : Detent bracket component

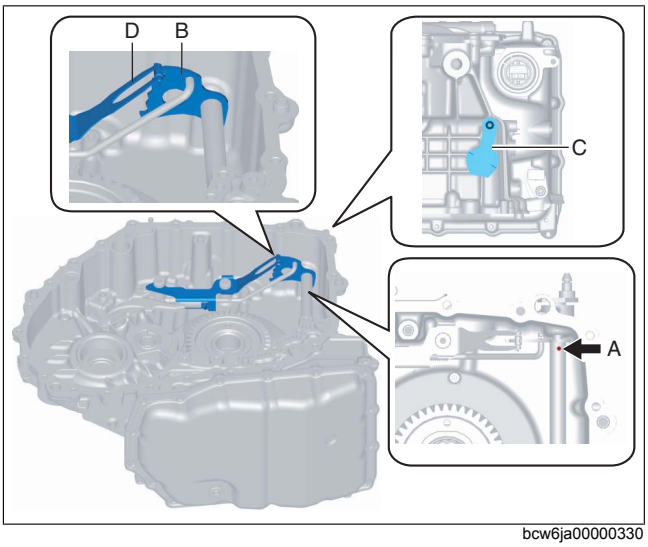

bcw6ja00000330


(2) Assemble a new roll pin to the position shown in the figure using a pin punch.

Note
- Use a pin punch with an end outer diameter of 5 mm {0.2 in} or more.

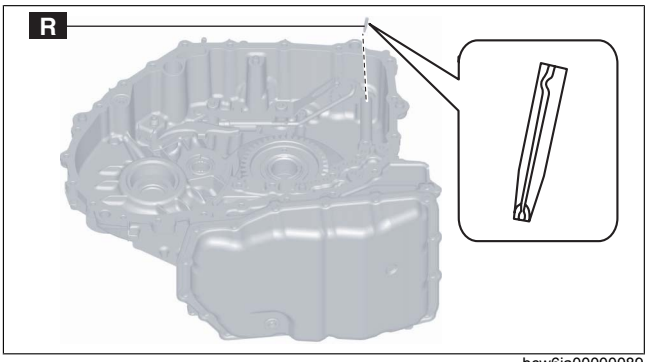

bcw6ja00000089


A : 0.00—1 mm {0.00—0.03 in}

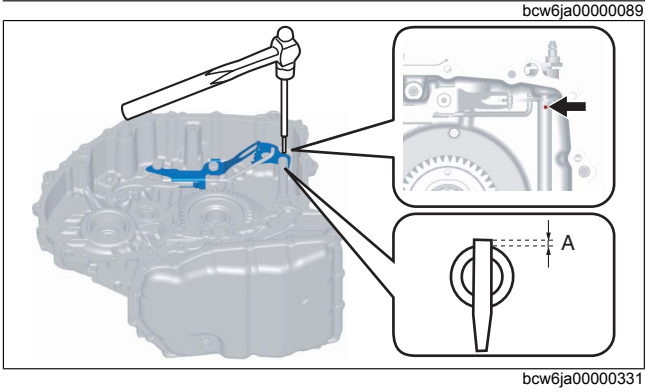

bcw6ja00000331


28. Assemble the thrust needle bearing.

Note
- Thrust needle bearing size: Outer diameter approx. 67 mm {2.6 in}

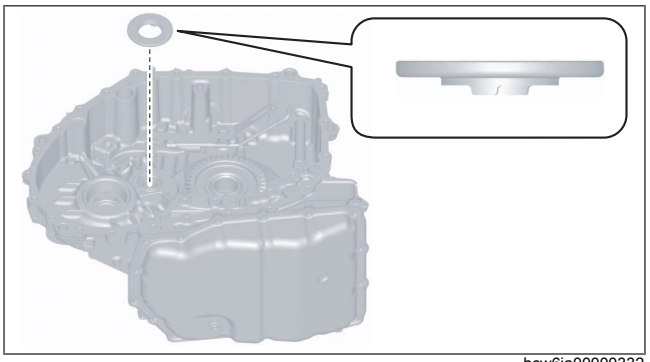

bcw6ja00000332

29. Assemble the secondary gear and output gear.

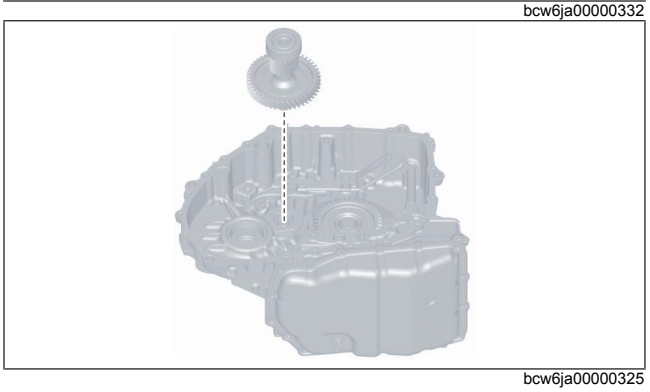


bcw6ja00000325

30. Assemble the oil pipe.

Caution

- **Do not assemble the oil pipe using a tool such as a hammer so as to prevent damaging the new part. For the oil pipe assembly, it is better to only use your hands to put the oil pipe into the output gear.**

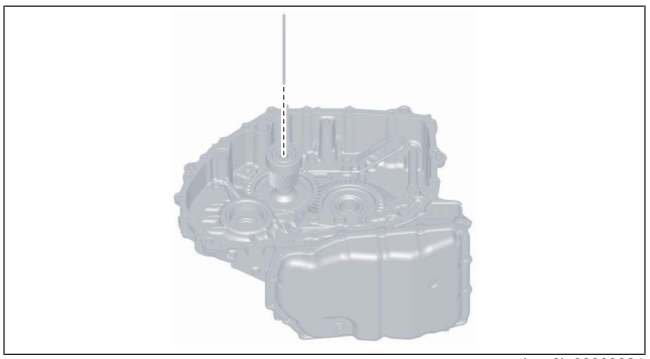


bcw6ja00000324

31. Assemble the thrust needle bearing.


Note

- Thrust needle bearing size: Outer diameter approx. 39.4 mm {1.55 in}

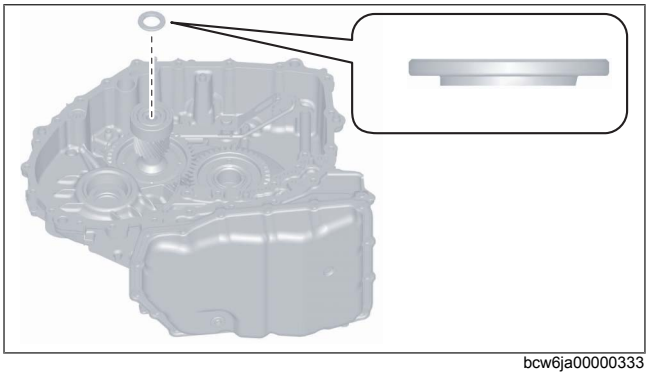

bcw6ja00000333


32. Assemble the ring gear and differential.

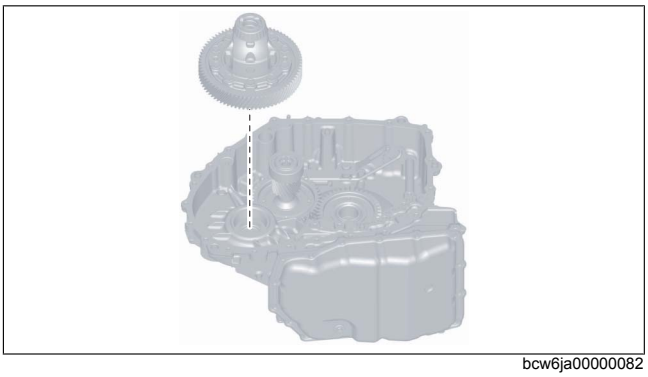

bcw6ja00000082

33. Assemble the thrust needle bearing.

Note
- Thrust needle bearing size: Inner diameter approx. 51.5 mm {2.03 in}

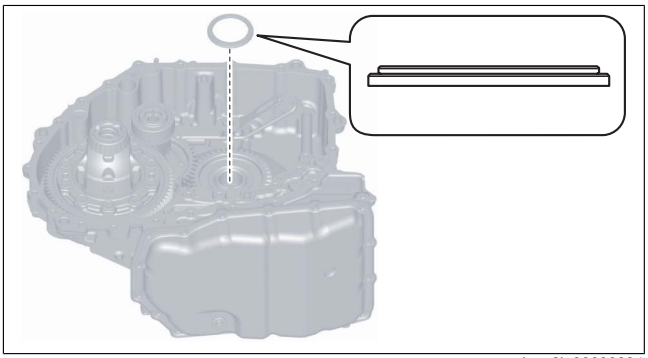


bcw6ja00000334

34. Assemble new seal rings to the clutch component using the following procedure:

Caution
- **If a seal ring is reused it could cause ATF leakage, therefore use a new seal ring.**


(1) Apply ATF (ATF FZ) to the new seal rings.

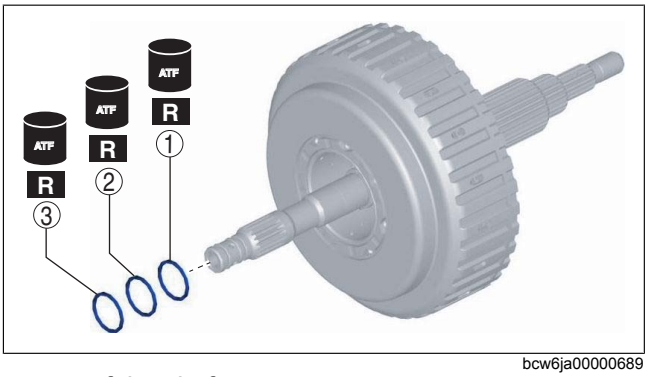


bcw6ja00000689

(2) Roll an A4-size piece of paper onto the maximum diameter of the shaft.

Note
- Rolled piece of paper inner diameter approx. 27 mm {1.1 in}

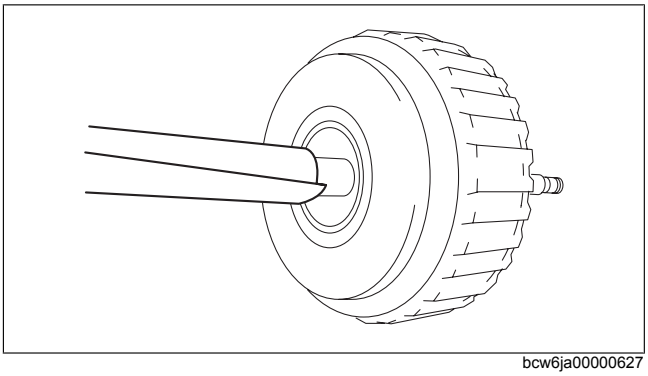


bcw6ja00000627

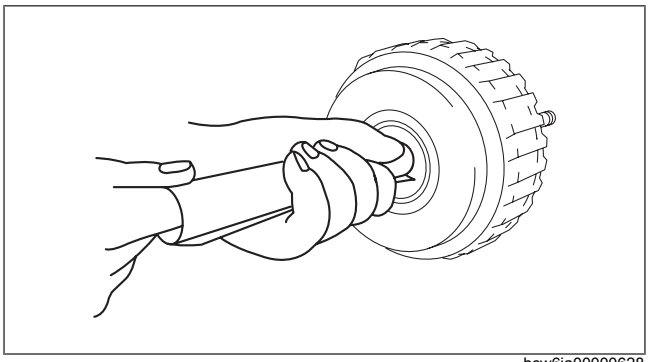


bcw6ja00000628

(3) Secure both ends of the rolled piece of paper with tape as shown in the figure.

A : TAPE

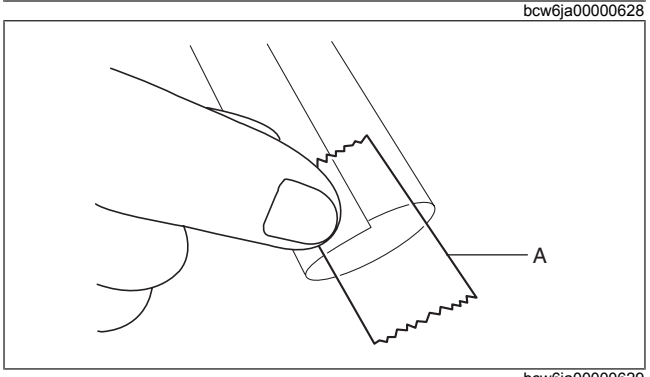

bcw6ja00000629

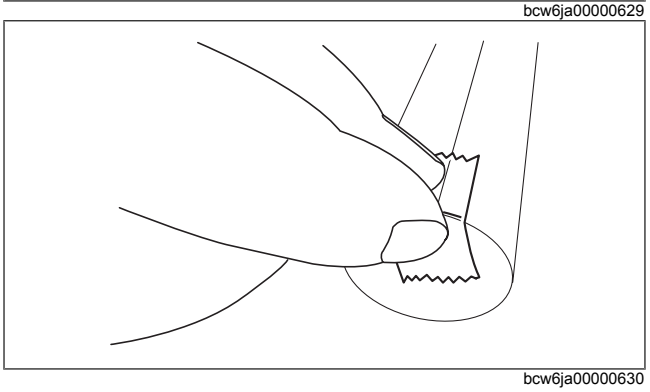


bcw6ja00000630

(4) Align the rolled piece of paper with the seal ring groove of the clutch component.

Note


- The figure shows the seal ring groove (end cover side) lined up.

A : Rolled piece of paper
B : Seal ring (end cover side) installation position

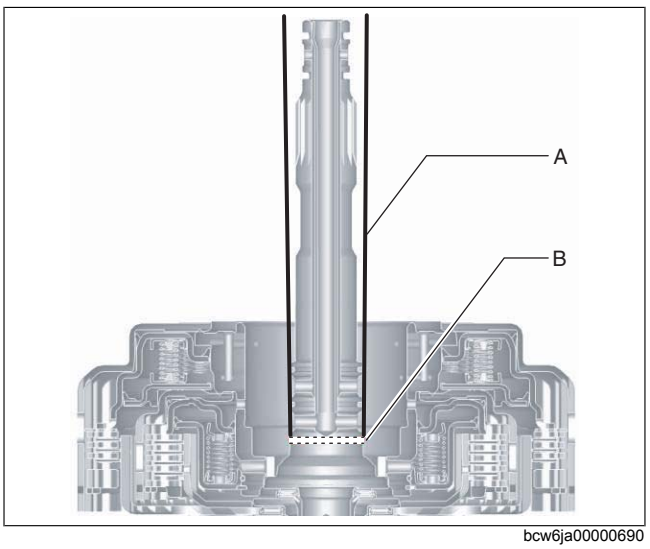

bcw6ja00000690

(5) Bend the rolled piece of paper to the end of the shaft.

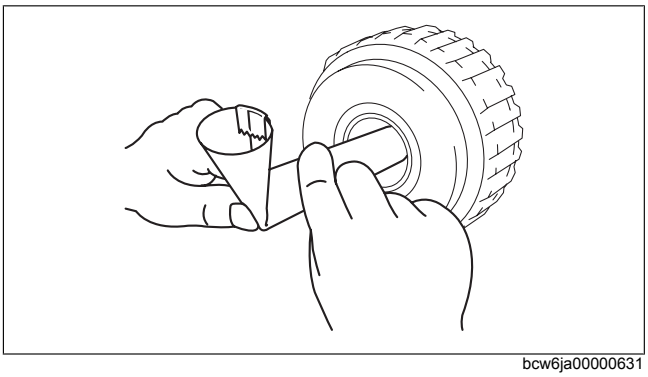


bcw6ja00000631

(6) Attach the new seal ring to the position approx. 5 mm {0.2 in} from the insertion side of the end of the rolled piece of paper, and align the seal ring end gap to the position of the tape.

Caution
- **Be careful not to open the seal ring too much, it might become damaged.**

A : Seal ring

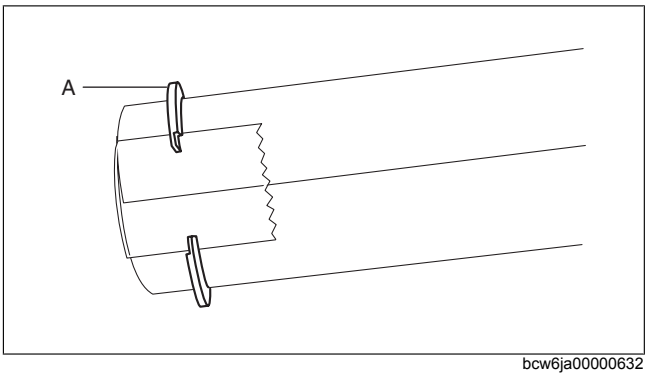


bcw6ja00000632

(7) Assemble the seal ring in the groove by pushing the seal ring evenly with a precision driver (Phillips).

Caution
- **Because an operation malfunction might occur, verify that the seal ring is assembled to the groove.**

(8) Assemble the seal ring (center section) using the same procedure from Steps 1 to 7.

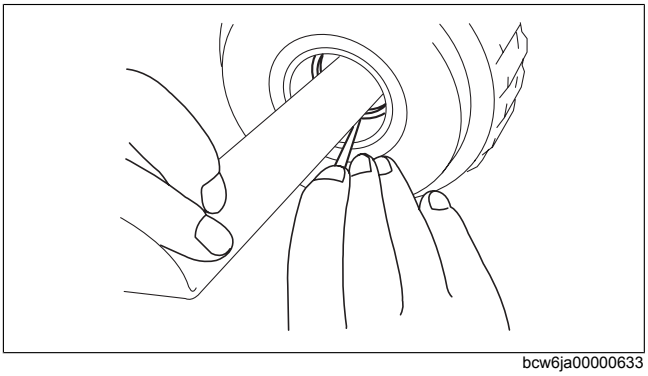


bcw6ja00000633

(9) Assemble the seal ring (torque converter side) to the groove while using a finger to widen the seal ring.

Caution
- **Be careful not to open the seal ring too much, it might become damaged.**

1	Seal ring (end cover side) (outer diameter approx. 24.6 mm {0.969 in}, thickness approx. 1.5 mm {0.059 in})
2	Seal ring (center section) (outer diameter approx. 24.6 mm {0.969 in}, thickness approx. 1.5 mm {0.059 in})
3	Seal ring (torque converter side) (outer diameter approx. 24.6 mm {0.969 in}, thickness approx. 1.5 mm {0.059 in})

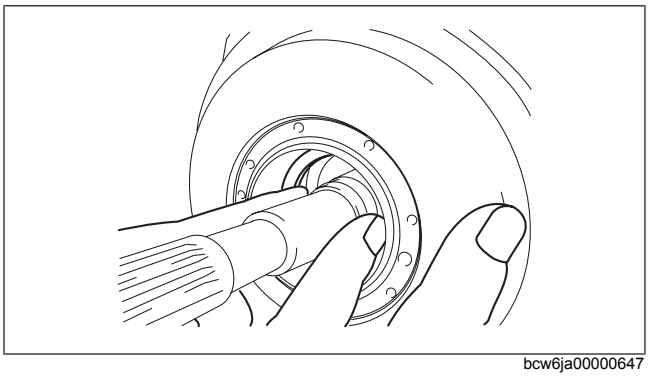


bcw6ja00000647

35. Assemble new D-rings to the clutch component using the following procedure:

Caution
- **If a D-ring is reused it could cause ATF leakage, therefore use a new D-ring.**


(1) Apply ATF (ATF FZ) to the new D-rings.
(2) Assemble the new D-rings to the clutch component.

Note
- D-ring size: Outer diameter approx. 16.3 mm {0.642 in}, thickness approx. 1.6 mm {0.063 in}

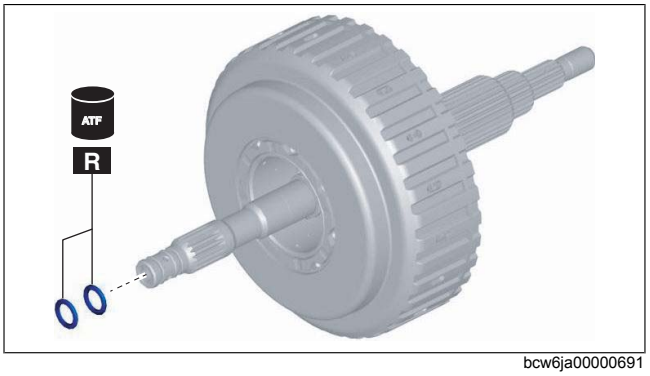

bcw6ja00000691


36. Assemble together the clutch component, high clutch hub, low clutch hub, and thrust needle bearing using the following procedure:
(1) Assemble the parts using the procedure shown in the figure:

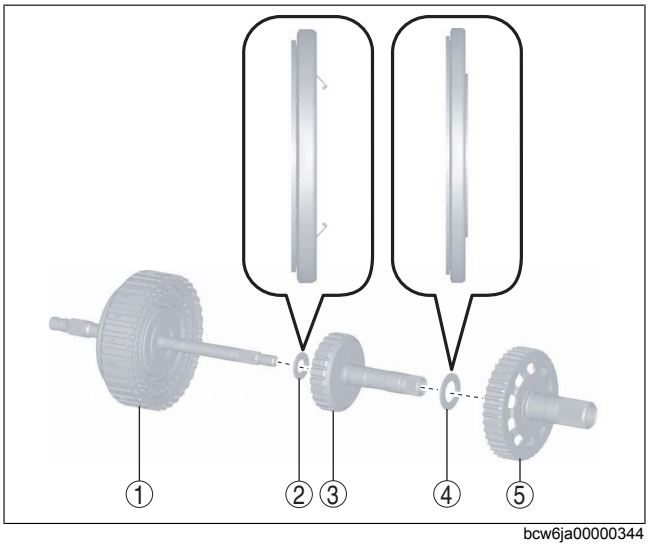

bcw6ja00000344

Note
- For the high clutch hub and low clutch hub assembly, assembly is easier if the work is performed using the following procedure:
  — High clutch hub

1. Place the assembled parts on the workbench with the clutch component situated sideways.

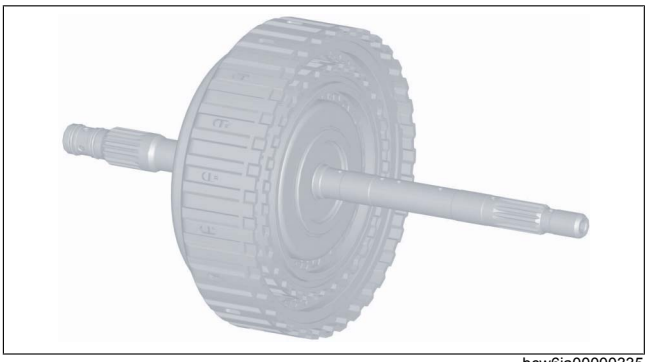


bcw6ja00000335


2. While rotating the high clutch hub, engage the splines of each of the high clutch drive plates one by one, and assemble.

— Low clutch hub

1. Place the assembled parts on the workbench with the clutch component situated sideways.

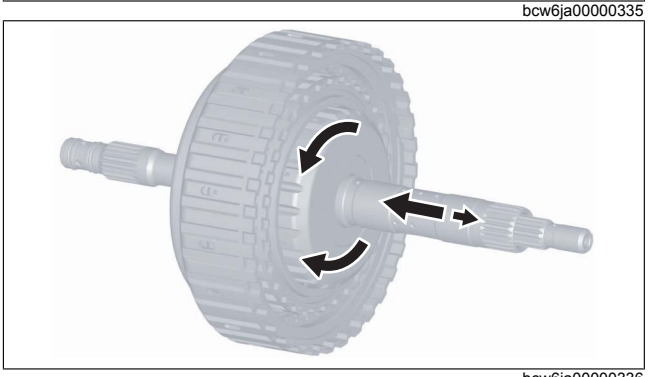


bcw6ja00000336

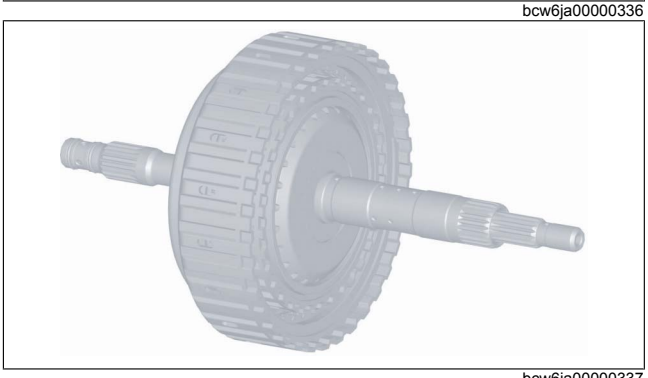

bcw6ja00000337

2. While rotating the low clutch hub, engage the splines of each of the low clutch drive plates one by one, and assemble.

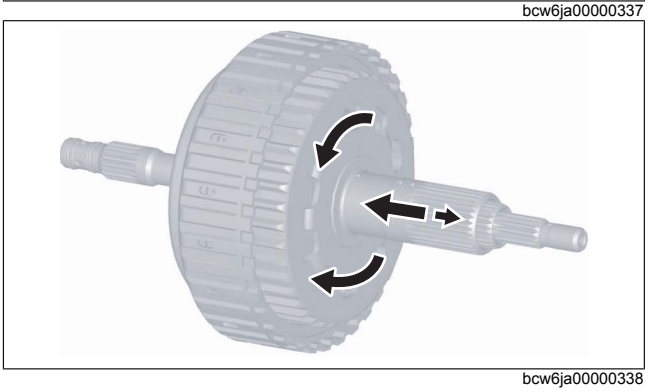

bcw6ja00000338

1	Clutch component
2	Thrust needle bearing (outer diameter approx. 32.6 mm {1.28 in})
3	High clutch hub
4	Thrust needle bearing (outer diameter approx. 44 mm {1.7 in})
5	Low clutch hub


(2) To verify that the parts are securely assembled together, measure the distance shown in the figure.

Note


- Recommended measuring instrument: Vernier caliper

Specification
60.60—62.09 mm {2.386—2.444 in}

- If not within the specification, disassemble the assembled parts and reassemble.

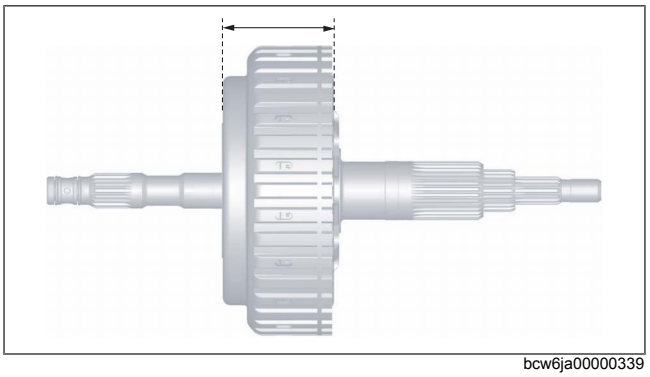
bcw6ja00000339


37. Assemble the parts which were assembled together in Step 36 using the following procedure:
    (1) Assemble the parts assembled together in Step 36.

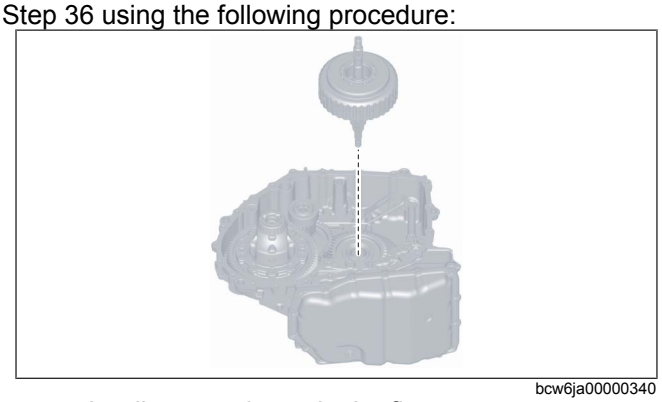
bcw6ja00000340

    (2) To verify that the parts are securely assembled, measure the distance shown in the figure.

Note
- Recommended measuring instrument: Depth gauge, straight edge ruler

A : Transaxle case end (alignment surface with converter housing)
B : Clutch component end

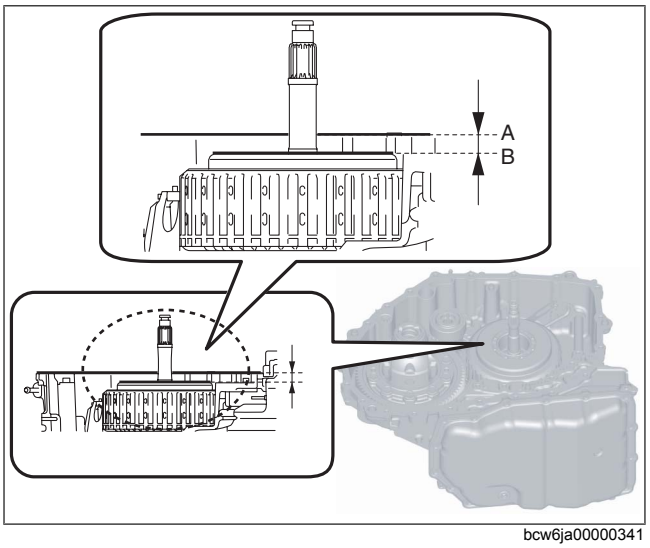

bcw6ja00000341

Specification
8.46—9.88 mm {0.334—0.388 in}


- If not within the specification, remove the parts and perform re-assembly from Step 36.

Note
- Measurement method

1) Set two straight edge rulers along the alignment surface of the transaxle case with the converter housing as shown in the figure.
2) Measure the positions (2 locations) shown in the figure using a depth gauge and calculate the average value.

A : Straight edge rulers


3) Subtract the thickness of the straight edge rulers from the average value.

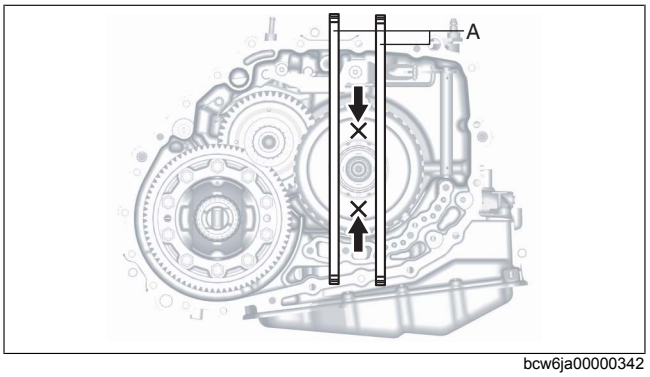

bcw6ja00000342


38. Assemble the thrust washer.

Note
- Thrust washer size: Inner diameter approx. 58.7 mm {2.31 in}

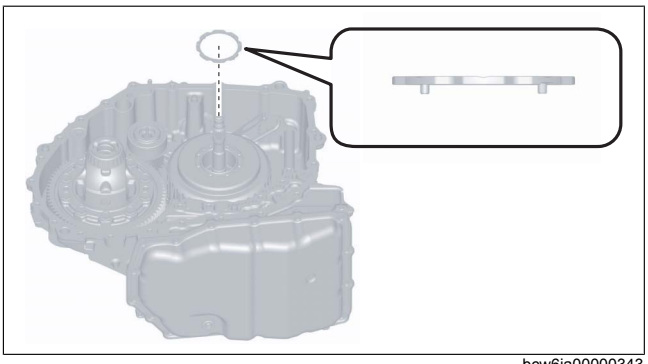


bcw6ja00000343

39. Assemble the oil pump using the following procedure:

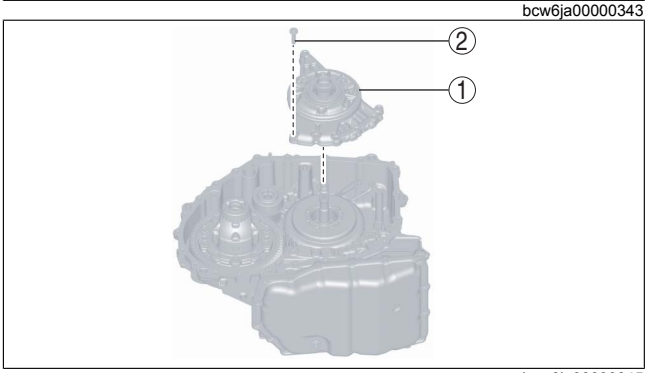

bcw6ja00000345

(1) Assemble the oil pump.

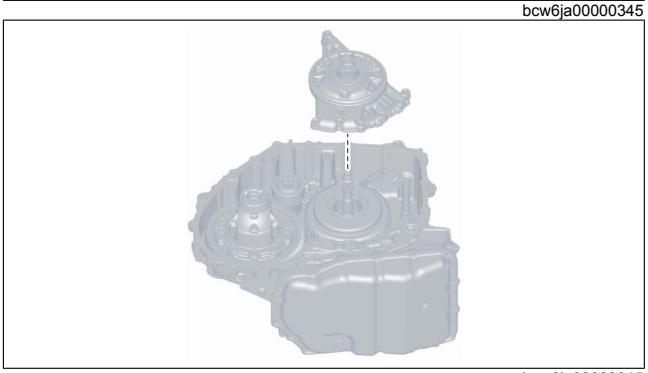


bcw6ja00000315

(2) Assemble and tighten the bolts shown in the figure.

Note
- Bolt size: M8 x 1.25 bolt (length approx. 31 mm {1.2 in})

Tightening torque
19—25 N·m {2.0—2.5 kgf·m, 15—18 ft·lbf}

1	Oil pump
2	7 bolts (M8 x 1.25 bolt, length approx. 31 mm {1.2 in})

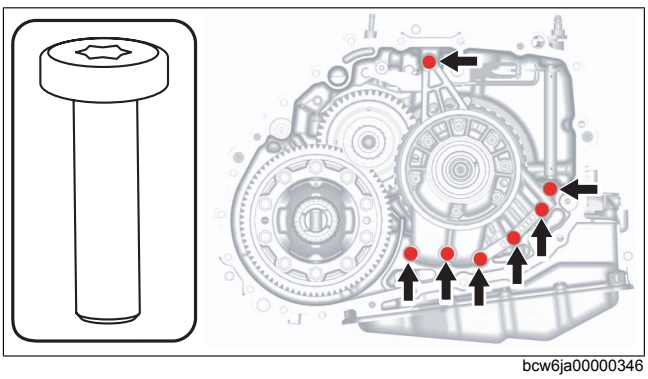

bcw6ja00000346

40. Assemble the converter housing using the following procedure:

* : Of the 21 bolts, 4 are applied with sealant


(1) Assemble new O-rings using the following procedure:

Caution


- **If an O-ring is reused it could cause ATF leakage, therefore use a new O-ring.**

1) Apply ATF (ATF FZ) to the new O-rings.

2) Assemble the new O-rings.

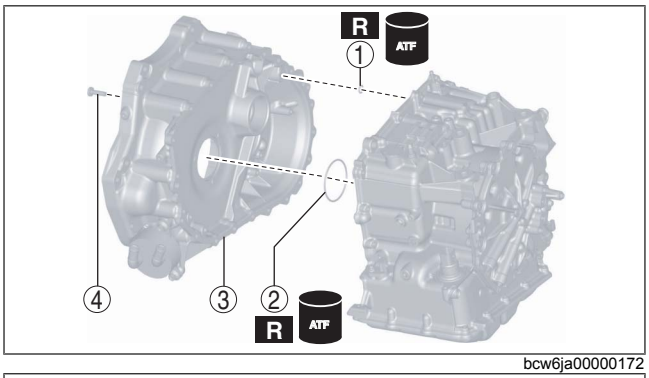

bcw6ja00000172

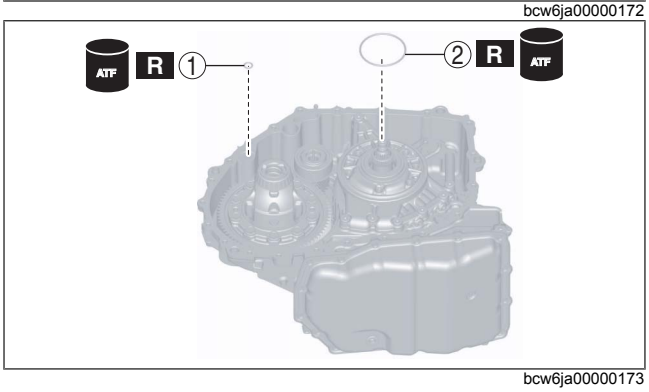

bcw6ja00000173

1	O-ring (outer diameter approx. 15.6 mm {0.614 in}, thickness approx. 2.4 mm {0.094 in})
2	O-ring (outer diameter approx. 73.3 mm {2.89 in}, thickness approx. 3.0 mm {0.12 in})

(2) Remove any remaining old sealant on the contact surfaces of the transaxle case and converter housing, and degrease the contact surfaces.

Caution

- **When degreasing and if degreaser is used, use a rag saturated with degreaser and be careful not to allow degreaser to penetrate the interior of the transaxle.**
  In addition, after degreasing, visually verify that there is no foreign matter (such as old sealant, cloth fibers) which has penetrated the interior of the transaxle.


(3) Apply sealant (silicone sealant TB1217E) to the transaxle case.

Caution


- **If sealant is applied excessively or applied to a part other than the indicated part, the O-ring could deform and the sealant could penetrate the oil passage. Apply an appropriate amount of sealant to the indicated part.**

Note

- Sealant application amount (bead thickness): φ1.8—2.5 mm {0.071—0.098 in}.

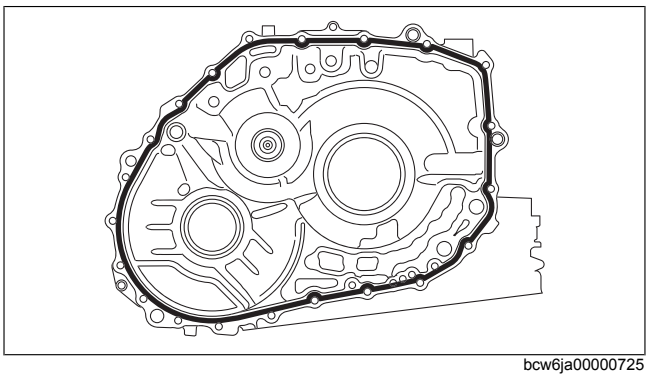
bcw6ja00000725


(4) Assemble the converter housing before the applied sealant starts to harden.

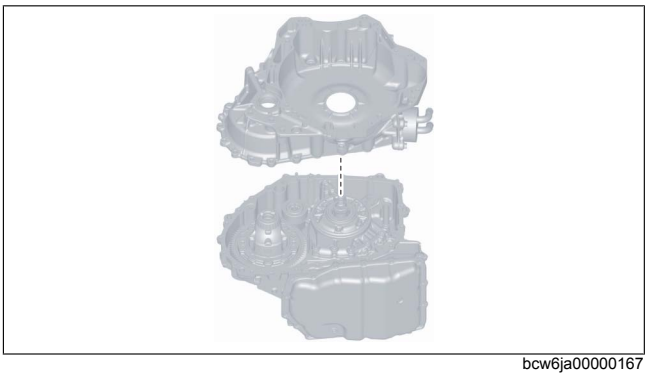

bcw6ja00000167

(5) Assemble and temporarily tighten the bolts to the positions shown in the figure.

Note
- Bolt size: M8 x 1.25 bolt (length approx. 28 mm {1.1 in})

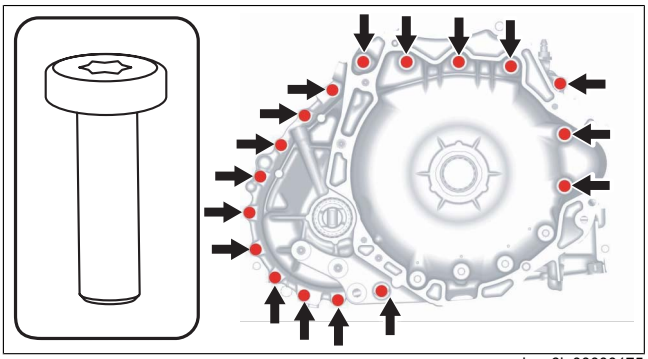


bcw6ja00000175

(6) Assemble and temporarily tighten the new bolts to the positions shown in the figure.

Caution
- **The bolts for the assembly are coated with sealant. If the bolts are reused it could cause ATF leakage, therefore use new bolts.**


Note
- Bolt size: M8 x 1.25 bolt, length approx. 28 mm {1.1 in} (with sealant applied)

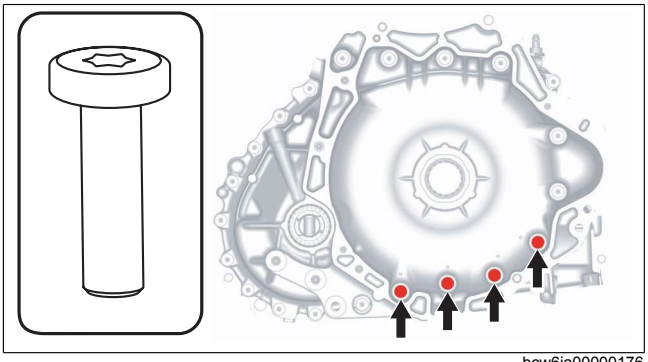

bcw6ja00000176

(7) Tighten the bolts shown in the figure.

Tightening torque
19—25 N·m {2.0—2.5 kgf·m, 15—18 ft·lbf}

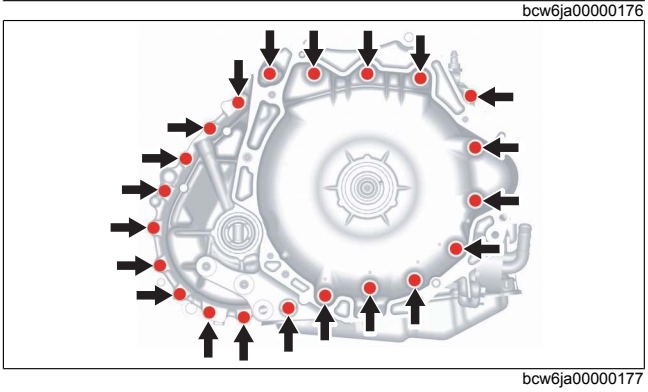

bcw6ja00000177


1	O-ring (outer diameter approx. 15.6 mm {0.614 in}, thickness approx. 2.4 mm {0.094 in})
2	O-ring (outer diameter approx. 73.3 mm {2.89 in}, thickness approx. 3.0 mm {0.12 in})
3	Converter housing
4	21 Bolts * (M8 x 1.25 bolt, length approx. 28 mm {1.1 in})

41. Remove the SSTs from the transaxle using the following procedure:

Caution
- **When removing the transaxle from the SST (engine stand) using chain hoists, be careful not to allow the transaxle (oil cooler in particular) to contact the SST (engine stand). If the transaxle contacts the SST, verify the areas which are contacted and replace damaged parts with new ones.**

(1) Assemble the SSTs using part number: 9YA02 1015, or M10 x 1.5 bolt (length 35 mm {1.4 in}).
A : Part number: 9YA02 1015, or M10 x 1.5 bolt, length 35 mm {1.4 in}

Tightening torque
38—52 N·m {3.9—5.3 kgf·m, 29—38 ft·lbf}

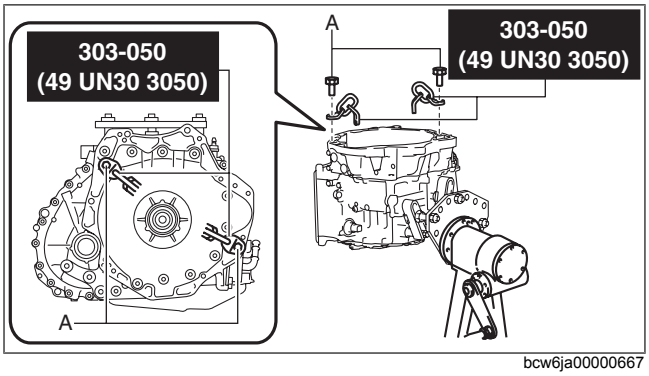


bcw6ja00000667

(2) Using chain hoists, remove the transaxle from the SST (engine stand).


Caution
- **When removing the transaxle from the SST (engine stand) using chain hoists, be careful not to allow the transaxle (oil cooler in particular) to contact the SST (engine stand). If the transaxle contacts the SST, verify the areas which are contacted and replace damaged parts with new ones.**

A : Part number: 9YA02 A220, or M12 x 1.75 bolt, length 40 mm {1.6 in}

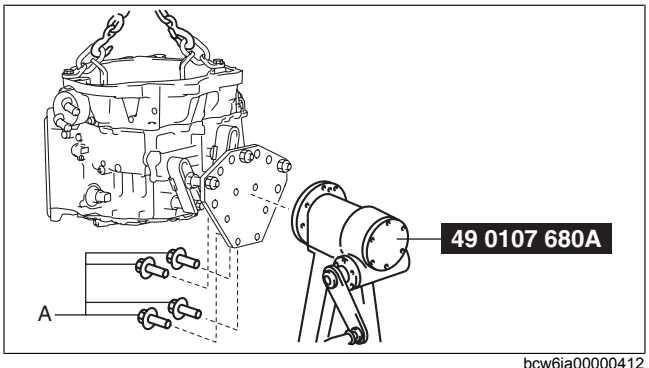

bcw6ja00000412


(3) Remove the SSTs.
A : Part number: 9YA02 1015, or M10 x 1.5 bolt, length 35 mm {1.4 in}

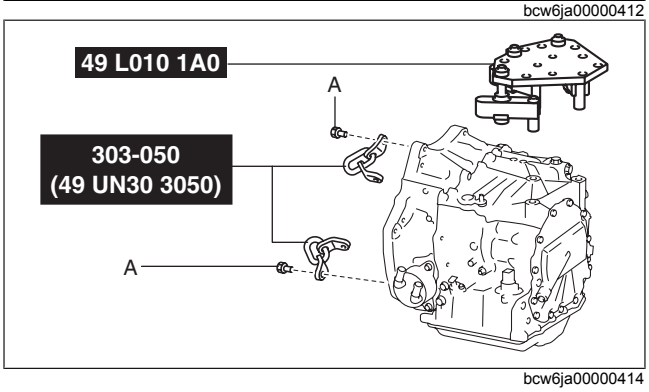

bcw6ja00000414

(4) Disassemble the SST.

A : Part number: 9YA02 1440, or M14 x 1.5 bolt, length 100 mm {3.94 in}

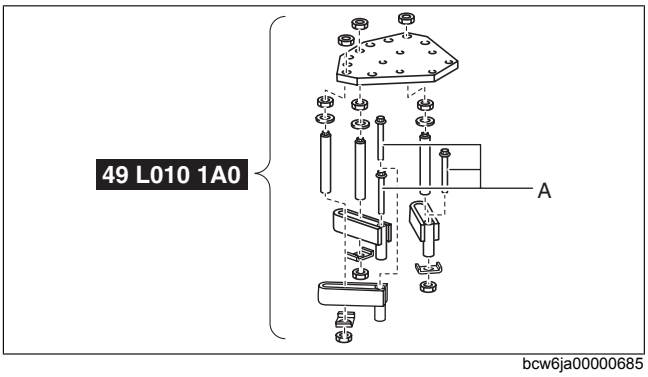


bcw6ja00000685

42. Assemble the torque converter using the following procedure:


(1) Apply ATF (ATF FZ) to the stator shaft end of the oil pump shown in the figure.

Caution

- **Accurately perform the procedure to protect the internal parts of the torque converter.**

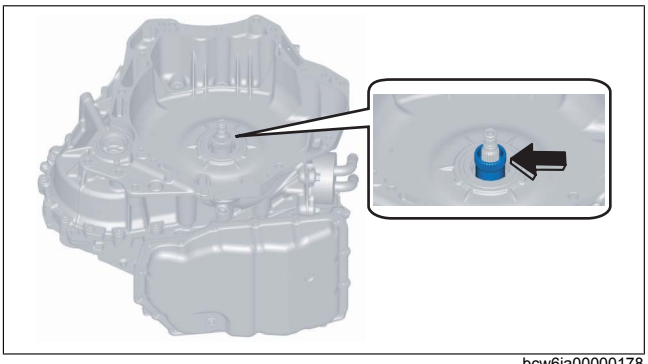
bcw6ja00000178

(2) Assemble the torque converter so that the two surfaces of the notch on the end of the torque converter engage the inner rotor of the oil pump.

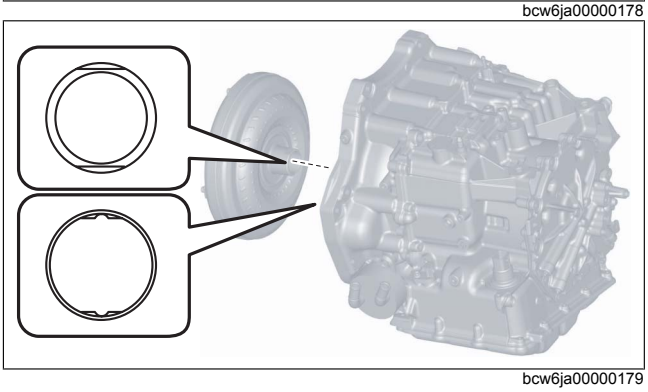
bcw6ja00000179


(3) To verify that the torque converter is securely assembled, measure the distance shown in the figure.

Note

- Recommended measuring instrument: Depth gauge, straight edge ruler

A : Converter housing end (alignment surface with engine)

B : Torque converter stud bolt surface

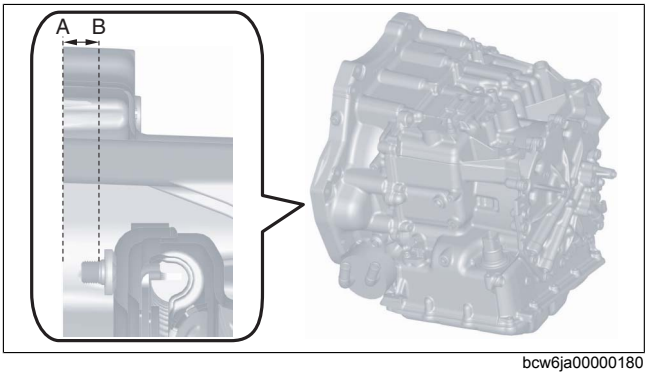

bcw6ja00000180

Specification

17.2 mm {0.678 in} or more

- If not within the specification, remove the torque converter and reassemble.

Note


- Measurement method

1) Set two straight edge rulers along the alignment surface of the converter housing with the engine as shown in the figure.

2) Measure the positions (2 locations) shown in the figure using a depth gauge and calculate the average value.

A : Straight edge rulers


3) Subtract the thickness of the straight edge rulers from the average value.

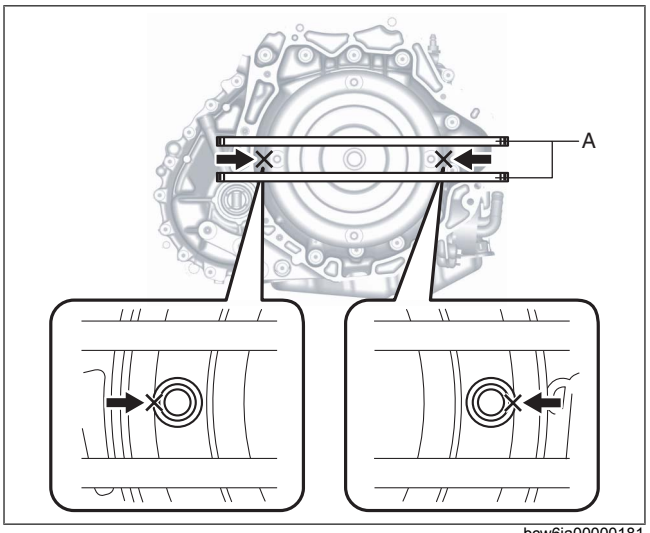

bcw6ja00000181

43. Assemble and tighten the stud bolts.


Tightening torque
15—25 N·m {1.6—2.5 kgf·m, 12—18 ft·lbf}

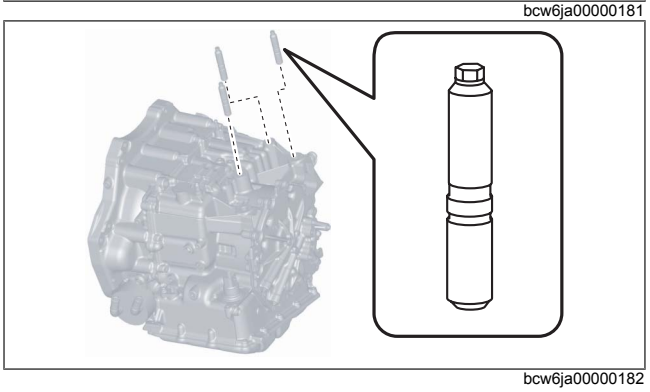

bcw6ja00000182

44. Assemble the electric AT oil pump using the following procedure: (only vehicles with i-stop)

Caution
- **Do not drop or apply a shock to the electric AT oil pump. Replace the electric AT oil pump with a new one if it was dropped or received an impact.**
- **Do not disassemble the electric AT oil pump. Replace the electric AT oil pump if it has been disassembled.**
- **Verify that there is no sealant or foreign matter in the electrical AT oil pump and transaxle. Otherwise, it could cause a malfunction.**
- **Be careful not to scratch or damage the aligning surfaces of the electric AT oil pump and end cover and the O-ring installation area so as not to cause ATF leakage.**

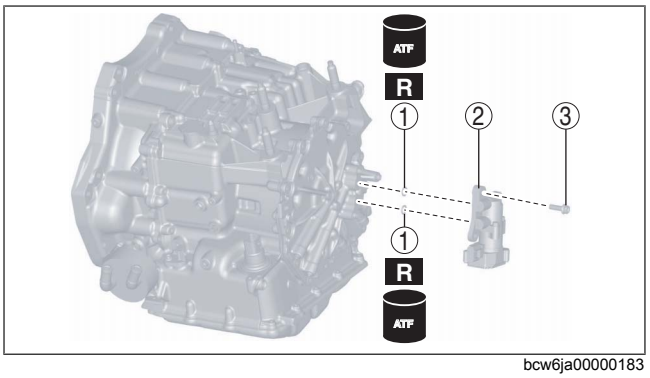

bcw6ja00000183

(1) Assemble new O-rings using the following procedure:


Caution
- **If an O-ring is reused it could cause ATF leakage, therefore use a new O-ring.**

Note
- O-ring size: Outer diameter approx. 15.6 mm {0.614 in}, thickness approx. 2.4 mm {0.094 in}

1) Apply ATF (ATF FZ) to the new O-rings.

2) Assemble the new O-rings.

(2) Remove any remaining old sealant on the contact surfaces of the end cover and electric AT oil pump, and clean degrease the contact surfaces.

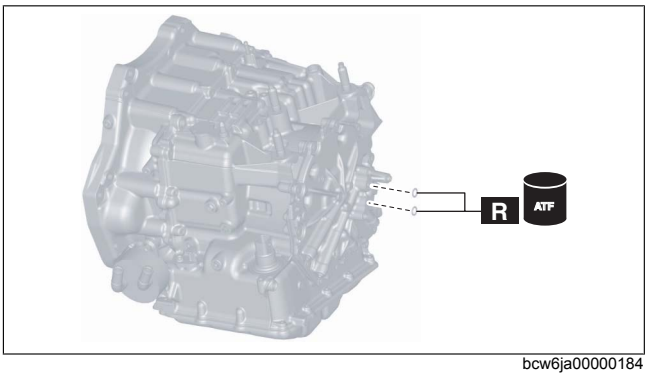

bcw6ja00000184

Caution

- **When degreasing and if degreaser is used, use a rag saturated with degreaser and be careful not to allow degreaser to penetrate the oil passage.**
  In addition, after degreasing, visually verify that there is no foreign matter (such as old sealant, cloth fibers) which has penetrated the oil passage.


(3) Apply sealant (silicone sealant TB1217E) to the electric AT oil pump.

Caution

- **If sealant is applied excessively or applied to a part other than the indicated part, the O-ring could deform and the sealant could penetrate the oil passage. Apply an appropriate amount of sealant to the indicated part.**


Note

- Sealant application amount (bead thickness): φ0.5—1.5 mm {0.02—0.05 in}.

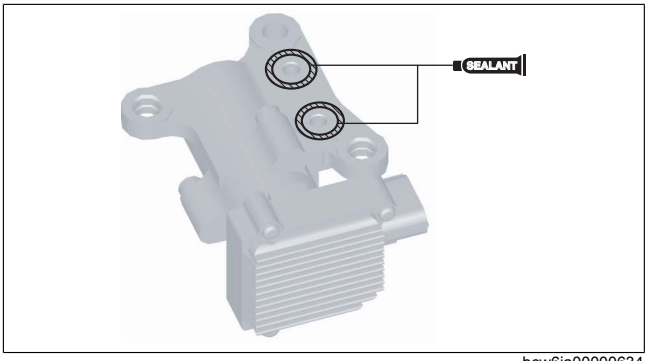

bcw6ja00000634

(4) Assemble the electric AT oil pump before the applied sealant starts to harden.

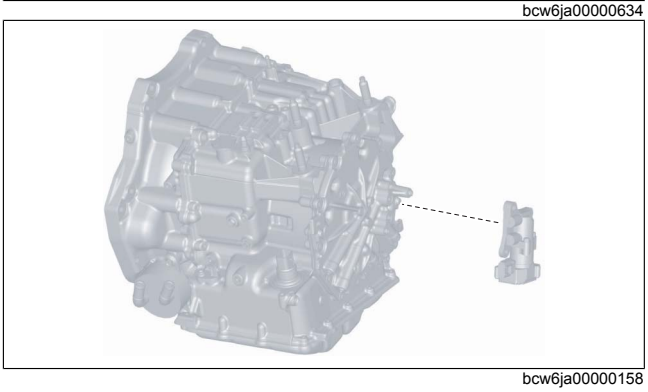
bcw6ja00000158


(5) Assemble and tighten the bolts shown in the figure.

Note

- Bolt size: M8 x 1.25 bolt (length approx. 25 mm {0.98 in})

Tightening torque
19—25 N·m {2.0—2.5 kgf·m, 15—18 ft·lbf}

1	O-ring (outer diameter approx. 15.6 mm {0.614 in}, thickness approx. 2.4 mm {0.094 in})
2	Electric AT oil pump
3	3 bolts (M8 x 1.25 bolt, length approx. 25 mm {0.98 in})

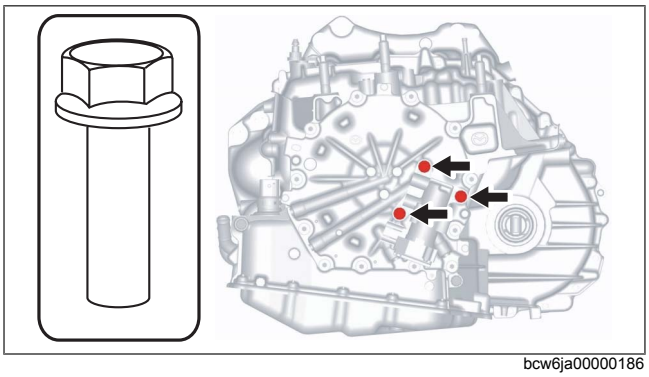

bcw6ja00000186