
## SECONDARY GEAR AND OUTPUT GEAR DISASSEMBLY

id051700661000

### Structural view

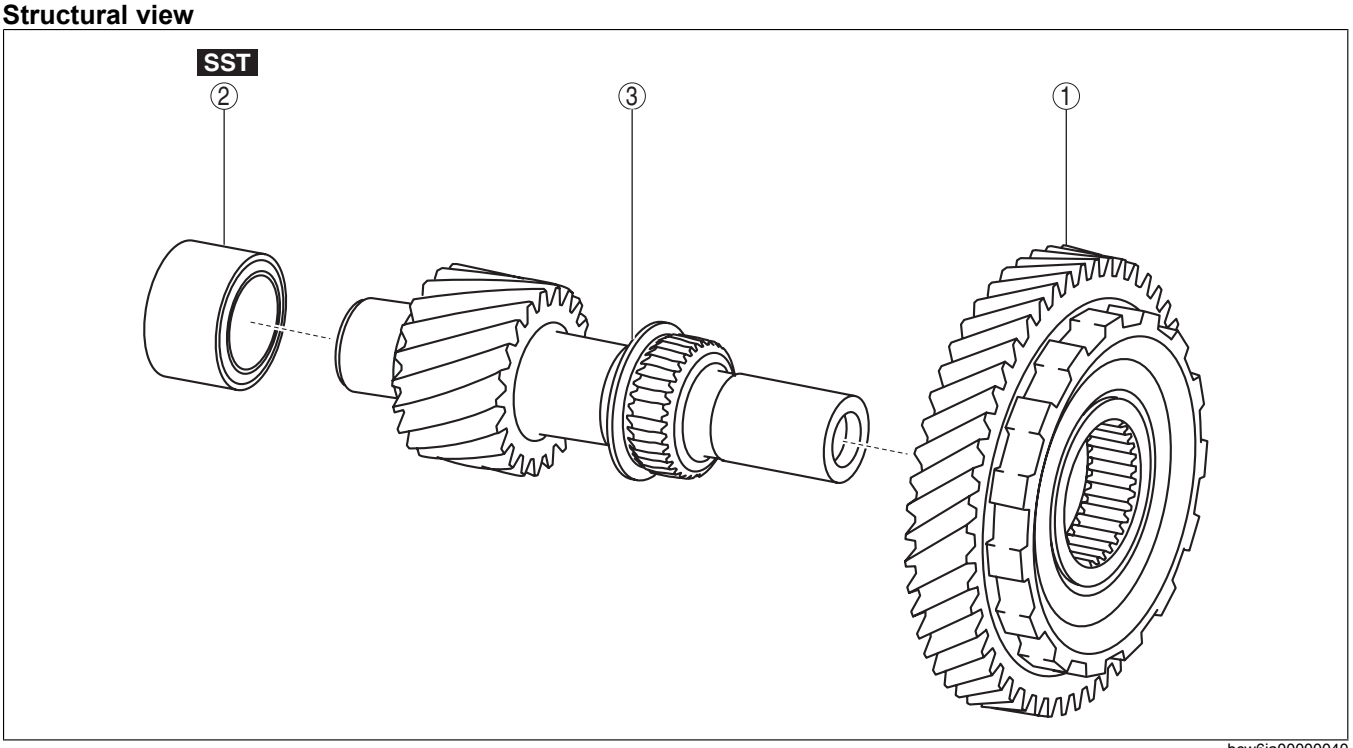


bcw6ja00000040

| | |
|---|---|
| 1 | Secondary gear |
| 2 | Bearing race (converter housing side) |
| 3 | Output gear |

### Disassembly Procedure

1. Perform the following inspection:


**Caution**

- **If there is no malfunction based on the results of the inspection, it is not necessary to disassemble the secondary gear and output gear.**

- Visual inspection of parts
- Secondary gear and output gear inspection
- If there is a malfunction, disassemble the secondary gear and output gear and replace the malfunctioning part with a new one.


2. Using the press, remove the secondary gear.

A : Press

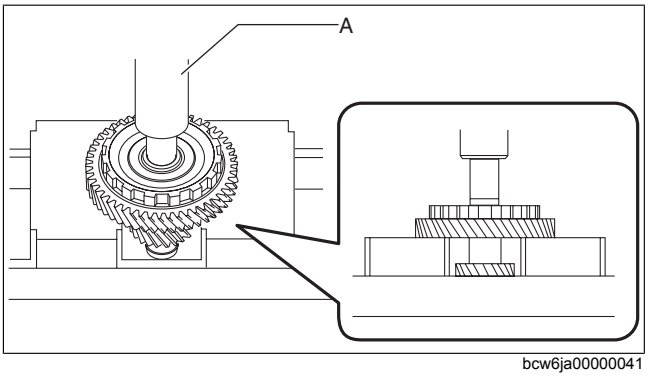



bcw6ja00000041

A : Secondary gear

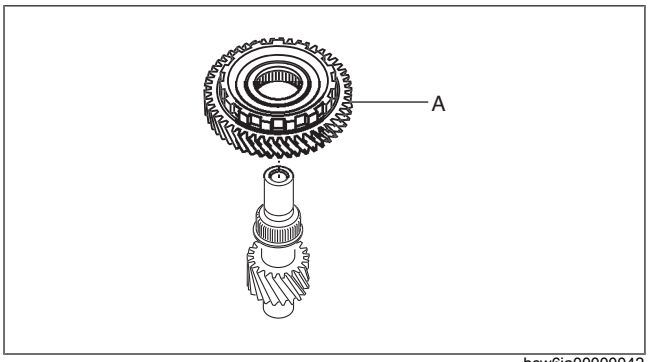



bcw6ja00000042

3. Using the SSTs and press, remove the bearing race.
A : Press

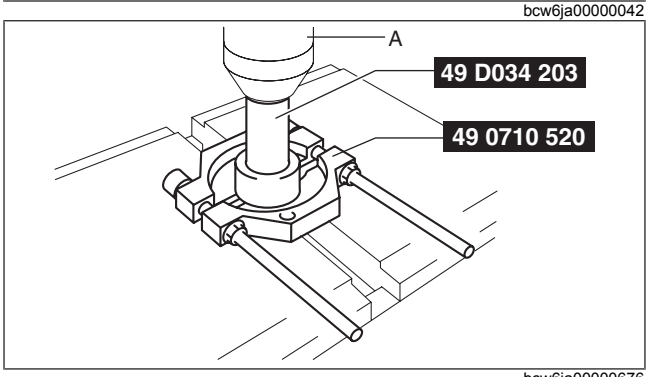


bcw6ja00000676

4. Clean the disassembled parts. (See AUTOMATIC TRANSAXLE CLEANING.)

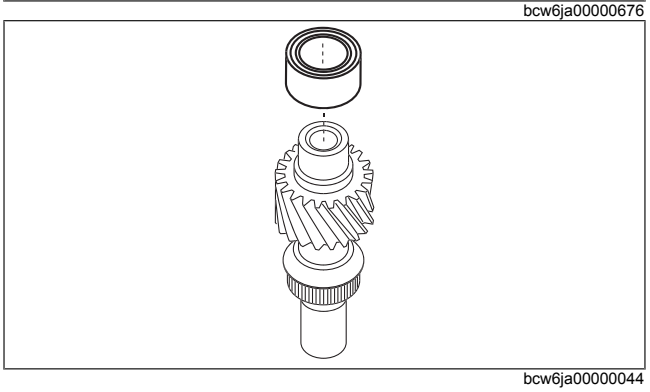

bcw6ja00000044