
TORQUE CONVERTER INSPECTION

id051700661800


Caution

- **For the torque converter inspection, only an inspection for burning or seizure of the TCC can be performed. For other malfunctions, on-vehicle inspection is required.**

1. Assemble the drum and shaft component to the torque converter.

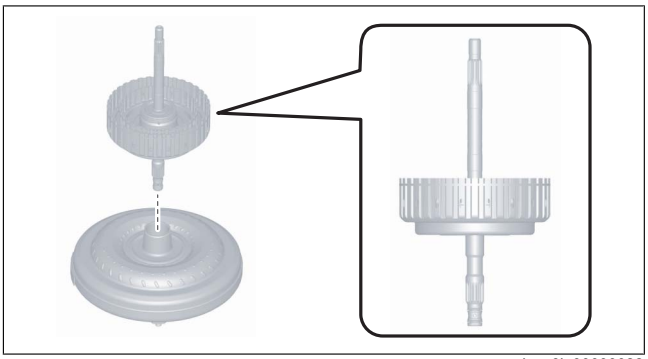

bcw6ja00000022

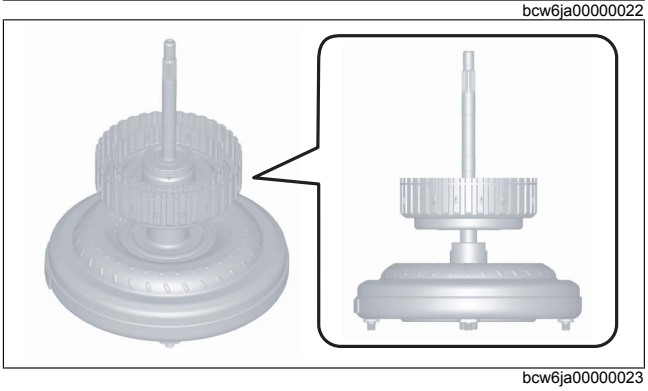

bcw6ja00000023


2. With the torque converter secured by hand, rotate the drum and shaft component.

Note

- When rotating the drum and shaft component, a little force is required depending on the amount of ATF in the torque converter.

A : Secure by hand

- If the drum and shaft component cannot be rotated, burning or seizure of the TCC can be considered, therefore replace the torque converter with a new one.

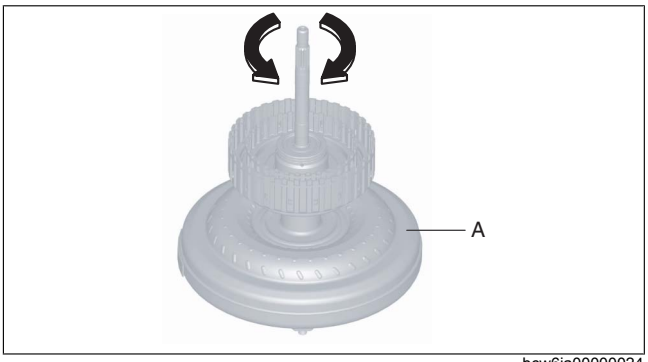

bcw6ja00000024

3. Remove the drum and shaft component.



bcw6ja00000025