
REAR PLANETARY GEAR INSPECTION

id051700662100

Radial Needle Bearing Inspection (in Pinion Gear)

1. Place the rear planetary gear with the front internal gear side pointing upward on a workbench.

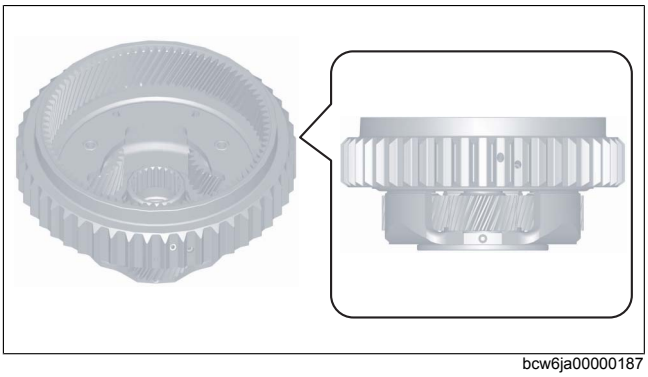


bcw6ja00000187

2. Rotate the pinion gears by hand and verify that there is no malfunction in the radial needle bearing in the pinion gear (rotation sticking).

Caution
- **Verify all of the pinion gears.**


- If there is a malfunction, replace the rear planetary gear with a new one.

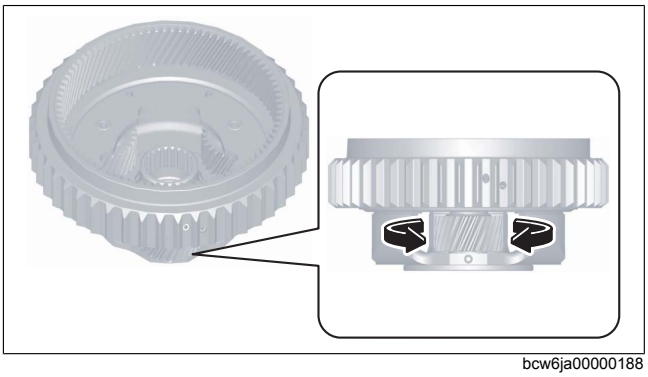

bcw6ja00000188


Thrust Needle Bearing Inspection

1. Place the rear planetary gear with the front internal gear side pointing upward on a workbench.

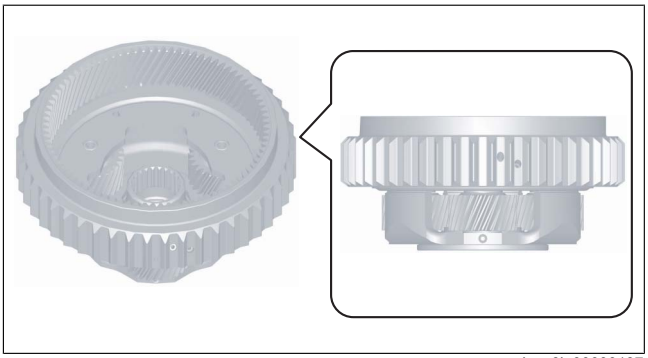


bcw6ja00000187


2. Assemble the rear sun gear to the rear planetary gear.

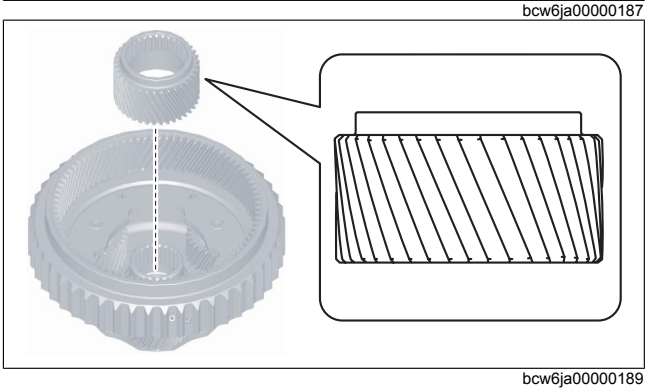


bcw6ja00000189

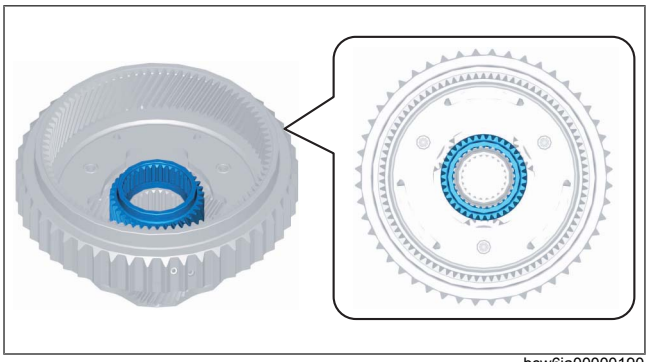
bcw6ja00000190

3. With a load applied by hand to the rear sun gear, rotate the rear sun gear and verify that there is no malfunction in the thrust needle bearing (rotation sticking).
   - If there is a malfunction, replace the rear planetary gear with a new one.

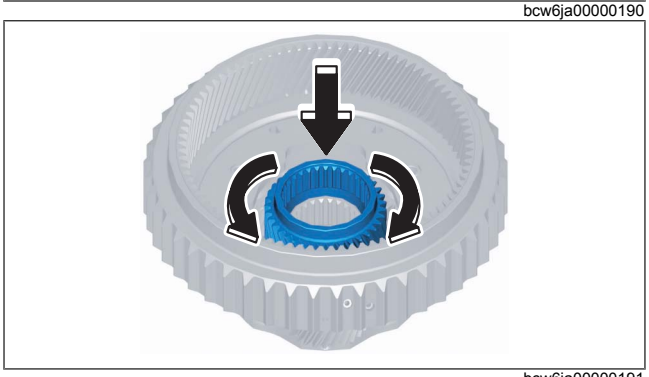
bcw6ja00000191

4. Remove the rear sun gear.

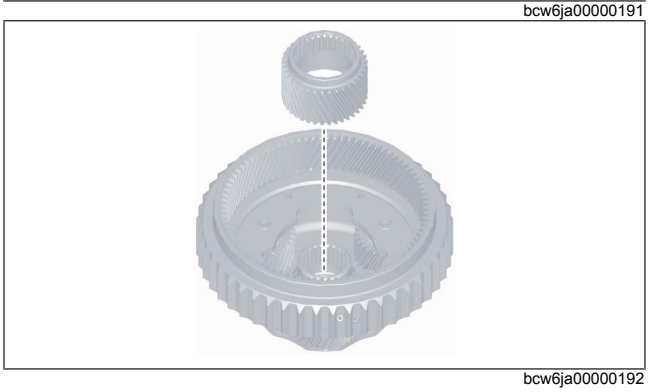
bcw6ja00000192


Pinion Washer Inspection
Pinion washer visual inspection

1. Visually verify that all of the following washers are between the pinion gear and planetary carrier for one pinion gear.

   Caution
   - **Verify all of the pinion gears.**

   — Copper washer (outer side): 2
   — Iron washer (inner side): 2

A : Copper washer (outer side)
B : Iron washer (inner side)

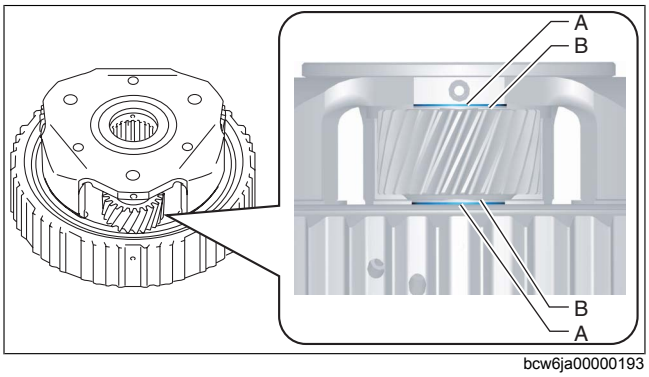


bcw6ja00000193

   - Even if one of the washers is damaged, replace the rear planetary gear with a new one.

Pinion washer wear inspection

1. Place the rear planetary gear with the front internal gear side pointing downward on a workbench.

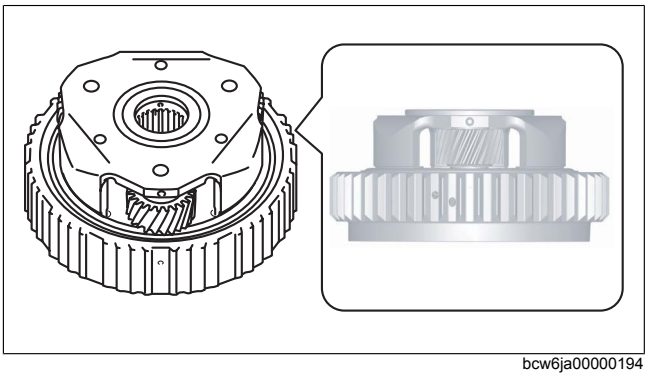

bcw6ja00000194


2. Measure the gap between the pinion washer and planetary carrier.

Caution
- **Measure all of the pinion gears.**

Note
- Recommended measuring instrument: Thickness gauge

Maximum
0.879 mm {0.0346 in}

- If it is the maximum specification or more, replace the rear planetary gear with a new one.

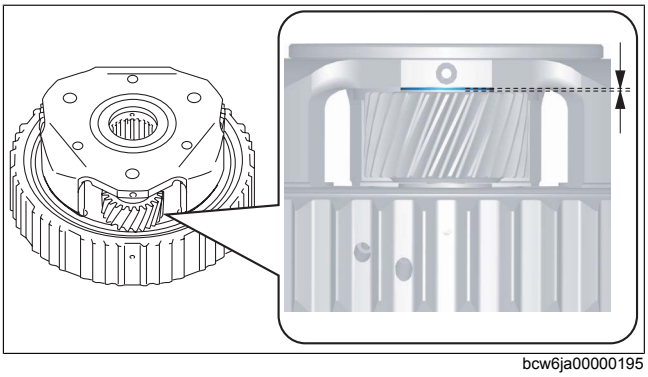

bcw6ja00000195