SECONDARY GEAR AND OUTPUT GEAR INSPECTION

id051700662300

Thrust Needle Bearing Inspection


1. Inspect the two thrust needle bearings used for the secondary gear and output gear. (See THRUST NEEDLE BEARING INSPECTION.)

Note
- Thrust needle bearing (converter housing side) size: Outer diameter approx. 39.4 mm {1.55 in}
- Thrust needle bearing (transaxle case side) size: Outer diameter approx. 67 mm {2.6 in}

- If there is a malfunction, replace the thrust needle bearing with a new one.

Roller Bearing Inspection


1. Place the converter housing with the transaxle case side pointing upward on a workbench.

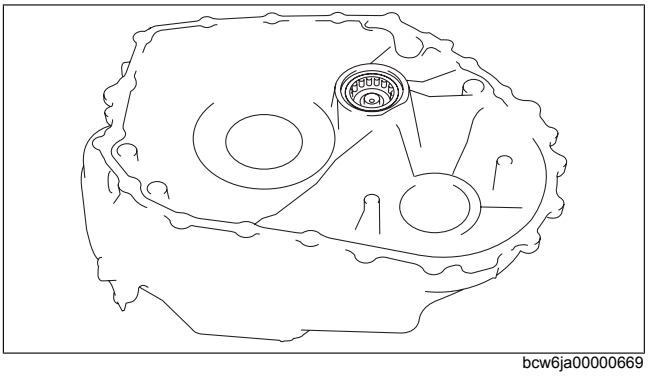


bcw6ja00000669

2. Assemble the thrust needle bearing to the converter housing.

Note
- Thrust needle bearing size: Outer diameter approx. 39.4 mm {1.55 in}

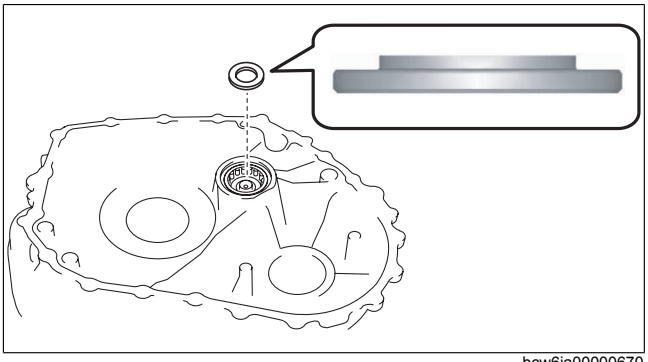



bcw6ja00000670

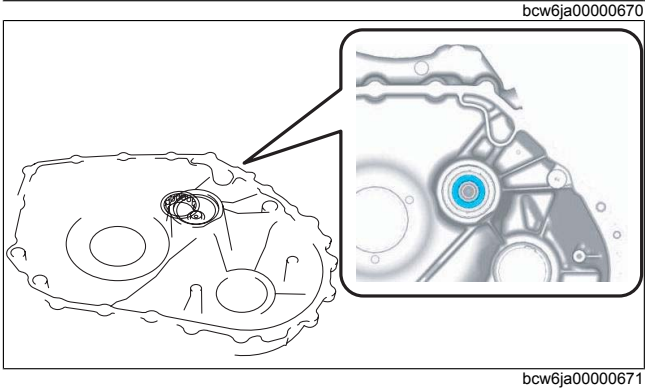

bcw6ja00000671

3. Assemble the secondary gear and output gear to the converter housing.

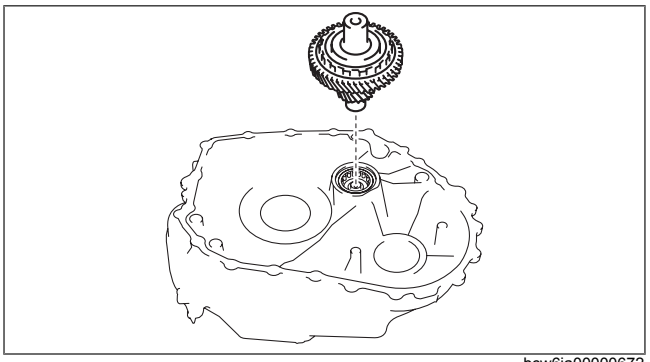

bcw6ja00000672

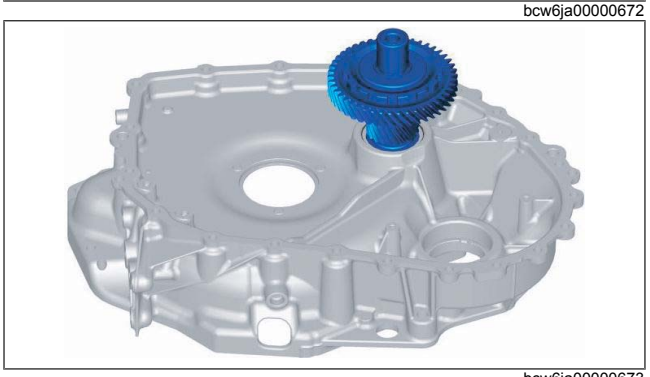

bcw6ja00000673

4. Rotate the secondary gear and output gear and verify that there is no malfunction in the roller bearing (rotation sticking).
   - If there is a malfunction in the roller bearing, replace the roller bearing using the following procedure.

   (1) Measure opening width A of the snap ring shown in the figure and verify the type of snap ring.

   Snap ring type
   Dimension A is 19.4—20.6 mm: Type A
   Dimension A is 16.4—17.6 mm: Type B

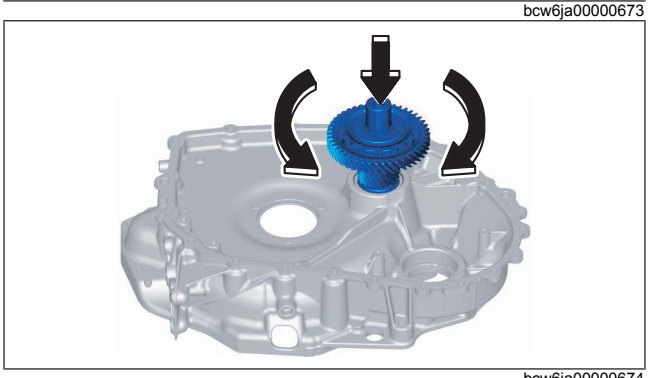

bcw6ja00000674

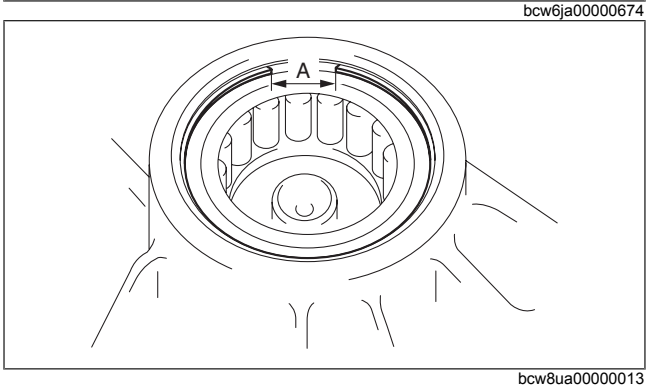


bcw8ua00000013

   - If the snap ring is type A, replace the converter housing and roller bearing with new ones because the roller bearing cannot be replaced as a single unit.
   - If the snap ring is type B, replace the roller bearing.
     (See SECONDARY GEAR AND OUTPUT GEAR DISASSEMBLY.)
     (See SECONDARY GEAR AND OUTPUT GEAR ASSEMBLY.)
     (See AUTOMATIC TRANSAXLE DISASSEMBLY.)
     (See AUTOMATIC TRANSAXLE ASSEMBLY.)

5. Remove the secondary gear and output gear.

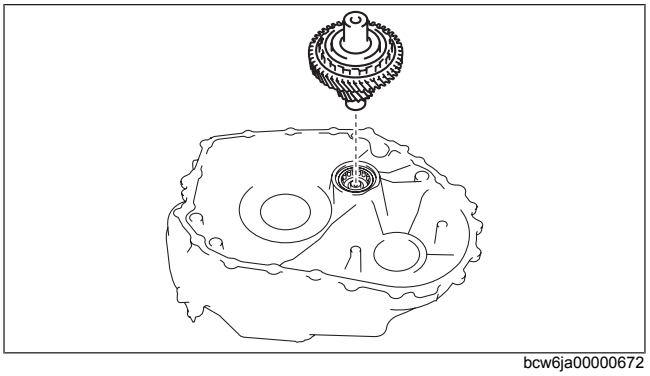
bcw6ja00000672


6. Remove the thrust needle bearing.

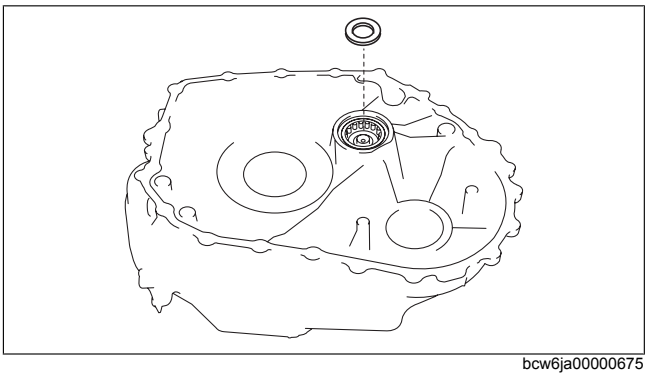

bcw6ja00000675

Radial Needle Bearing Inspection

1. Place the transaxle with the converter housing side pointing upward on the workbench.

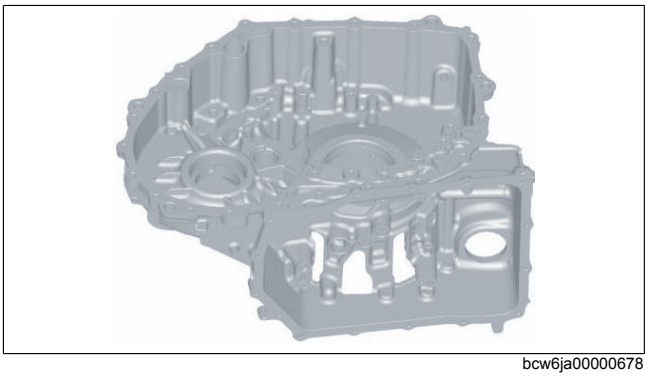


bcw6ja00000678


2. Assemble the thrust needle bearing to the transaxle case.

Note

- Thrust needle bearing size: Outer diameter approx. 67 mm {2.6 in}

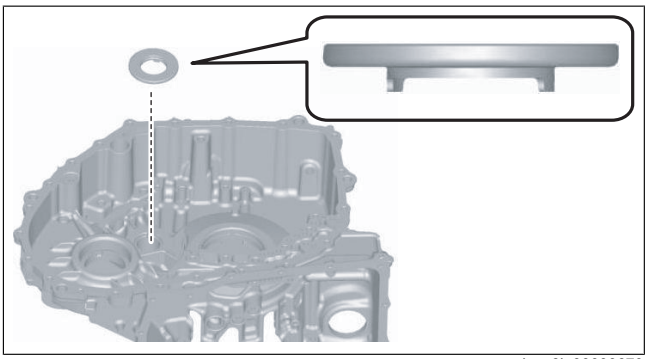


bcw6ja00000679

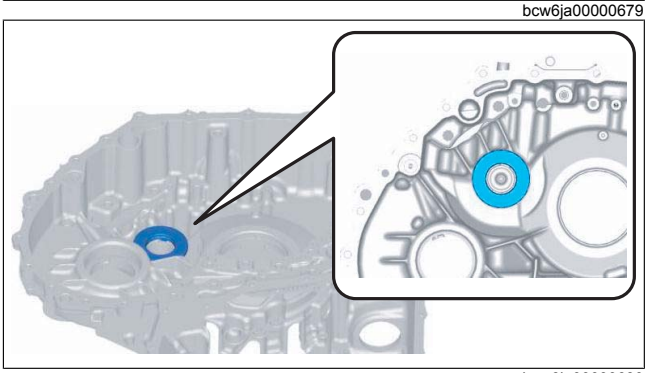


bcw6ja00000680

3. Assemble the secondary gear and output gear to the transaxle case.

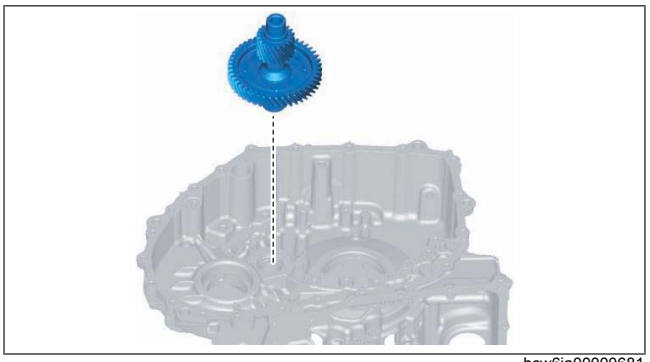


bcw6ja00000681

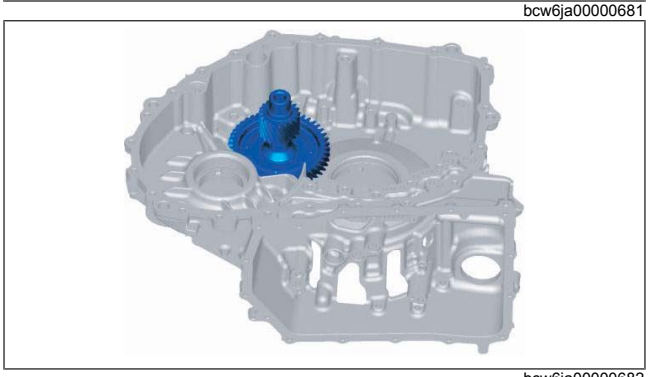

bcw6ja00000682


4. Rotate the secondary gear and output gear and verify if there is no malfunction in the radial needle bearing (rotation sticking).
   - If there is a malfunction with the radial needle bearing, replace the transaxle case and radial needle bearing with new ones because the radial needle bearing cannot be removed.

   (See AUTOMATIC TRANSAXLE DISASSEMBLY.)
   (See AUTOMATIC TRANSAXLE ASSEMBLY.)

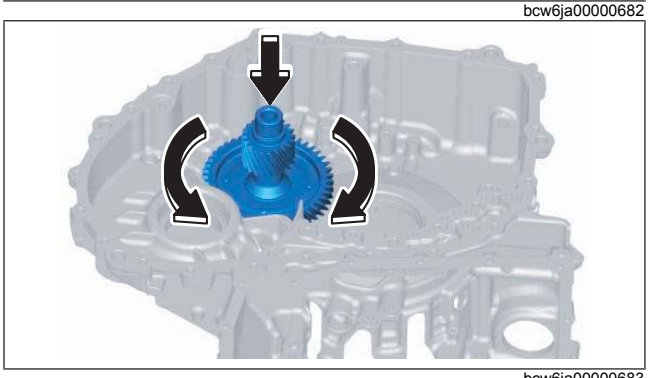


bcw6ja00000683

5. Remove the secondary gear and output gear.

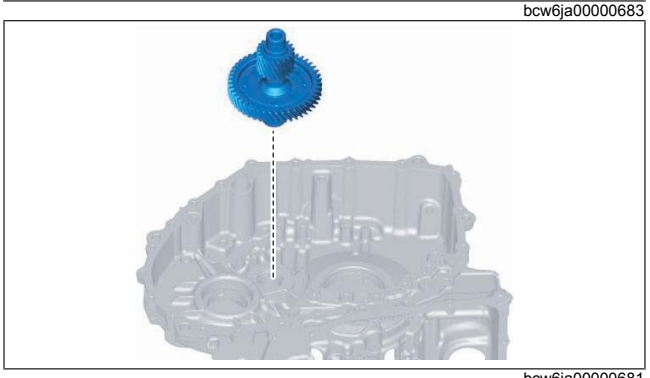

bcw6ja00000681

6. Remove the thrust needle bearing.

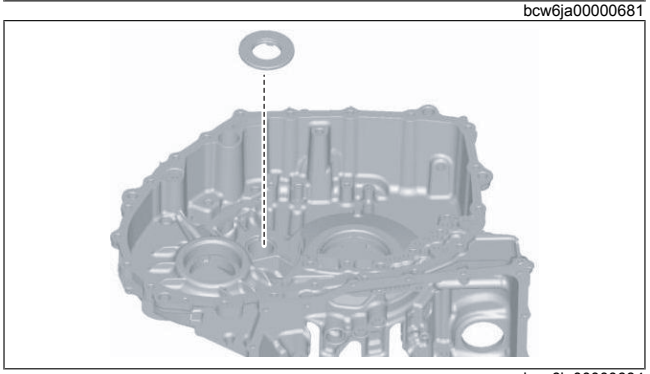

bcw6ja00000684