LOW CLUTCH HUB INSPECTION

id051700663100

Bush Inner Diameter Inspection


1. Measure the inner diameter of the bushing in two locations shown in the figure.

Note

- When measuring, measure near the center of the bushing avoiding the oil groove, and then calculate the average value of the X and Y directions as shown in the figure.
- Recommended measuring instrument: Cylinder gauge or caliper gauge

Maximum
24.661 mm {0.97091 in}

- If it is the maximum specification or more, replace the low clutch hub with a new one.

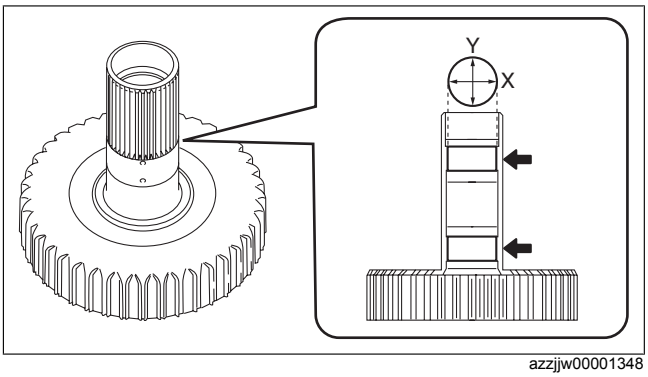

azzjjw00001348