
SECONDARY GEAR AND OUTPUT GEAR ASSEMBLY

id051700664000

Structural view

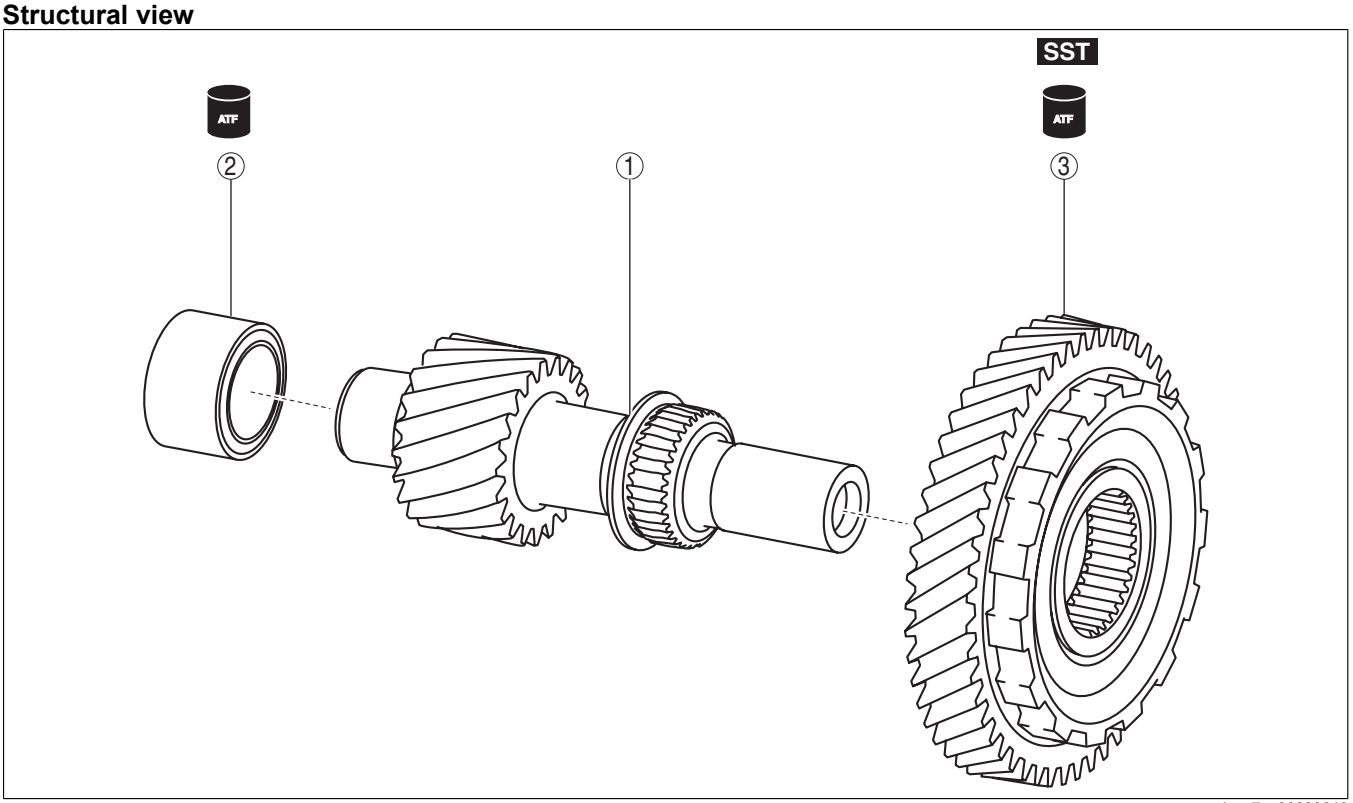

bcw7za00000019


1	Output gear
2	Bearing race (converter housing side) (inner diameter approx. 27 mm {1.1 in})
3	Secondary gear

Assembly Procedure

1. Assemble a new bearing race (converter housing side) using the following procedure:


Note
- Bearing race size: Inner diameter approx. 27 mm {1.1 in}

(1) Apply ATF (ATF FZ) to the engagement area of the bearing race and output gear.
(2) Assemble the bearing inner race using a press.

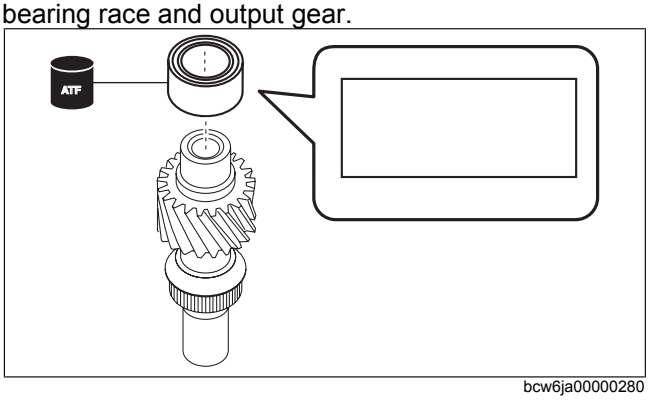


bcw6ja00000280

A : Press
B : Bearing inner race

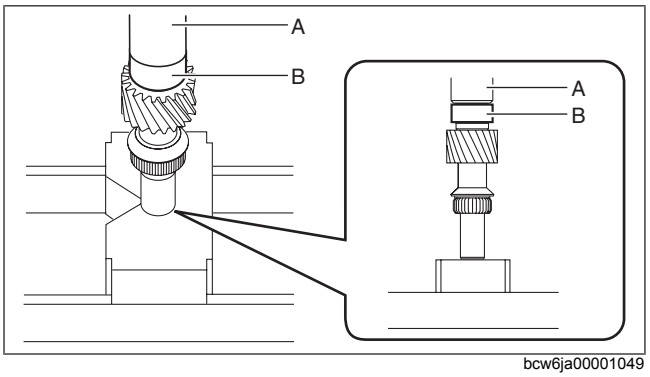


bcw6ja00001049

2. Assemble the secondary gear using the following procedure:
   (1) Apply ATF (ATF FZ) to the engagement area (spline area) of the secondary gear and output gear.
   (2) Using the SST and press, assemble the secondary gear.

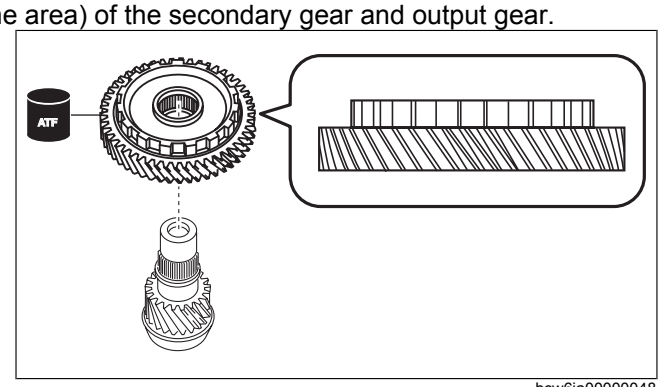

bcw6ja00000048

A : Press

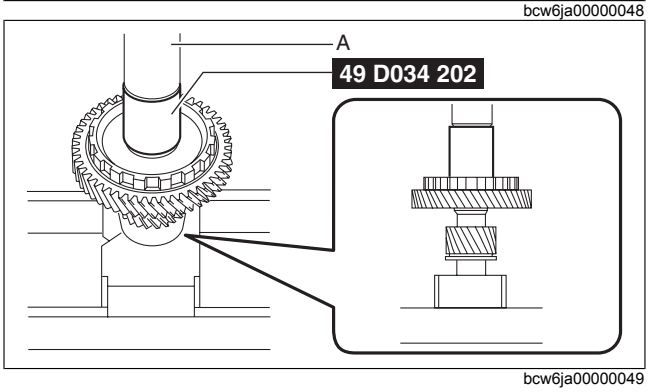

bcw6ja00000049