## DRIVE SHAFT JOURNAL INSPECTION

id051700665500

**Drive shaft (LH)**


1. Remove the drive shaft (LH) from the vehicle.

   **Note**
   - For the drive shaft (LH) removal procedure from the vehicle, verify the Workshop Manual.

2. Measure the outer diameter of the drive shaft (LH) journal.

   **Note**
   - When measuring, measure near the center of the journal, and then calculate the average value of the X and Y directions as shown in the figure.
   - Recommended measuring instrument: Micrometer

   - If it is the minimum specification or less, disassemble the drive shaft (LH) and replace the outer ring with a new one.

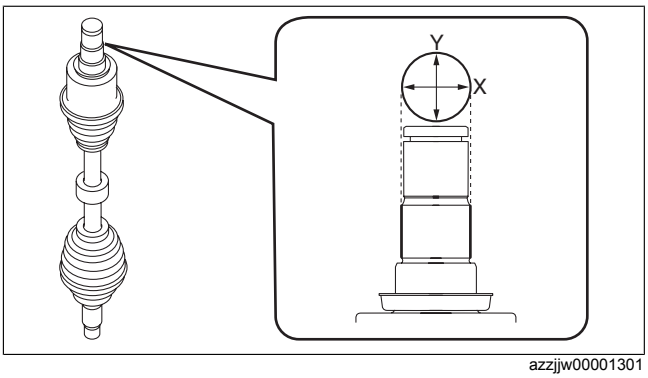

azzjjw00001301

   **Note**
   - For the drive shaft disassembly/assembly procedure, verify the Workshop Manual.

   **Minimum**
   **27.944 mm {1.1002 in}**

**Drive Shaft (RH)**


1. Remove the drive shaft (RH) from the vehicle.

   **Note**
   - For the drive shaft (RH) removal procedure from the vehicle, verify the Workshop Manual.

2. Measure the outer diameter of the drive shaft (RH) journal.

   **Note**
   - When measuring, measure near the center of the journal, and then calculate the average value of the X and Y directions as shown in the figure.
   - Recommended measuring instrument: Micrometer

   - If it is the minimum specification or less, replace the drive shaft (RH) with a new one.

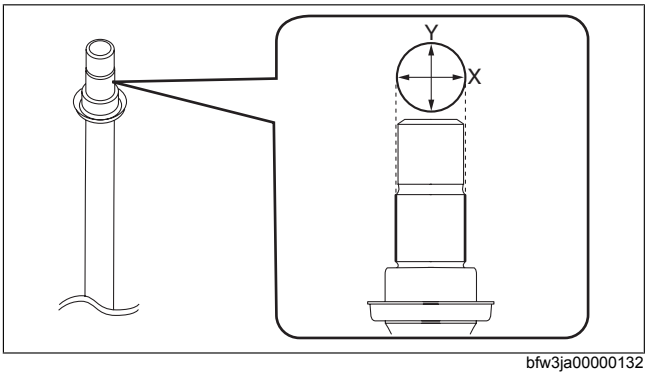

bfw3ja00000132

   **Minimum**
   **27.944 mm {1.1002 in}**