
TRANSAXLE DISASSEMBLY

id051500168100

Step 1

1. Assemble the **SST (49 G019 0A0)** to the **SST (49 0107 680A)**.


   Bolt used
   Part number: 9YA02 A220 or M12 × 1.75 bolt (length 40 mm {1.6 in})
   Tightening torque
   88—118 N·m {9.0—12 kgf·m, 65—87 ft·lbf}

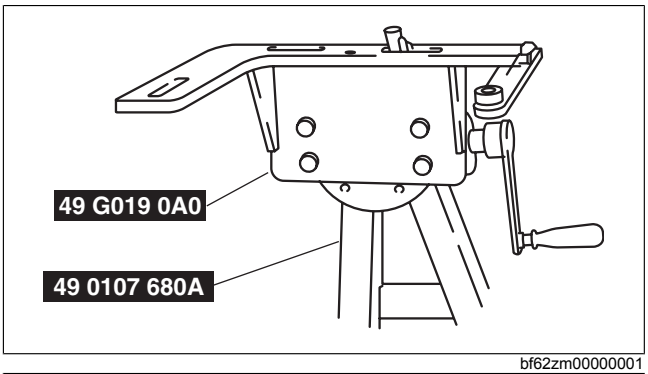

bf62zm00000001

2. Assemble the MTX to the **SST (49 G019 0A0)**.


   Bolt A
   Part number: 99450 1055, or M10 × 1.25 bolt (length 55 mm {2.2 in}) and nut (M10 × 1.25)
   Bolt A tightening torque
   38—52 N·m {3.9—5.3 kgf·m, 29—38 ft·lbf}
   Bolt B
   SST (component part for 49 G019 0A0: 49 G019 003)
   Bolt B tightening torque
   88—118 N·m {9.0—12 kgf·m, 65—87 ft·lbf}
   Bolt C
   Part number: 9YA02 1080, or M10 × 1.5 bolt (length 55 mm {2.2 in})
   Bolt C tightening torque
   38—52 N·m {3.9—5.3 kgf·m, 29—38 ft·lbf}
   Bolt D
   Part number: 99450 1030 or M10 × 1.25 bolt (length 30 mm {1.2 in})
   Bolt D tightening torque
   38—52 N·m {3.9—5.3 kgf·m, 29—38 ft·lbf}

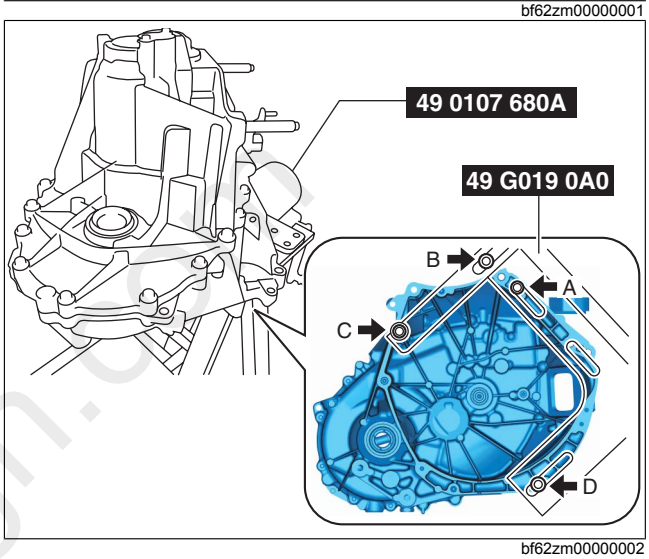

bf62zm00000002

3. Remove the parts around the transaxle in the order shown in the figure.

cardiagn.com

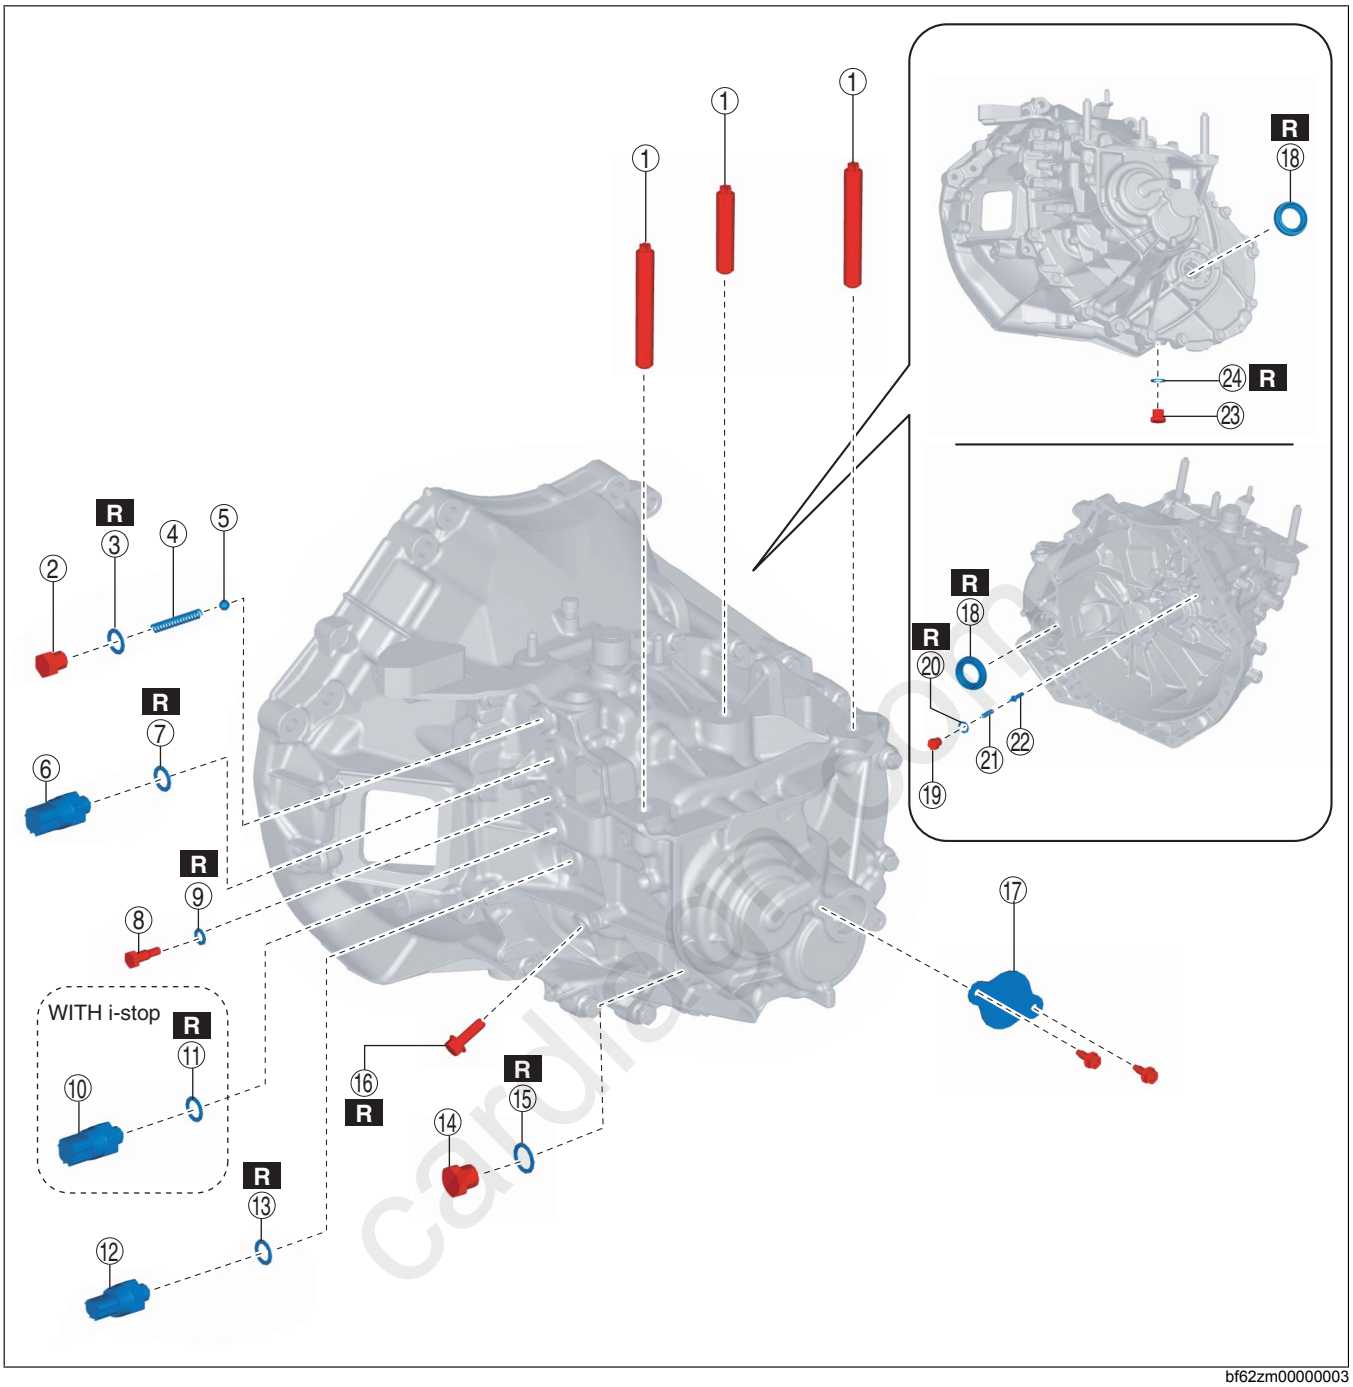

bf62zm00000003


1	Stud bolt
2	Plug
3	Gasket
4	Spring
5	Detent ball
6	Neutral switch No.1
7	Gasket
8	Shift lever shaft anchor bolt
9	Gasket
10	Neutral switch No.2 (with i-stop)
11	Gasket (with i-stop)
12	Back-up light switch
13	Gasket
14	Oil level plug
15	Gasket
16	Reverse idler shaft anchor bolt

17	Service hole plate (See Service hole plate removal note.)
18	Oil seal
19	Plug
20	Gasket
21	Spring
22	Pin
23	Drain plug
24	Gasket

Service hole plate removal note

Caution
- **Do not damage the transaxle case when removing the service hole plate.**


1. Remove the service hole plate while lightly tapping the side of the service hole plate using a cloth-wrapped flathead screwdriver.

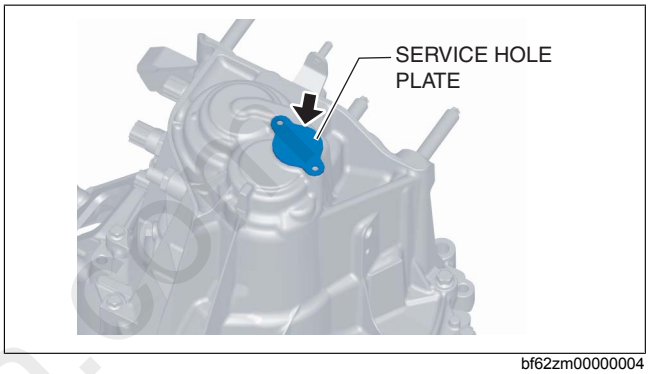

bf62zm00000004

Step 2
1. Disassemble the transaxle in the order shown in the figure.

cardiagn.com

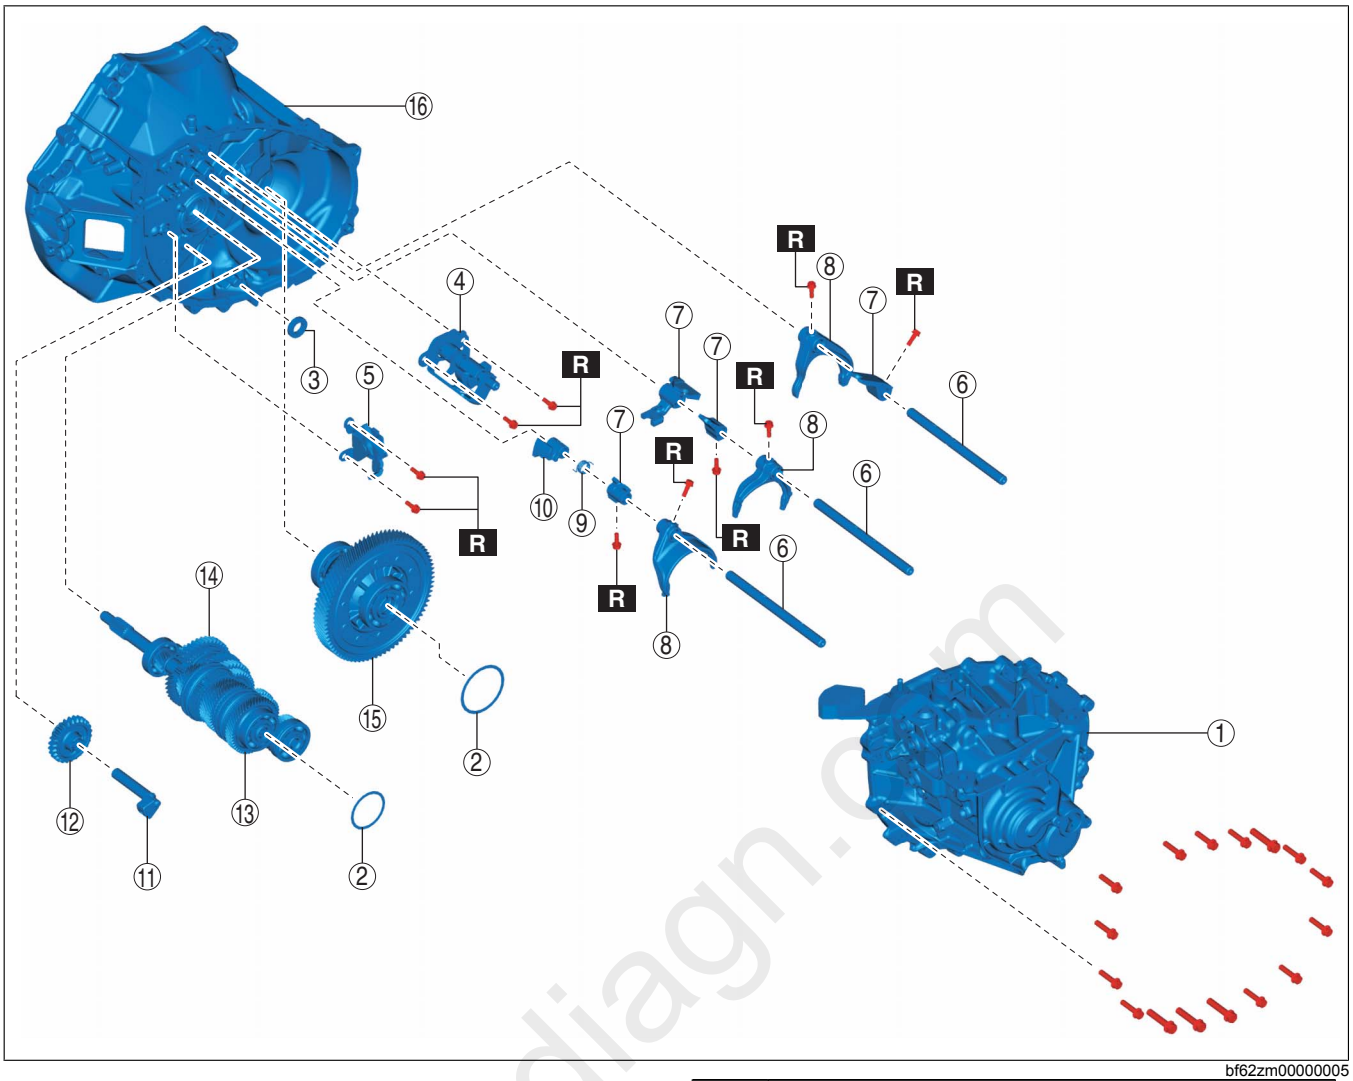

bf62zm00000005

1	Transaxle case component (See Transaxle case component removal note.)
2	Shim
3	Magnet
4	Control set
5	Reverse lever component
6	Shift rod
7	Shift rod end
8	Shift fork
9	Spring
10	Reverse gate


11	Reverse idler shaft
12	Reverse idler gear
13	Primary shaft component (See Primary shaft component, secondary shaft component removal note.)
14	Secondary shaft component (See Primary shaft component, secondary shaft component removal note.)
15	Differential
16	Clutch housing component

2. Remove the silicone sealant of the transaxle case component and clutch housing component, and clean all the parts.

cardiagn.com


Transaxle case component removal note

1. Remove the transaxle case component installation bolts.

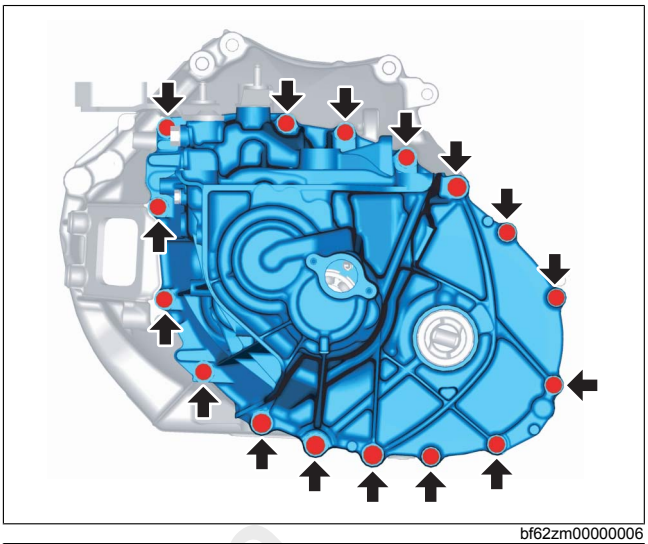
bf62zm00000006

2. While pulling up the ball bearing outer race using pliers as shown in the figure, turn the clip to align the clip opening with the service hole.

   Caution
   - **Cover a cloth with the servicing area and hold the ball bearing outer race with pliers while being careful not to damage the ball bearing outer race.**

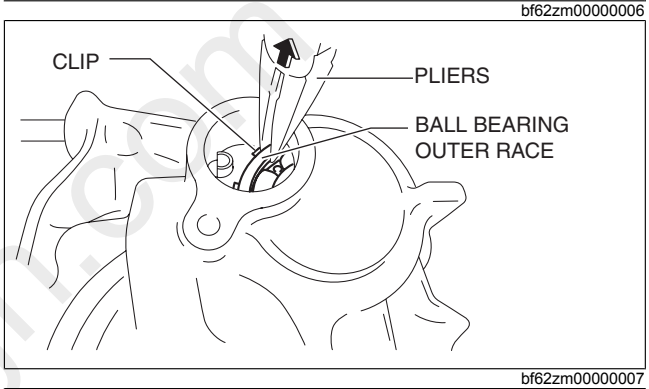


bf62zm00000007

3. Keep apart the pliers from the ball bearing outer race.
4. Insert the snap ring pliers into the service hole, widen the clip, and disconnect the secondary shaft component from the transaxle case.

   Caution
   - **Be careful not to damage or scratch the transaxle case when using the snap ring pliers. Otherwise, oil could leak.**


   Note
   - If the clip and the secondary shaft component are disengaged, the secondary shaft component will dislodge slightly so that it can be disconnected from the transaxle case.

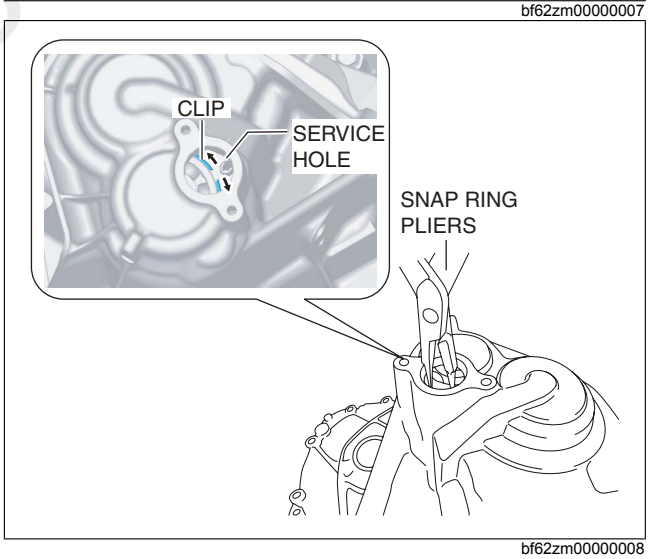

bf62zm00000008


cardiagn.com

5. Align the select lever with the positioning mark and set it to the reverse position.

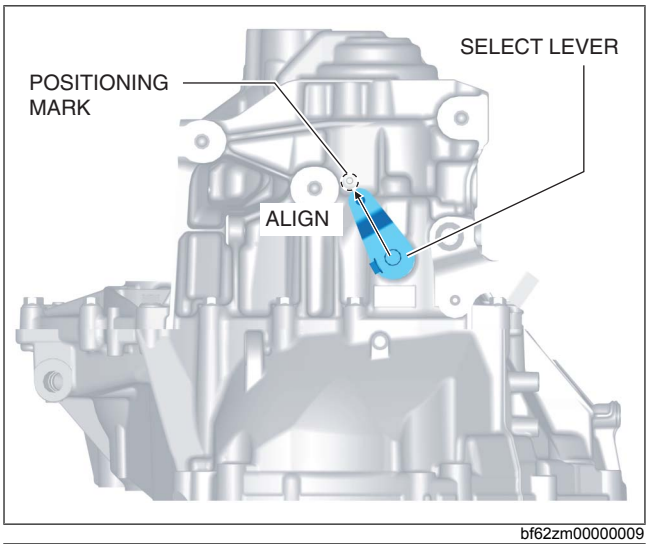


bf62zm00000009

6. Pull the shift lever in the direction shown in the figure.

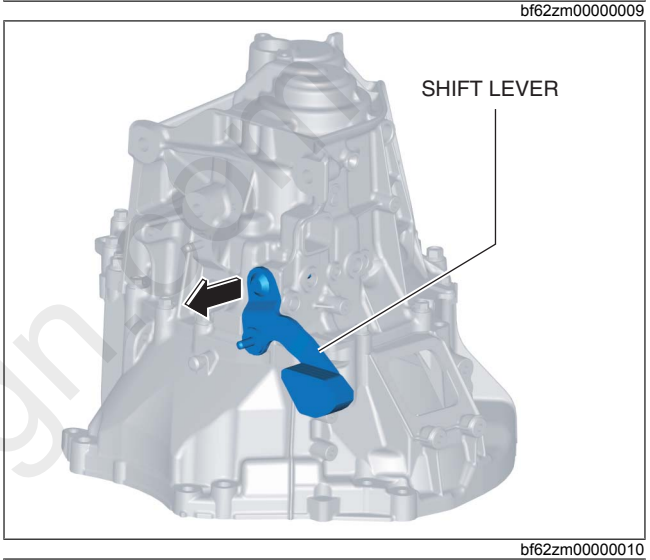

bf62zm00000010


7. Tap the locations shown in the figure using a plastic hammer to remove the transaxle case component.

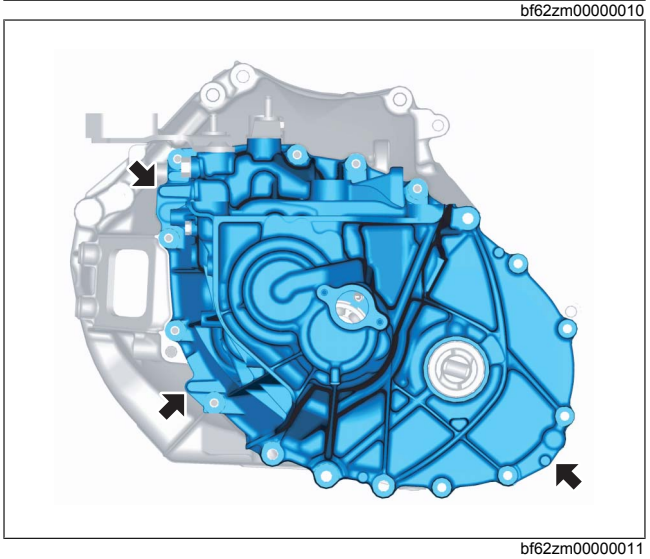
bf62zm00000011

cardiagn.com

Primary shaft component, secondary shaft component removal note

1. Remove the primary shaft component and secondary shaft component as a single unit.

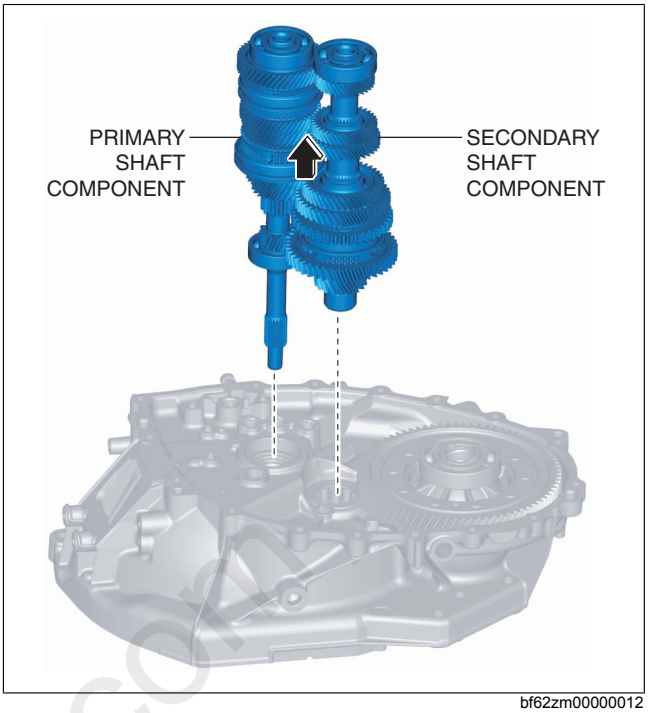

bf62zm00000012

cardiagn.com