TRANSAXLE CASE AND CLUTCH HOUSING DISASSEMBLY


id051500168200

Transaxle Case Component Disassembly

1. Install the bolt and nut to the transaxle case component at the location shown in the figure, and pinch the bolt using a vice to secure the transaxle case component.


   Bolt
   PART NUMBER 99450 0855 or M8 x 1.25 bolt, length 55 mm {2.2 in}
   Nut
   M8 × 1.25

2. Disassemble the transaxle case component in the order shown in the figure.

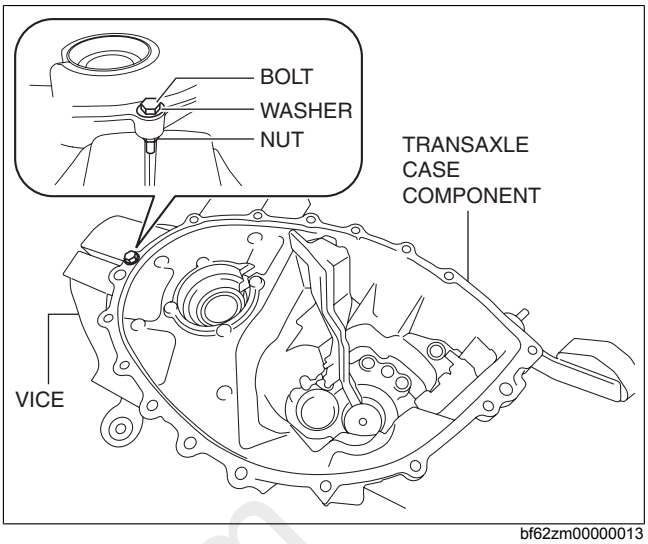

bf62zm00000013

cardiagn.com

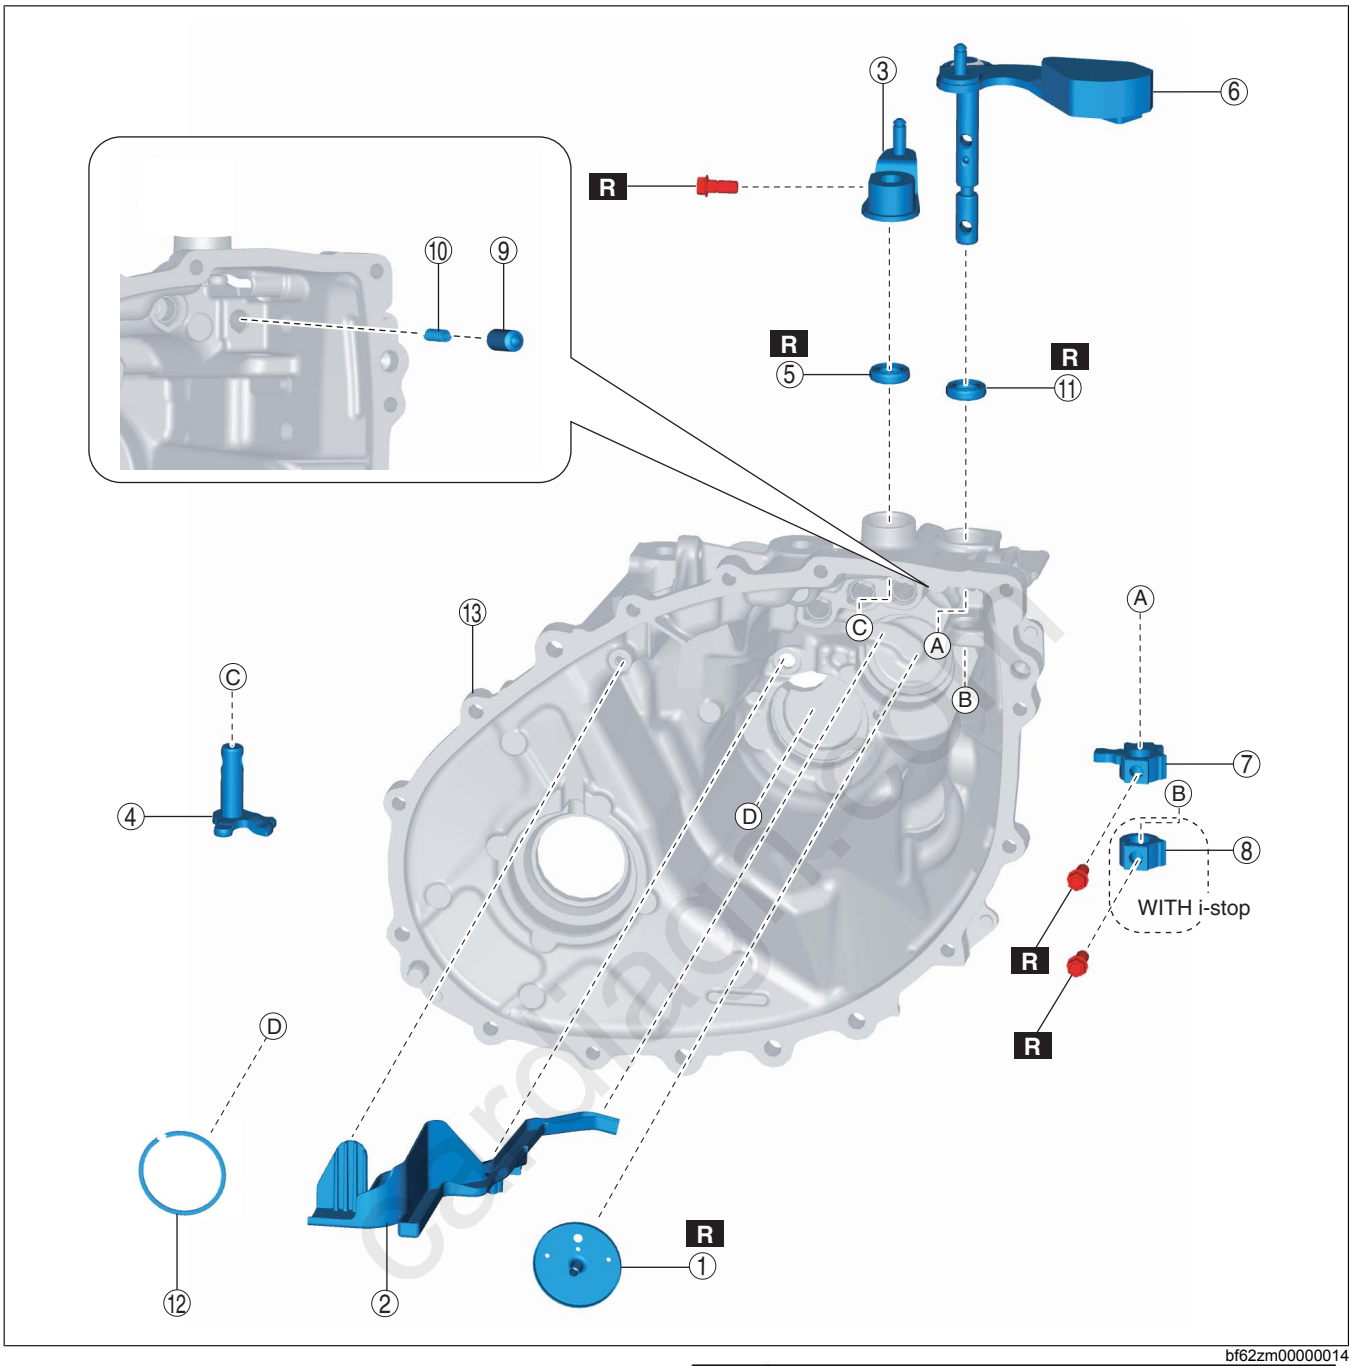


bf62zm00000014

1	Funnel (primary shaft) (See Funnel (primary shaft) removal note.)
2	Oil path
3	Select lever
4	Select arm
5	Oil seal (select lever) (See Oil seal (select lever) removal note.)
6	Shift lever
7	Inner shift lever

8	Switch pin (with i-stop)
9	Detent ball pin
10	Spring
11	Oil seal (shift lever) (See Oil seal (shift lever) removal note.)
12	Clip
13	Transaxle case

Funnel (primary shaft) removal note


1. Remove the funnel from the transaxle case using a screwdriver as shown in the figure.

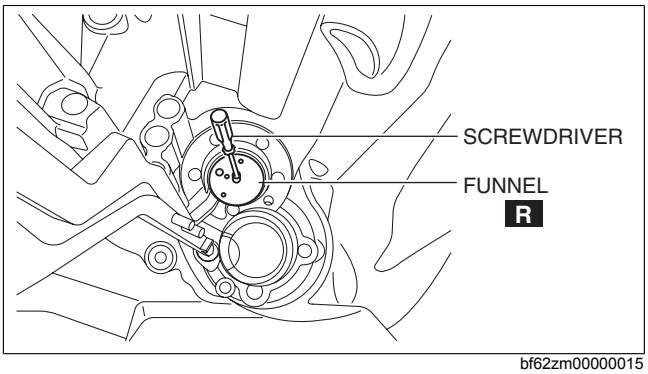

bf62zm00000015

Oil seal (select lever) removal note


1. Remove the oil seal from the transaxle case using a flathead screwdriver.

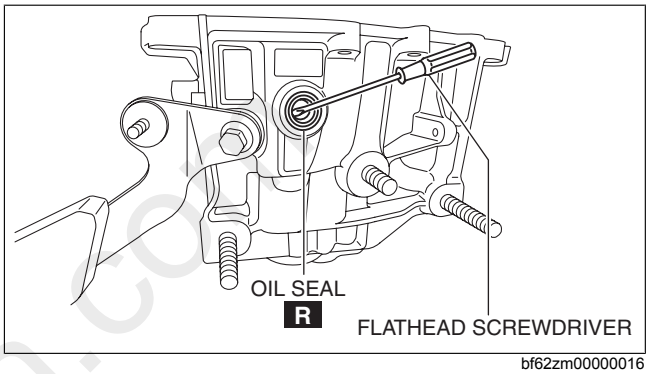

bf62zm00000016

Oil seal (shift lever) removal note

1. Remove the oil seal from the transaxle case using a flathead screwdriver.

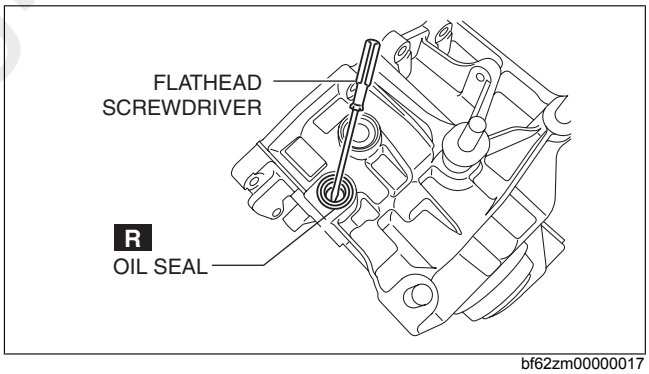


bf62zm00000017

Clutch Housing Component Disassembly

1. Remove the clutch housing components in the order shown in the figure.

cardiagn.com

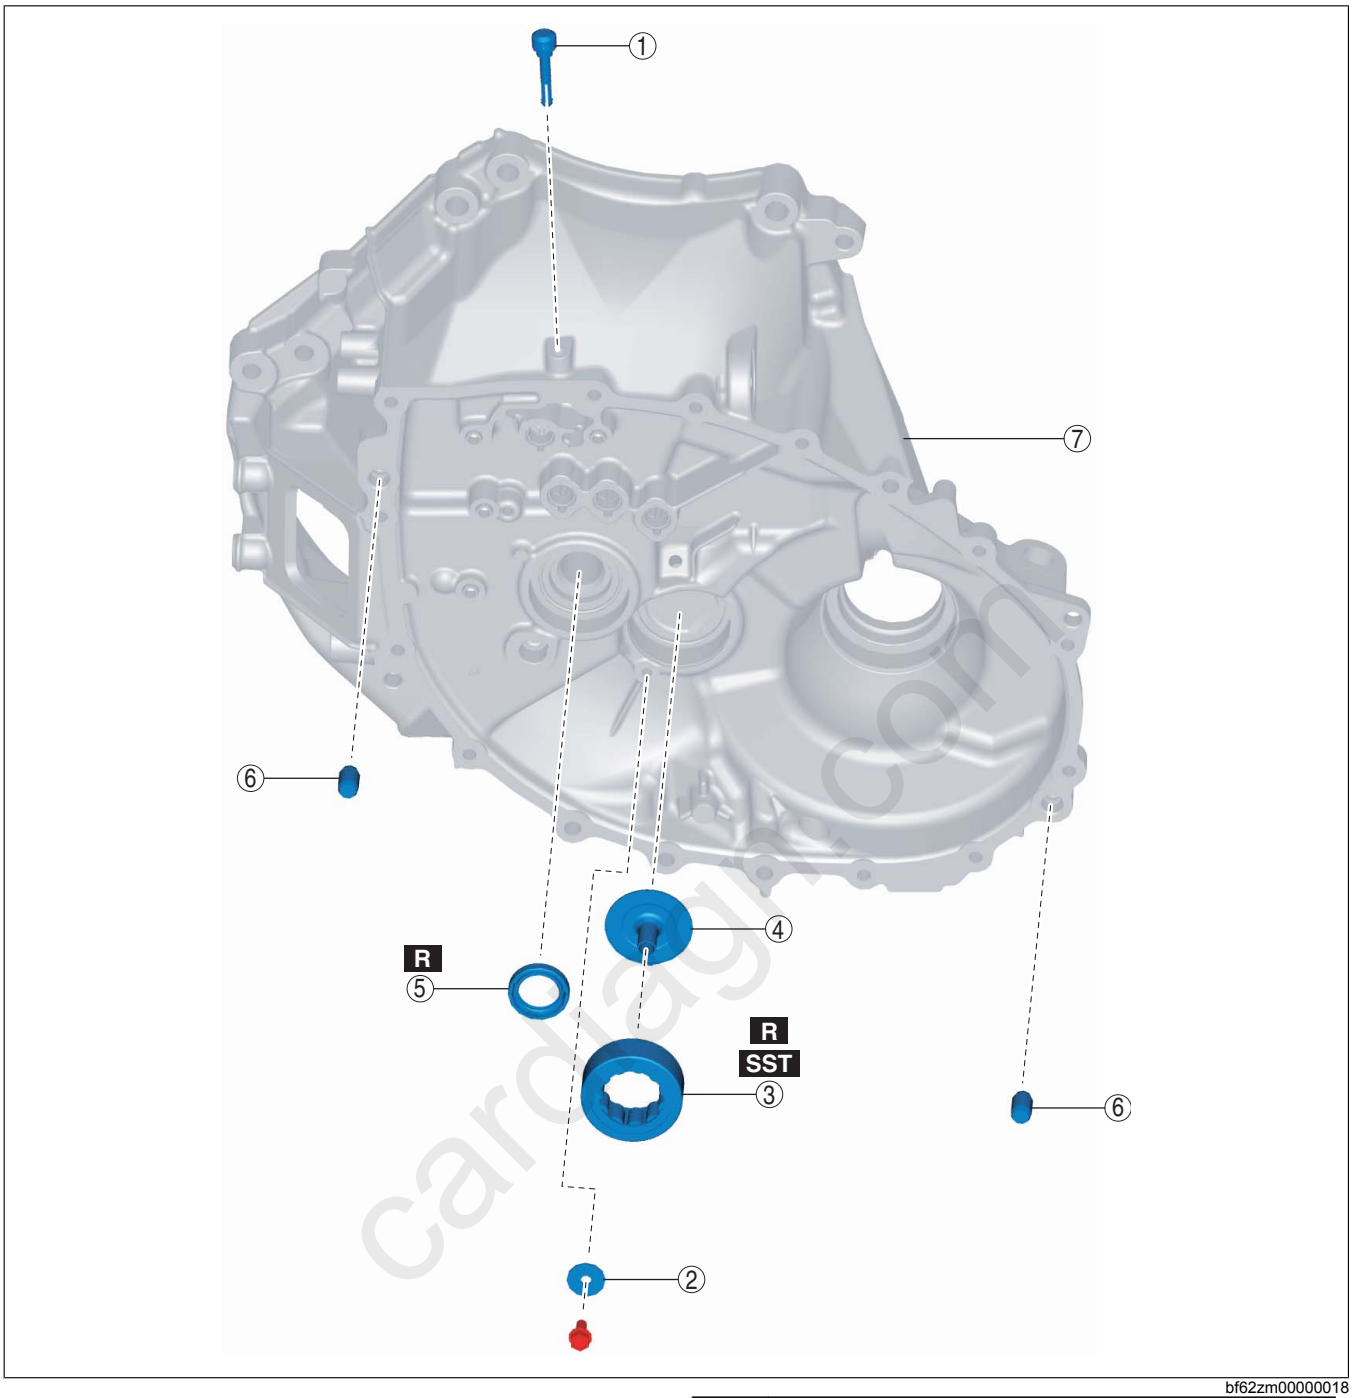

bf62zm00000018


1	Breather
2	Stopper plate
3	Roller bearing (See Roller bearing removal note.)
4	Funnel

5	Oil seal (See Oil seal removal note.)
6	Dowel pin
7	Clutch housing

cardiagn.com

Roller bearing removal note


1. Remove the roller bearing from the clutch housing using the **SST**.

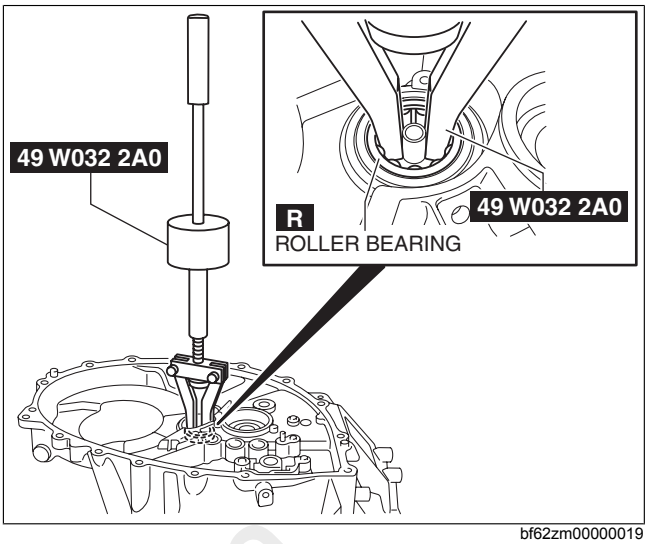

bf62zm00000019

Oil seal removal note

1. Remove the oil seal from the clutch housing using a flathead screwdriver.

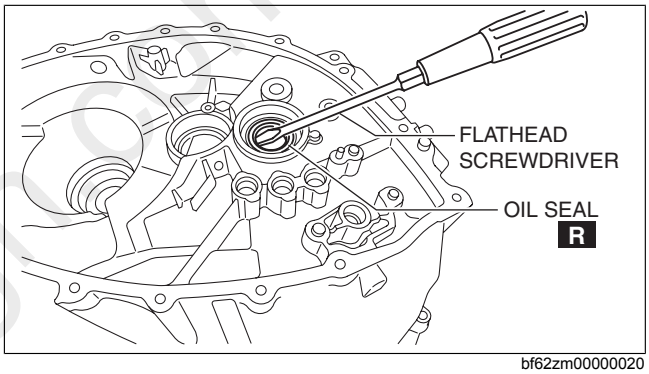

bf62zm00000020

cardiagn.com