
REVERSE IDLER GEAR COMPONENT INSPECTION

id051500168400

Gear Inspection

1. Inspect the gears for damage, wear, or loss.
   - If there is any malfunction, replace the gear.
2. Inspect the gears and reverse lever component for damage and wear on the contact surfaces.
   - If there is any malfunction, replace the gear.
3. Measure the inner diameter of the bushing assembled to the reverse idler gear using a cylinder gauge. Measurement positions total four and are in the X and Y directions, at two points (A and B) as shown in the figure.

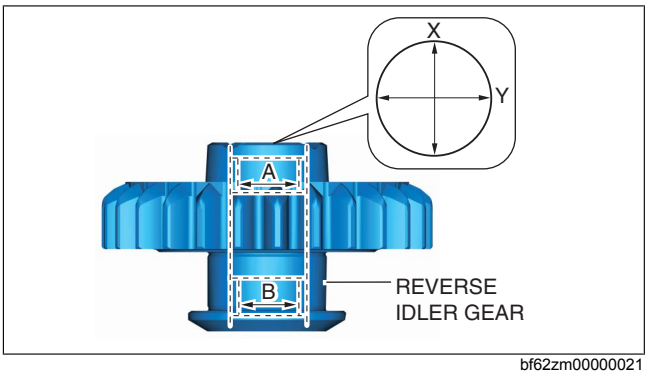

bf62zm00000021


Inner diameter of gear

Measurement location	Specification (mm {in})	Maximum (mm {in})
Reverse idler gear bushing	16.025 {0.6309}	16.034 {0.6313}

- If it exceeds the maximum, replace the gear.

Reverse Idler Shaft Inspection

1. Inspect the sliding parts for damage and wear.
   - If there is any malfunction, replace the reverse idler shaft.
2. Measure the outer diameter of the reverse idler shaft using the micrometer. Measurement positions total four and are in the X and Y directions, at two points (A and B) as shown in the figure.

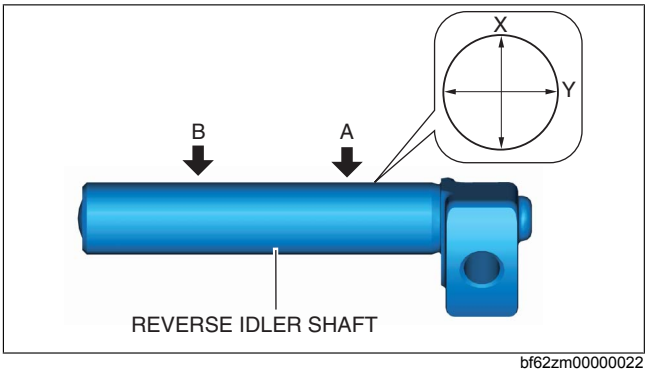

bf62zm00000022

Reverse idler shaft outer diameter

Measurement location	Specification (mm {in})	Minimum (mm {in})
Reverse idler shaft	15.975 {0.6289}	15.966 {0.6286}

- If it is less than the minimum, replace the reverse idler shaft.