
PRIMARY SHAFT COMPONENT DISASSEMBLY

id051500168700

1. Disassemble the primary shaft component in the order shown in the figure.

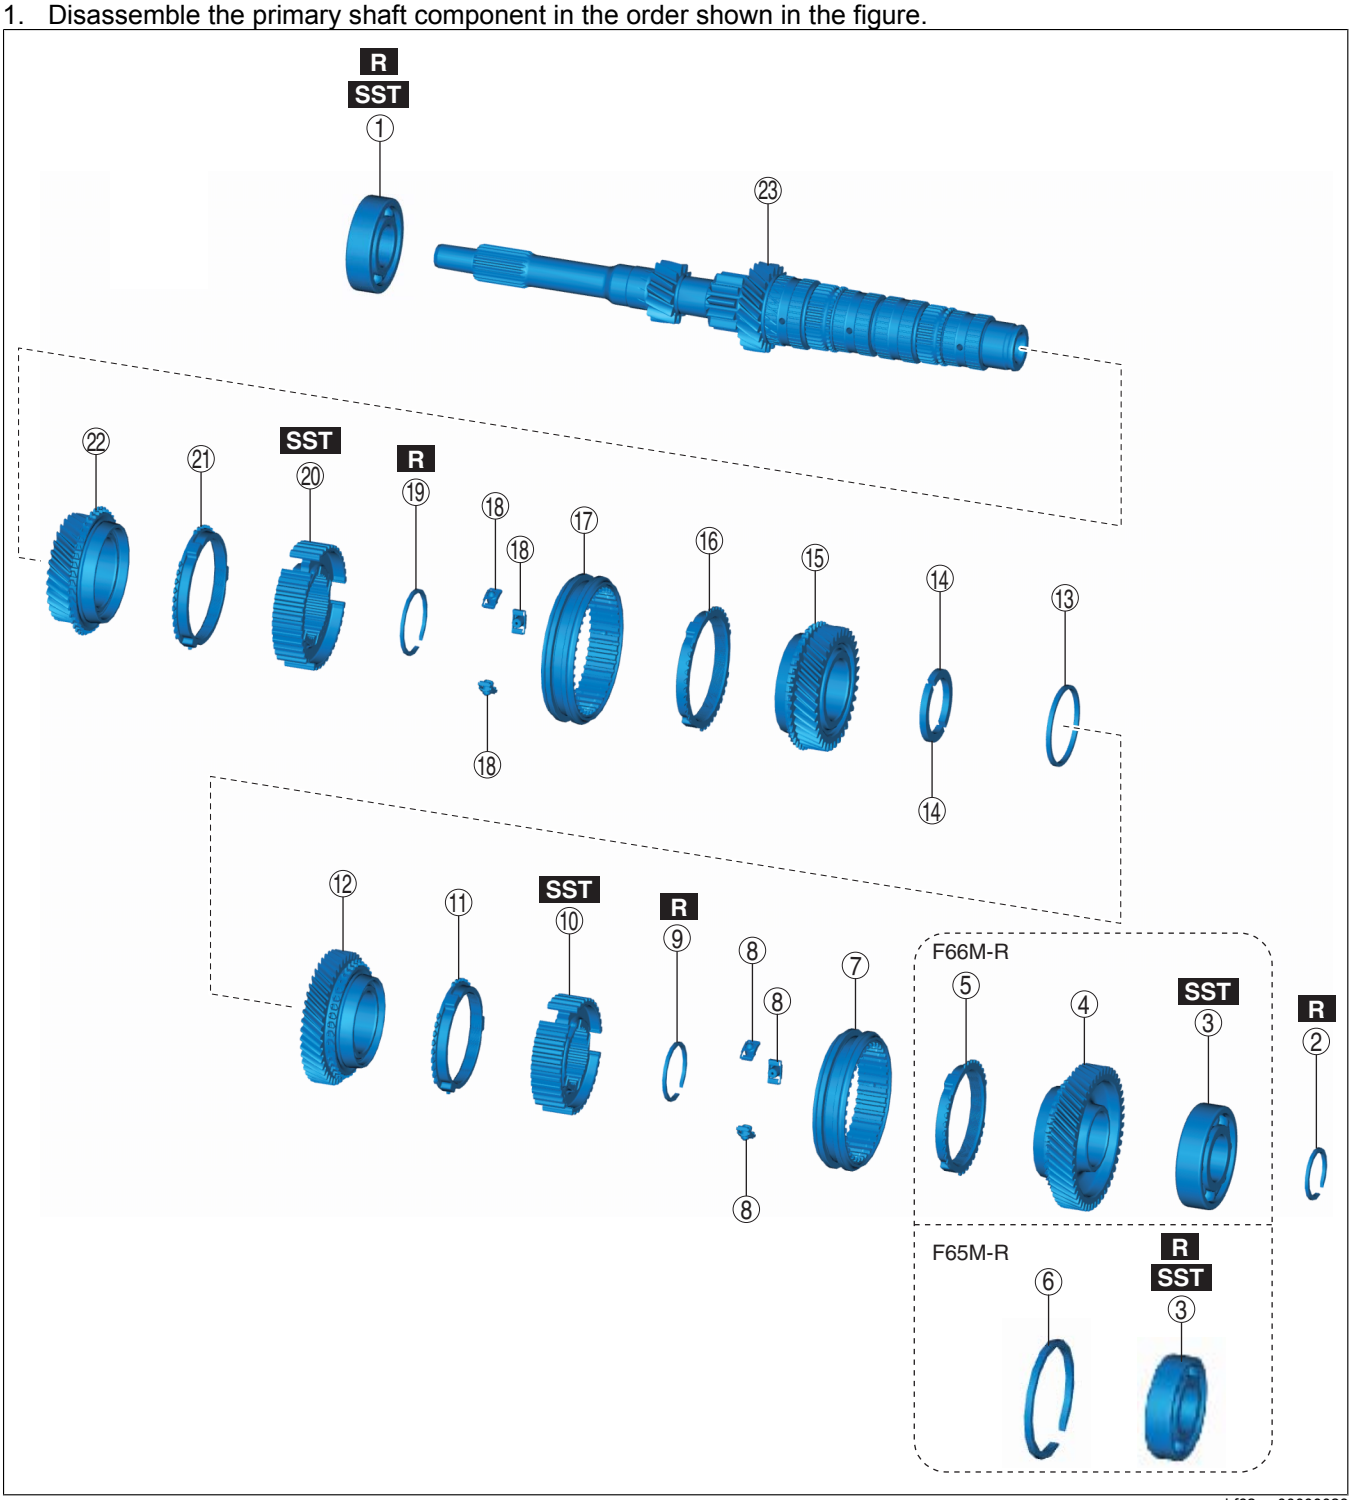

bf62zm00000028

1	Ball bearing (See Ball Bearing (Clutch Housing Side) Removal Note .)
2	Clip
3	Ball bearing (See Ball Bearing (Transaxle Case Side) Removal Note.)
4	6th gear
5	Synchronizer ring
6	Clip
7	Clutch hub sleeve


8	Synchronizer key
9	Clip
10	Clutch hub (5GR/6GR) (See Clutch Hub (5GR/6GR) Removal Note.)
11	Synchronizer ring
12	5th gear
13	Holder
14	Thrust washer
15	4th gear
16	Synchronizer ring
17	Clutch hub sleeve

18	Synchronizer key
19	Clip
20	Clutch hub (3GR/4GR) (See Clutch Hub (3GR/4GR) Removal Note.)

21	Synchronizer ring
22	3rd gear
23	Primary shaft

Ball Bearing (Clutch Housing Side) Removal Note

1. Set the primary shaft component and the **SST** in the press as shown in the figure.
2. Remove the ball bearing using the press.

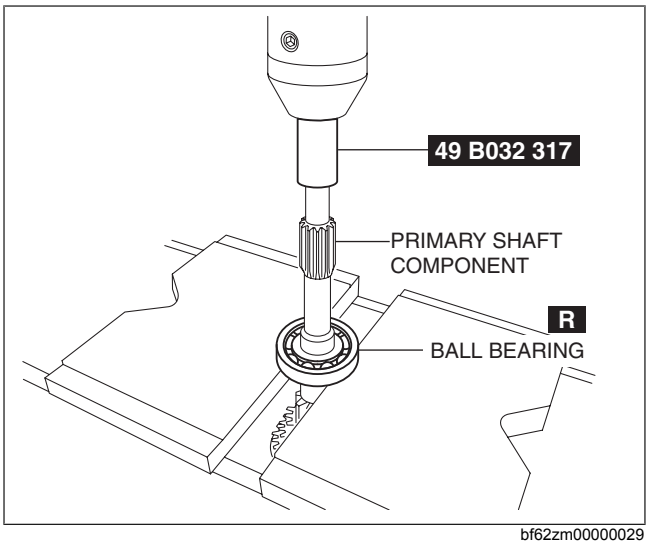


bf62zm00000029

Ball Bearing (Transaxle Case Side) Removal Note

1. Set the **SSTs** and primary shaft component in the press as shown in the figure.


F65M-R

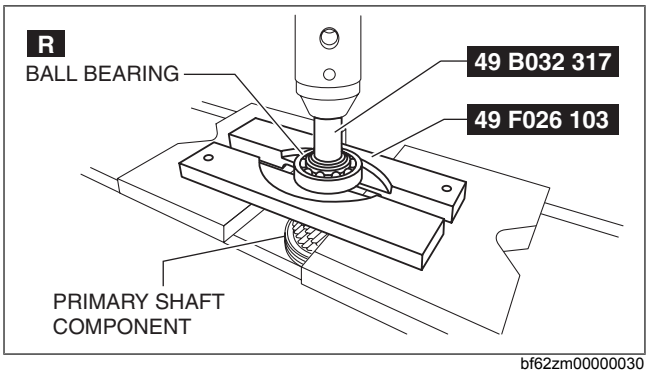

bf62zm00000030

F66M-R


2. Remove the ball bearing using the press. (F65M-R)
3. Remove the ball bearing and 6th gear using the press. (F66M-R)

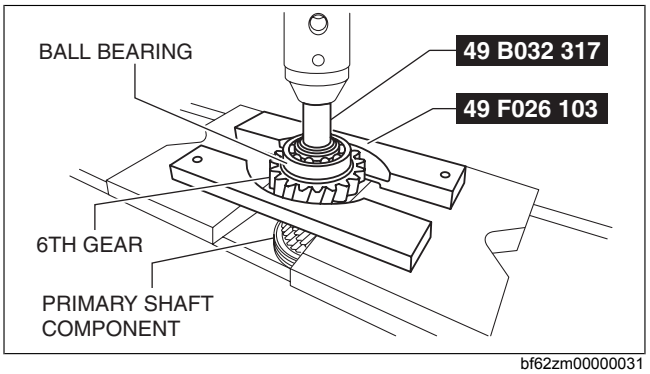

bf62zm00000031

Clutch Hub (5GR/6GR) Removal Note


1. Set the **SSTs** and primary shaft component in the press as shown in the figure.
2. Remove the clutch hub (5GR/6GR), synchronizer ring and 5th gear as a single unit using the press.

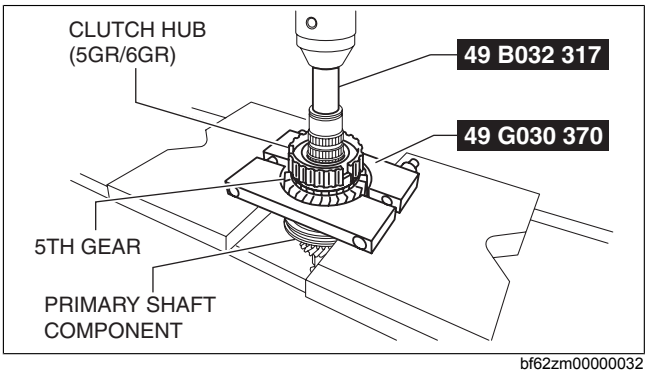

bf62zm00000032

Clutch Hub (3GR/4GR) Removal Note

1. Set the **SST** and primary shaft component in the press as shown in the figure.
2. Remove the clutch hub (3GR/4GR), synchronizer ring and 3rd gear as a single unit using the press.

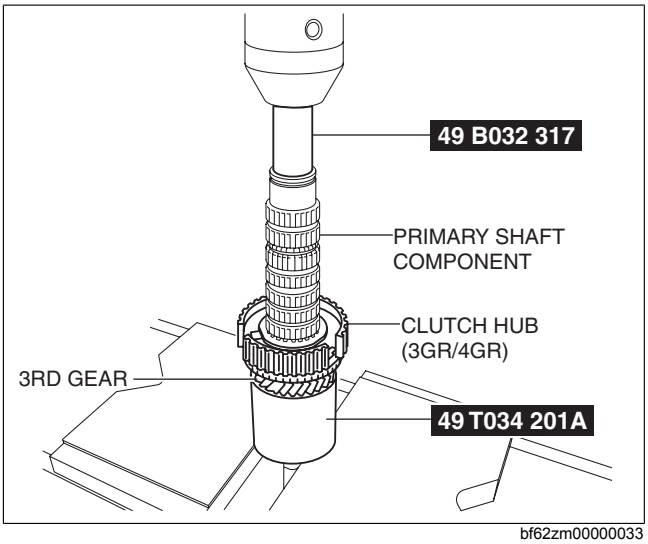

bf62zm00000033