
PRIMARY SHAFT COMPONENT ASSEMBLY

id051500168900

1. Assemble the primary shaft component using the procedure shown in the figure.

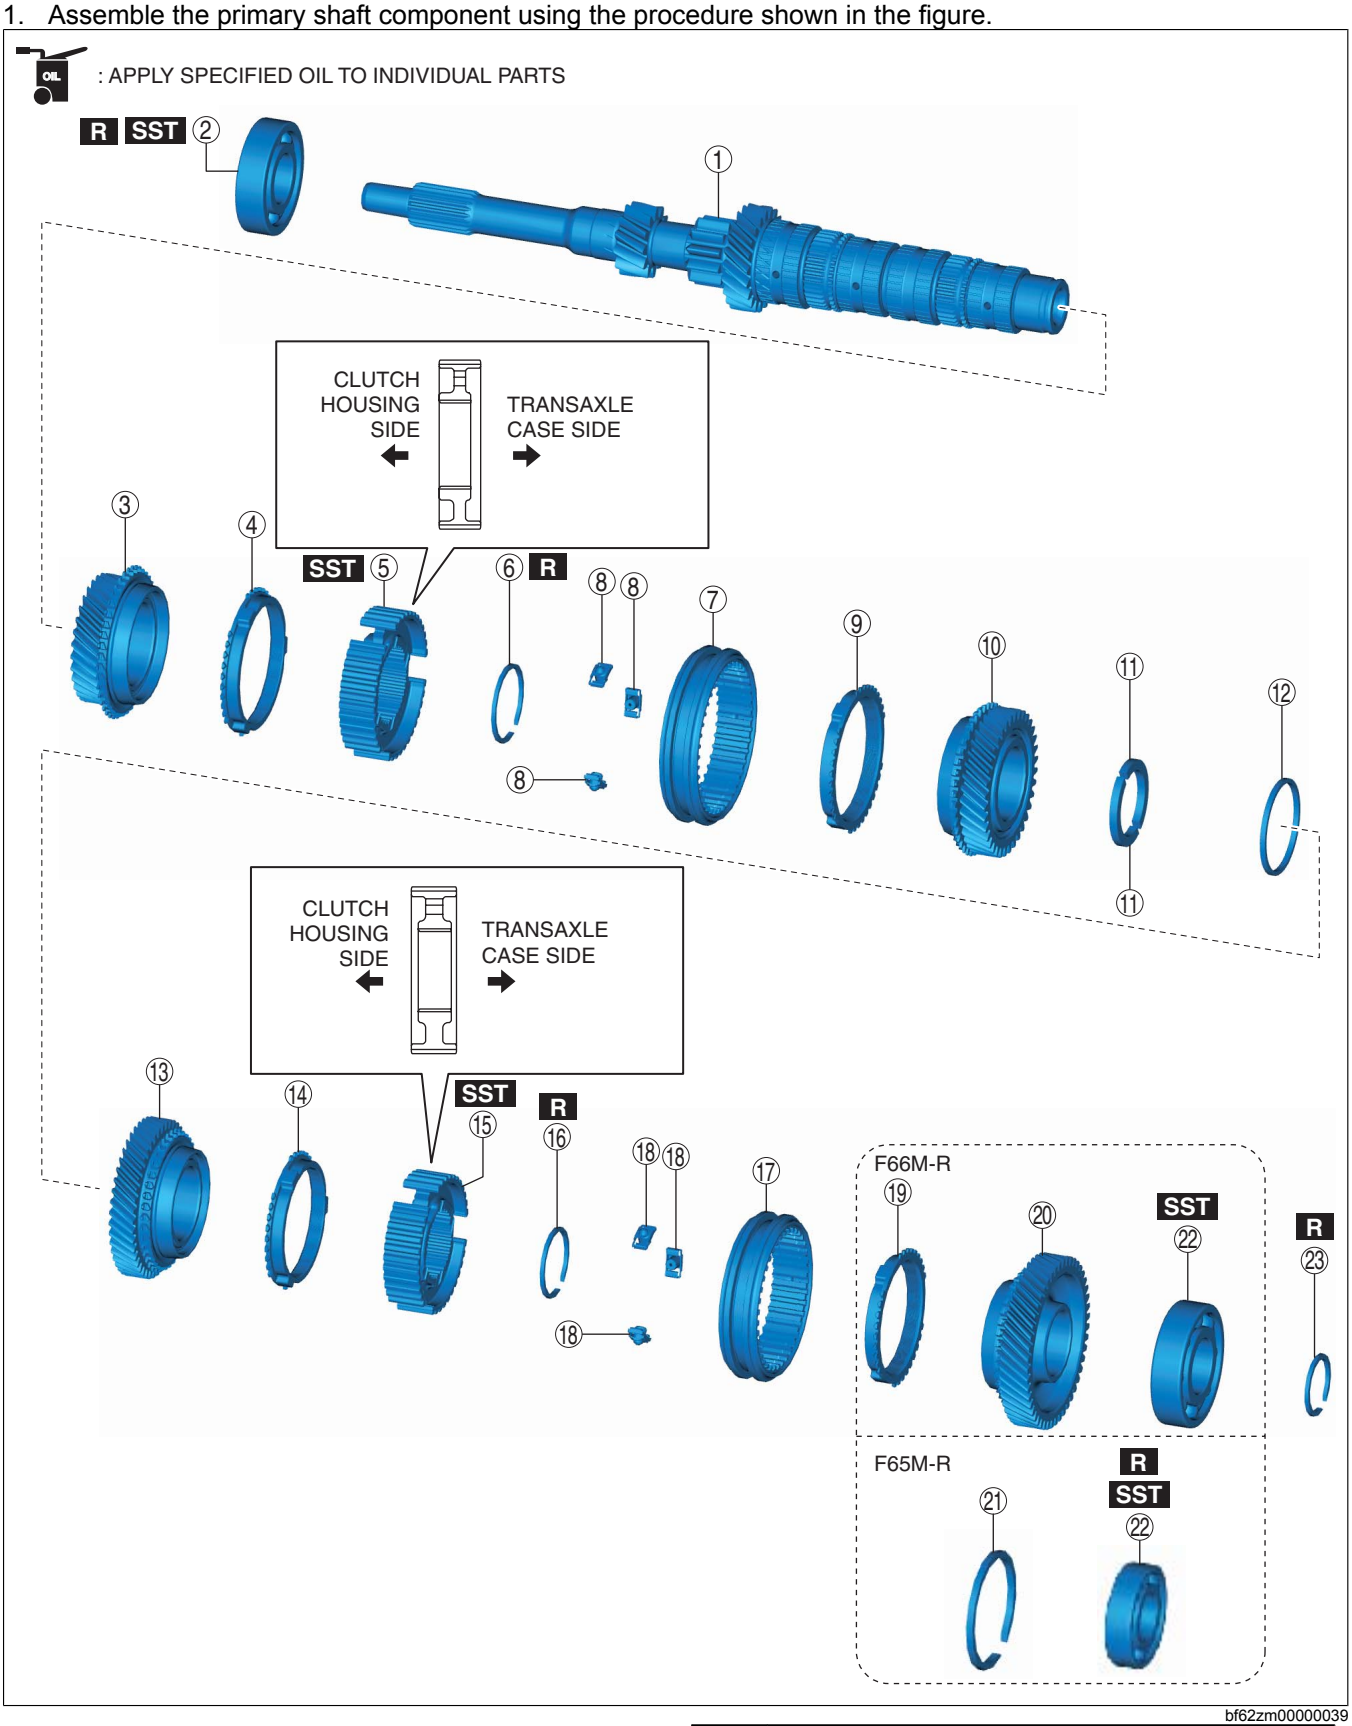

bf62zm00000039

1	Primary shaft
2	Ball bearing (See Ball Bearing (Clutch Housing Side) Assembly Note.)


3	3rd gear
4	Synchronizer ring
5	Clutch hub (3GR/4GR) (See Clutch Hub (3GR/4GR) Assembly Note.)

6	Clip
7	Clutch hub sleeve (See Clutch Hub Sleeve Assembly Note.)
8	Synchronizer key (See Synchronizer Key Assembly Note.)
9	Synchronizer ring (See Synchronizer Ring Assembly Note.)
10	4th gear
11	Thrust washer
12	Holder
13	5th gear
14	Synchronizer ring
15	Clutch hub (5GR/6GR) (See Clutch Hub (5GR/6GR) Assembly Note.)

16	Clip
17	Clutch hub sleeve (See Clutch Hub Sleeve Assembly Note.)
18	Synchronizer key (See Synchronizer Key Assembly Note.)
19	Synchronizer ring (See Synchronizer Ring Assembly Note.)
20	6th gear
21	Clip
22	Ball bearing (See Ball Bearing (Transaxle Case Side) Assembly Note.)
23	Clip

Ball Bearing (Clutch Housing Side) Assembly Note


1. Set the **SSTs**, new ball bearing, and the primary shaft in a press as shown in the figure.
2. Assemble the ball bearing using the press.

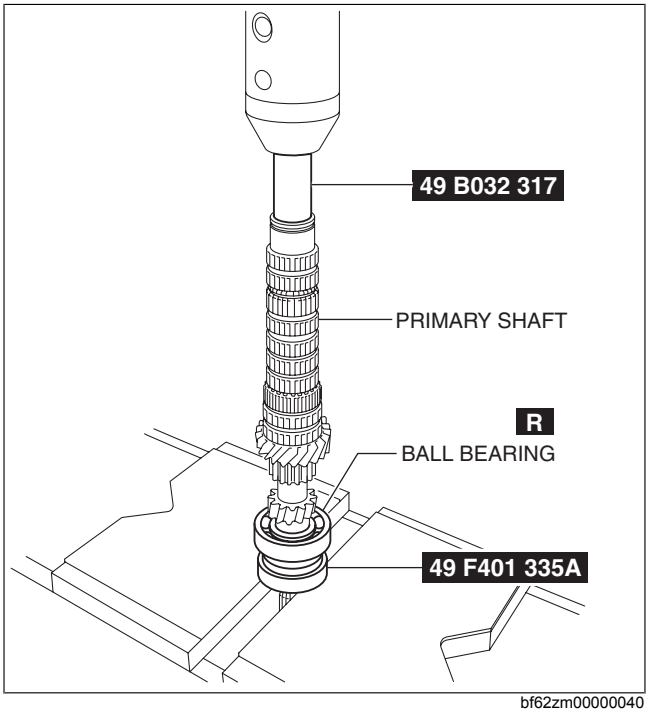

bf62zm00000040

Clutch Hub (3GR/4GR) Assembly Note

1. Set the **SSTs**, clutch hub (3GR/4GR), and the primary shaft component in a press as shown in the figure.
2. Align the synchronizer ring projections with the clutch hub (3GR/4GR) key grooves.
3. Assemble the clutch hub (3GR/4GR) using the press.

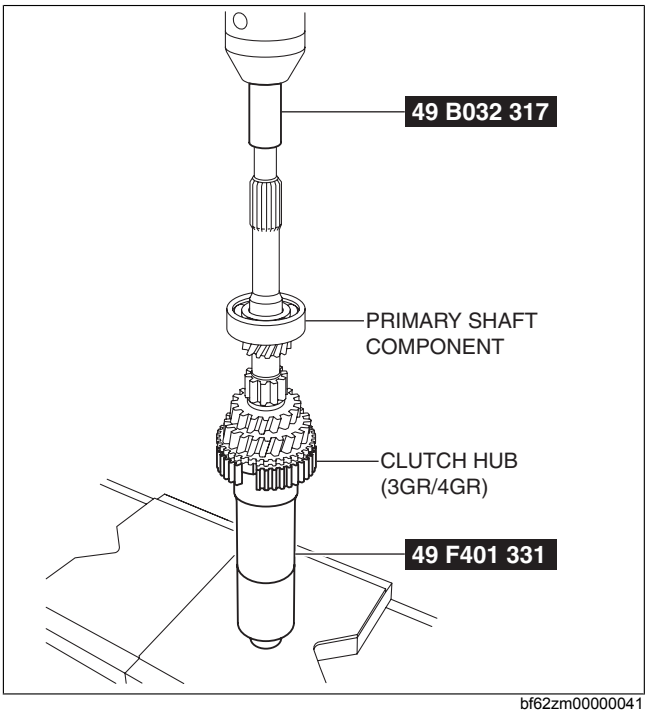

bf62zm00000041


Clutch Hub Sleeve Assembly Note

1. Align the positioning groove of the clutch hub sleeve with the center of the clutch hub key groove as shown in the figure, and assemble the clutch hub sleeve.

Note


- A groove is cut across the entire circumference of the clutch hub sleeve, however the deeper grooves in 3 locations are the reference position grooves.

3GR/4GR

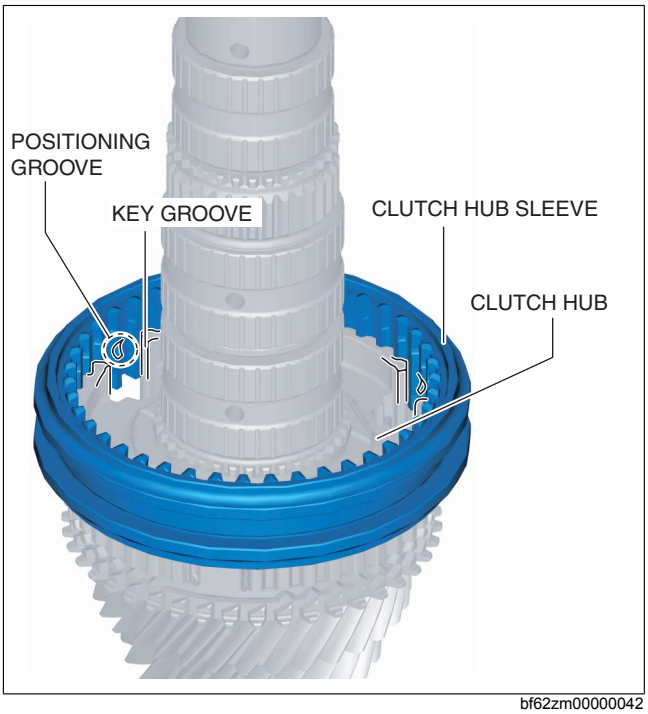

bf62zm00000042

5GR/6GR

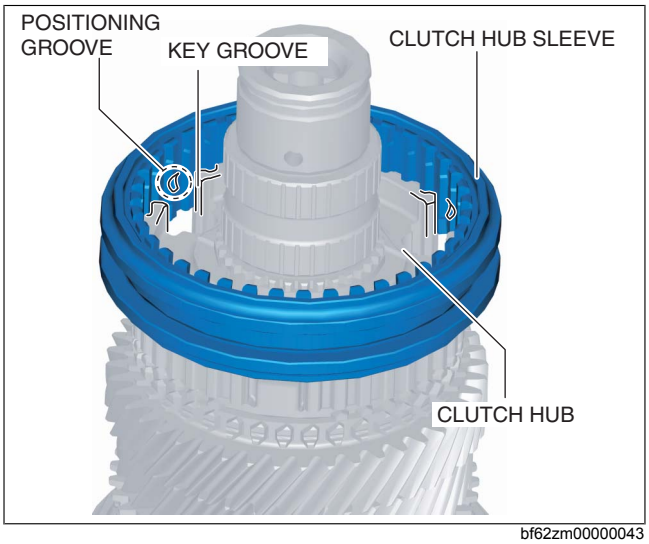


bf62zm00000043

Synchronizer Key Assembly Note


1. Align the synchronizer keys with the clutch hub grooves as shown in the figure and assemble.

3GR/4GR

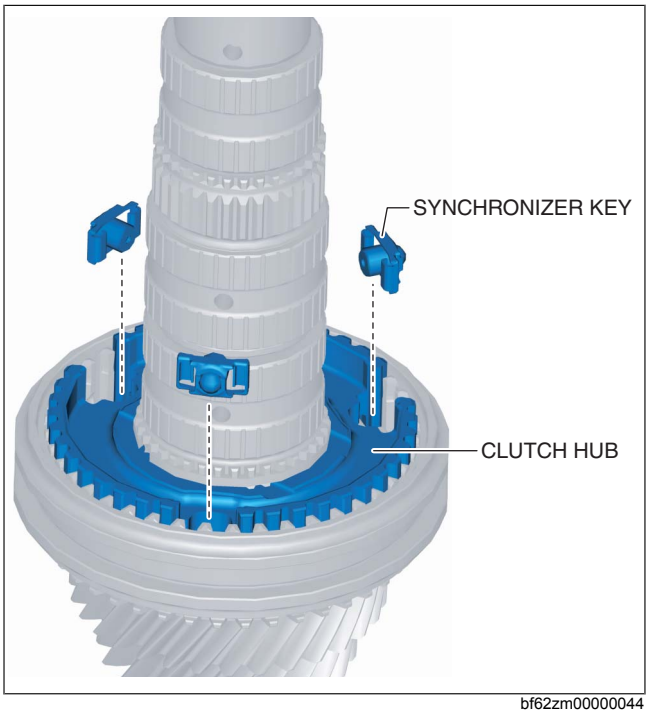


bf62zm00000044

5GR/6GR

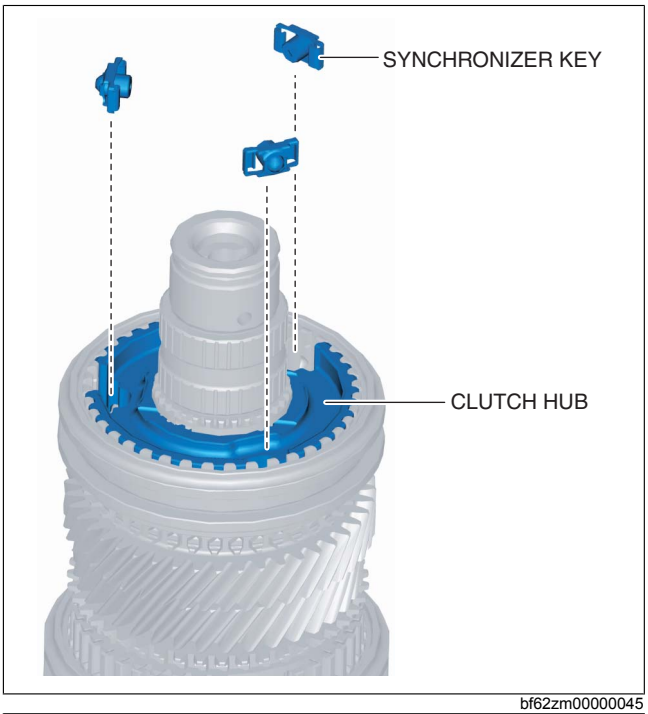

bf62zm00000045

2. After the synchronizer keys are assembled, verify that the detent ball of the synchronizer key is engaged with the positioning groove of the clutch hub sleeve.

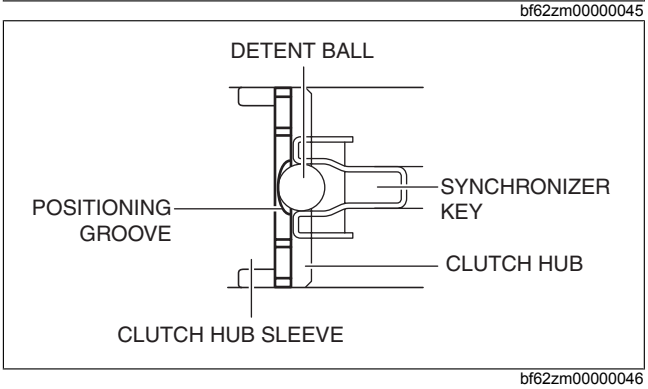


bf62zm00000046

Synchronizer Ring Assembly Note


1. Align the projection of the synchronizer ring with the key groove of the clutch hub as shown in the figure, and assemble the synchronizer ring.

3GR/4GR

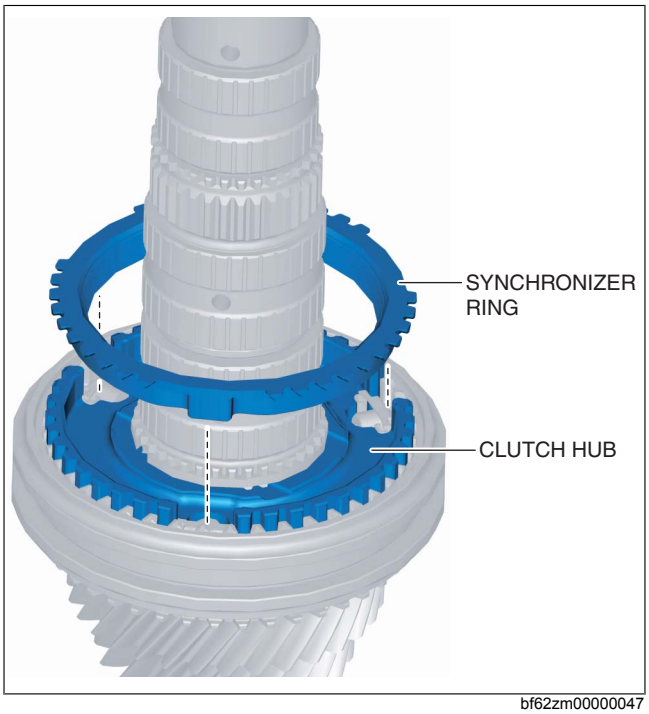

bf62zm00000047


5GR/6GR

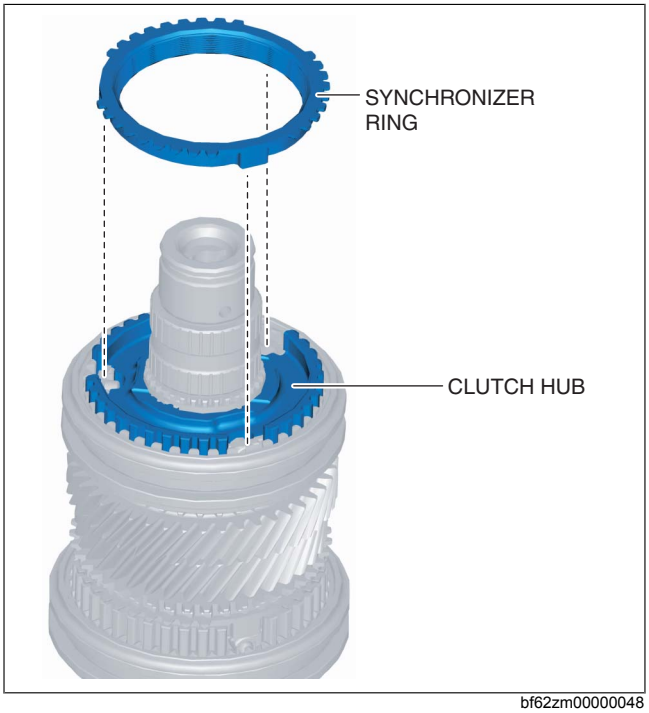

bf62zm00000048

Clutch Hub (5GR/6GR) Assembly Note

1. Set the **SSTs**, primary shaft component, and clutch hub (5GR/6GR) in a press as shown in the figure.
2. Align the synchronizer ring projections with the clutch hub (5GR/6GR) gear key grooves.
3. Assemble the clutch hub (5GR/6GR) using the press.

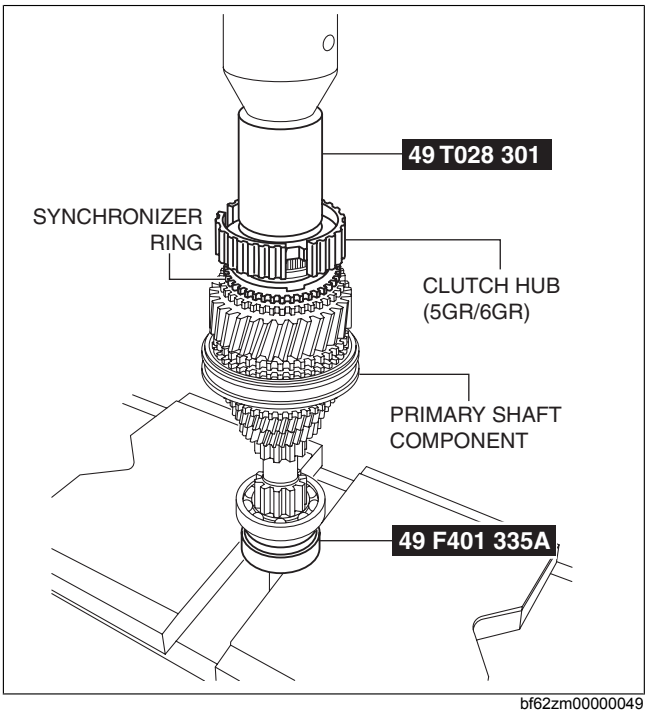


bf62zm00000049

Ball Bearing (Transaxle Case Side) Assembly Note


1. Set the **SSTs**, primary shaft component, and new ball bearing in a press as shown in the figure.

F65M-R

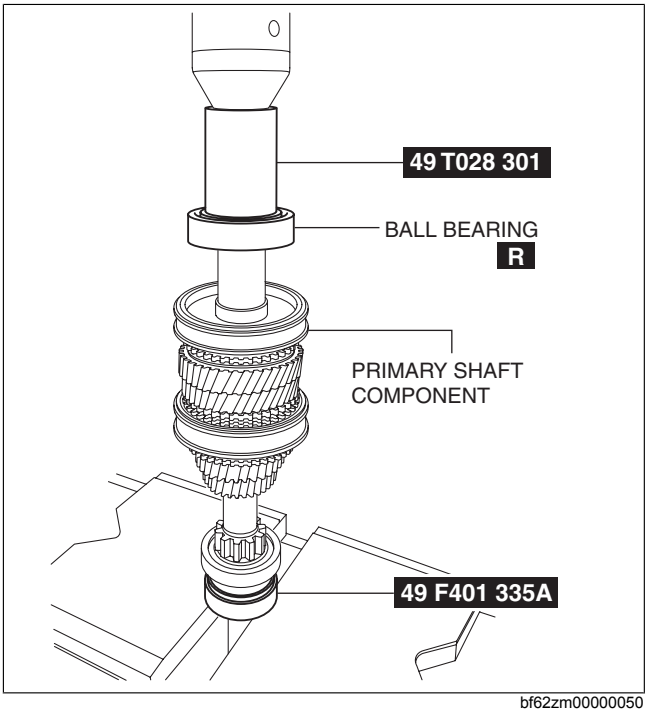

bf62zm00000050

2. Assemble the ball bearing using the press.
3. Assemble a new clip.

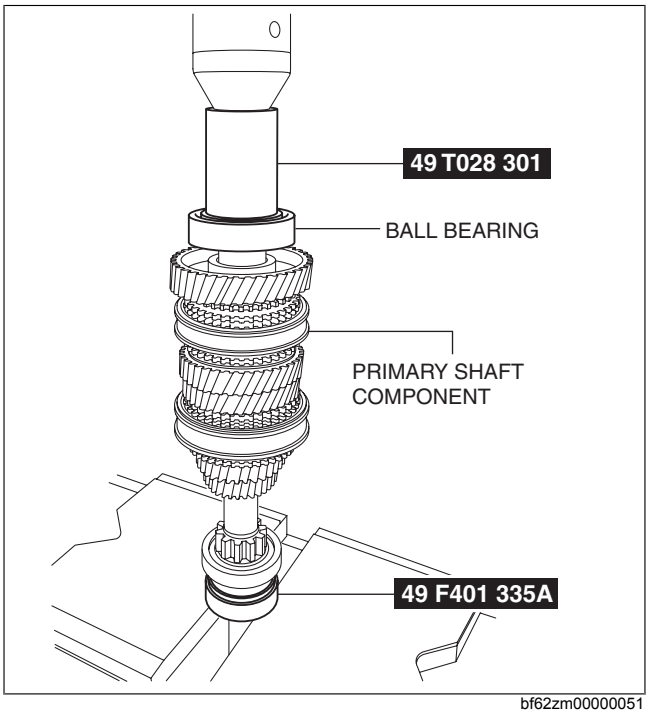

bf62zm00000051